


Position of Parts in Seat <RHD Rear Seat w/ Ottoman>

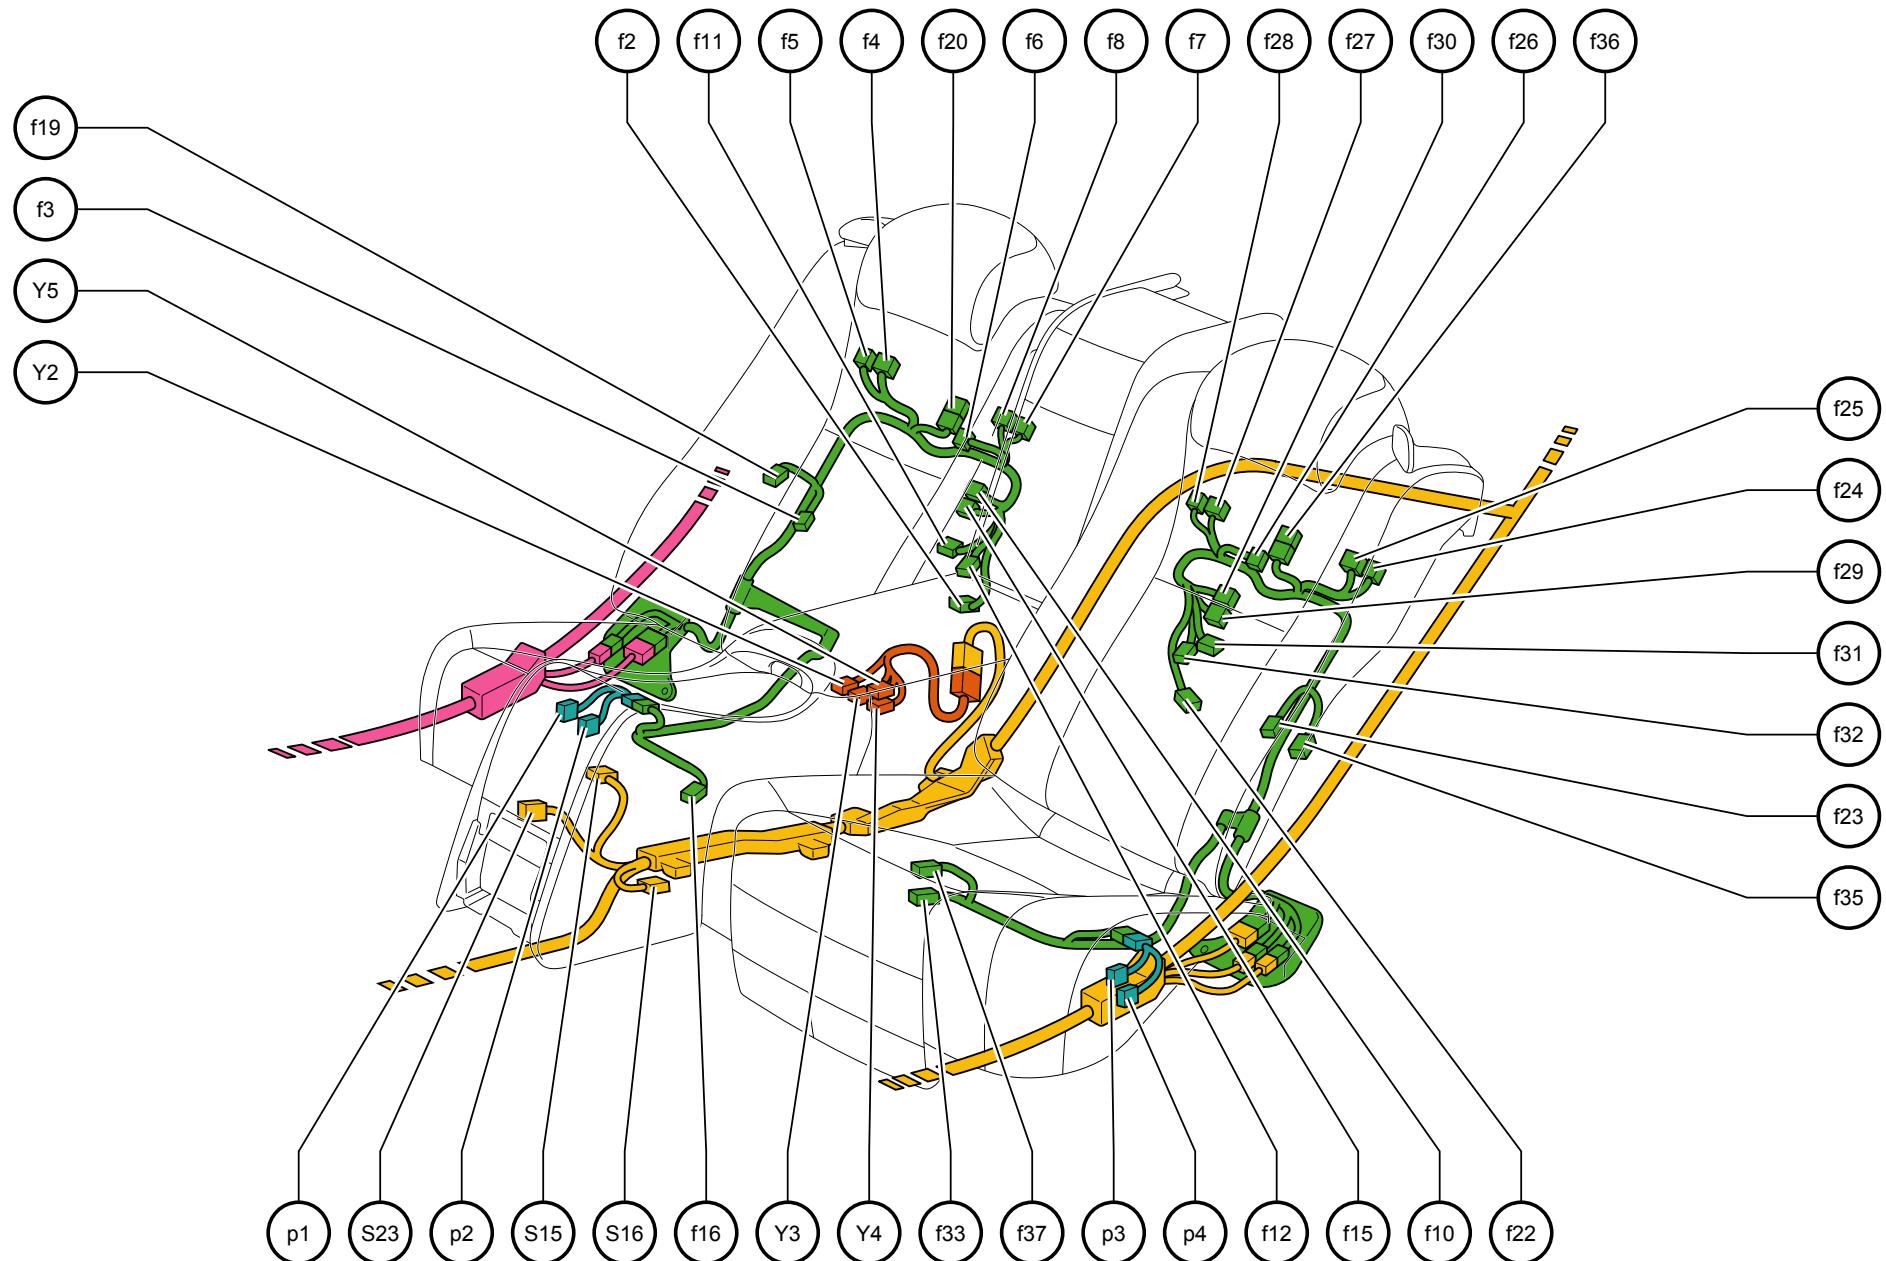


S 15 Rear Console Switch
S 16 Cooling Box Illumination Light
S 23 Rear Seat Entertainment Table Switch

Y 2 Seat Vibrator Switch
Y 3 Video Terminal
Y 4 Rear Cigarette Lighter Socket
Y 5 Rear Cigarette Lighter Illumination Light

f 2 Seat Vibrator
f 3 Rear Seat Heater RH
f 4 Rear Power Seat Control ECU RH
f 5 Rear Power Seat Control ECU RH
f 6 Rear Headrest Motor RH
f 7 Rear Seat Climate Control ECU RH
f 8 Rear Seat Climate Control ECU RH
f 10 Rear Power Seat Position Sensor RH (Fold Position)
f 11 Rear Seat Climate Fan Motor RH (Seat Back)
f 12 Rear Seat Climate Controller RH (Seat Back)
f 15 Rear Seat Heater LH
f 16 Rear Power Seat Motor RH
f 19 Rear Side Airbag Squib Circuit RH
f 20 Junction Connector
f 22 Seat Vibrator
f 23 Rear Seat Heater LH
f 24 Rear Power Seat Control ECU LH
f 25 Rear Power Seat Control ECU LH
f 26 Rear Headrest Motor LH
f 27 Rear Seat Climate Control ECU LH
f 28 Rear Seat Climate Control ECU LH
f 29 Rear Power Seat Position Motor LH (Fold Position)
f 30 Rear Power Seat Position Sensor LH (Fold Position)
f 31 Rear Seat Climate Fan Motor LH (Seat Back)
f 32 Rear Seat Climate Controller LH (Seat Back)
f 33 Rear Power Seat Motor LH
f 35 Rear Side Airbag Squib Circuit LH
f 36 Junction Connector
f 37 Rear Seat Cushion Airbag Squib Circuit LH

p 1 Rear Seat Climate Controller RH (Seat Cushion)
p 2 Rear Seat Climate Fan Motor RH (Seat Cushion)
p 3 Rear Seat Climate Controller LH (Seat Cushion)
p 4 Rear Seat Climate Fan Motor LH (Seat Cushion)

Position of Parts in Seat <RHD Rear Seat w/ Ottoman>

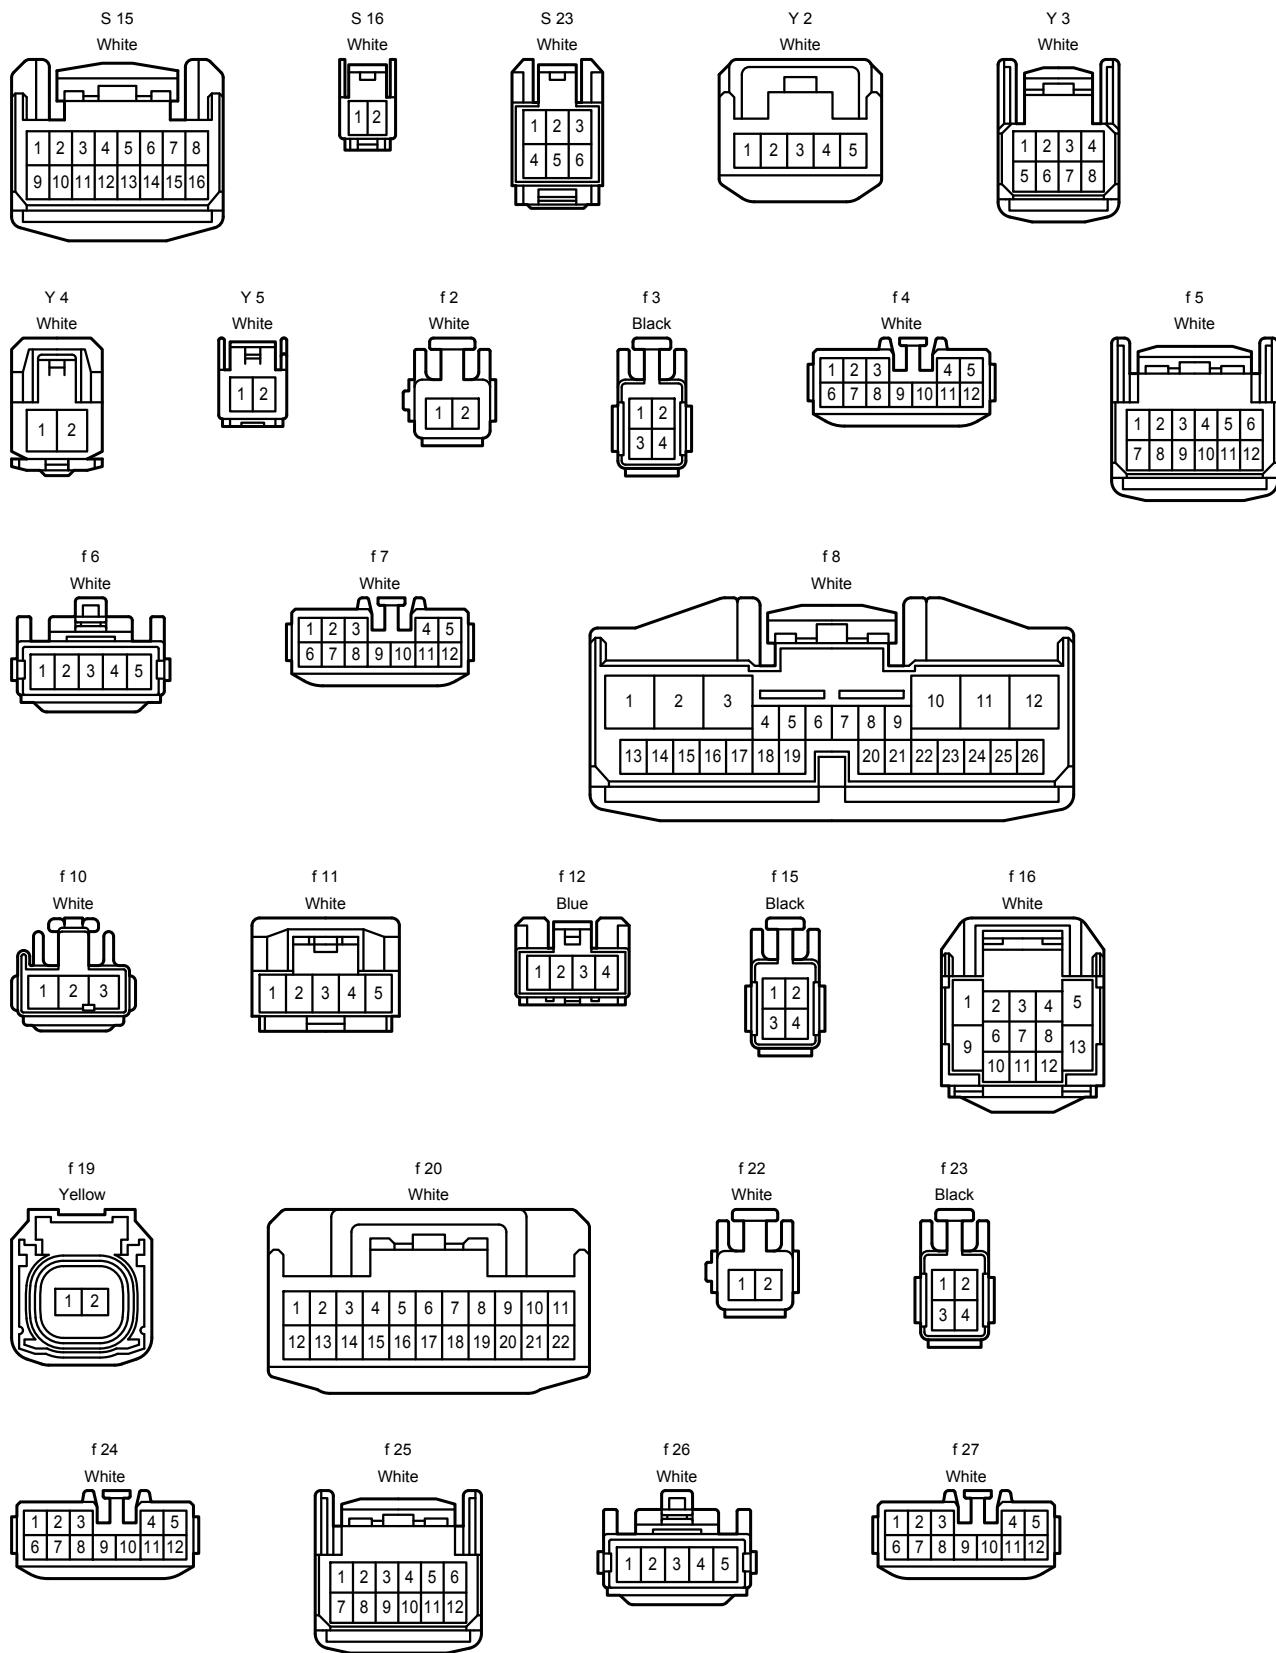

Position of Parts in Seat <RHD Rear Seat w/ Ottoman>

