


Position of Parts in Seat <RHD Rear Seat w/o Ottoman w/ Power Seat>

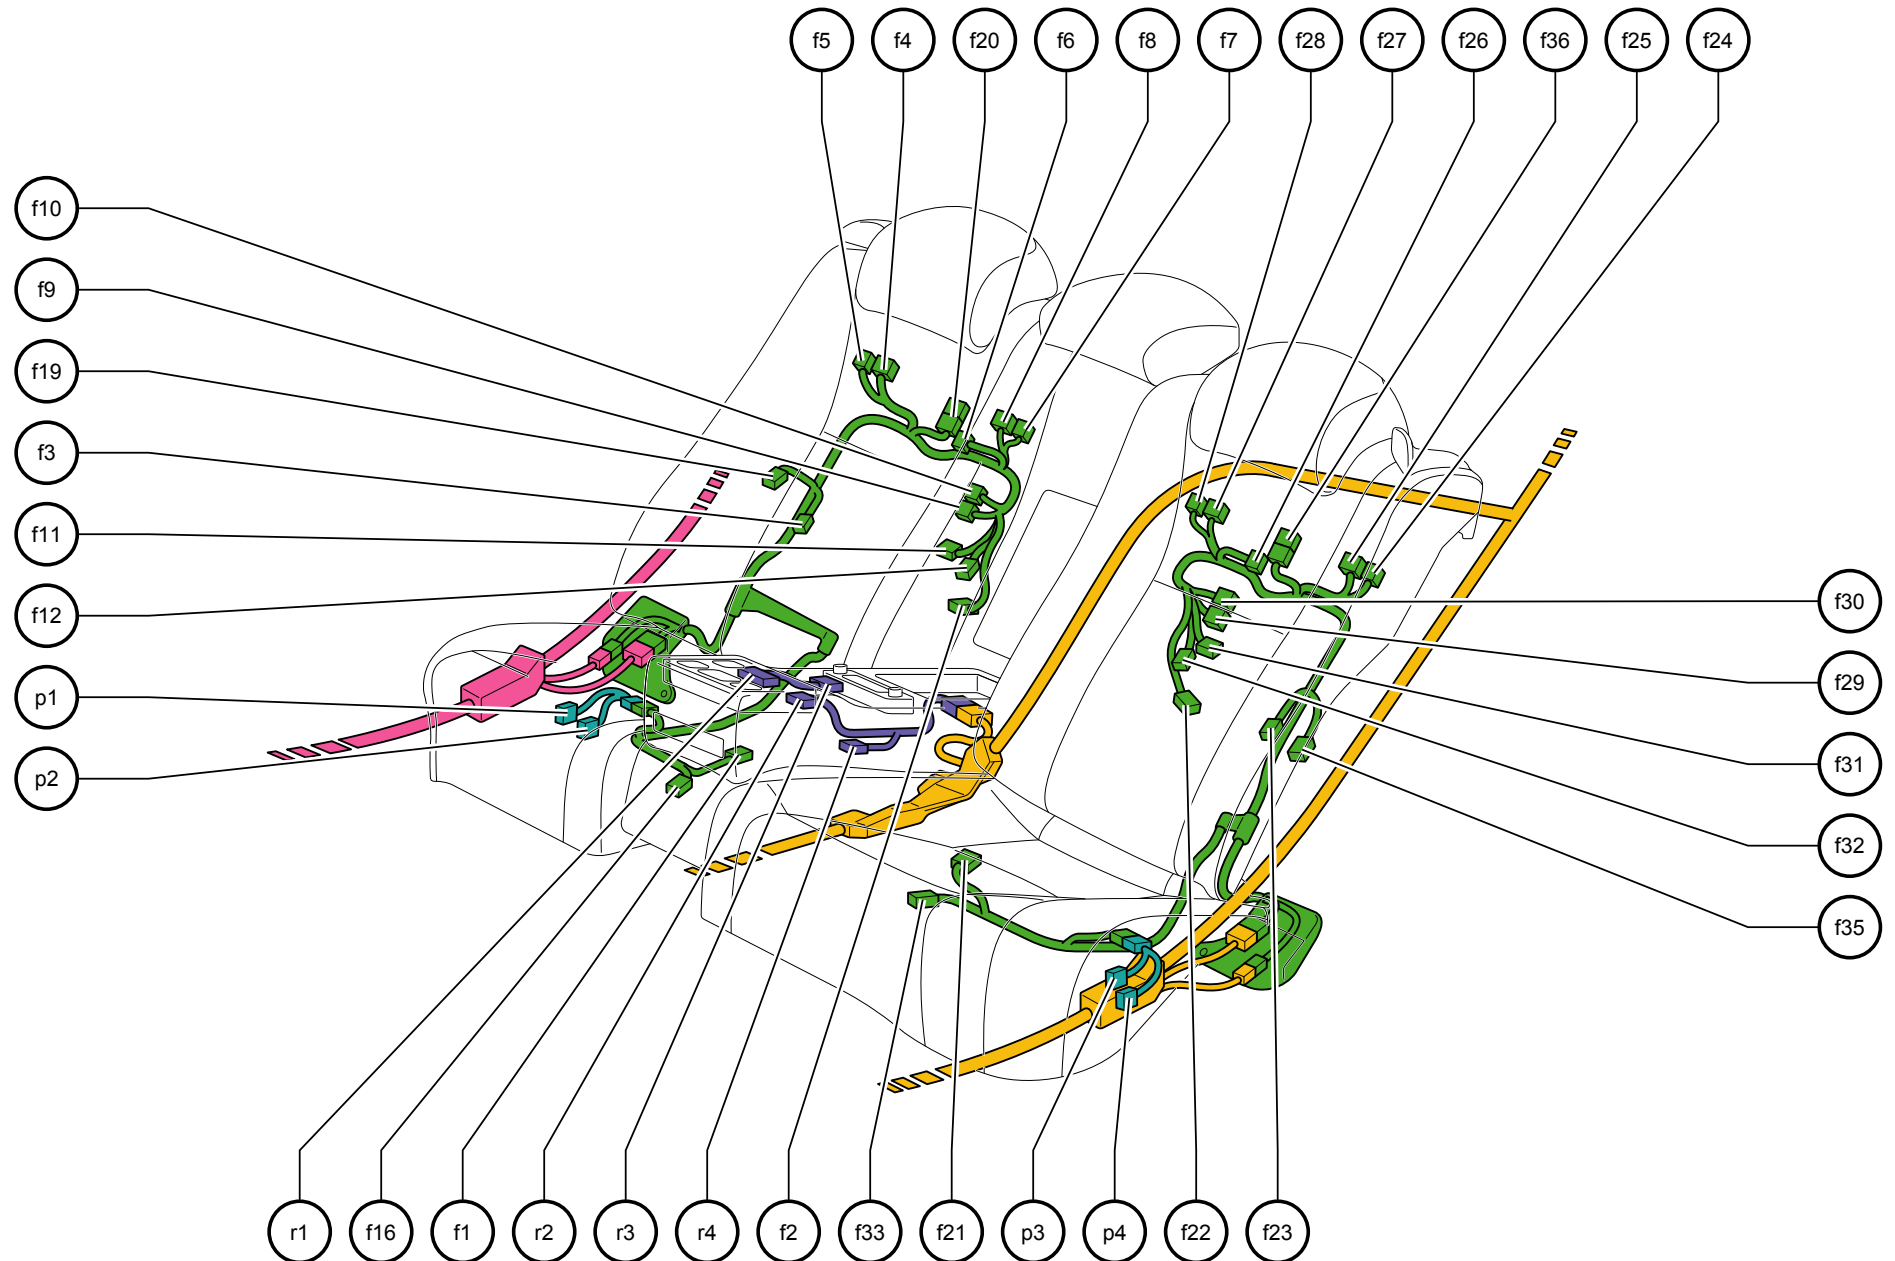


- f 1 Rear Seat Inner Belt Switch RH
- f 2 Seat Vibrator
- f 3 Rear Seat Heater RH
- f 4 Rear Power Seat Control ECU RH
- f 5 Rear Power Seat Control ECU RH
- f 6 Rear Headrest Motor RH
- f 7 Rear Seat Climate Control ECU RH
- f 8 Rear Seat Climate Control ECU RH
- f 9 Rear Power Seat Position Motor RH (Fold Position)
- f 10 Rear Power Seat Position Sensor RH (Fold Position)
- f 11 Rear Seat Climate Fan Motor RH (Seat Back)
- f 12 Rear Seat Climate Controller RH (Seat Back)
- f 16 Rear Power Seat Motor RH
- f 19 Rear Side Airbag Squib Circuit RH
- f 20 Junction Connector
- f 21 Rear Seat Inner Belt Switch LH
- f 22 Seat Vibrator
- f 23 Rear Seat Heater LH
- f 24 Rear Power Seat Control ECU LH
- f 25 Rear Power Seat Control ECU LH
- f 26 Rear Headrest Motor LH
- f 27 Rear Seat Climate Control ECU LH
- f 28 Rear Seat Climate Control ECU LH
- f 29 Rear Power Seat Position Motor LH (Fold Position)
- f 30 Rear Power Seat Position Sensor LH (Fold Position)
- f 31 Rear Seat Climate Fan Motor LH (Seat Back)
- f 32 Rear Seat Climate Controller LH (Seat Back)
- f 33 Rear Power Seat Motor LH
- f 35 Rear Side Airbag Squib Circuit LH
- f 36 Junction Connector

- p 1 Rear Seat Climate Controller RH (Seat Cushion)
- p 2 Rear Seat Climate Fan Motor RH (Seat Cushion)
- p 3 Rear Seat Climate Controller LH (Seat Cushion)
- p 4 Rear Seat Climate Fan Motor LH (Seat Cushion)

- r 1 Rear Console Switch
- r 2 Rear Console Switch
- r 3 Rear Console Switch Sub (Curtain Switch)
- r 4 Courtesy Light Switch (Armrest)

Position of Parts in Seat <RHD Rear Seat w/o Ottoman w/ Power Seat>

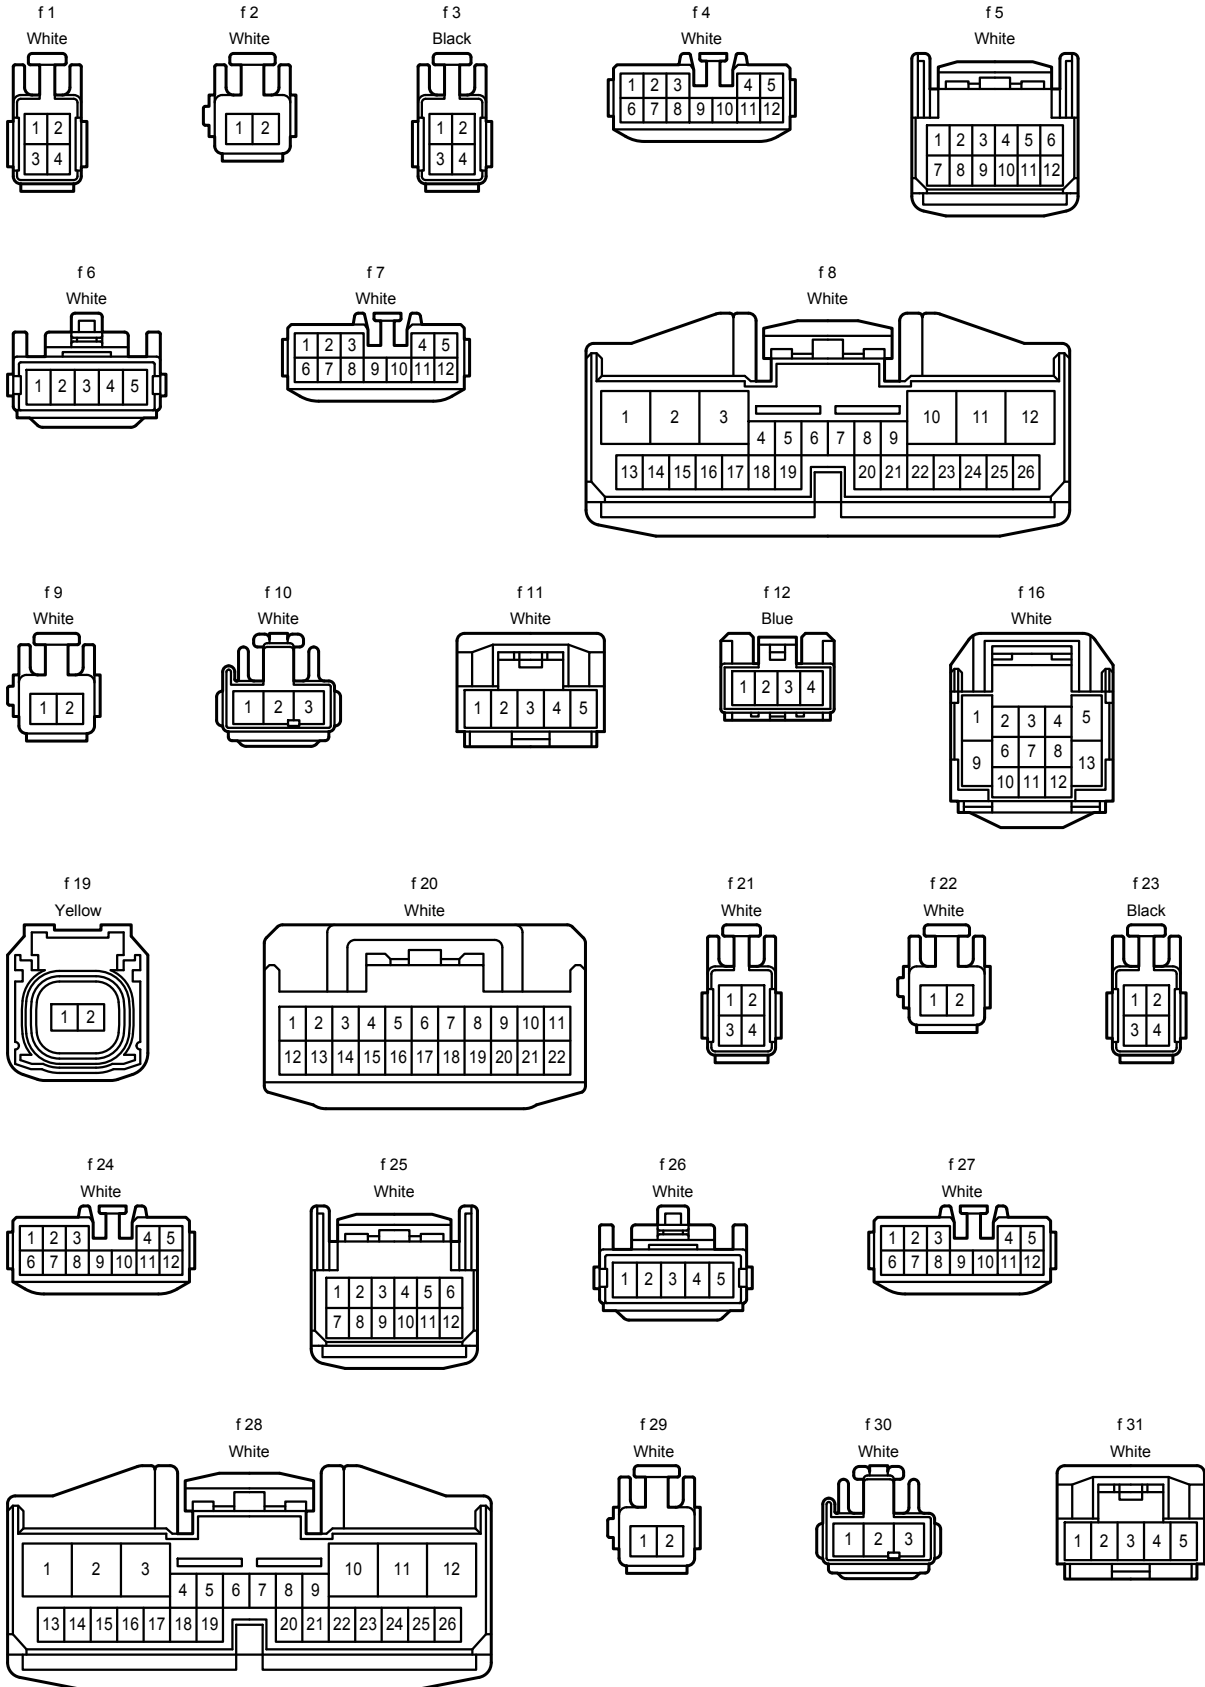

Position of Parts in Seat <RHD Rear Seat w/o Ottoman w/ Power Seat>

