


③ : Engine Room R/B No.3

LHD : Engine Compartment Left (See Page 20)

RHD : Engine Compartment Right (See Page 20)

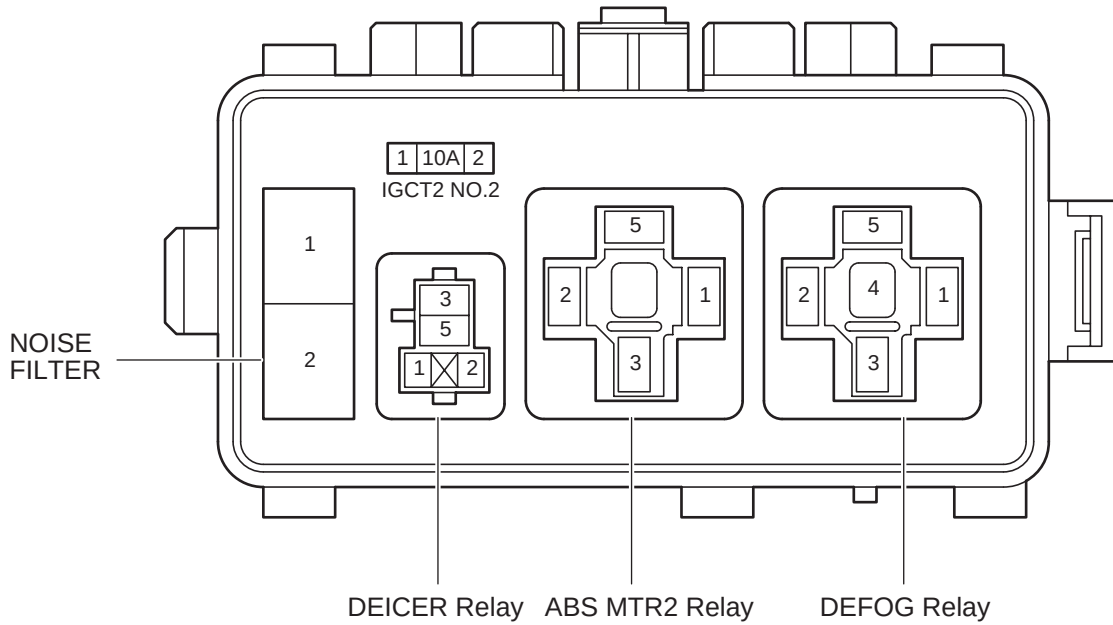

④ : Engine Room R/B No.4

LHD : Engine Compartment Left (See Page 20)

RHD : Engine Compartment Right (See Page 20)

