


Position of Parts in Engine Compartment <LHD>

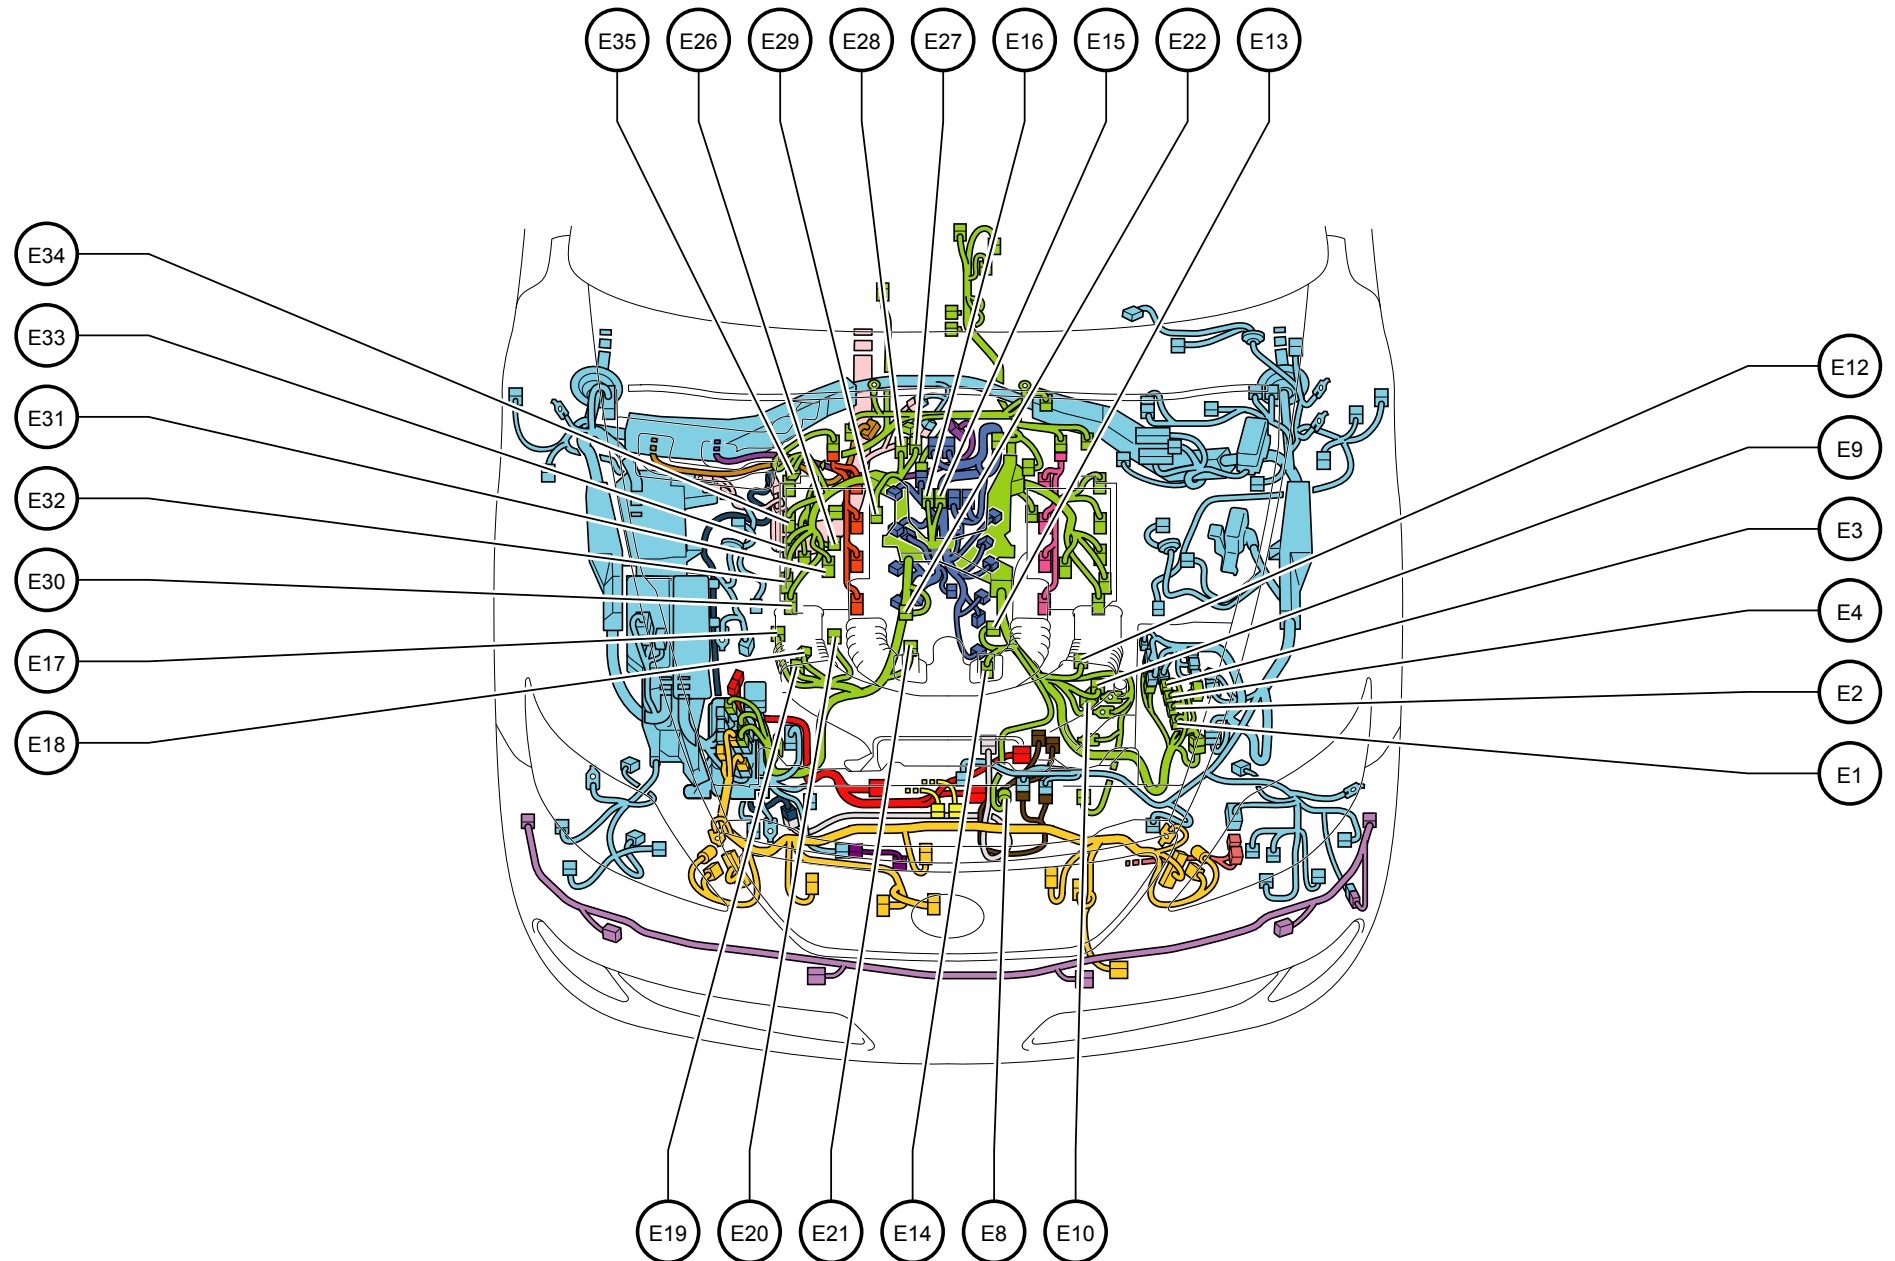


- E 1 ECM
- E 2 ECM
- E 3 ECM
- E 4 ECM
- E 8 Engine Oil Pressure Switch Assembly
- E 9 Cam Timing Control with EDU Motor Assembly (Bank 1)
- E 10 Cam Timing Control with EDU Motor Assembly (Bank 1)
- E 12 Cam Timing Oil Control Valve Assembly (Bank 1)
- E 13 Mass Air Flow Meter (Bank 1)
- E 14 E.F.I. Engine Coolant Temperature Sensor
- E 15 Injector Driver (Bank 1)
- E 16 Injector Driver (Bank 1)
- E 17 Cam Timing Oil Control Valve Assembly (Bank 2)
- E 18 Cam Timing Control with EDU Motor Assembly (Bank 2)
- E 19 Cam Timing Control with EDU Motor Assembly (Bank 2)
- E 20 Cam Position Sensor
- E 21 Throttle Body Assembly
- E 22 Mass Air Flow Meter (Bank 2)
- E 26 Engine Oil Level Sensor
- E 27 Injector Driver (Bank 2)
- E 28 Injector Driver (Bank 2)
- E 29 Noise Filter (Ignition Bank 2)
- E 30 Ignition Coil Assembly No.2
- E 31 VVT Sensor (Bank 2 Intake Side)
- E 32 VVT Sensor (Bank 2 Exhaust Side)
- E 33 Ignition Coil Assembly No.4
- E 34 Ignition Coil Assembly No.6
- E 35 Spill Control Valve (Bank 2)

Position of Parts in Engine Compartment <LHD>


E 1

White

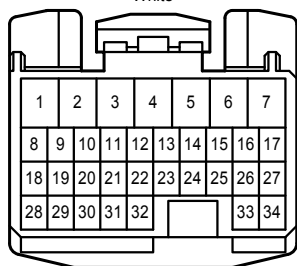


E 2

White

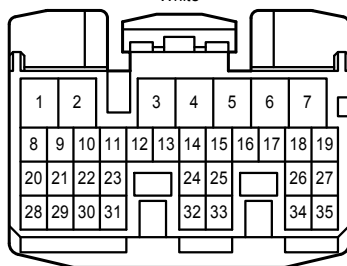


E 3

White

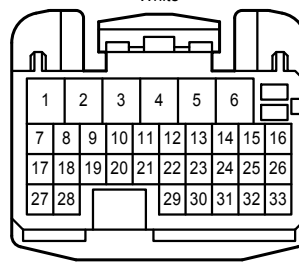

E 4

White

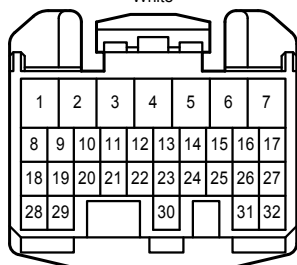

E 8

Gray




E 9

Black



E 10

Black

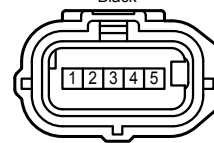

E 12

Black



E 13

Black




E 14

Dark Gray




E 15

Gray

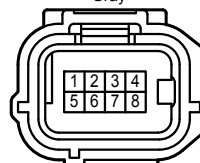

E 16

Gray

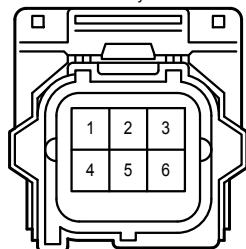

E 17

Black



E 18

Black




E 19

Black




E 20

Black

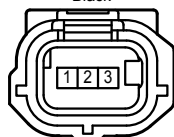

E 21

Black

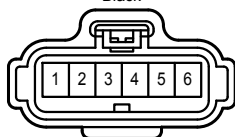

E 22

Black




E 26

Gray




E 27

Gray

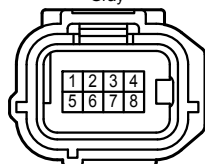

E 28

Gray

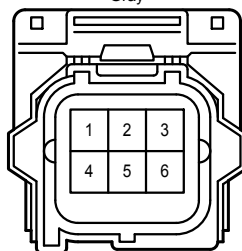

E 29

Gray



E 30

Gray



