


Position of Parts in Engine Compartment <RHD>

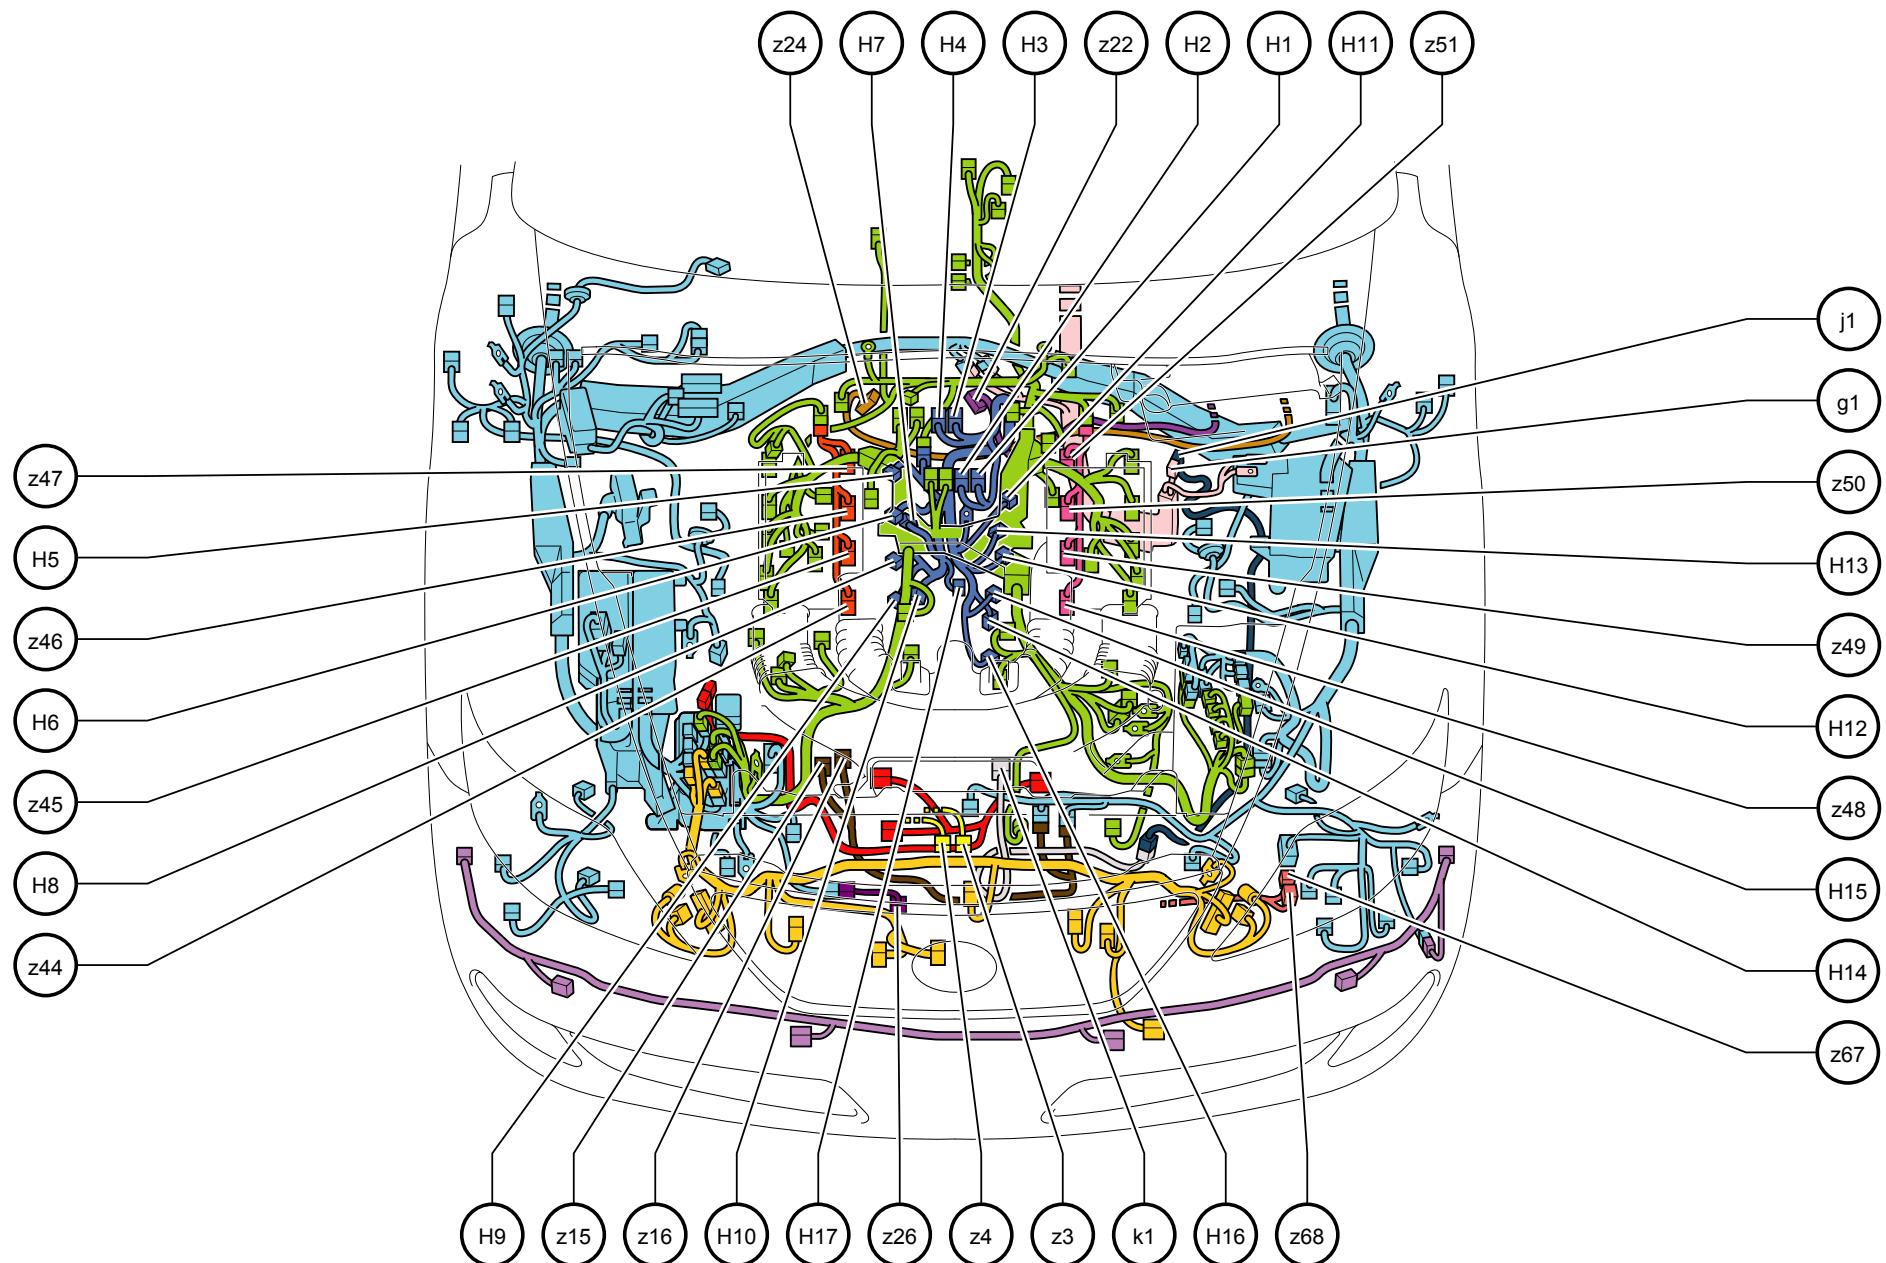

H 1 Injector Driver (Bank 1)
H 2 Injector Driver (Bank 1)
H 3 Injector Driver (Bank 2)
H 4 Injector Driver (Bank 2)
H 5 Direct Fuel Injector Assembly No.8
H 6 Direct Fuel Injector Assembly No.6
H 7 Knock Control Sensor (Bank 2 Sensor 2)
H 8 Direct Fuel Injector Assembly No.4
H 9 Direct Fuel Injector Assembly No.2
H 10 Knock Control Sensor (Bank 2 Sensor 1)
H 11 Direct Fuel Injector Assembly No.7
H 12 Knock Control Sensor (Bank 1 Sensor 2)
H 13 Direct Fuel Injector Assembly No.5
H 14 Knock Control Sensor (Bank 1 Sensor 1)
H 15 Direct Fuel Injector Assembly No.3
H 16 Direct Fuel Injector Assembly No.1
H 17 Fuel Pressure Sensor

g 1 With Converter Inverter Assembly

j 1 With Converter Inverter Assembly

k 1 With Motor Compressor Assembly

z 3 Cooling Fan ECU , Cooling Fan Motor

z 4 Cooling Fan ECU , Cooling Fan Motor No.2

z 15 Steering Actuator Assembly

z 16 Steering Actuator Assembly

z 22 Motor Generator No.2 , With Converter Inverter Assembly

z 24 Motor Generator No.1 , With Converter Inverter Assembly

z 26 Inverter Water Pump Motor Assembly

z 44 Port Fuel Injector Assembly No.2

z 45 Port Fuel Injector Assembly No.4

z 46 Port Fuel Injector Assembly No.6

z 47 Port Fuel Injector Assembly No.8

z 48 Port Fuel Injector Assembly No.1

z 49 Port Fuel Injector Assembly No.3


z 50 Port Fuel Injector Assembly No.5

z 51 Port Fuel Injector Assembly No.7

z 67 Front Active Stabilizer Control ECU Assembly , Front Active Stabilizer Control Actuator Assembly

z 68 Front Active Stabilizer Control ECU Assembly , Front Active Stabilizer Control Actuator Assembly

Position of Parts in Engine Compartment <RHD>

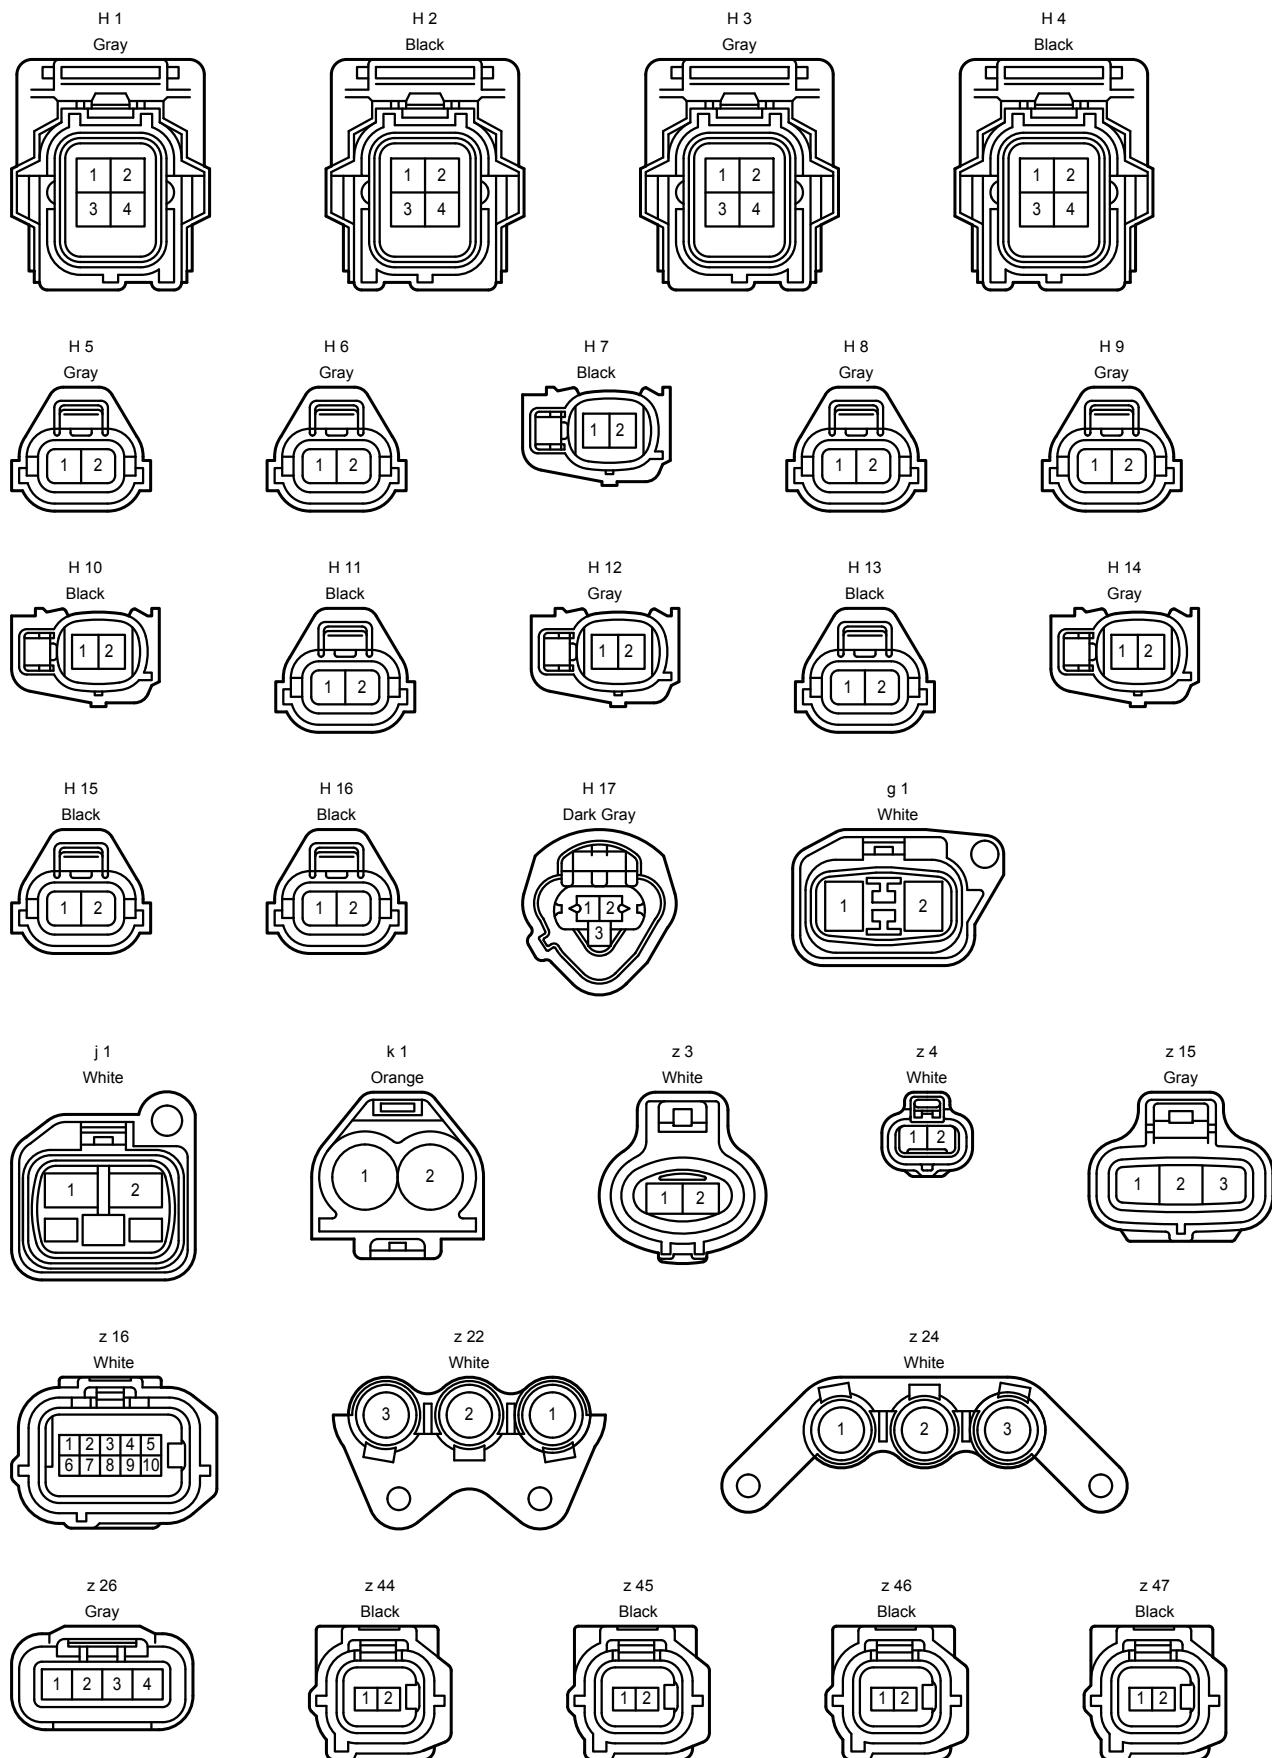

Position of Parts in Engine Compartment <RHD>

