



Position of Parts in Engine Compartment

















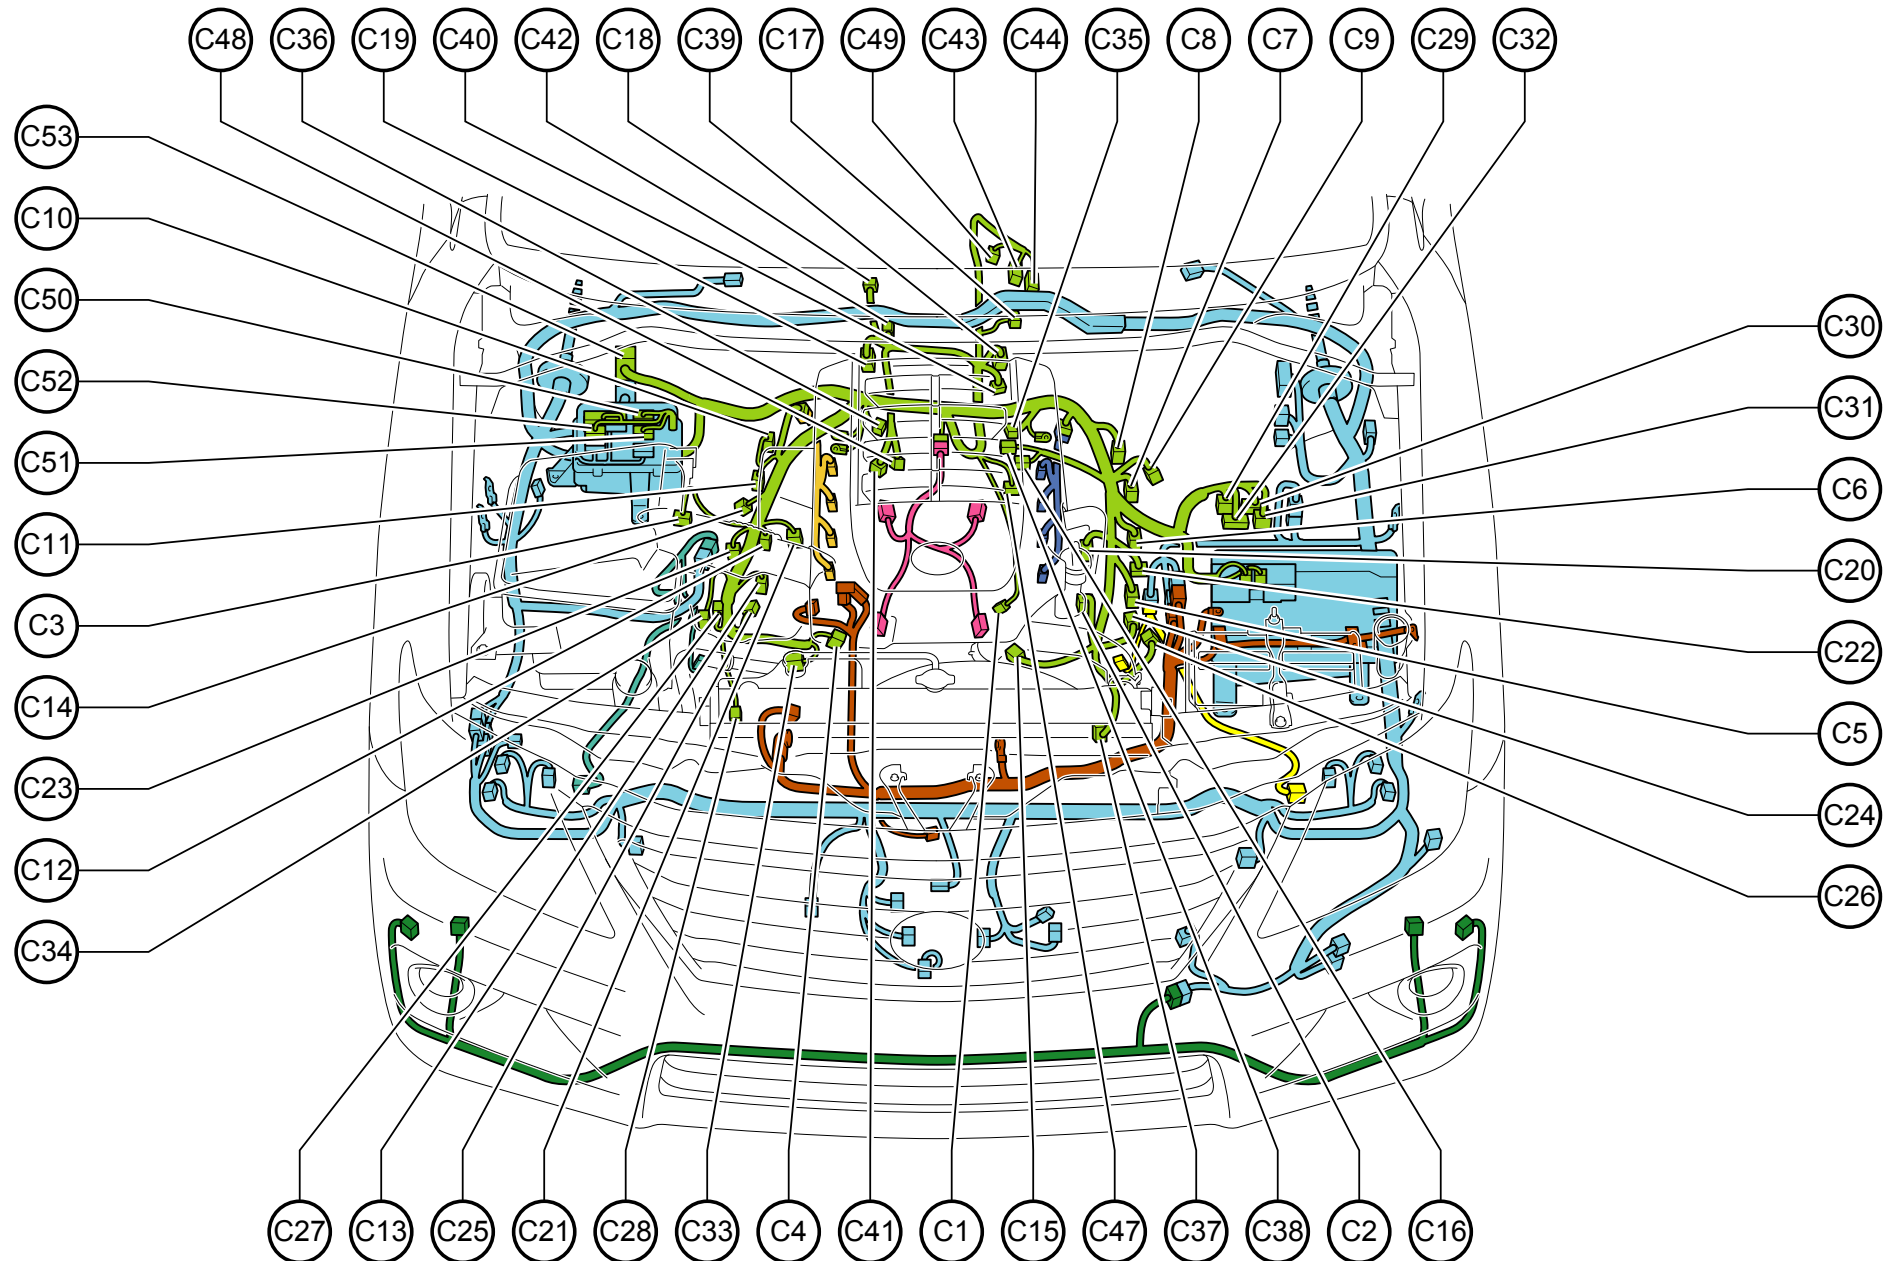


- C 1 Crankshaft Position Sensor
- C 2 Camshaft Position Sensor
- C 3 Mass Air Flow Meter
- C 4 Throttle Body Assembly
- C 5 Ignition Coil Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 7 Ignition Coil Assembly No.5
- C 8 Ignition Coil Assembly No.7
- C 9 Noise Filter (Ignition Bank 1)
- C 10 Ignition Coil Assembly No.8
- C 11 Ignition Coil Assembly No.6
- C 12 Ignition Coil Assembly No.4
- C 13 Ignition Coil Assembly No.2
- C 14 Noise Filter (Ignition Bank 2)
- C 15 E.F.I. Engine Coolant Temperature Sensor
- C 16 Purge VSV
- C 17 Oxygen Sensor (Bank 1 Sensor 2)
- C 18 Oxygen Sensor (Bank 2 Sensor 2)
- C 19 Park/Neutral Position Switch
- C 20 VVT Sensor (Bank 1 Intake Side)
- C 21 VVT Sensor (Bank 2 Intake Side)
- C 22 VVT Sensor (Bank 1 Exhaust Side)
- C 23 VVT Sensor (Bank 2 Exhaust Side)
- C 24 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 25 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 26 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 27 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 28 Power Steering Oil Pressure Sensor
- C 29 Air Injection Control Driver (Bank 1)
- C 30 Air Injection Control Driver (Bank 1)
- C 31 Air Injection Control Driver (Bank 2)
- C 32 Air Injection Control Driver (Bank 2)
- C 33 Air Pump Assembly (Bank 1)
- C 34 Air Pump Assembly (Bank 2)
- C 35 Air Switching Valve (Bank 1)
- C 36 Air Switching Valve (Bank 2)
- C 37 Cooler Compressor Assembly
- C 38 VSV (ACIS)
- C 39 Electronically Controlled Transmission Solenoid
- C 40 Electronically Controlled Transmission Solenoid
- C 41 Transmission Revolution Sensor (Turbine)
- C 42 Transmission Revolution Sensor (Counter Gear)
- C 43 Transfer Shift Actuator Assembly
- C 44 Transfer Shift Actuator Assembly
- C 47 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 48 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 49 Transfer Shift Actuator Assembly
- C 50 Junction Connector
- C 51 Junction Connector
- C 52 Junction Connector
- C 53 ECM

Position of Parts in Engine Compartment

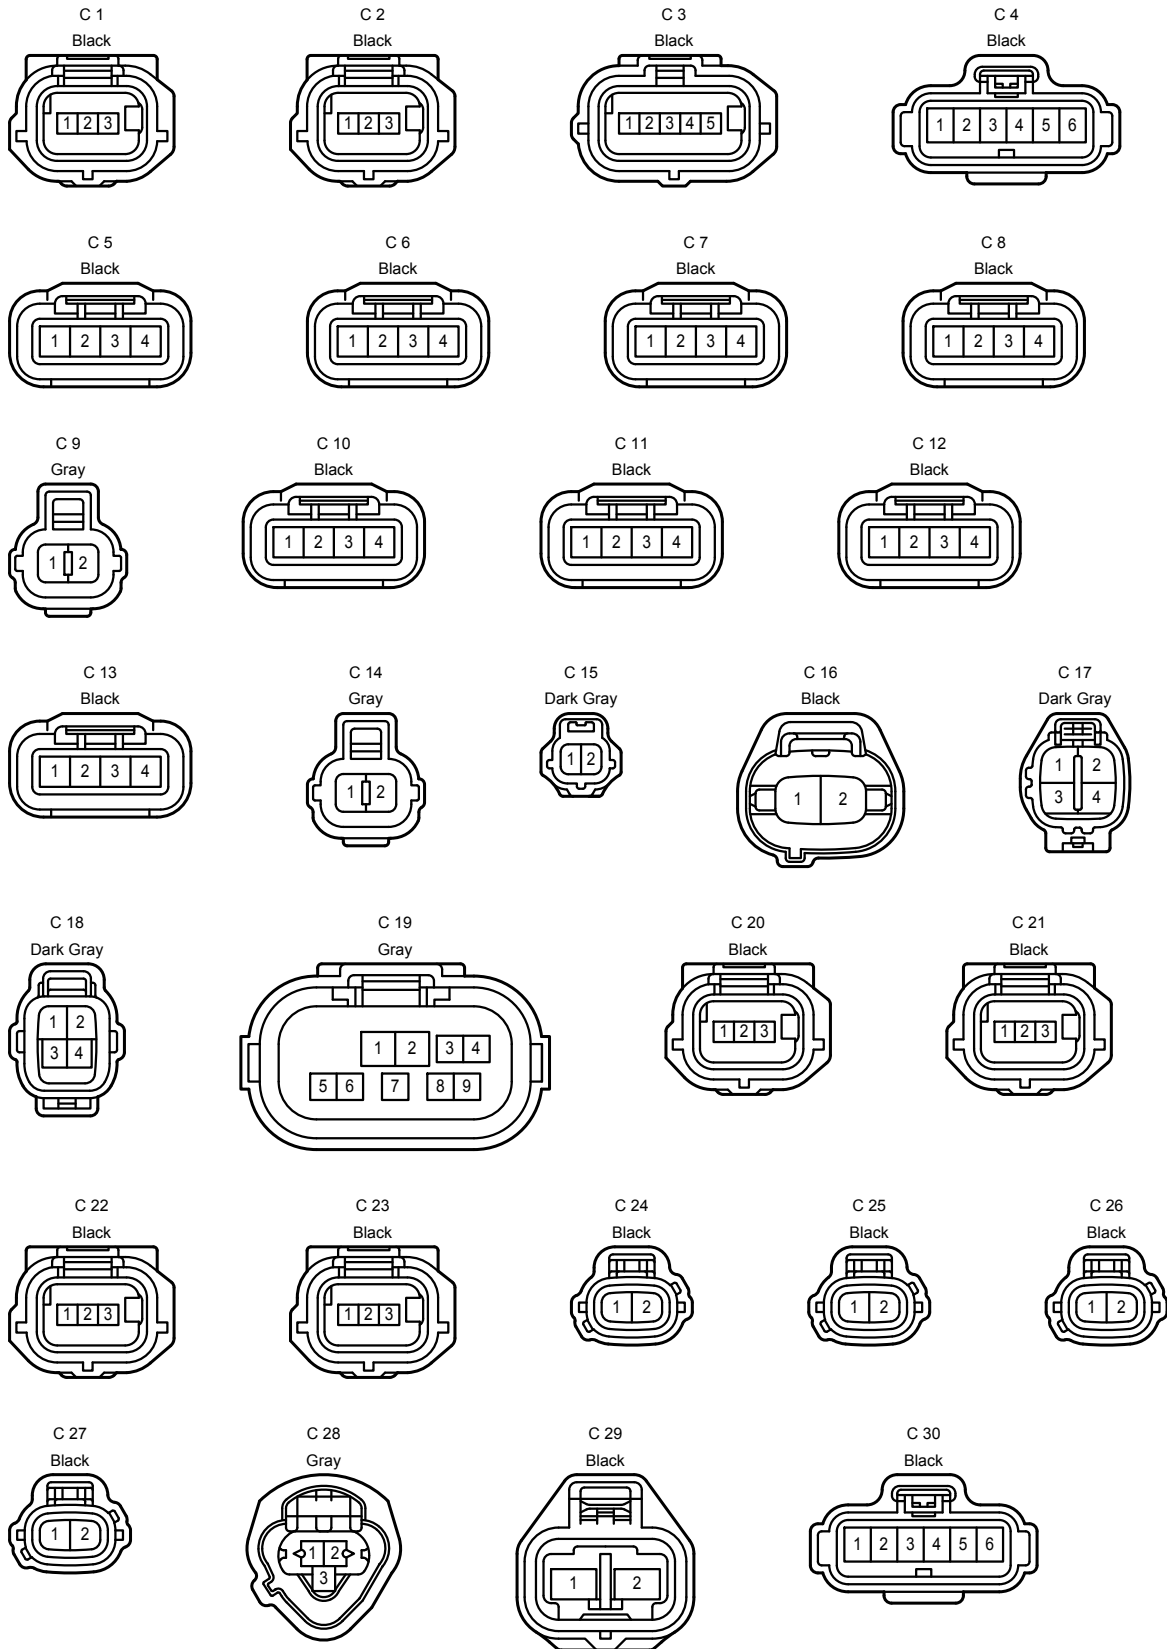

Position of Parts in Engine Compartment

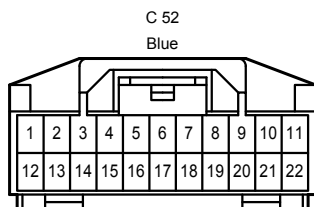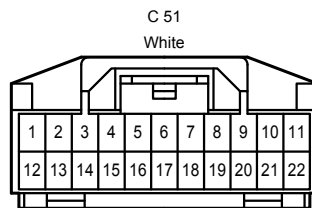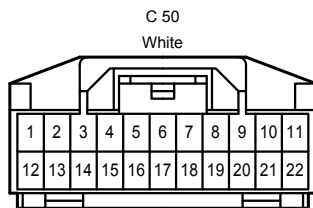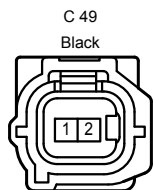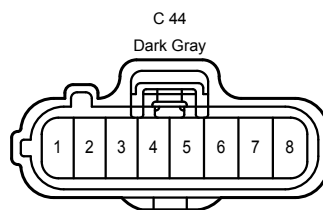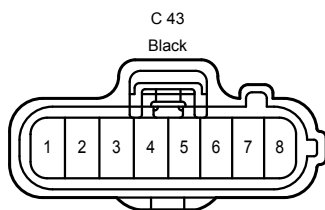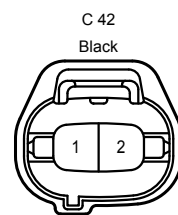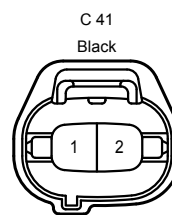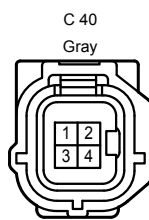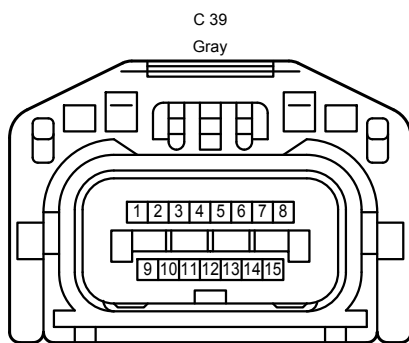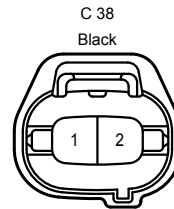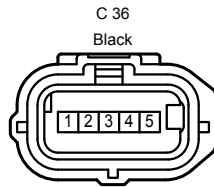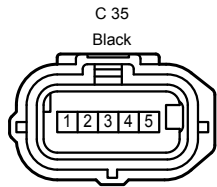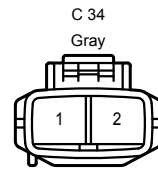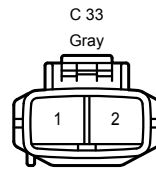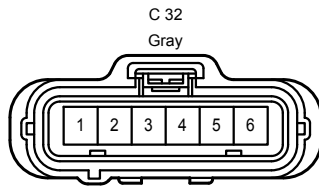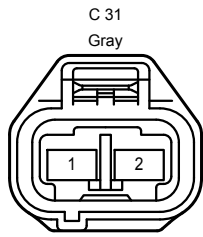

Position of Parts in Engine Compartment

C 53
Black

