




# I GROUND POINT (RHD)

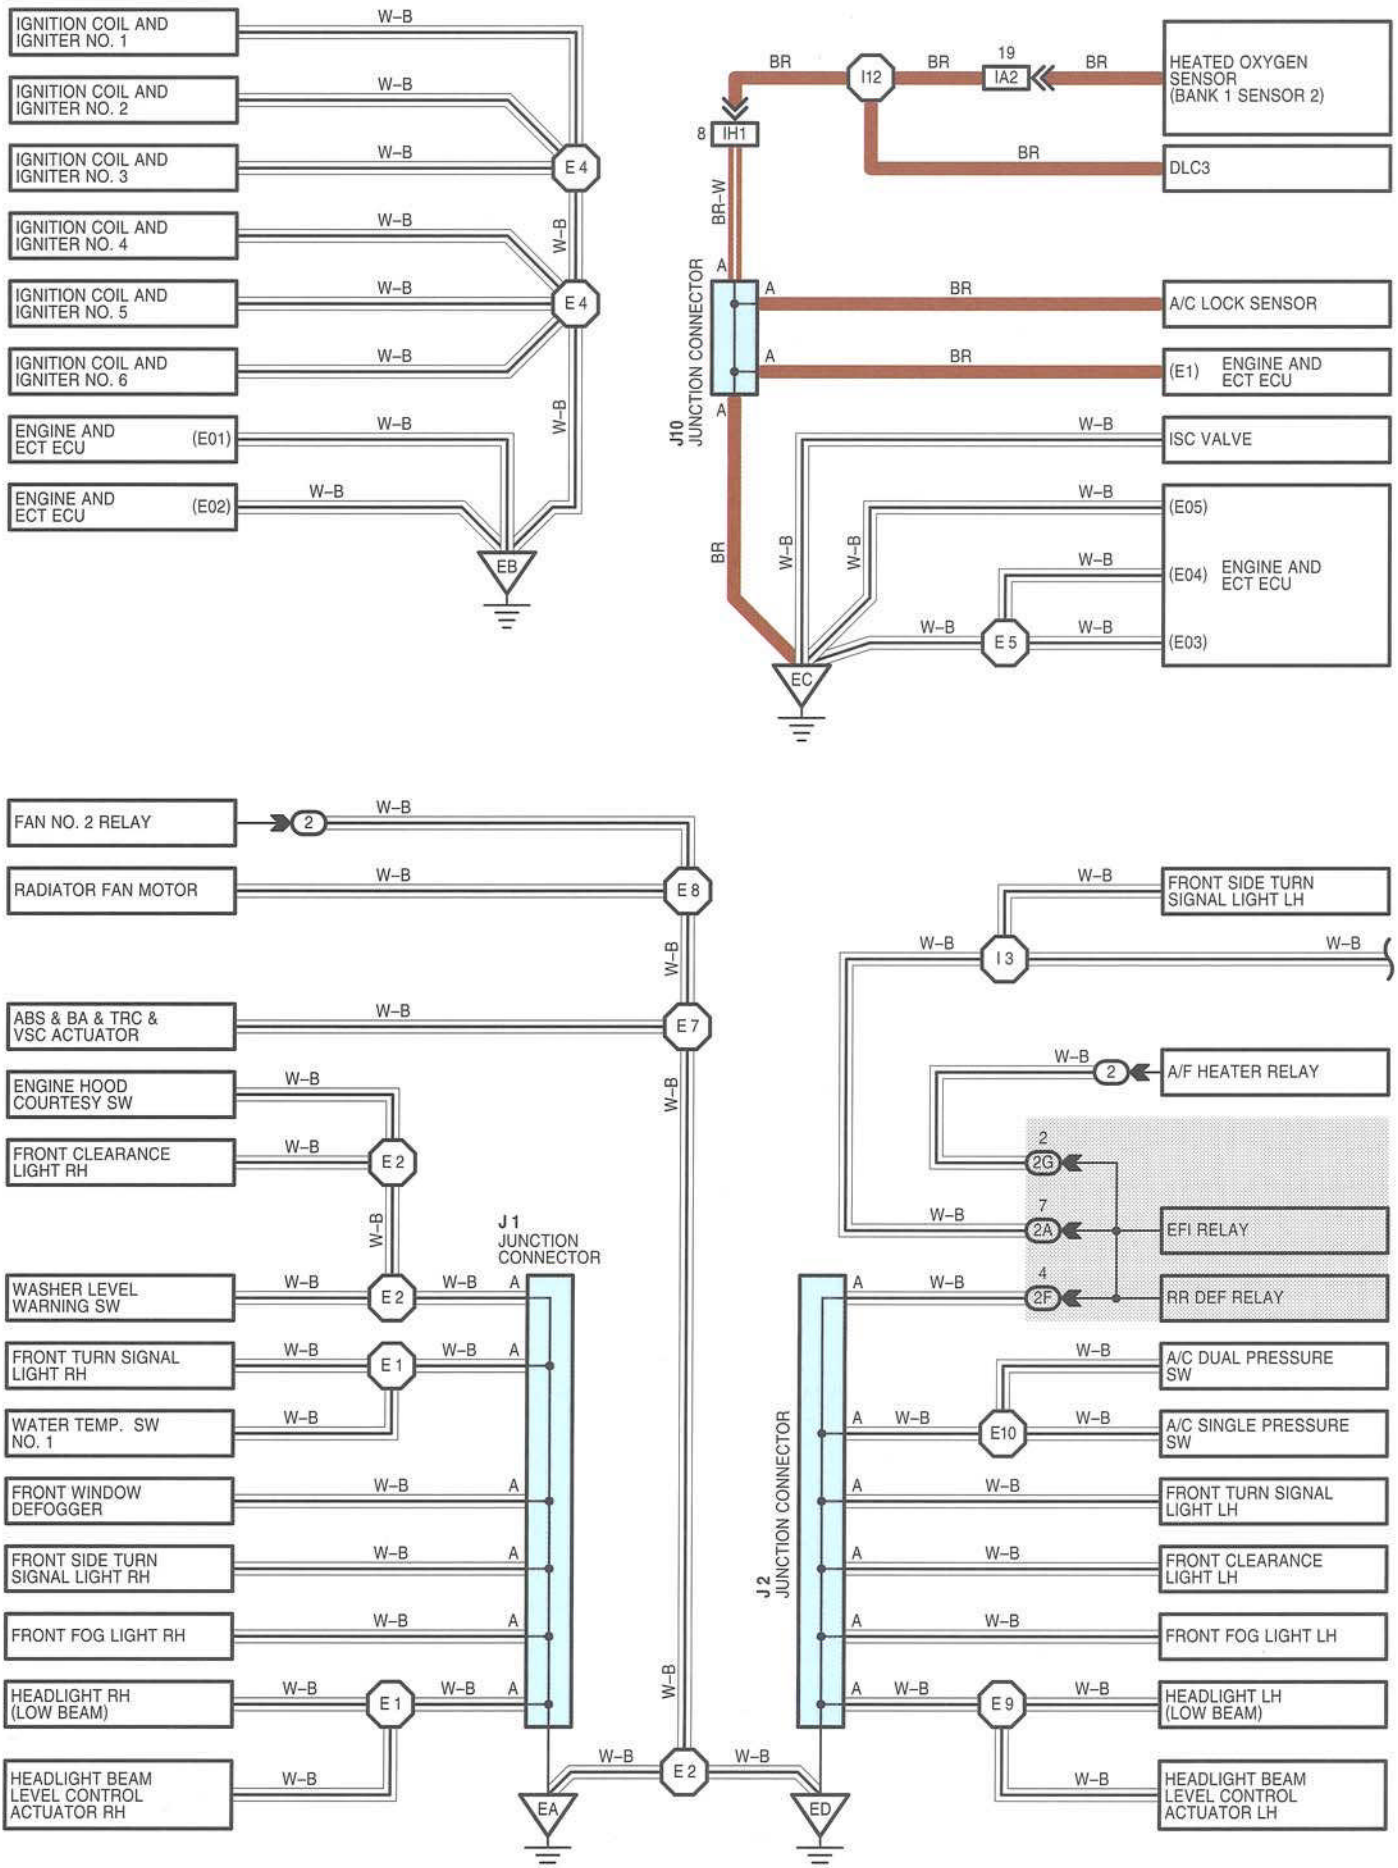


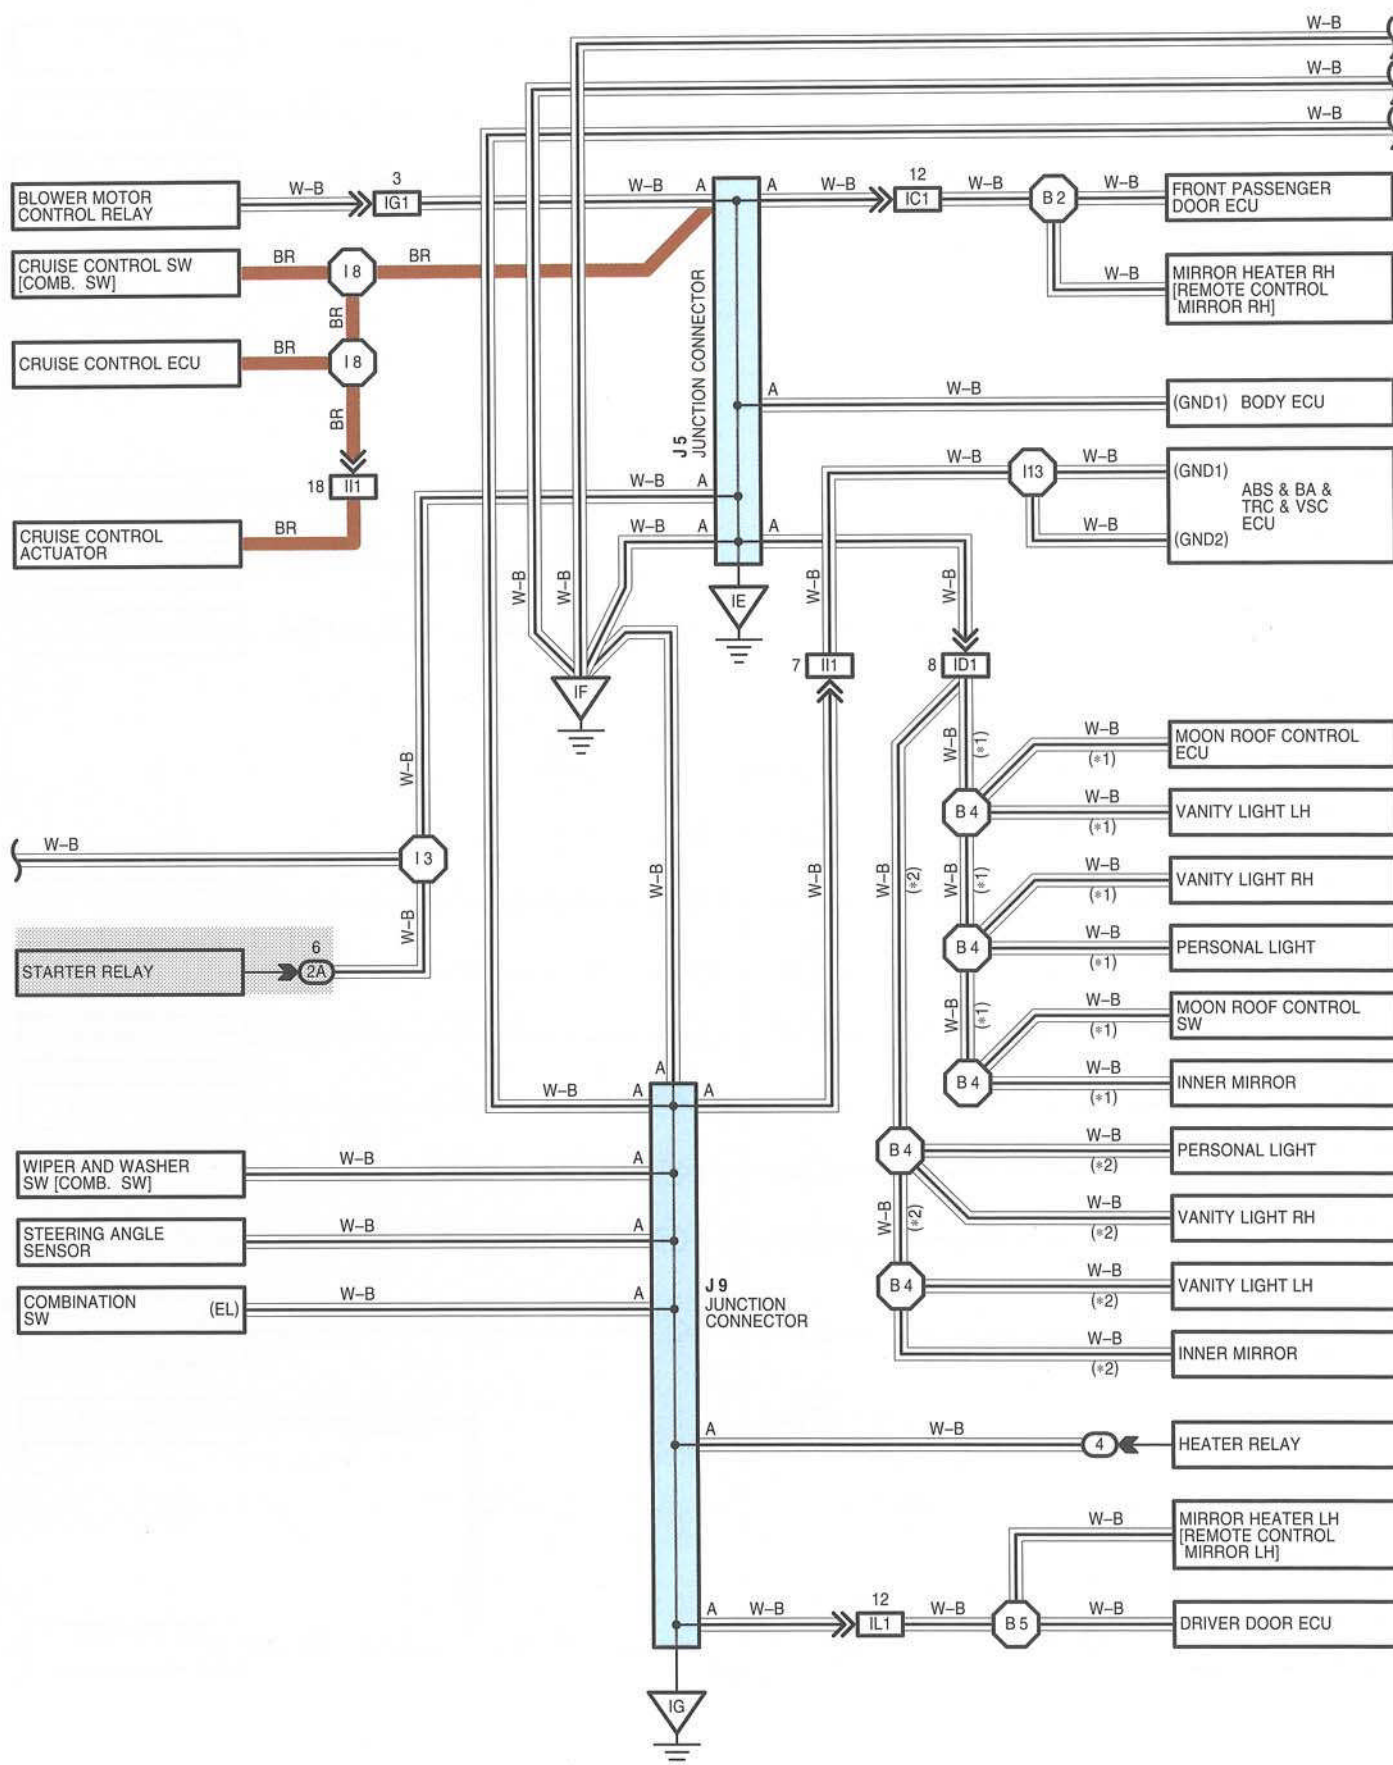


# I GROUND POINT (RHD)

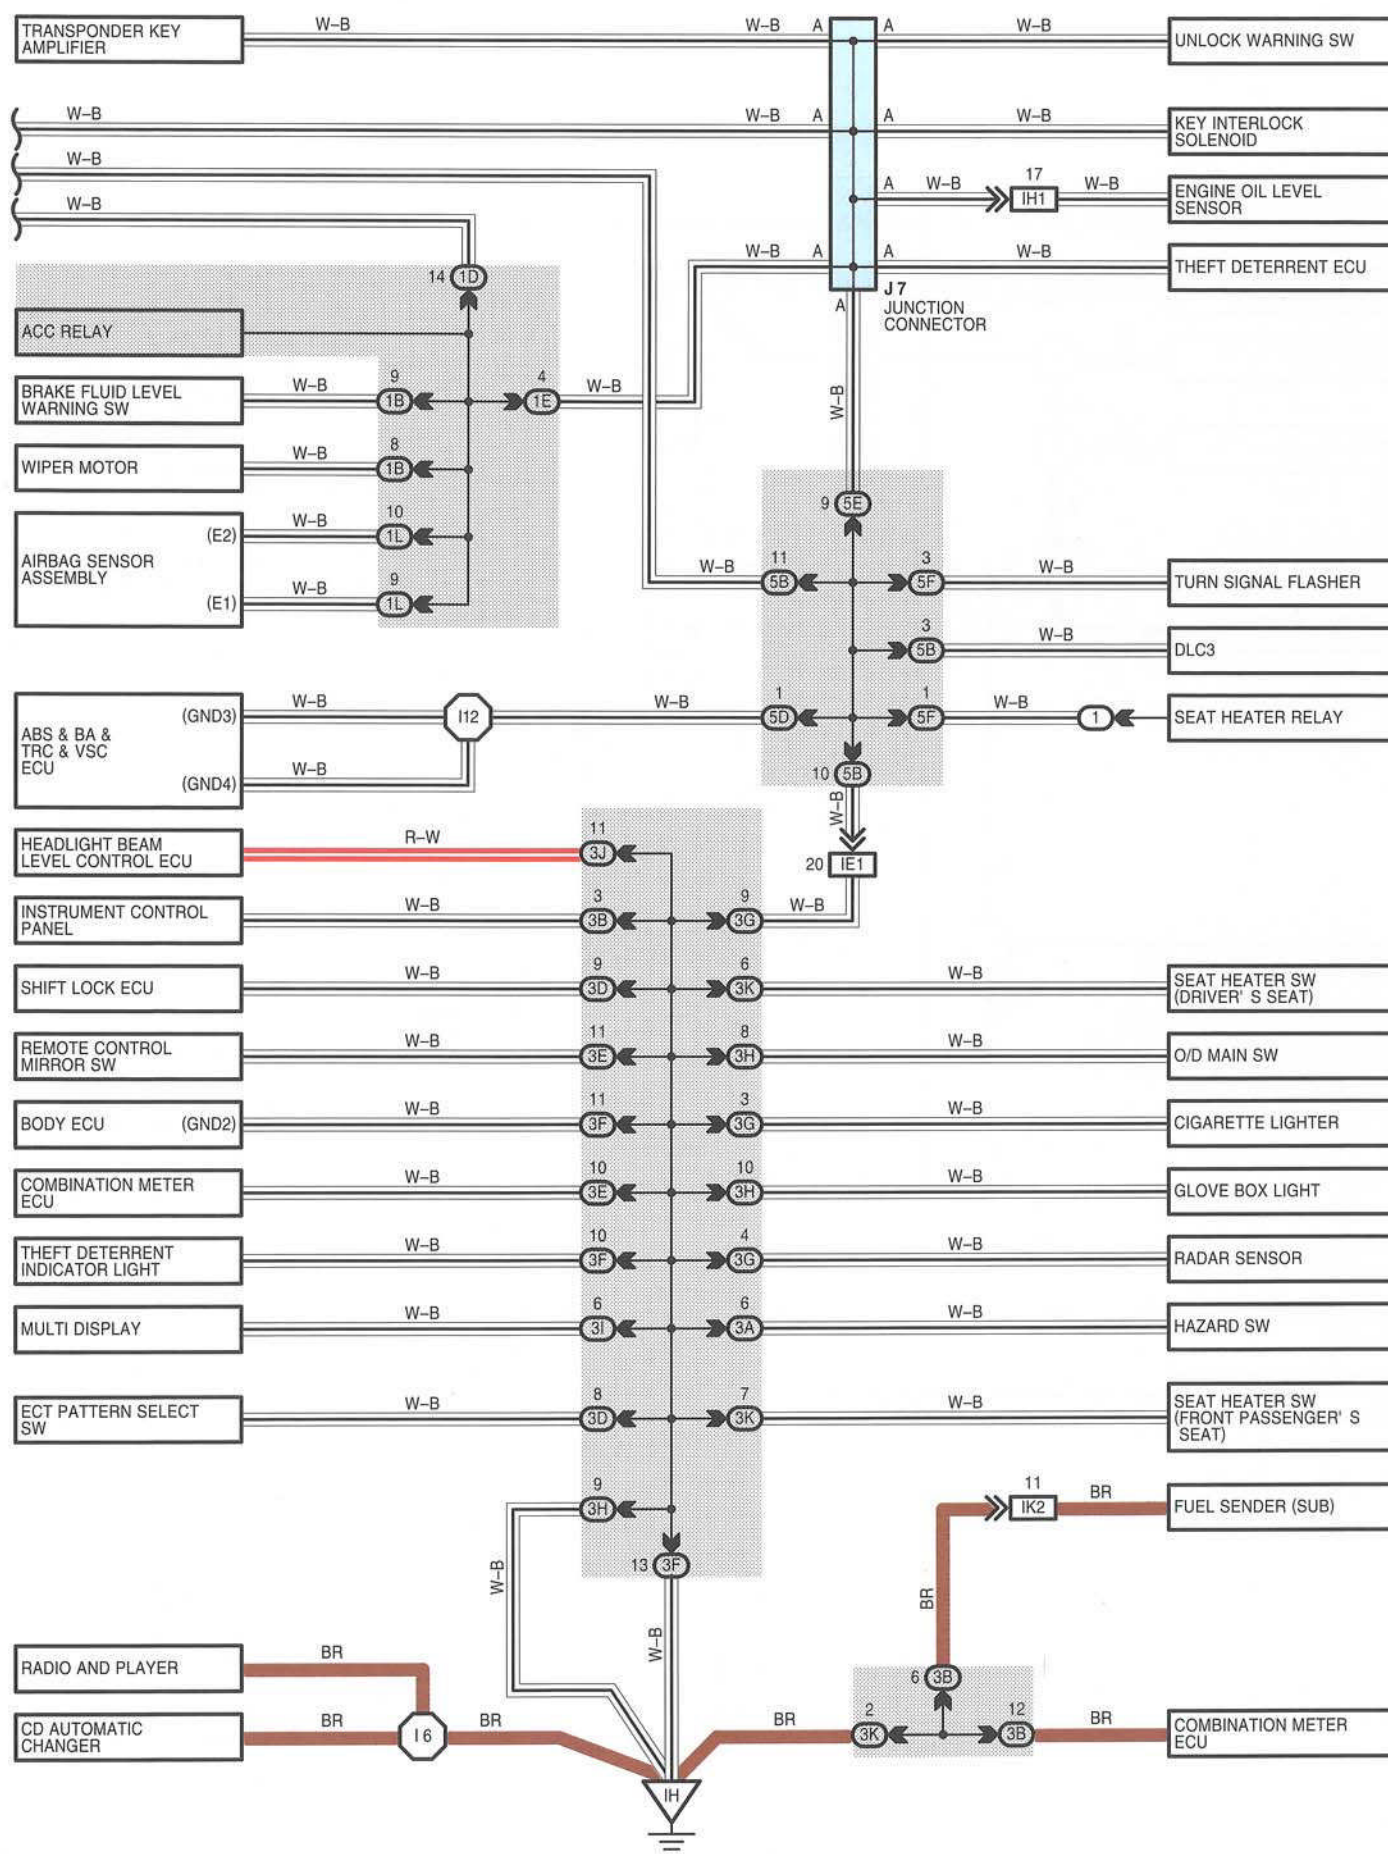



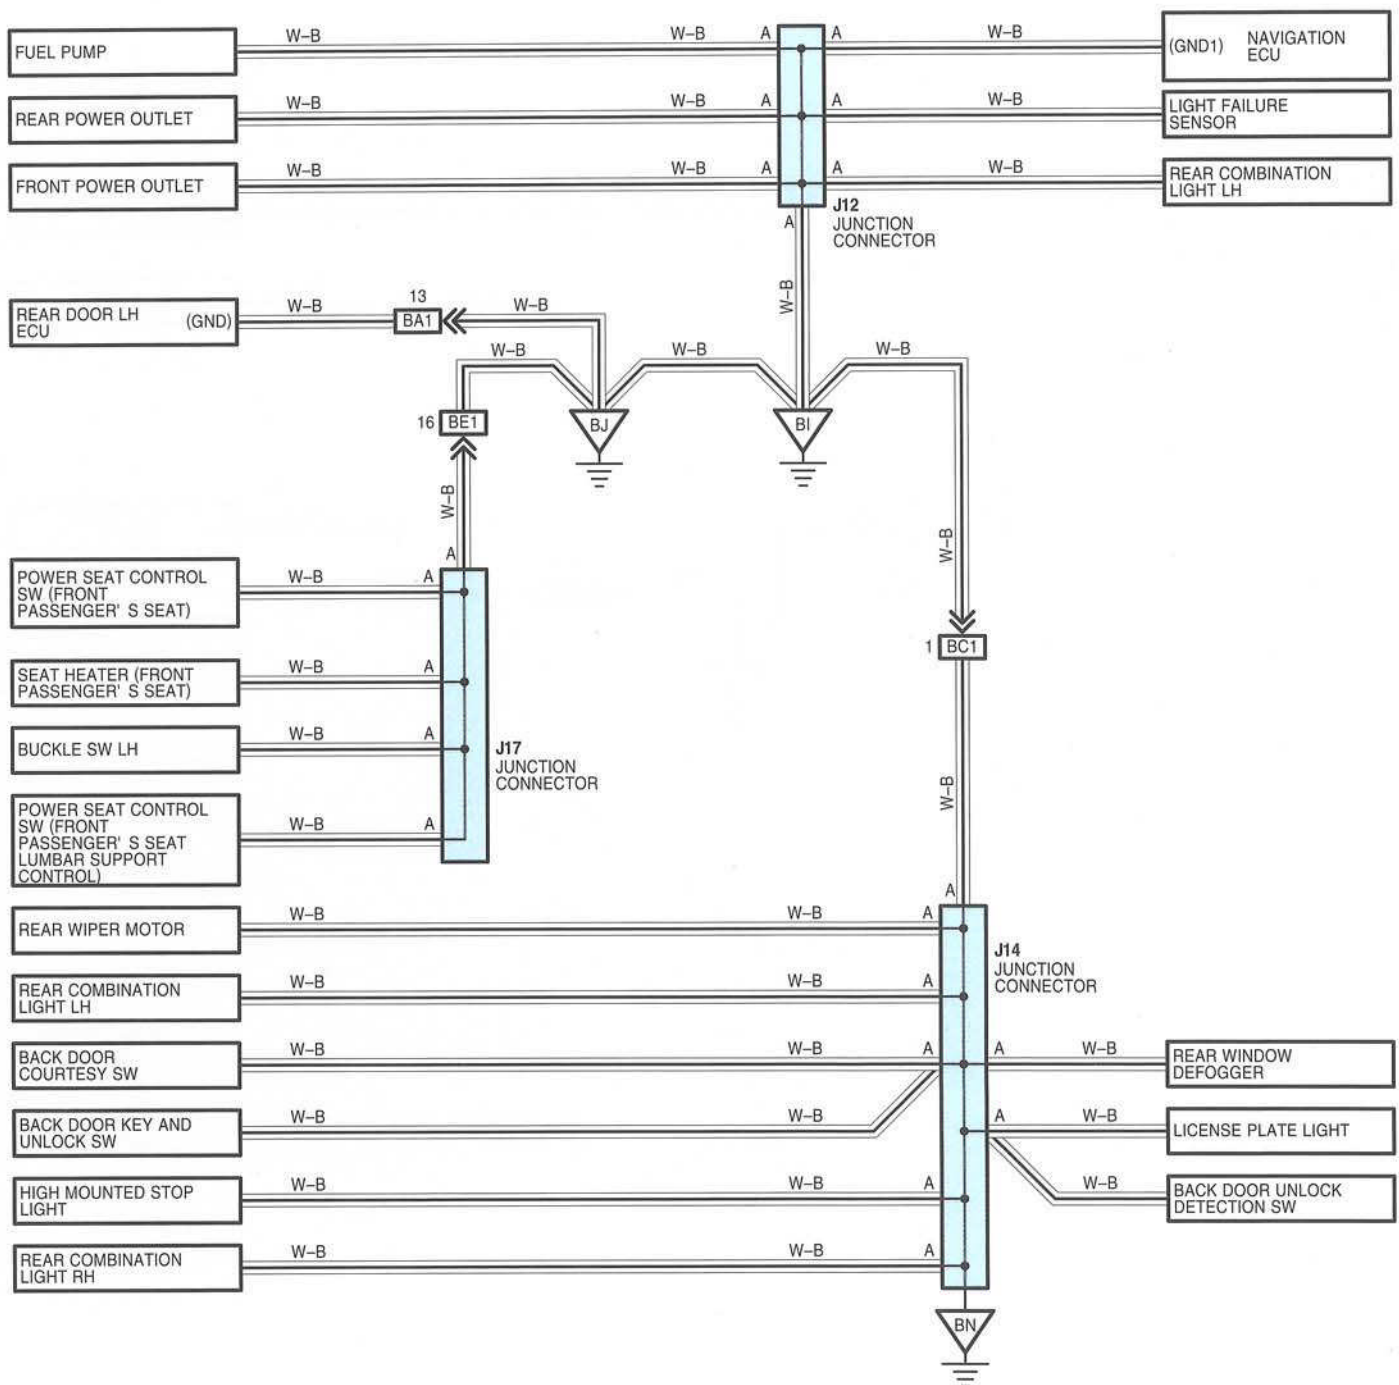

# I GROUND POINT (RHD)

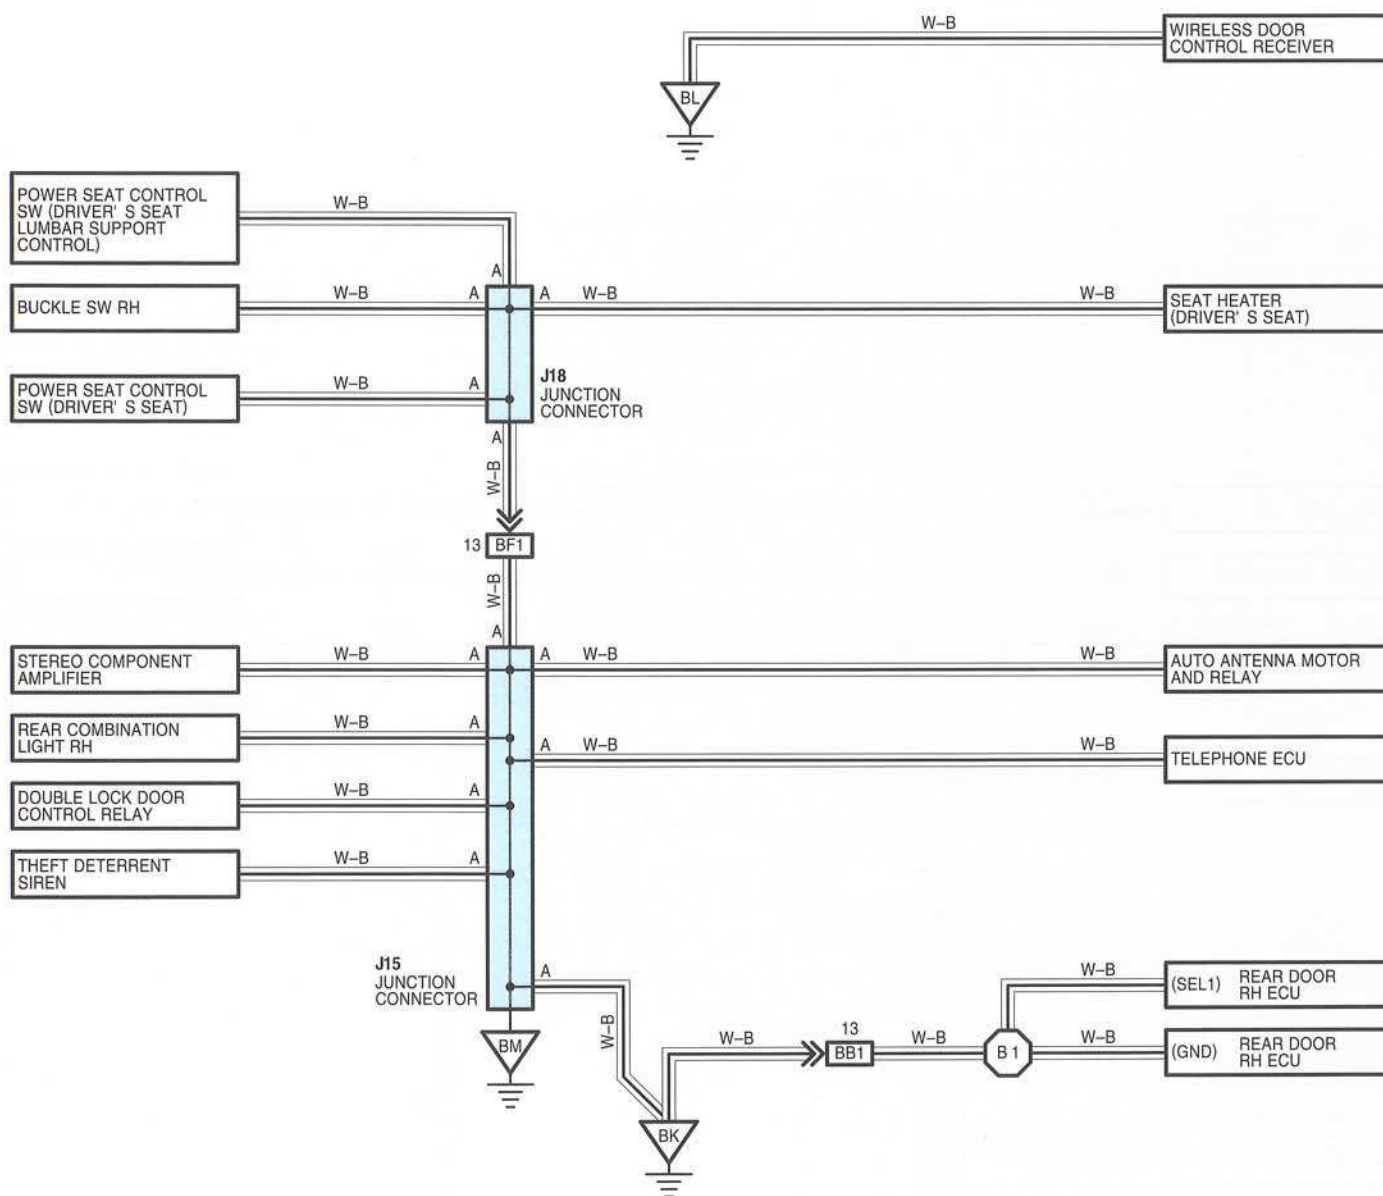

 : PARTS LOCATION

| Code | See Page  | Code | See Page  | Code | See Page  |
|------|-----------|------|-----------|------|-----------|
| J1   | 99 (RHD)  | J9   | 101 (RHD) | J15  | 102 (RHD) |
| J2   | 99 (RHD)  | J10  | 101 (RHD) | J17  | 104 (RHD) |
| J5   | 101 (RHD) | J12  | 102 (RHD) | J18  | 104 (RHD) |
| J7   | 101 (RHD) | J14  | 102 (RHD) |      |           |

 : RELAY BLOCKS

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|-------------------------------------|
| 1    | 87       | R/B No.1 (Lower Finish Panel)       |
| 2    | 88       | R/B No.2 (Engine Compartment Left)  |
| 4    | 89       | R/B No.4 (Left Kick Panel)          |

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)                    |
|------|----------|-------------------------------------------------------------------------|
| 1B   | 80 (RHD) | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)     |
| 1D   | 80 (RHD) | Cowl Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| 1E   |          |                                                                         |
| 1L   |          |                                                                         |
| 2A   | 82       | Cowl Wire and Engine Room J/B (Engine Compartment Left)                 |
| 2F   | 82       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)     |
| 2G   |          |                                                                         |
| 3A   |          |                                                                         |
| 3B   | 84       | Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center) |
| 3D   |          |                                                                         |
| 3E   |          |                                                                         |
| 3F   |          |                                                                         |
| 3G   |          |                                                                         |
| 3H   |          |                                                                         |
| 3I   |          |                                                                         |
| 3J   |          |                                                                         |
| 3K   |          |                                                                         |
| 5B   | 86       | Cowl Wire and J/B No.5 (Behind the Instrument Panel Left)               |
| 5D   |          |                                                                         |
| 5E   |          |                                                                         |
| 5F   |          |                                                                         |

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page  | Joining Wire Harness and Wire Harness (Connector Location)                |
|------|-----------|---------------------------------------------------------------------------|
| IA2  | 118 (RHD) | Cowl Wire and Floor No.2 Wire (Left Kick Panel)                           |
| IC1  | 118 (RHD) | Front Door LH Wire and Cowl Wire (Left Kick Panel)                        |
| ID1  | 118 (RHD) | Roof Wire and Cowl Wire (Left Side of Instrument Panel)                   |
| IE1  | 118 (RHD) | Instrument Panel Wire and Cowl Wire (Lower Finish Panel)                  |
| IG1  | 120 (RHD) | Cowl Wire and A/C Sub No.1 Wire (Instrument Panel Brace RH)               |
| IH1  | 120 (RHD) | Engine Wire and Cowl Wire (Behind the Glove Box)                          |
| II1  | 120 (RHD) | Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)                  |
| IK2  | 120 (RHD) | Instrument Panel Wire and Floor Wire (Instrument Panel Brace RH)          |
| IL1  | 120 (RHD) | Front Door RH Wire and Cowl Wire (Right Kick Panel)                       |
| BA1  | 122 (RHD) | Rear Door LH Wire and Floor No.2 Wire (Under the Left Center Pillar)      |
| BB1  | 122 (RHD) | Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)          |
| BC1  | 122 (RHD) | Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)          |
| BE1  | 124 (RHD) | Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat) |
| BF1  | 124 (RHD) | Floor Wire and Front Seat RH Wire (Under the Driver's Seat)               |

## I GROUND POINT (RHD)



### : GROUND POINTS

| Code | See Page  | Ground Points Location           |
|------|-----------|----------------------------------|
| EA   | 116 (RHD) | Engine Compartment Right         |
| EB   | 116 (RHD) | Surge Tank RH                    |
| EC   | 116 (RHD) | Rear Side of Surge Tank          |
| ED   | 116 (RHD) | Right Radiator Side Support      |
| IE   | 118 (RHD) | Cowl Side Panel LH               |
| IF   | 118 (RHD) | Dash Panel Center                |
| IG   | 118 (RHD) | Cowl Side Panel RH               |
| IH   | 118 (RHD) | Instrument Panel Brace RH        |
| BI   | 122 (RHD) | Upper the Rear Axle Housing Left |
| BJ   | 122 (RHD) | Under the Left Center Pillar     |
| BK   | 122 (RHD) | Under the Right Center Pillar    |
| BL   | 122 (RHD) | Left Rear Quarter Panel          |
| BM   | 122 (RHD) | Under the Rear RH Seat           |
| BN   | 122 (RHD) | Back Panel Center                |



### : SPLICE POINTS

| Code | See Page  | Wire Harness with Splice Points | Code | See Page  | Wire Harness with Splice Points |
|------|-----------|---------------------------------|------|-----------|---------------------------------|
| E1   | 116 (RHD) | Engine Room Main Wire           | I6   | 120 (RHD) | Instrument Panel Wire           |
| E2   |           |                                 | I8   | 120 (RHD) | Cowl Wire                       |
| E4   | 116 (RHD) | Engine Wire                     | I12  |           |                                 |
| E5   |           |                                 | I13  | 120 (RHD) | Engine Room Main Wire           |
| E7   | 116 (RHD) | Engine Room Main Wire           | B1   | 122 (RHD) | Rear Door RH Wire               |
| E8   |           |                                 | B2   | 122 (RHD) | Front Door LH Wire              |
| E9   |           |                                 | B4   | 122 (RHD) | Roof Wire                       |
| E10  |           |                                 | B5   | 122 (RHD) | Front Door RH Wire              |
| I3   | 120 (RHD) | Cowl Wire                       |      |           |                                 |

