


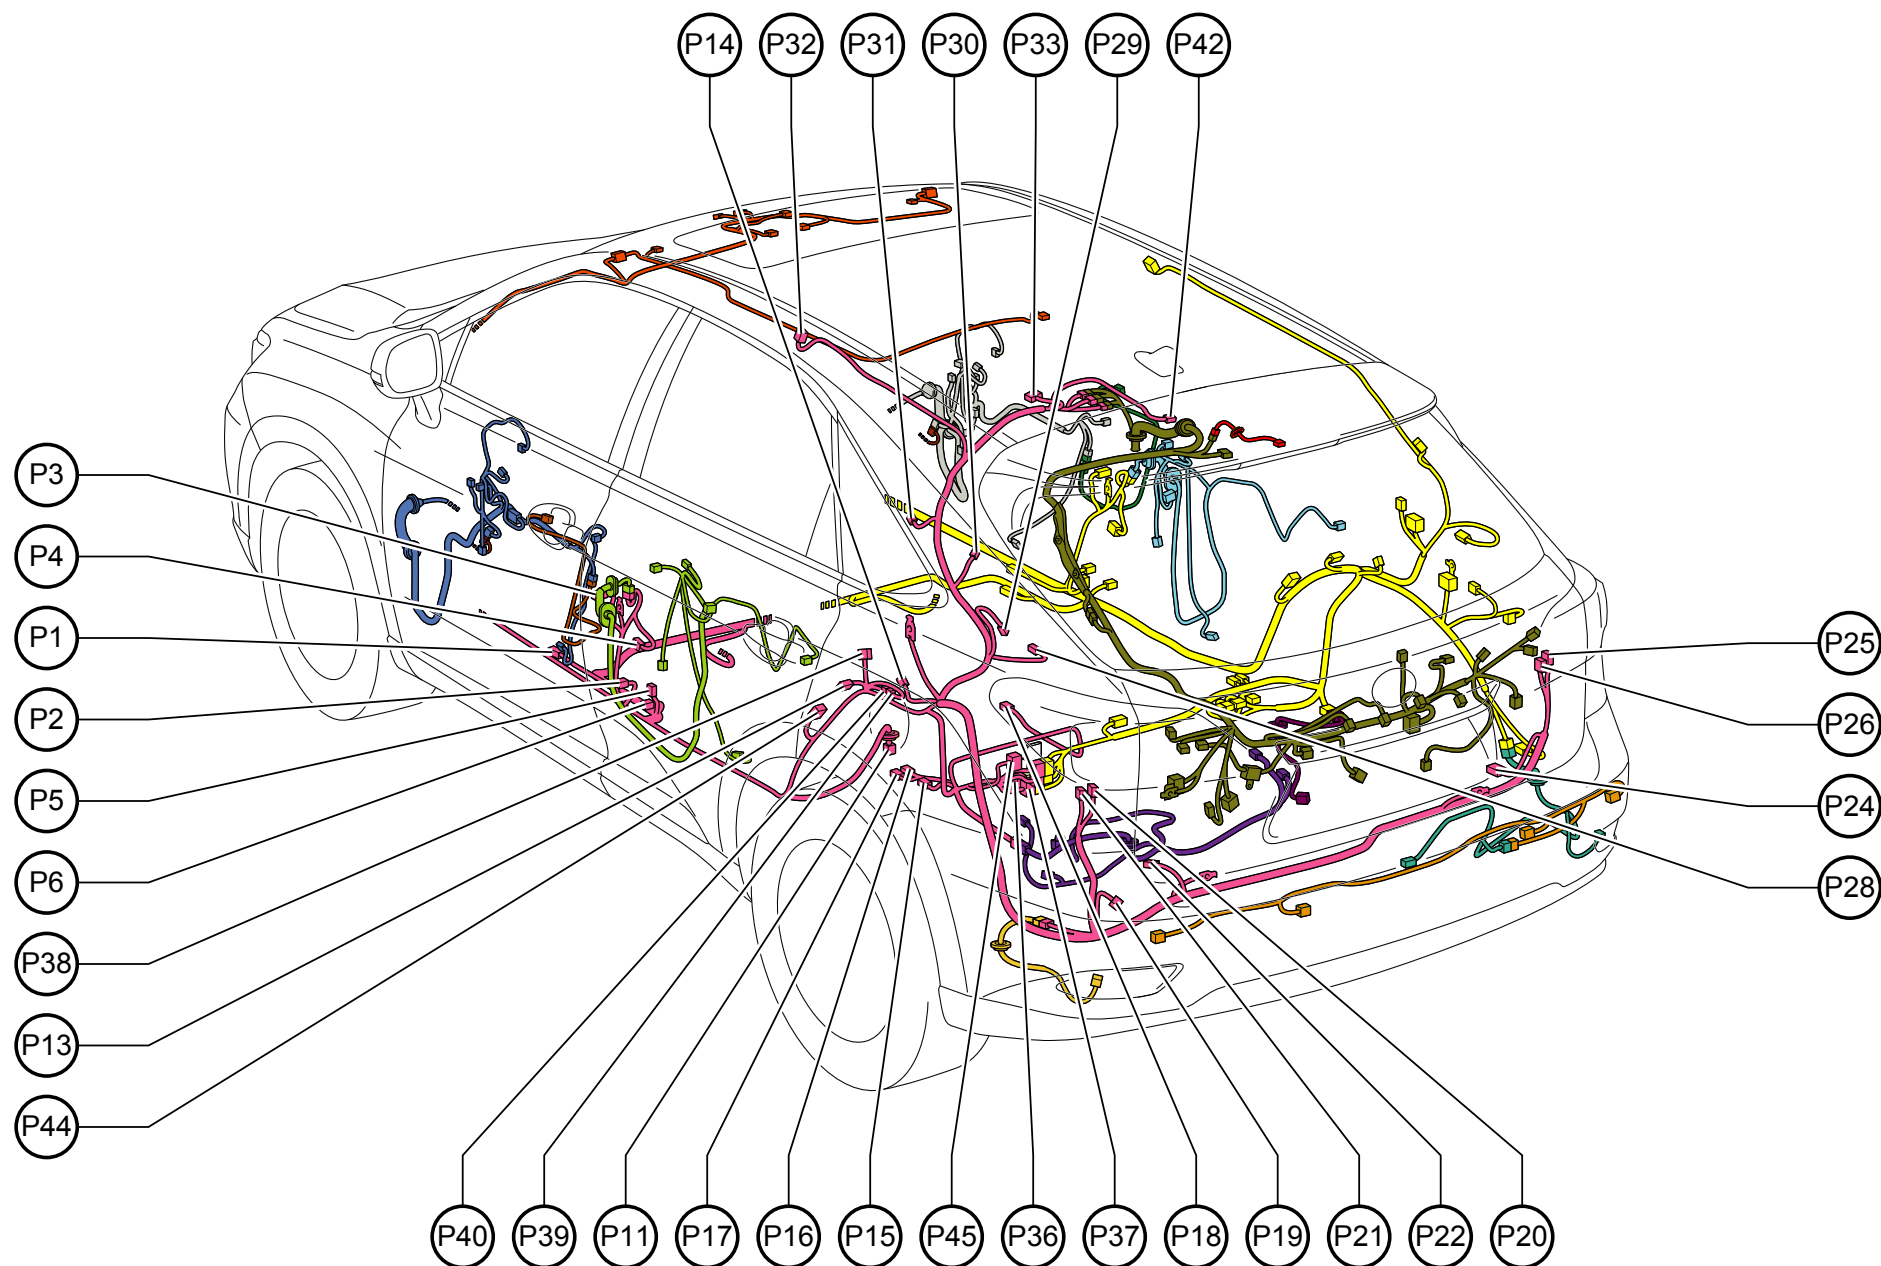

- P 1 No. 1 Interior Illumination Light Assembly LH
- P 2 Front Seat Outer Belt Assembly LH
- P 3 Front Door Courtesy Light Switch Assembly LH
- P 4 Side Airbag Sensor Assembly LH
- P 5 Front Seat Outer Belt Assembly LH
- P 6 Front Seat Outer Belt Assembly LH
- P 11 Fuel Pump , Fuel Sender Gauge Assembly
- P 13 Rear Door Courtesy Light Switch Assembly LH
- P 14 Rear No. 1 Seat Belt Assembly Outer LH
- P 15 Diode (Back Door)
- P 16 Rear Side Airbag Squib Circuit LH
- P 17 Rear Seat Inner with Center Belt Assembly LH
- P 18 Rear Indoor Electrical Key Oscillator
- P 19 Fuel Filter Opening Lid Lock Sub-Assembly
- P 20 Rear Combination Light Assembly LH
- P 21 Rear Combination Light Assembly LH
- P 22 Rear No. 3 Speaker Assembly
- P 24 Height Control Valve Harness Assembly
- P 25 Rear Combination Light Assembly RH
- P 26 Rear Combination Light Assembly RH
- P 28 No. 2 Room Light Assembly LH
- P 29 Rear Power Point Socket Assembly
- P 30 Quarter Side Speaker Assembly LH
- P 31 Noise Filter (Rear Window Defogger)
- P 32 Curtain Shield Airbag Assembly LH
- P 33 Power Back Door Unit Assembly
- P 36 Junction Connector
- P 37 Junction Connector
- P 38 Junction Connector
- P 39 Junction Connector
- P 40 Junction Connector
- P 42 Noise Filter (Center Stop Light Assembly)
- P 44 Rear Airbag Sensor LH
- P 45 Junction Connector

Position of Parts in Body <LHD>

