
 
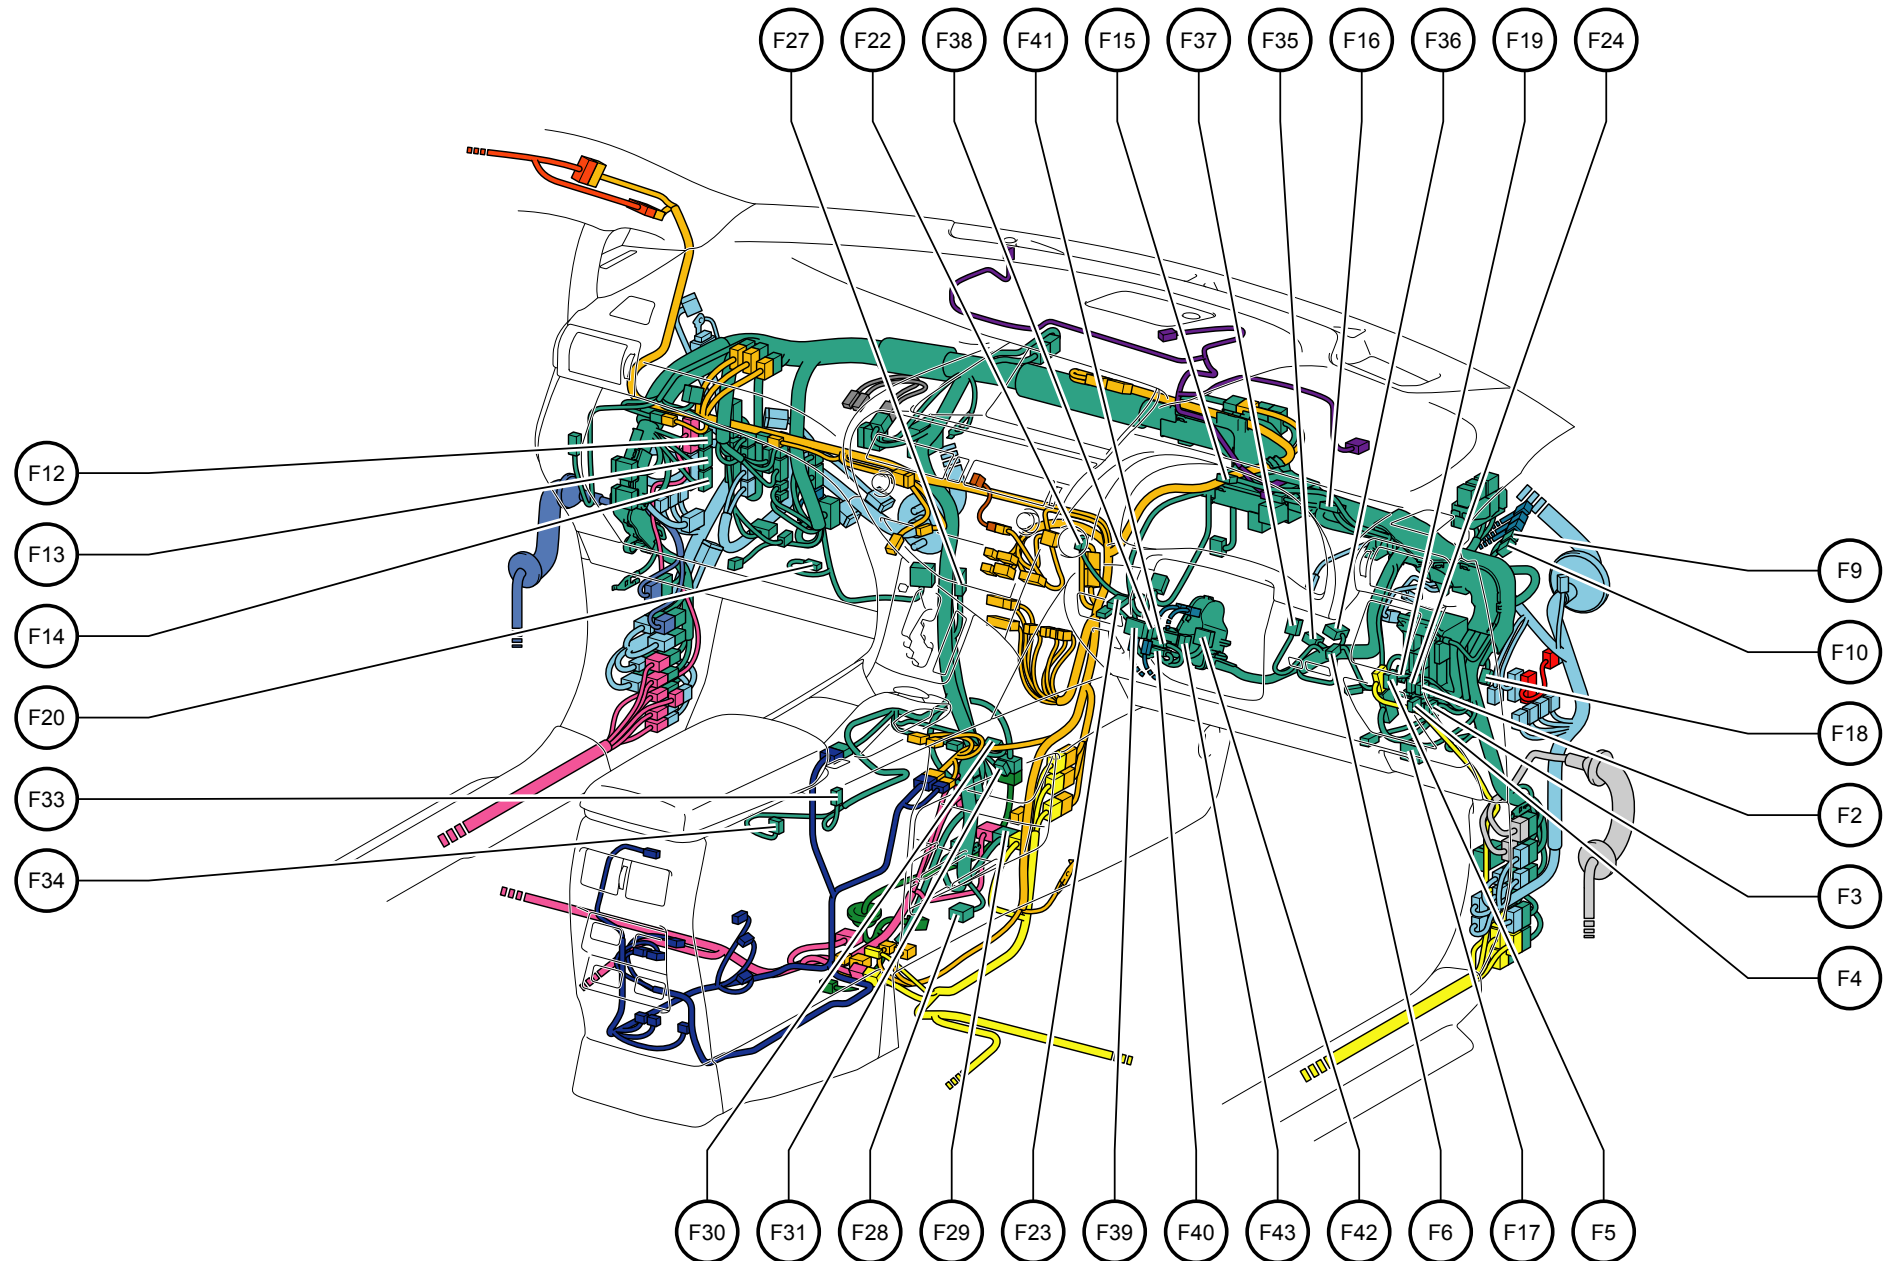

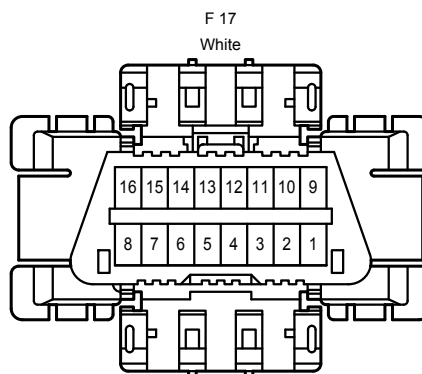
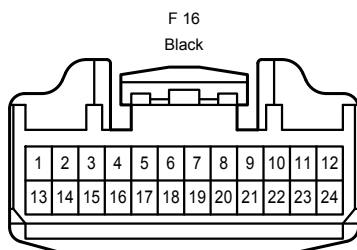
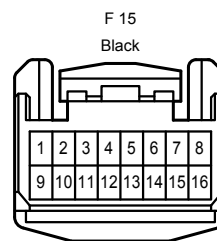
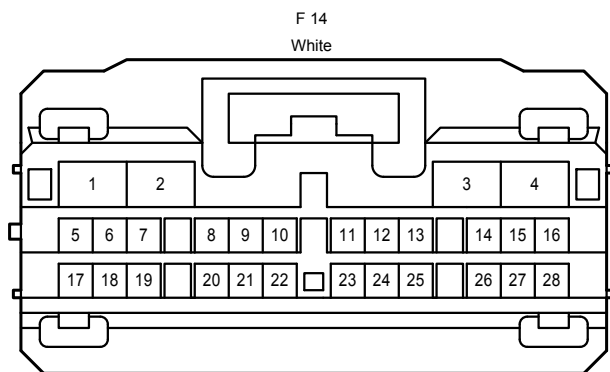
 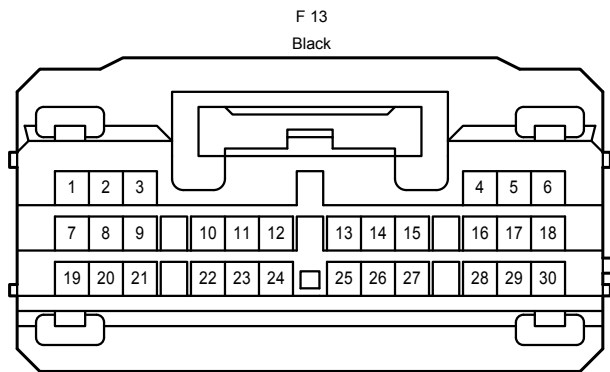
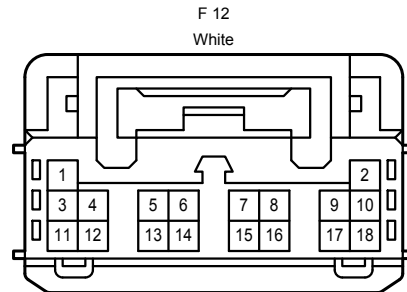

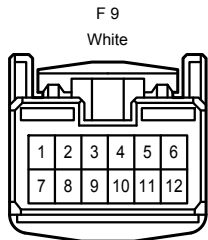
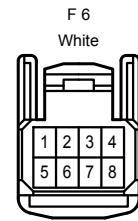
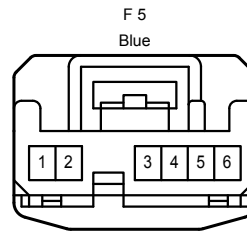


Position of Parts in Instrument Panel <RHD>

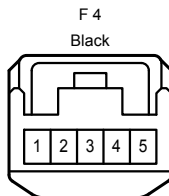

- F 2 Headlight Cleaner Switch Assembly
- F 3 Fuel Lid Opener Switch
- F 4 Door Control Switch Assembly
- F 5 Front Wiper Deicer Switch
- F 6 Light Control Rheostat
- F 9 Power Steering ECU Assembly
- F 10 Power Steering ECU Assembly
- F 12 Main Body ECU
- F 13 Main Body ECU
- F 14 Main Body ECU
- F 15 Combination Meter Assembly
- F 16 Combination Meter Assembly
- F 17 DLC3
- F 18 Height Control Off Switch
- F 19 Pre-Crash Safety System Cancel Switch
- F 20 No. 1 Interior Illumination Light Assembly LH
- F 22 Power Switch
- F 23 Satellite Switch Set
- F 24 Suspension Control Switch
- F 27 No. 1 Clearance Warning Buzzer
- F 28 Yaw Rate Sensor Assembly
- F 29 Airbag Sensor Assembly
- F 30 Transmission Control Switch
- F 31 Shift Lock Control ECU Sub-Assembly
- F 33 VSC Off Switch
- F 34 Seat Heater Switch
- F 35 Power Tilt Motor
- F 36 Multiplex Tilt & Telescopic ECU
- F 37 Steering Lock Actuator Assembly
- F 38 Power Tilt Motor
- F 39 Headlight Dimmer Switch Assembly
- F 40 Spiral Cable Sub-Assembly
- F 41 Spiral Cable Sub-Assembly
- F 42 Windshield Wiper Switch Assembly
- F 43 Steering Sensor

Position of Parts in Instrument Panel <RHD>

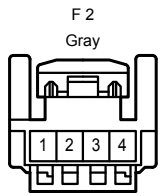

Position of Parts in Instrument Panel <RHD>

