



RELATIVE POSITION ON
BOTH SIDES

SPANISH OAK ECU

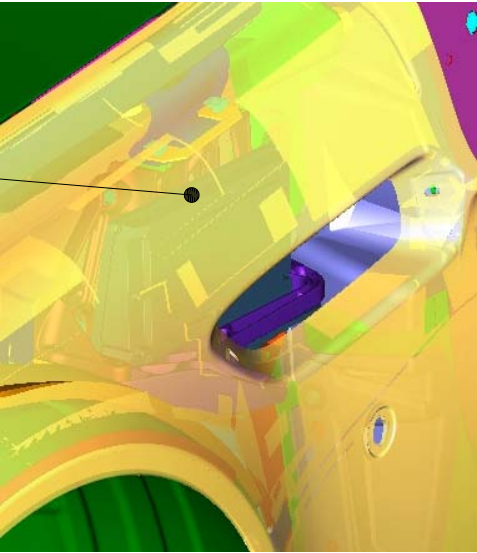

SPANISH OAK IS ON
PASSENGER SIDE

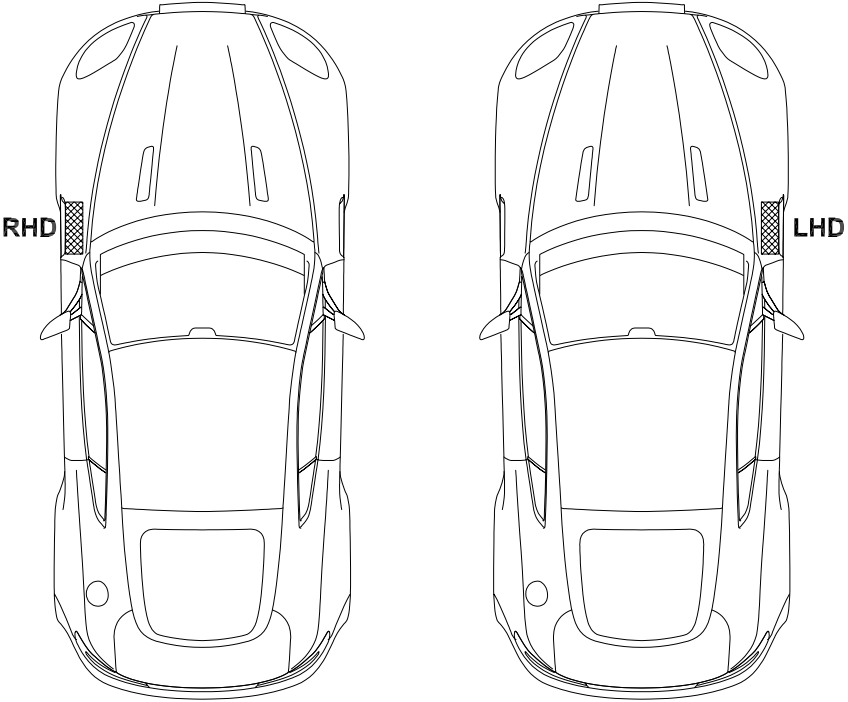

ECU (E-Engine)




CD1(O)	C0636-1	PAGE 1
IN1(O)	C0636-2	PAGE 1
IN2(O)	C0636-3	PAGE 1
IN3(O)	C0636-4	PAGE 1
IN4(O)	C0636-5	PAGE 1
EVR-CC(O)	C0636-6	PAGE 1
TPKIN(O)	C0636-7	PAGE 1
IN5(O)	C0636-8	PAGE 1
IN6(O)	C0636-9	PAGE 1
IN7(O)	C0636-10	PAGE 1
IN8(O)	C0636-11	PAGE 1
CD2(O)	C0636-12	PAGE 1
INT(O)	C0636-13	PAGE 1
FC-V(O)	C0636-14	PAGE 23
VRBRT(O)	C0636-15	PAGE 1
VCT1(O)	C0636-16	PAGE 1
VCT2(O)	C0636-17	PAGE 1
THROTTLE POT BREF(O)	C0636-18	PAGE 1
TP1-RS(O)	C0636-19	PAGE 1
KS1-(O)	C0636-20	PAGE 1
KS2-(O)	C0636-21	PAGE 1
KS2-(O)	C0636-22	PAGE 1
KS3-(O)	C0636-23	PAGE 1
CD4(O)	C0636-24	PAGE 1
CD1(O)	C0636-25	PAGE 1
KS4-(O)	C0636-26	PAGE 1
KS4+(O)	C0636-27	PAGE 1
CD2(O)	C0636-28	PAGE 1
TP2-PS(O)	C0636-29	PAGE 1
HEG01(O)	C0636-30	PAGE 1
HEG02(O)	C0636-31	PAGE 1
KS1+(O)	C0636-32	PAGE 1
ECT(O)	C0636-33	PAGE 1
CKP+(O)	C0636-34	PAGE 1
CD2(O)	C0636-35	PAGE 1
FRTS(O)	C0636-36	PAGE 1
FRPT(O)	C0636-37	PAGE 1
CD6(O)	C0636-38	PAGE 1
CDX(O)	C0636-39	PAGE 1
BREF(O)	C0636-40	PAGE 1
SIGRTN(O)	C0636-41	PAGE 1
CD7(O)	C0636-42	PAGE 1
CD8(O)	C0636-43	PAGE 1
DPE(O)	C0636-44	PAGE 1
CRANK POS-(O)	C0636-45	PAGE 1
KS3+(O)	C0636-46	PAGE 1
THROTTLE MTR-(O)	C0636-47	PAGE 1
THROTTLE MTR-(O)	C0636-48	PAGE 1
HTR1(O)	C0636-49	PAGE 1
HTR2(O)	C0636-50	PAGE 1

ECU (T-Trans)


FAWM(O)	C0634-2	PAGE 23
ENG COOL LEVEL(O)	C0634-4	PAGE 1
MAP(O)	C0634-7	PAGE 1
ENG OIL TEMP(O)	C0634-8	PAGE 1
MAF+ RHO(O)	C0634-9	PAGE 1
MAF+ RHO(O)	C0634-10	PAGE 1
MAF+ LHS(O)	C0634-11	PAGE 1
IAT(O)	C0634-12	PAGE 1
SOLENOID(O)	C0634-13	PAGE 1
CB2+(O)	C0634-14	PAGE 3
ML(O)	C0634-21	PAGE 13
MAF- LHS(O)	C0634-23	PAGE 1
HEG012(O)	C0634-24	PAGE 1
HEG022(O)	C0634-25	PAGE 1
CB2-(O)	C0634-26	PAGE 3
BMP(O)	C0634-36	PAGE 1
ALTMON(O)	C0634-38	PAGE 22
BREF(O)	C0634-40	PAGE 1
SIGRTN(O)	C0634-41	PAGE 1
PUMP(O)	C0634-44	PAGE 1
HTR12(O)	C0634-47	PAGE 1
HTR22(O)	C0634-48	PAGE 1
FAWM(O)	C0634-49	PAGE 23
HTR(O)	C0634-50	PAGE 1

ECU (C-Cowl)

STRT_LEN(O)	C0635-2	PAGE 22
APP1 BREF(O)	C0635-4	PAGE 1
APP1(O)	C0635-5	PAGE 1
APP1 RTN(O)	C0635-6	PAGE 1
BRAKE PEDAL SWITCH(O)	C0635-7	PAGE 20
BRAKE ON/OFF SWITCH(O)	C0635-8	PAGE 20
CAGE GROUND(O)	C0635-10	PAGE 25
CB1+(O)	C0635-11	PAGE 3
MOTOR FUEL PUMP(O)	C0635-12	PAGE 23
PSPT(O)	C0635-14	PAGE 1
ACCS(O)	C0635-15	PAGE 1
APP2 BREF(O)	C0635-16	PAGE 1
APP2(O)	C0635-17	PAGE 1
APP2 RTN(O)	C0635-18	PAGE 1
SCCS(O)	C0635-19	PAGE 8
RESTRAINT DEPLOY IND(O)	C0635-20	PAGE 2
FUEL PUMP MONITOR(O)	C0635-21	PAGE 23
OIL PR SW(O)	C0635-22	PAGE 1
CB1-(O)	C0635-23	PAGE 3
POWERHOLD(O)	C0635-24	PAGE 1
ACOR(O)	C0635-25	PAGE 5
ACPT(O)	C0635-26	PAGE 1
APFS(O)	C0635-28	PAGE 1
CSTT(O)	C0635-29	PAGE 22
SCCS RTN(O)	C0635-30	PAGE 8
TXOUT(O)	C0635-31	PAGE 9
EVMM(O)	C0635-34	PAGE 1
VPOWER(O)	C0635-35	PAGE 1
VPOWER(O)	C0635-36	PAGE 1
PATL(O)	C0635-37	PAGE 13
PH(O)	C0635-38	PAGE 22
CSRT(O)	C0635-39	PAGE 22
BREF(O)	C0635-40	PAGE 1
SIGRTN(O)	C0635-41	PAGE 1
RVIN(O)	C0635-42	PAGE 9
ERV(O)	C0635-43	PAGE 1
FEPS(O)	C0635-44	PAGE 3
KEEP ALIVE POWER(O)	C0635-45	PAGE 25
POWER GROUND(O)	C0635-47	PAGE 25
POWER GROUND(O)	C0635-48	PAGE 25
POWER GROUND(O)	C0635-49	PAGE 25
IGMSNS(O)	C0635-50	PAGE 25

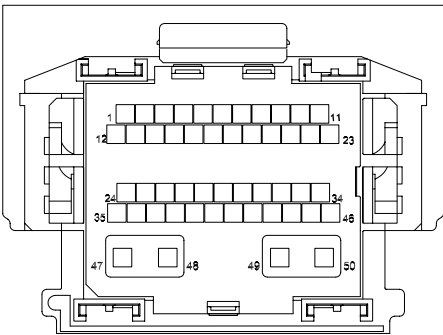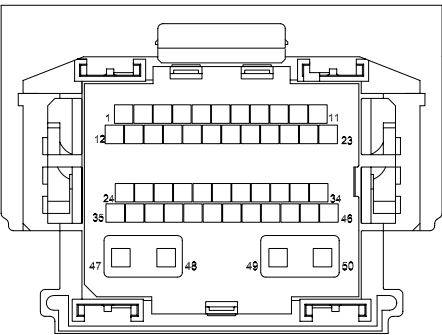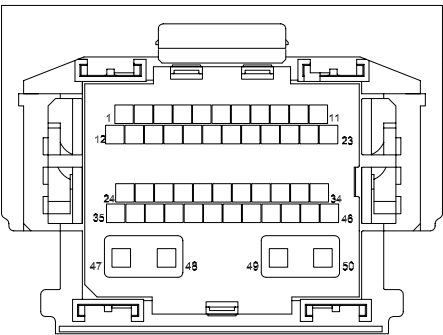

VIEWED THROUGH WIRE INSERTION SIDE OF ENGINE HARNESS CONNECTORS

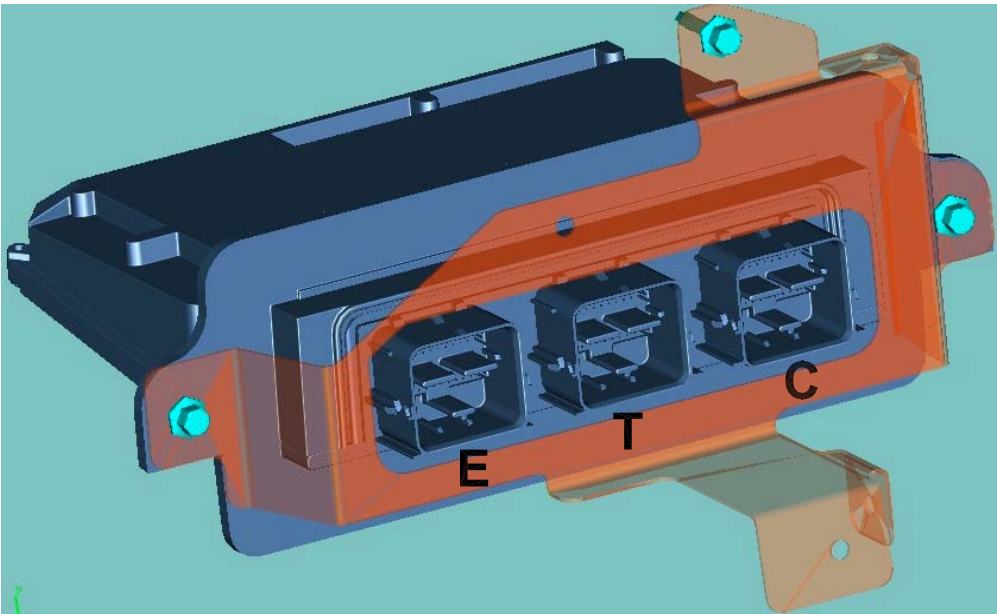

VIEW LOOKING INTO CONNECTORS ON MODULE