



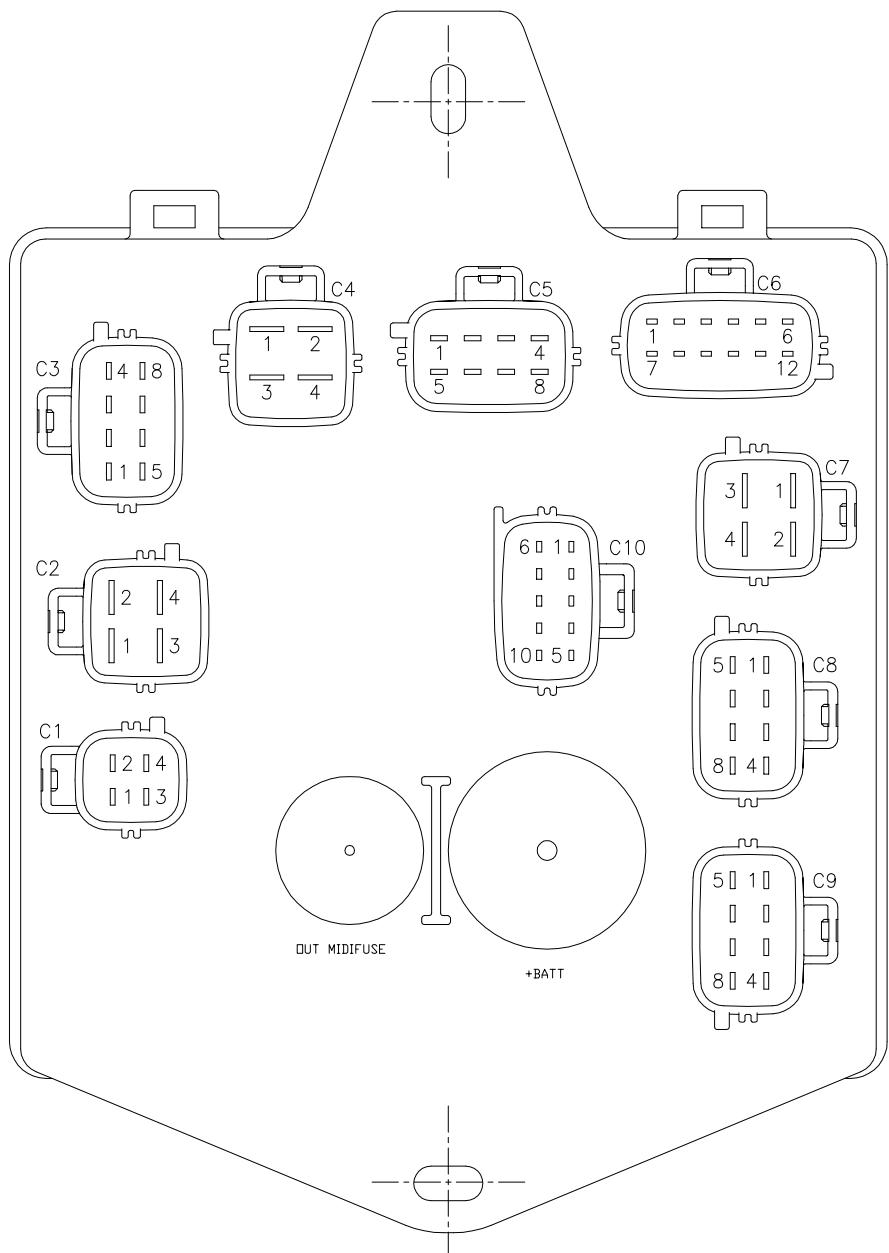


VIEW THROUGH BASE

FUSEBOX CONNECTOR	CIRCUIT C NUMBER	HARNESS
1	C0570	Forward
2	C0571	Forward
3	C0572	Forward
4	C0573	Forward
5	C0574	Forward
6	C0575	Forward
7	C0576	Engine
8	C0577	Engine
9	C0578	Engine
10	C0579	Forward

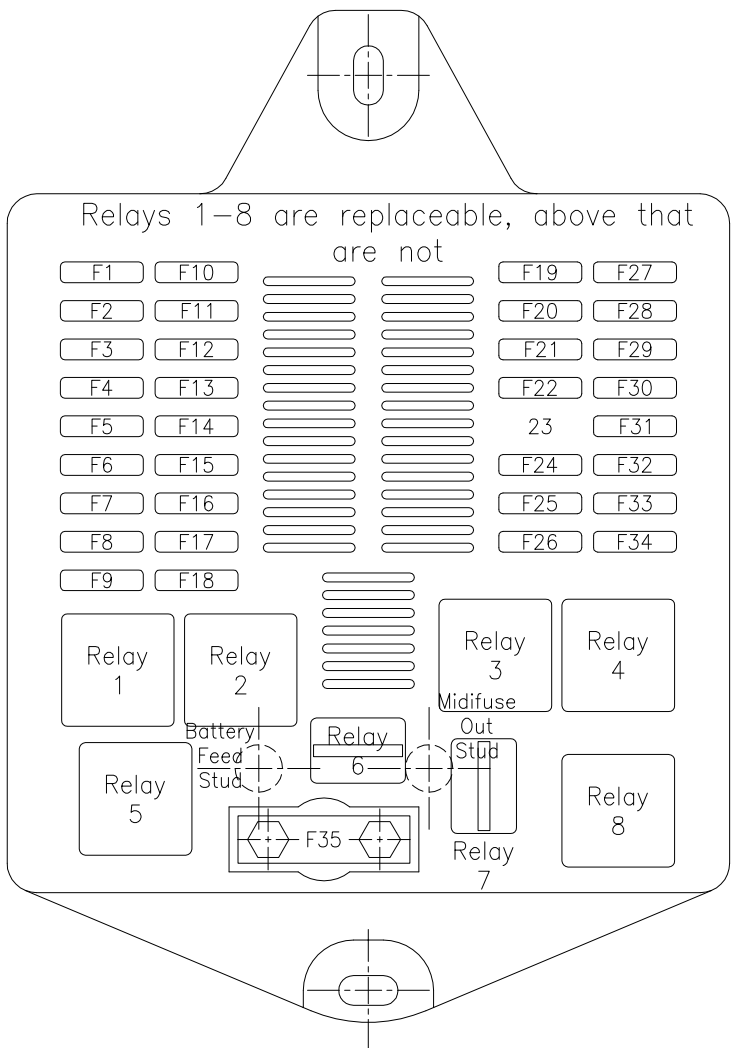

VIEW THROUGH LID

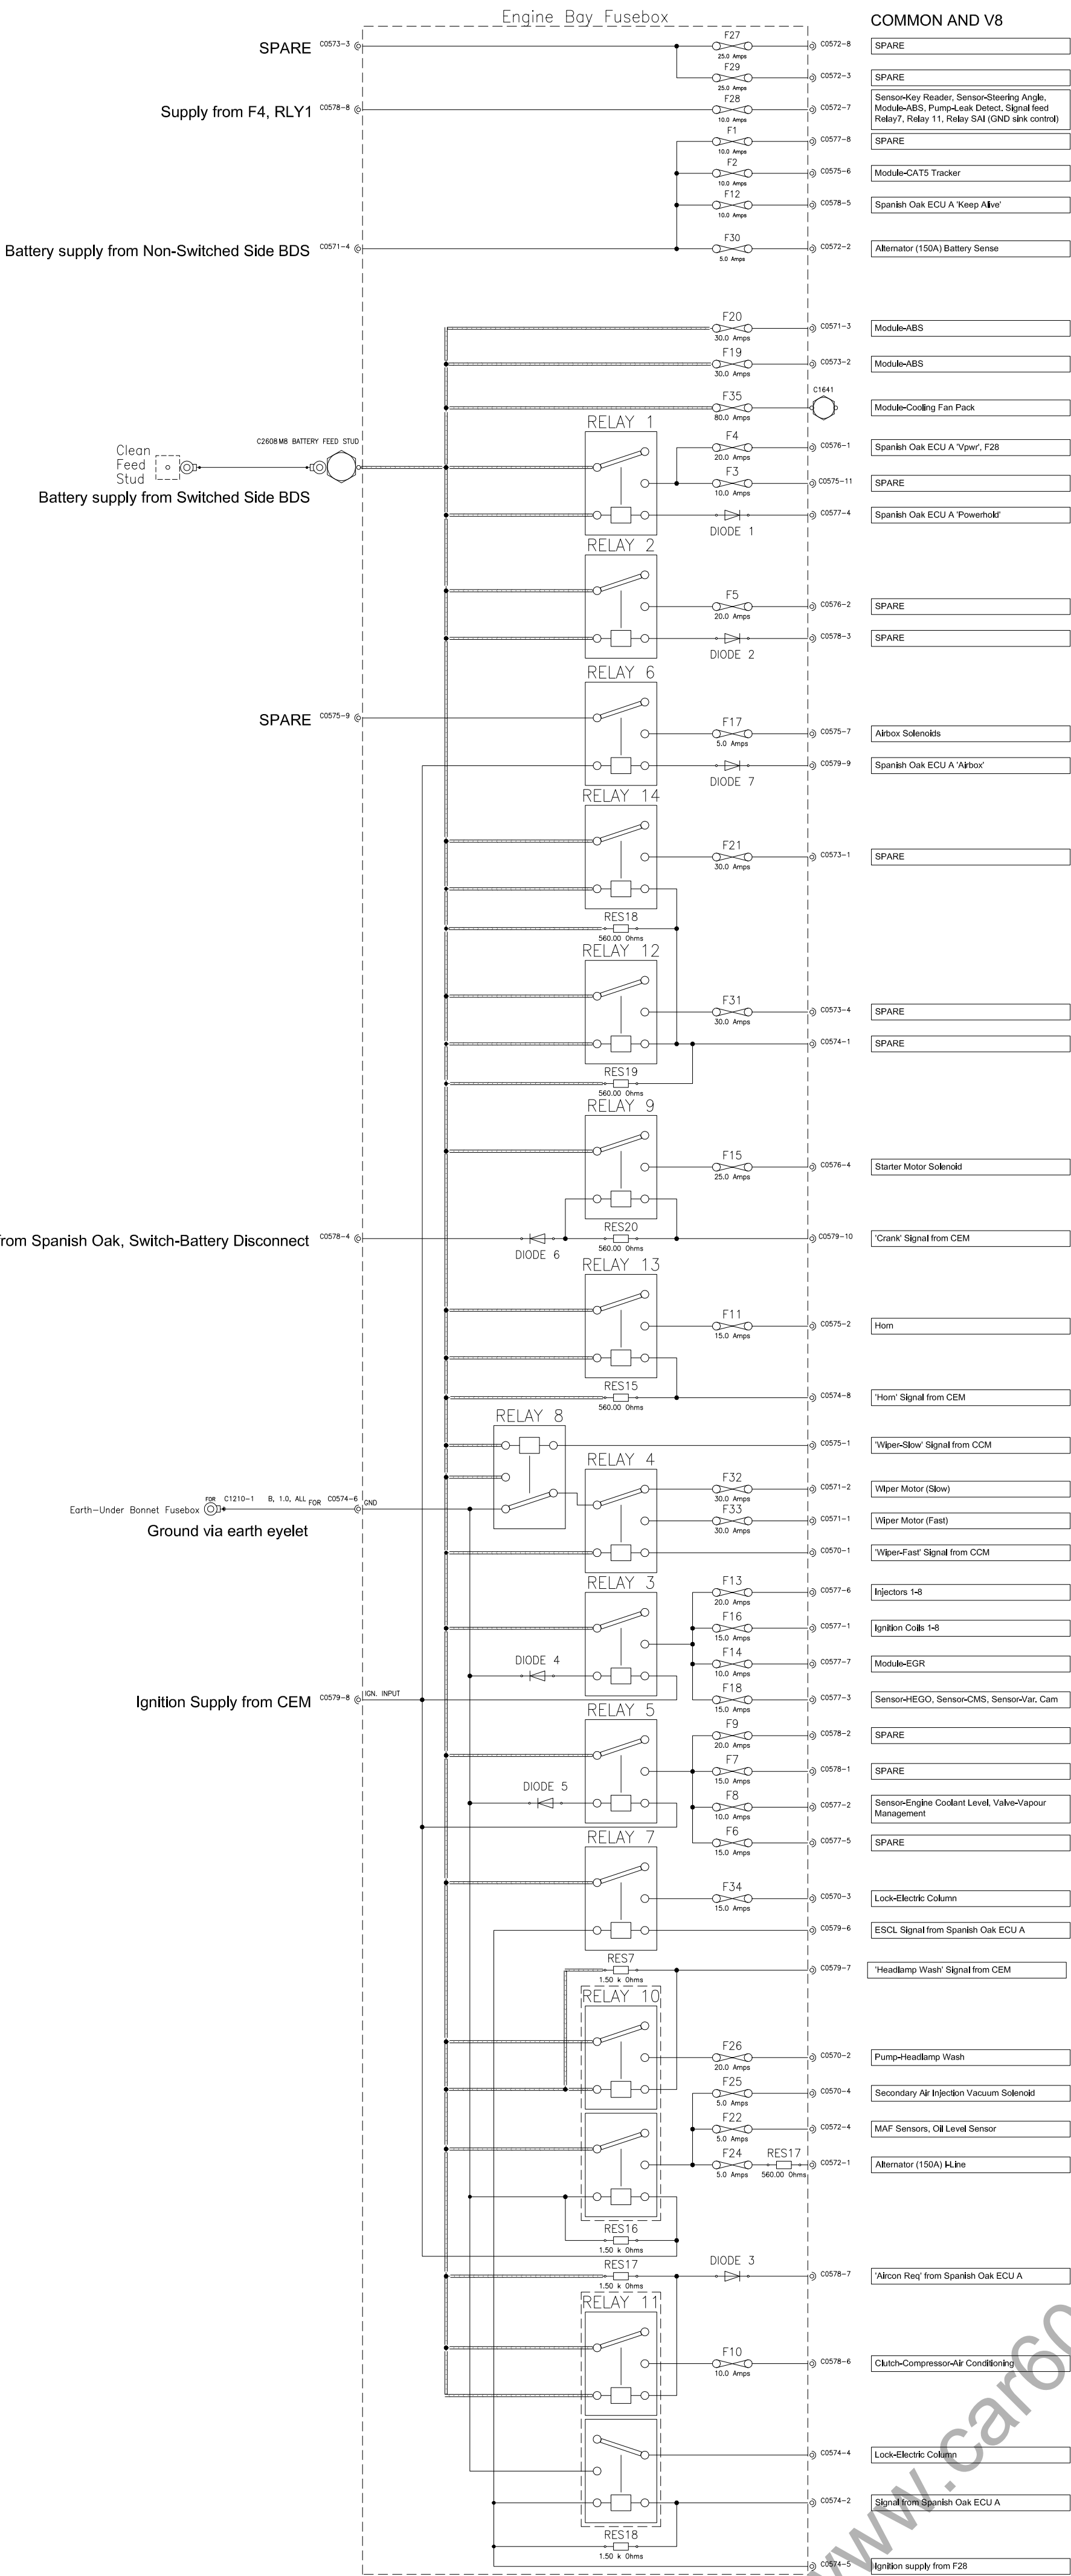

COMMON AND V8

SPARE	C0572-8	SPARE
SPARE	C0572-3	SPARE
Sensor-Key Reader, Sensor-Steering Angle, Module-ABS, Pump-Leak Detect, Signal feed Relay7, Relay 11, Relay SAI (GND sink control)	C0572-7	
SPARE	C0577-8	SPARE
Module-CATS Tracker	C0575-6	
Spanish Oak ECU A 'Keep Alive'	C0578-5	
Alternator (150A) Battery Sense	C0572-2	
Module-ABS	C0571-3	
Module-ABS	C0573-2	
Module-Cooling Fan Pack	C1641	
Spanish Oak ECU A 'Vpwr', F28	C0576-1	
SPARE	C0575-11	
Spanish Oak ECU A 'Powerhold'	C0577-4	
SPARE	C0576-2	
SPARE	C0578-3	
Airbox Solenoids	C0575-7	
Spanish Oak ECU A 'Airbox'	C0579-9	
SPARE	C0573-1	
SPARE	C0573-4	
SPARE	C0574-1	
Starter Motor Solenoid	C0576-4	
'Crank' Signal from CEM	C0579-10	
Horn	C0575-2	
'Horn' Signal from CEM	C0574-8	
'Wiper-Slow' Signal from CCM	C0575-1	
Wiper Motor (Slow)	C0571-2	
Wiper Motor (Fast)	C0571-1	
'Wiper-Fast' Signal from CCM	C0570-1	
Injectors 1-8	C0577-6	
Ignition Coils 1-8	C0577-1	
Module-EGR	C0577-7	
Sensor-HEGO, Sensor-CMS, Sensor-Var, Cam	C0577-3	
SPARE	C0578-2	
SPARE	C0578-1	
Sensor-Engine Coolant Level, Valve-Vapour Management	C0577-2	
SPARE	C0577-5	
Lock-Electric Column	C0570-3	
ESCL Signal from Spanish Oak ECU A	C0579-6	
'Headlamp Wash' Signal from CEM	C0579-7	
Pump-Headlamp Wash	C0570-2	
Secondary Air Injection Vacuum Solenoid	C0570-4	
MAF Sensors, Oil Level Sensor	C0572-4	
Alternator (150A) H-Line	C0572-1	
'Alcon Req' from Spanish Oak ECU A	C0578-7	
Clutch-Compressor-Air Conditioning	C0578-6	
Lock-Electric Column	C0574-4	
Signal from Spanish Oak ECU A	C0574-2	
Ignition supply from F28	C0574-5	