

维修工具

01-60 维修工具

发动机 SST 01-60-1

01

发动机 SST

 
1: Mazda SST 编号

2: 全球 SST 编号

 
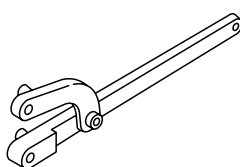
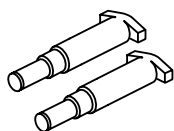
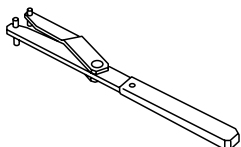
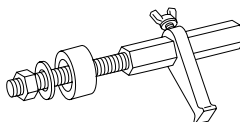
 
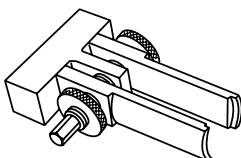
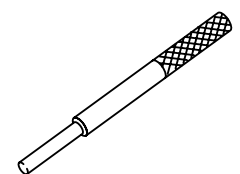
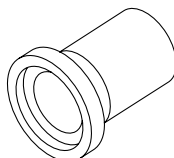
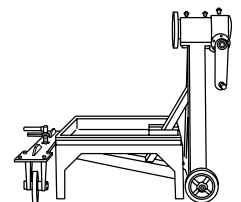
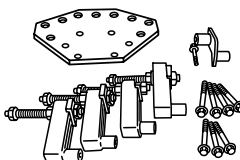
 
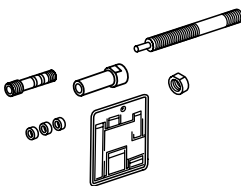

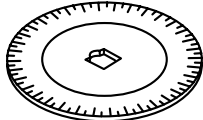
示例

1:49 JE01 061
2:303-507

曲轴 TDC 定位销

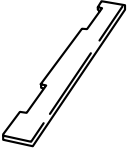
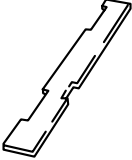
 
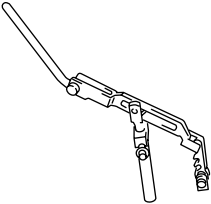
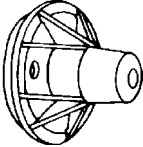


b3e016002000201

<p>1:49 JE01 061 2:303-507</p> <p>曲轴 TDC 定位销</p> 	<p>1: 49 UN20 5072 2:205-072</p> <p>夹具</p> 	<p>1: 49 B011 105 2: -</p> <p>适配器</p> 
<p>1:49 G032 354 2: -</p> <p>调整扳手</p> 	<p>1:49 E011 1A0 2: -</p> <p>齿圈制动调节</p> 	<p>1:49 0636 100B 2: -</p> <p>气门弹簧提升器 支臂</p> 
<p>1:49 B012 0A2 2: -</p> <p>枢轴</p> 	<p>1:49 B012 015 2: -</p> <p>气门导管的安装</p> 	<p>1:49 H010 401 2: -</p> <p>油封安装工具</p> 
<p>1:49 0107 680A 2: -</p> <p>发动机底座</p> 	<p>1:49 L010 1A0 2: -</p> <p>发动机吊架套件</p> 	<p>1:49 S120 170 2: -</p> <p>阀封拆卸器</p> 
<p>1:49 L012 0A0B 2: -</p> <p>阀封和气门导管 安装工具套件</p> 	<p>1:49 T032 302 2: -</p> <p>轴承安装用工具</p> 	<p>1:49 D032 316 2: -</p> <p>量角器</p> 

01-60-1

维修工具

<div>1:49 JE01 054 凸轮轴校准正时 工具 (欧洲)</div> <div></div>	<div>49 UN30 3465 2: 303-465 凸轮轴校准正时 工具 (除欧洲之外)</div> <div></div>	<div>1:49 G011 201 2: - 附件</div> <div></div>
<div>1:49 JE02 0A2 2: - 万向阀工具 (仅欧洲)</div> <div></div>	<div>1:49 UN30 3328 2:303-328 后油封拆卸工具</div> <div></div>	<div>-</div>