



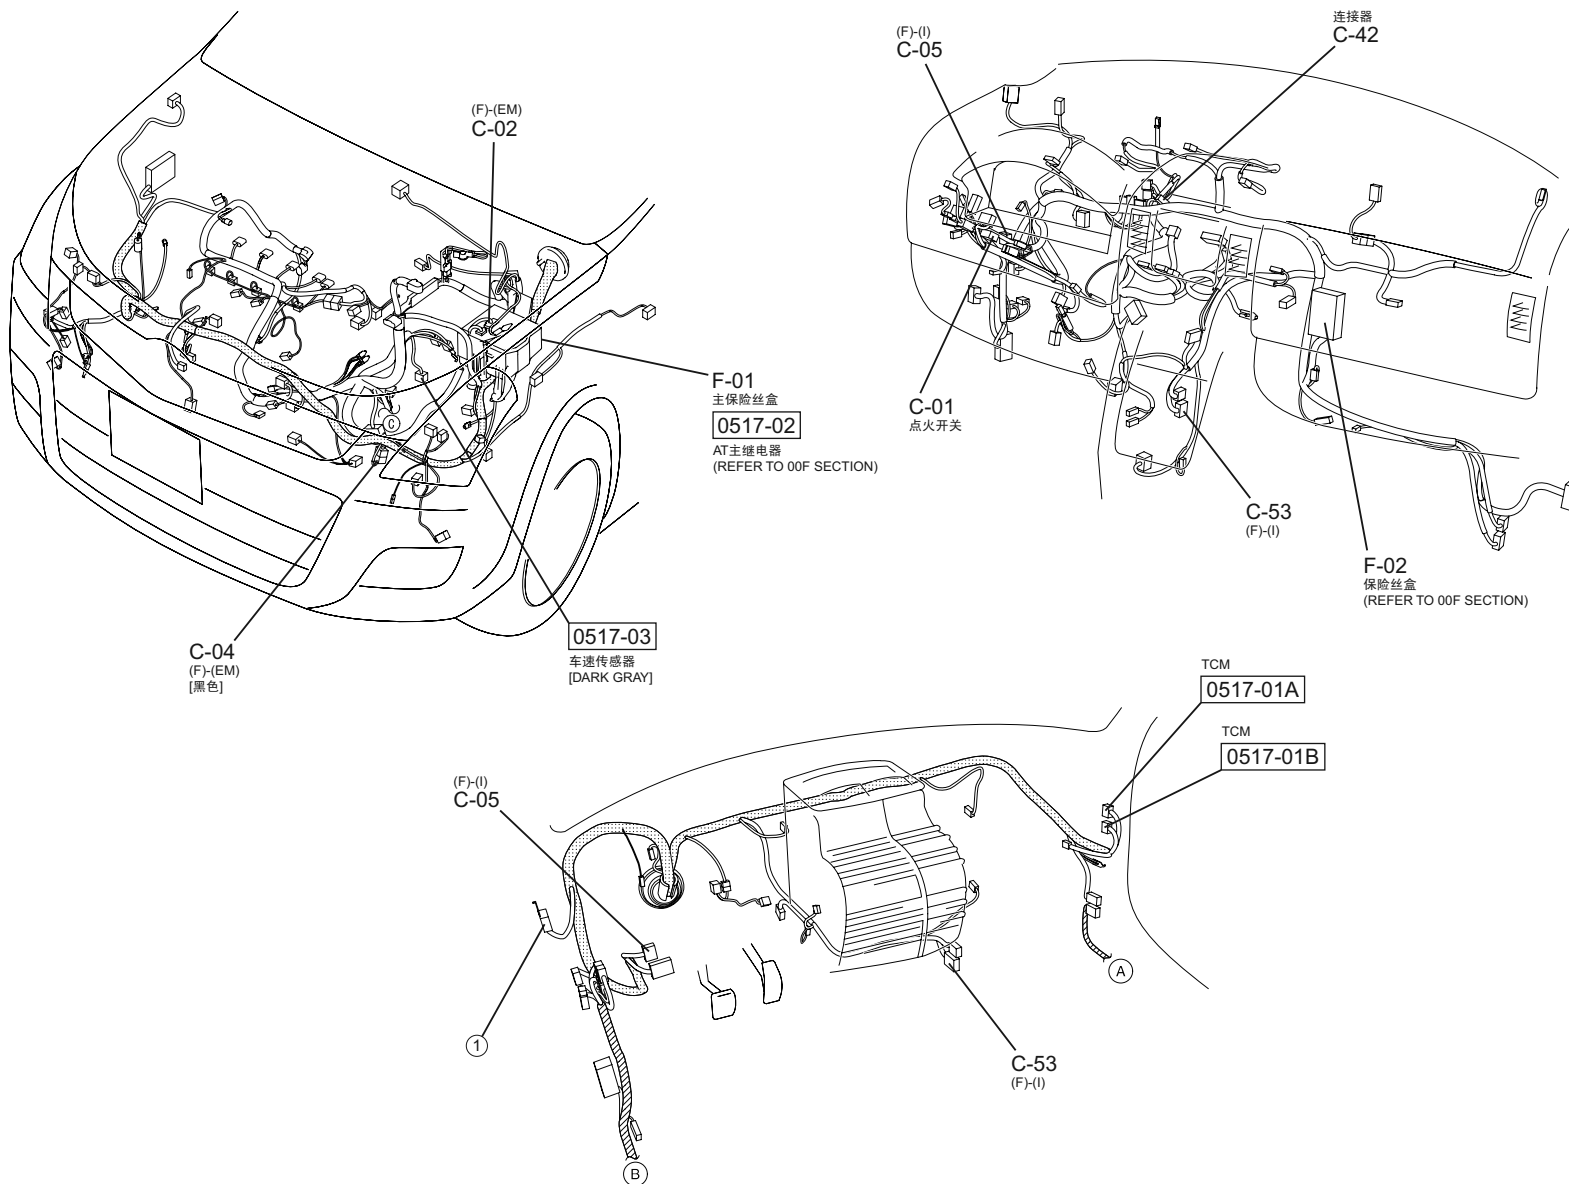

束线符号：  (F)  (E)  (R)

 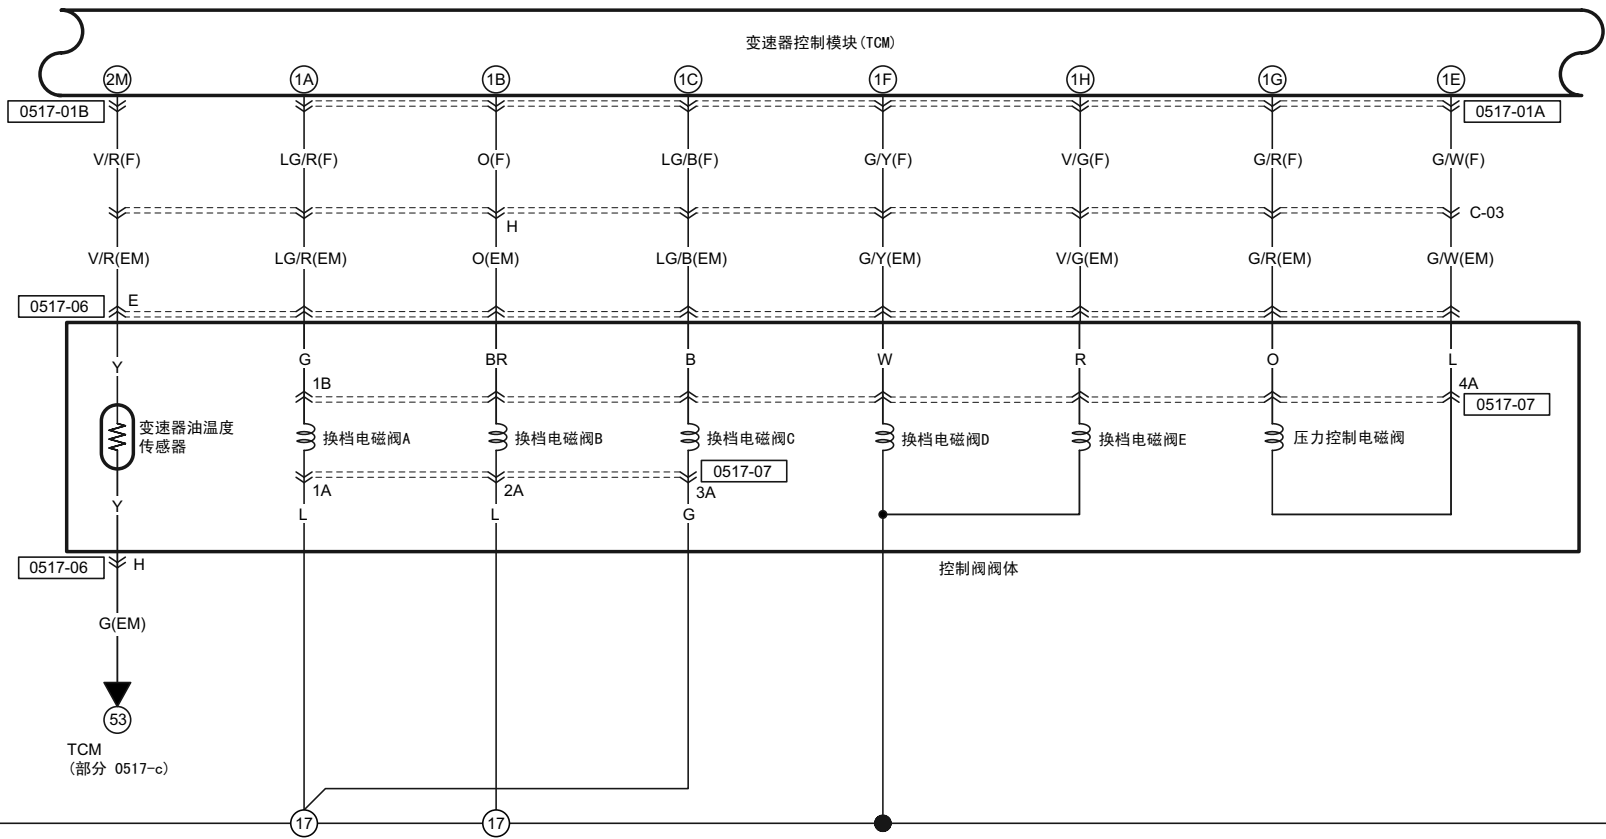


*：排空




TTT



0517-01A
TCM(F)




0517-01B
TCM(F)

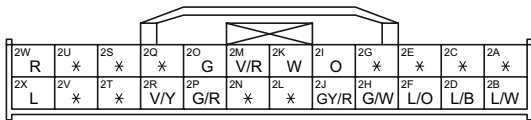


0517-06
排放 (EM) - 变速器短线

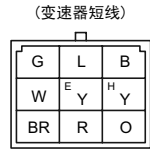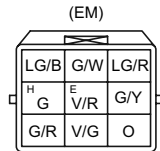


0517-07
电磁阀 (变速器短线)

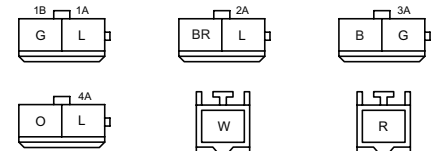

束线符号： (F) (E) (R)

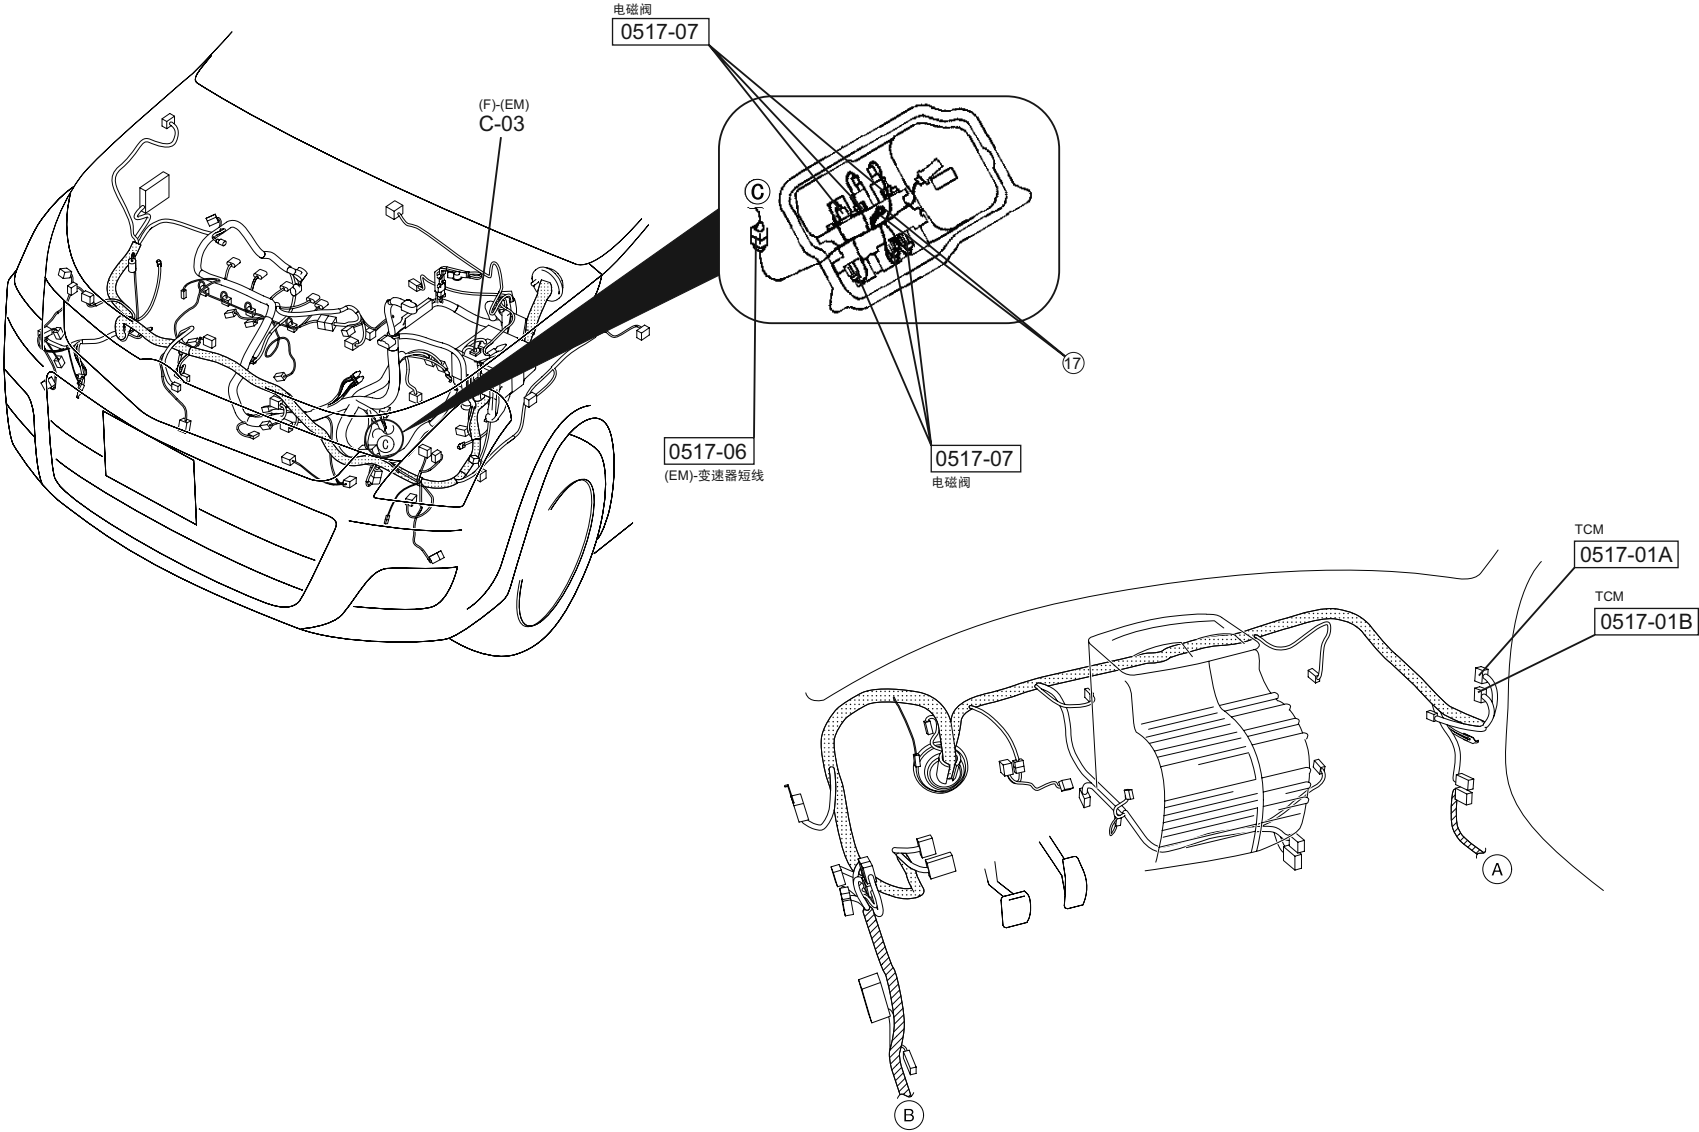

: 裸线
* : 排空

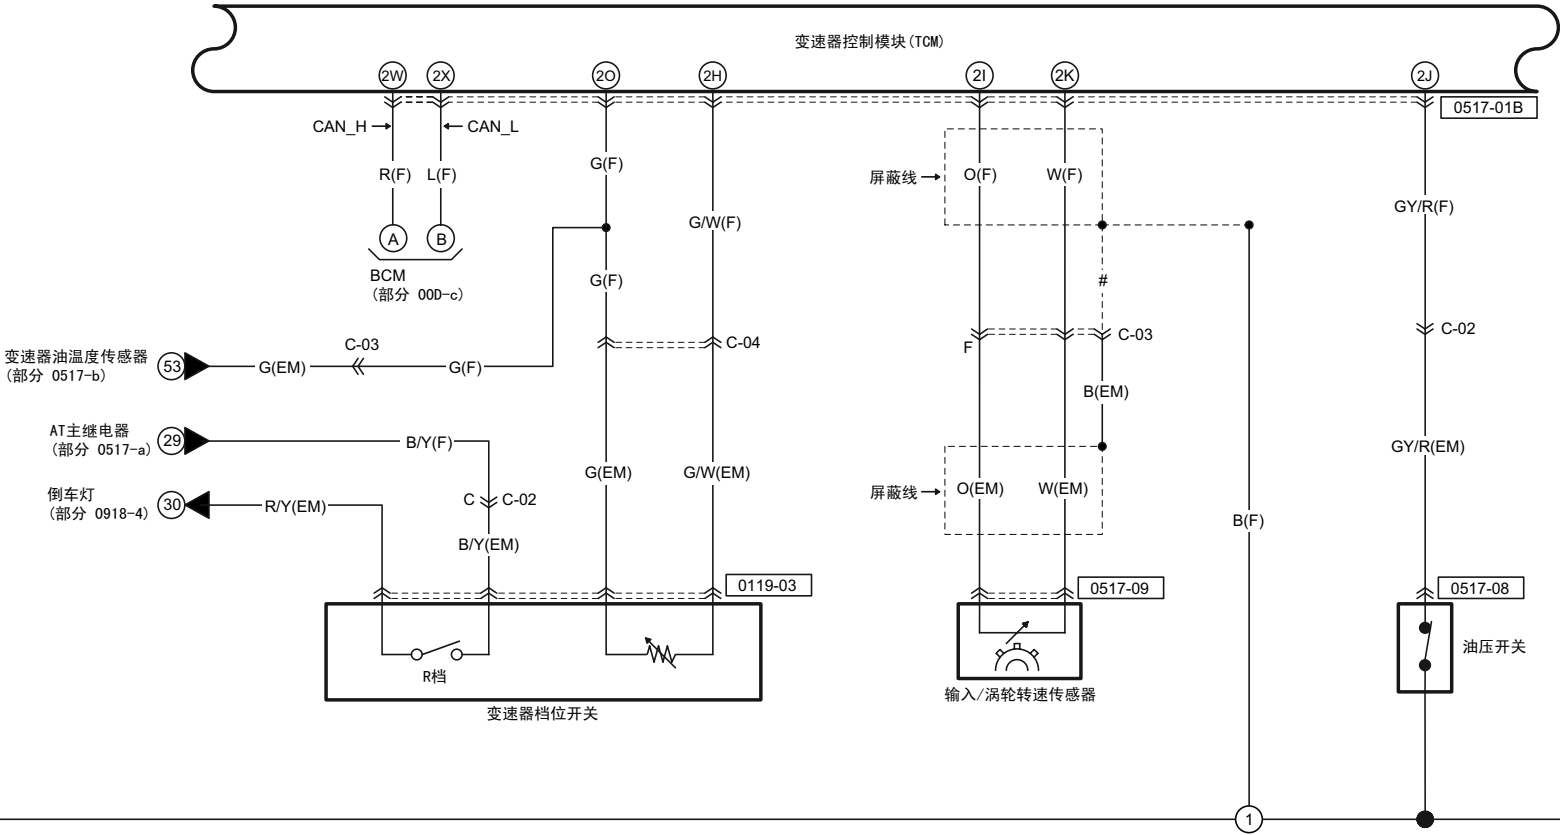

TTT


0517-01B
TCM(F)

2W	2U	2S	2Q	2O	2M	2K	2I	2G	2E	2C	2A
R	*	*	*	G	V/R	W	O	*	*	*	*
2X	2V	2T	2R	2P	2N	2L	2J	2H	2F	2D	2B
L	*	*	V/Y	G/R	*	*	GY/R	GW	L/O	L/B	L/W


0517-08
油压开关 (EM)



 
0517-09
输入/涡轮转速传感器 (EM)




0119-03
变速器档位开关 (EM)

 

束线符号：  (F)  (E)  (R)

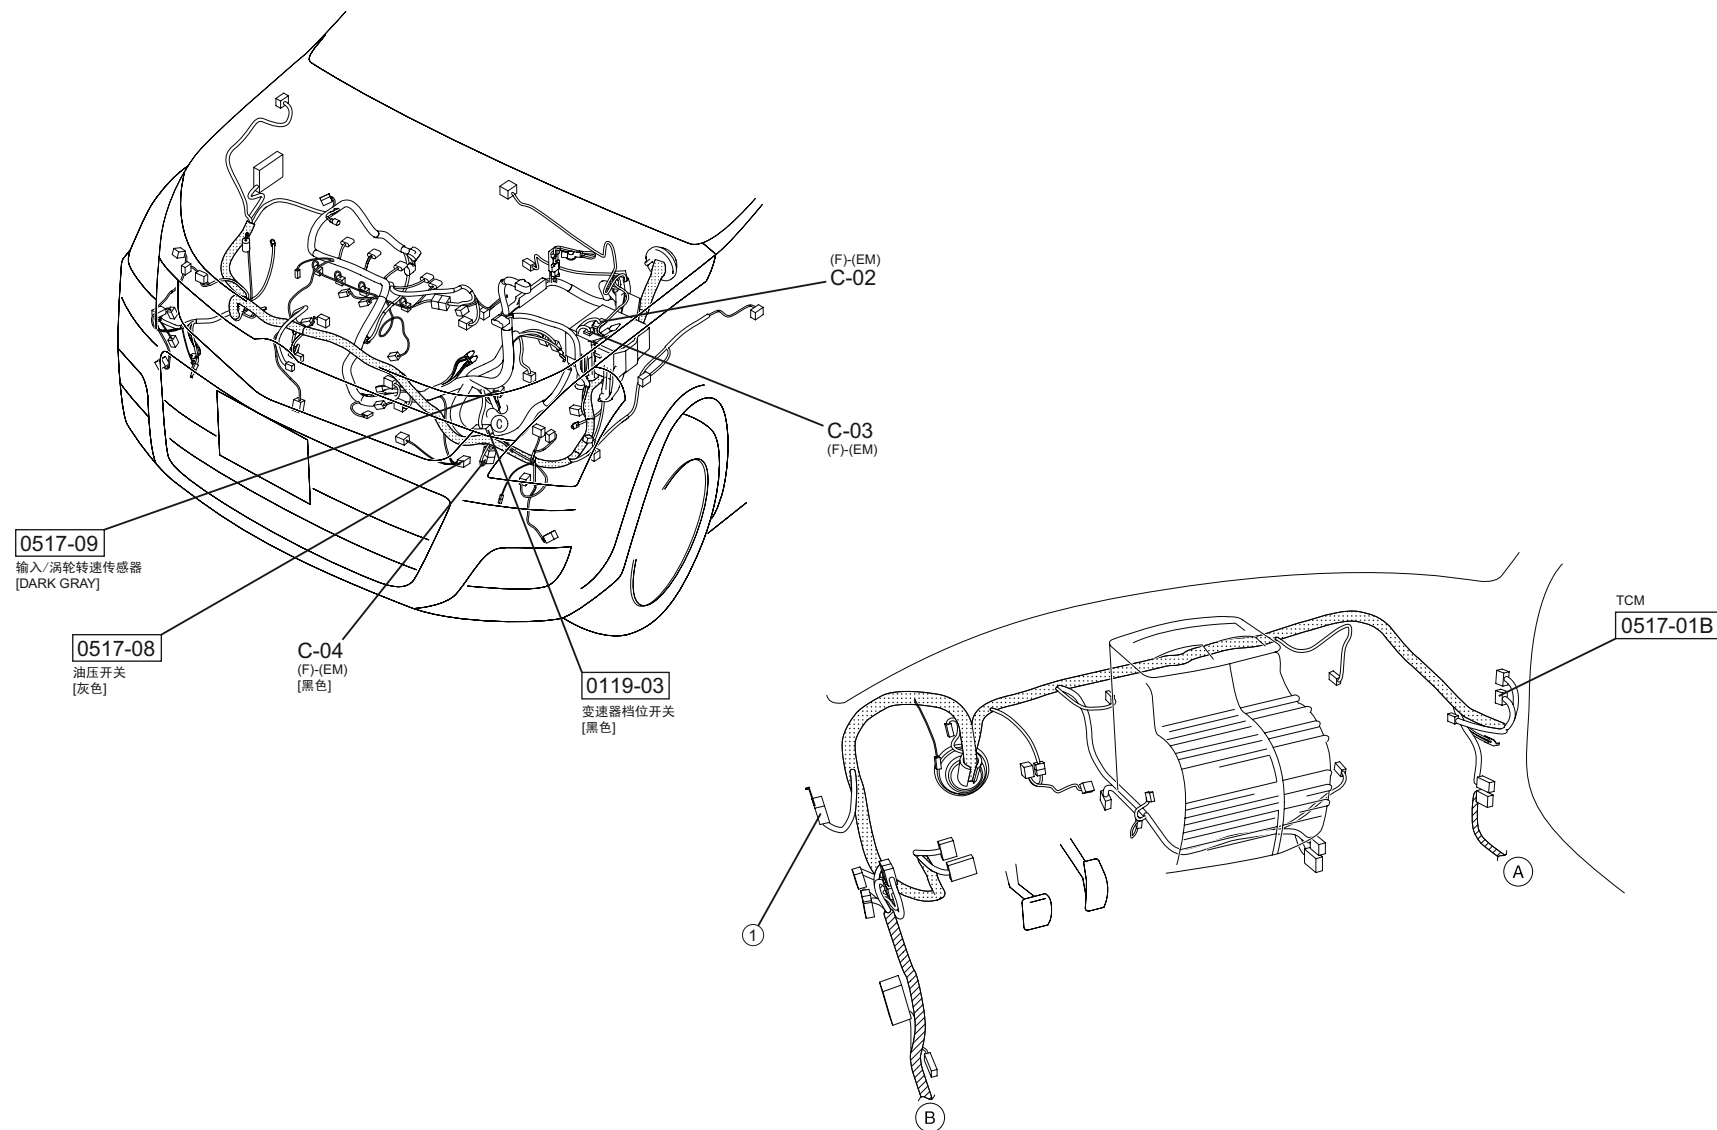


*：排空

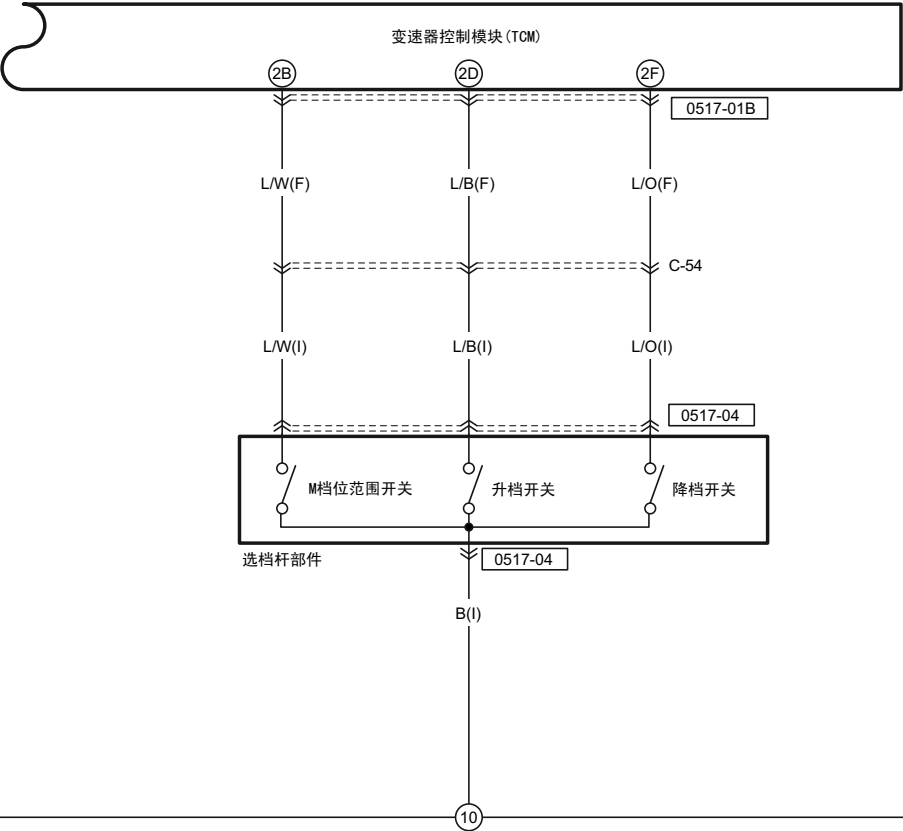


TTT

 0517-01B
TCM(F)



0517-04
选档杆部件 (I)

 

束线符号： (F) (E) (R)

