




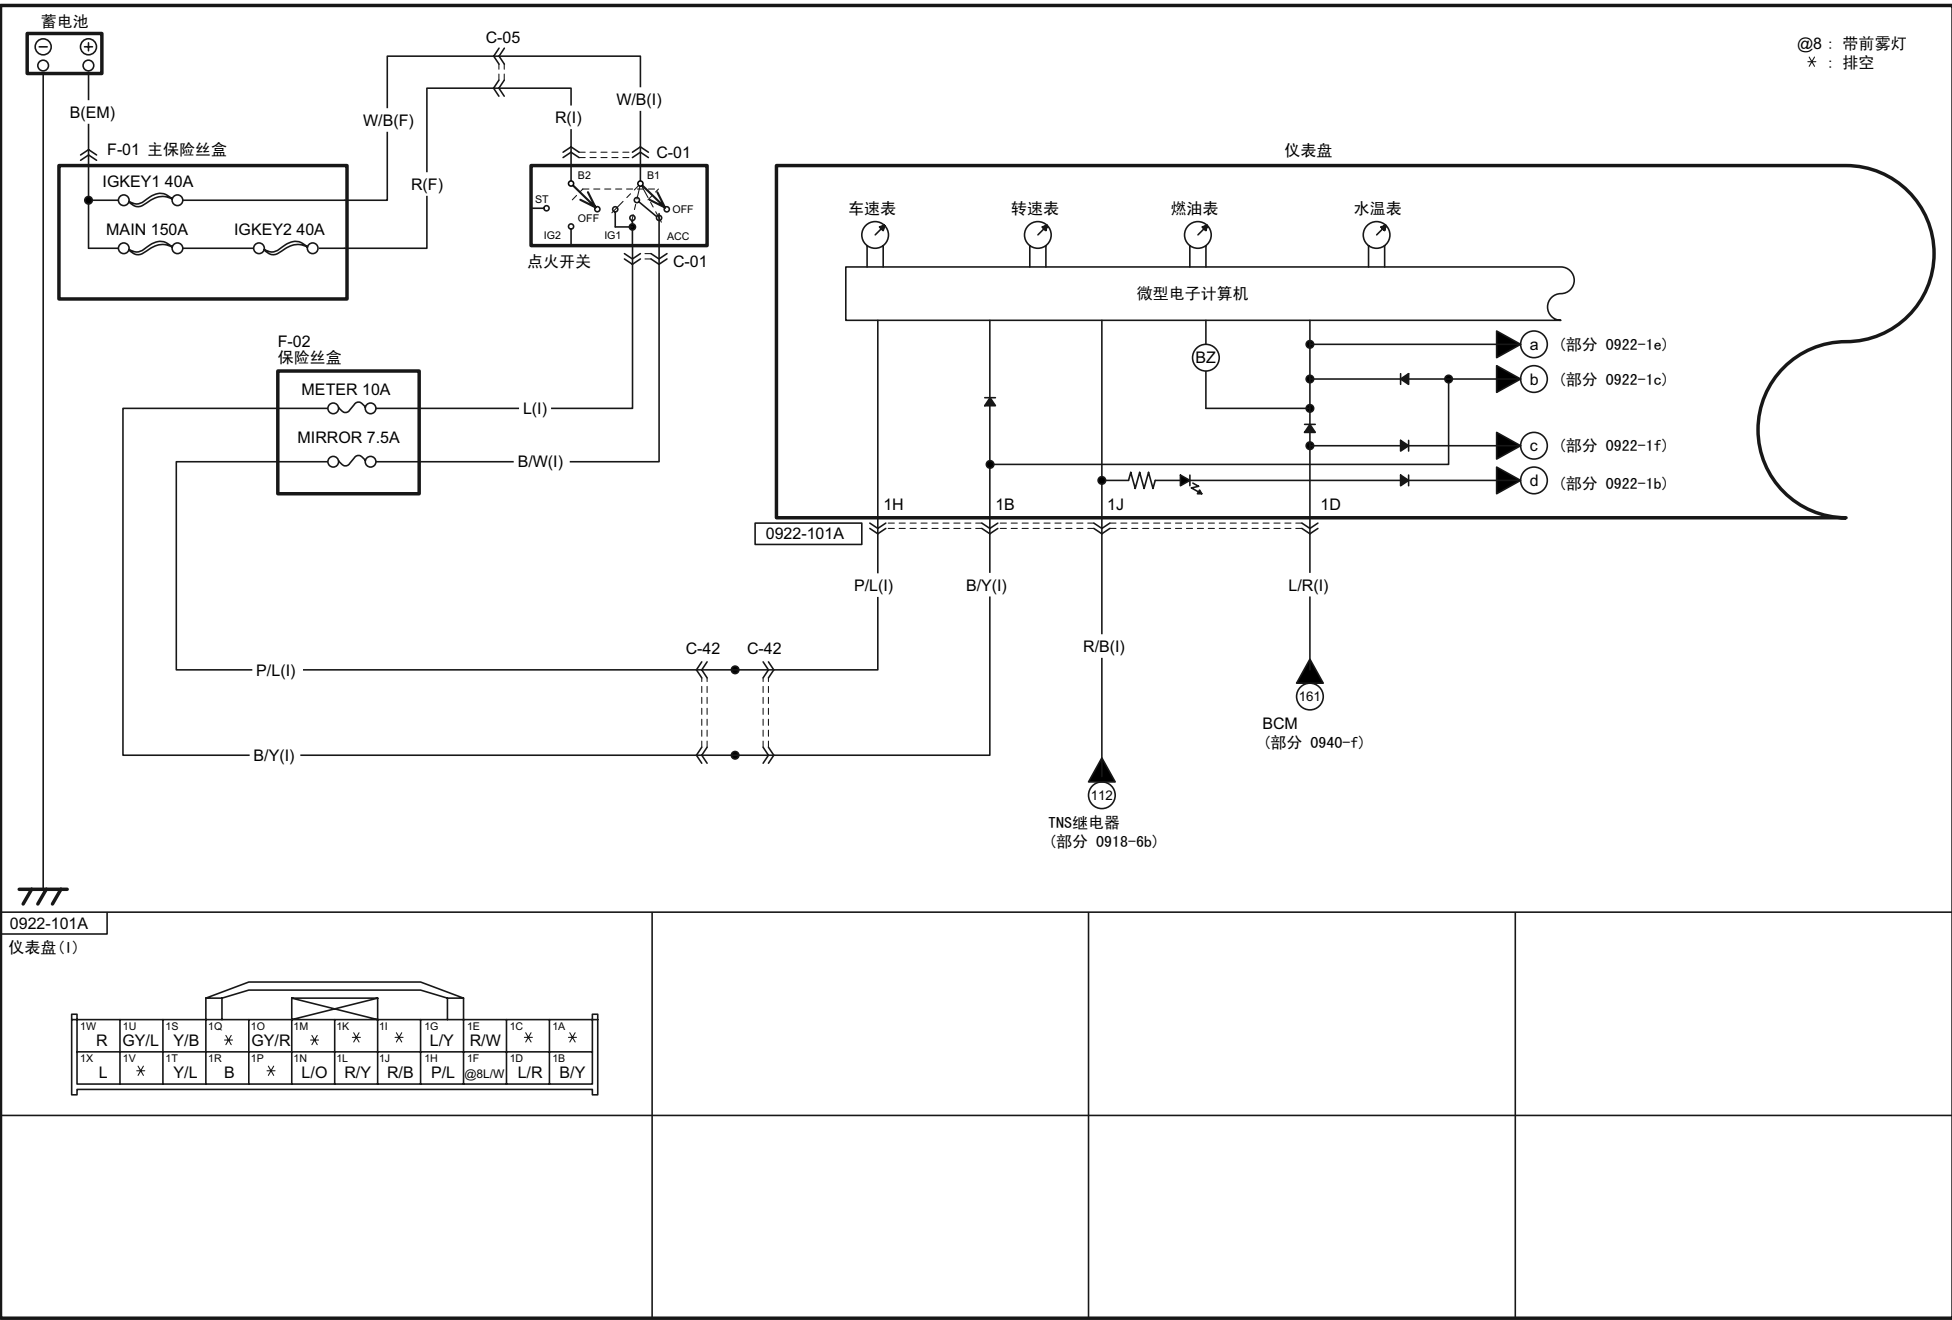


束线符号： (F) (E) (R)

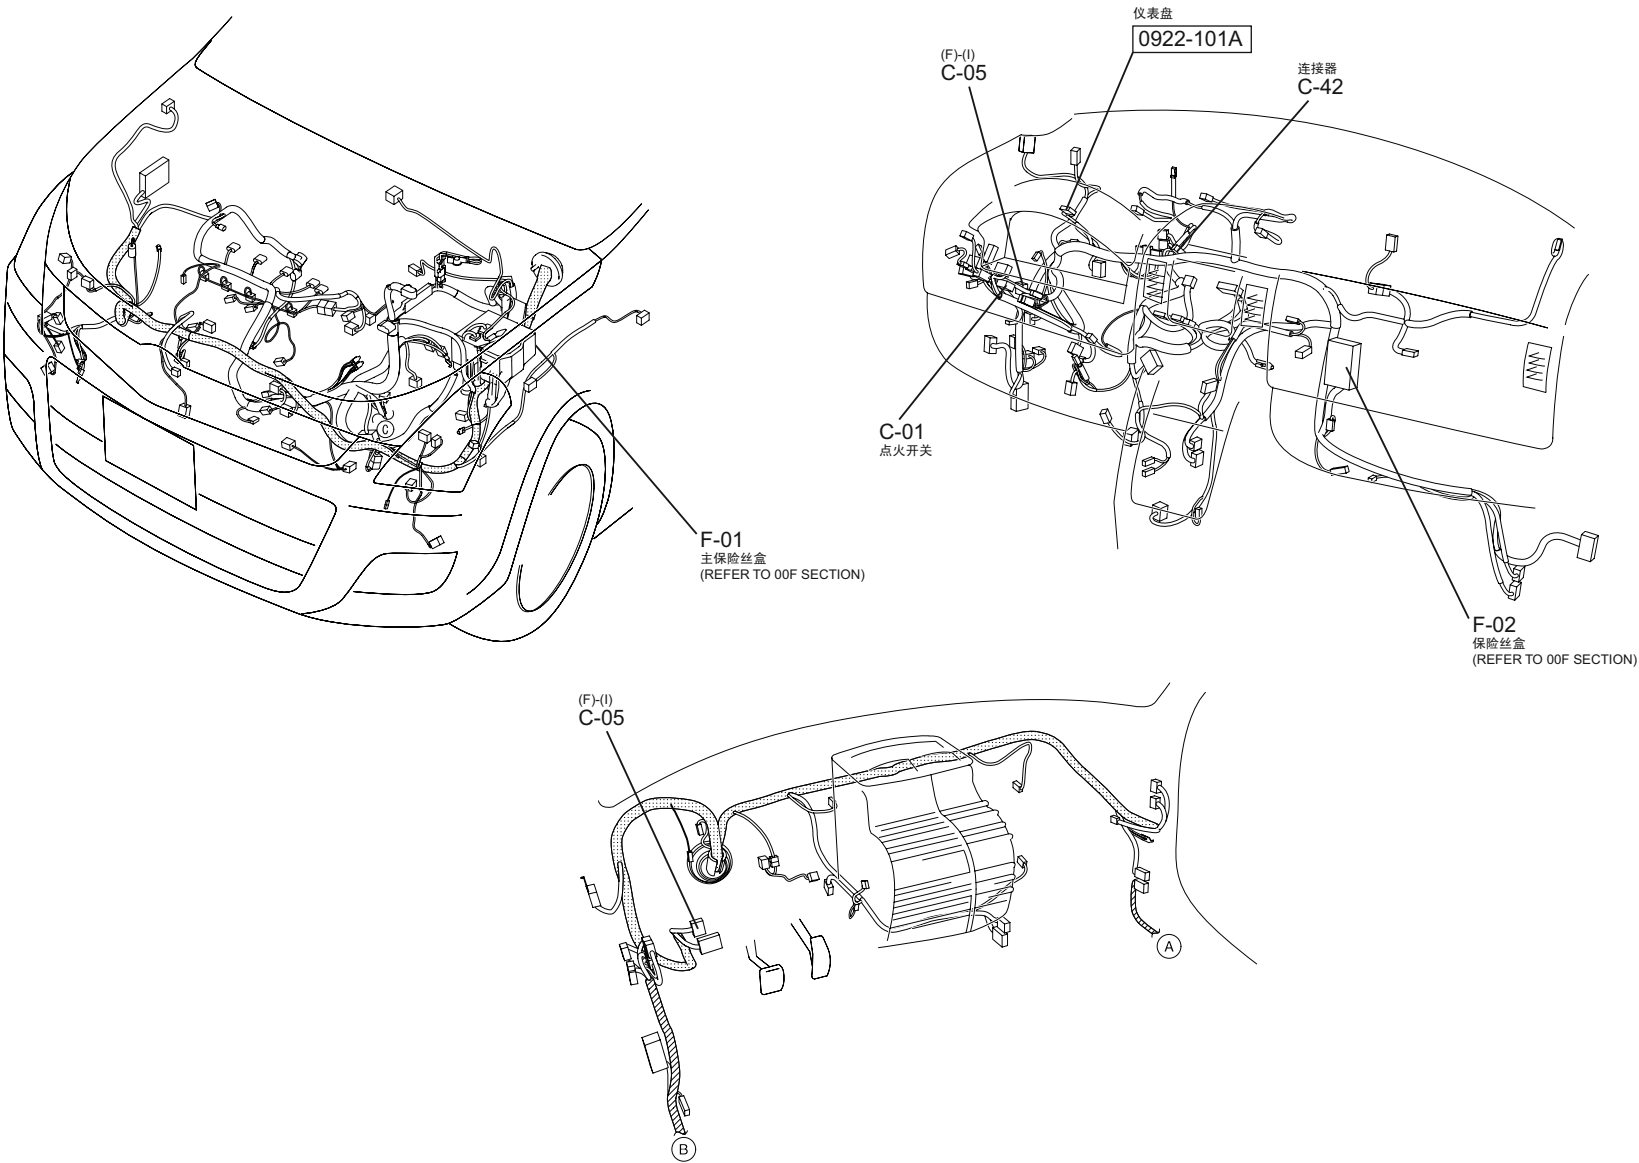


@8：带前雾灯
*：排空

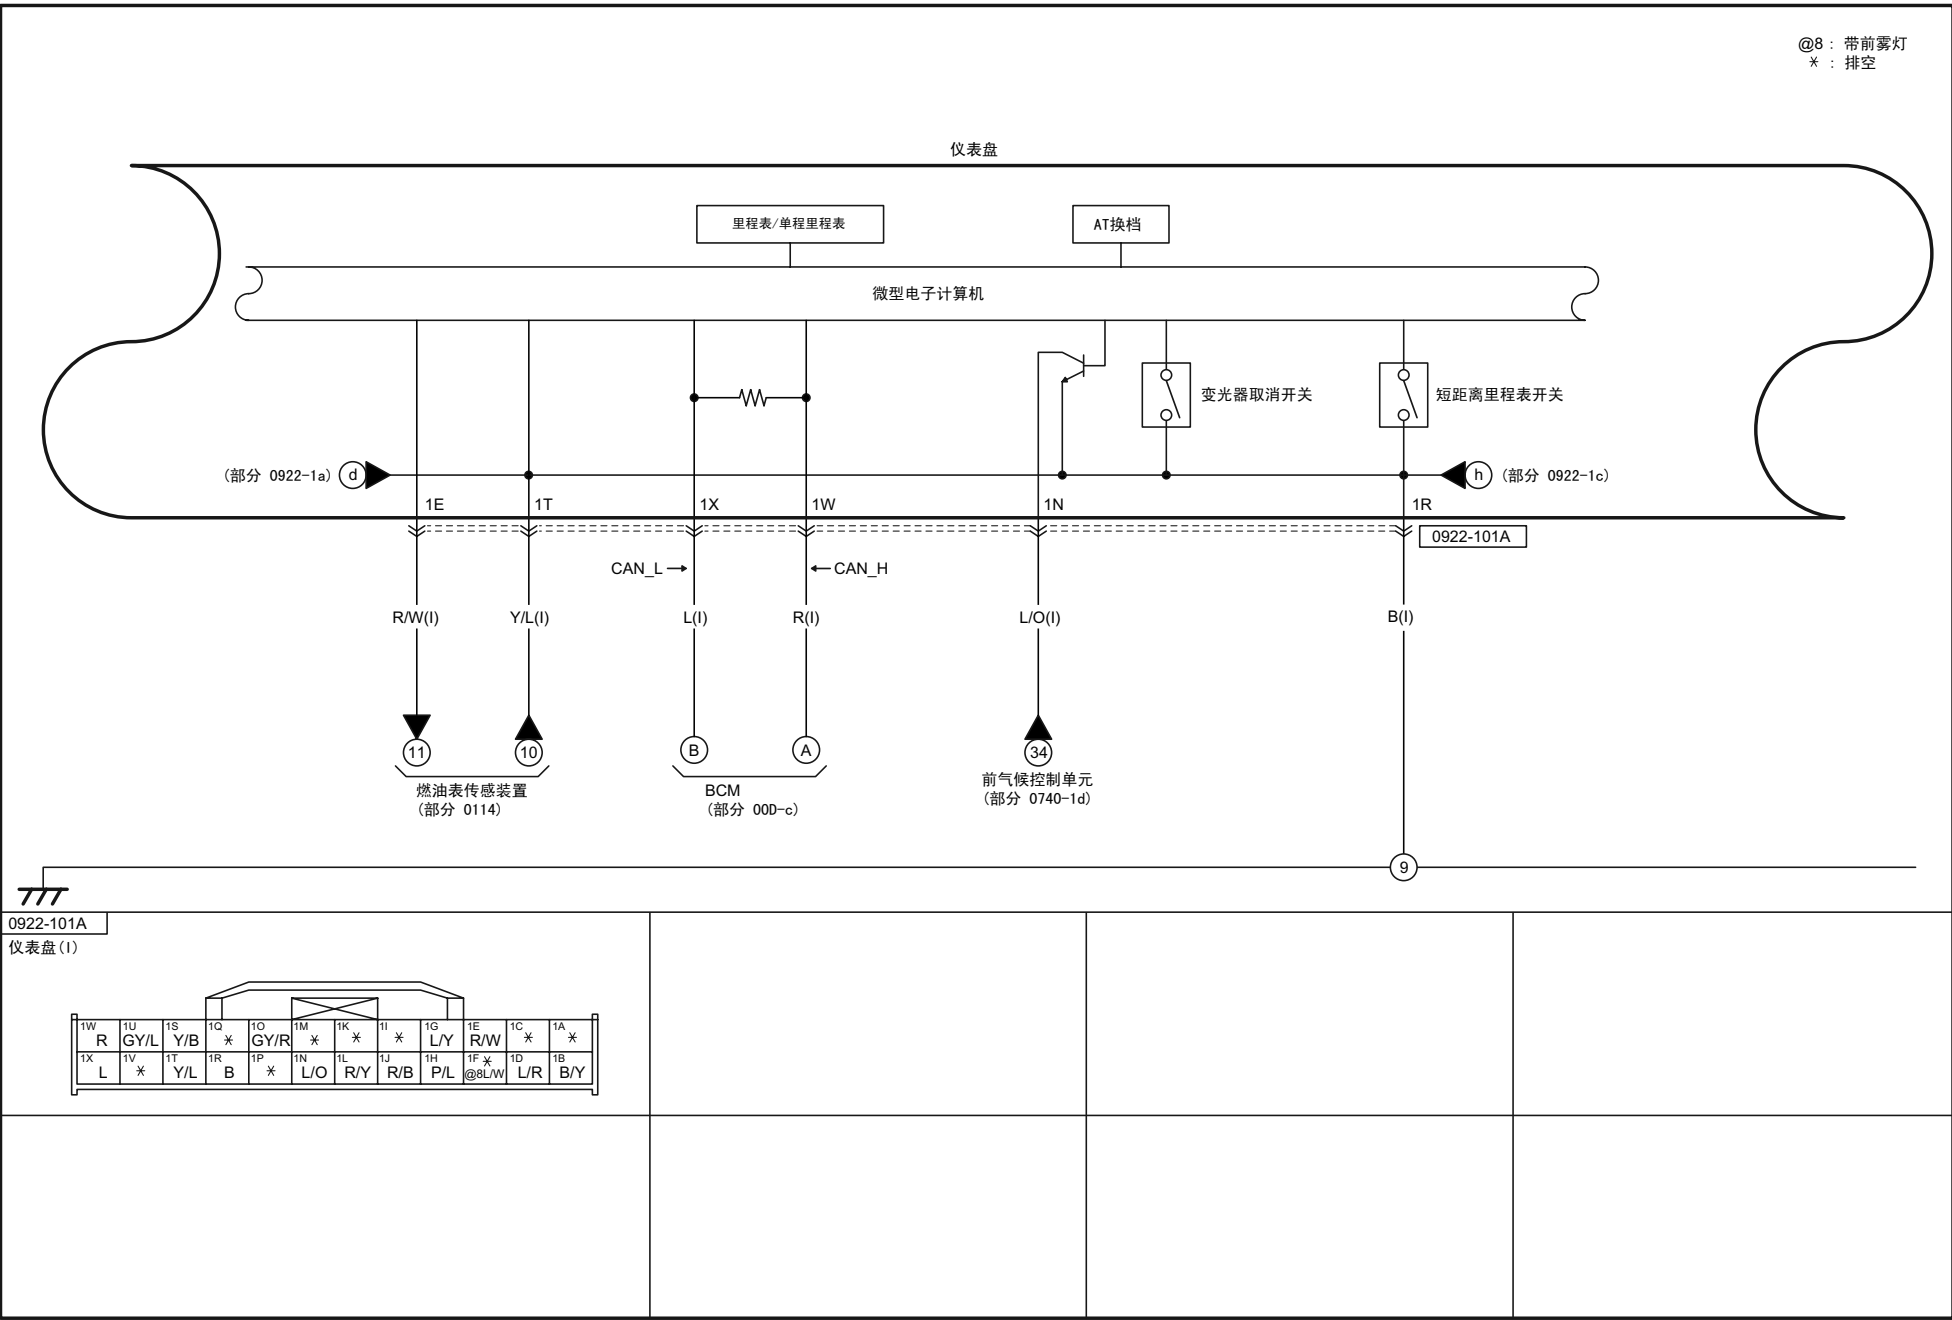

束线符号：  (F)  (E)  (R)

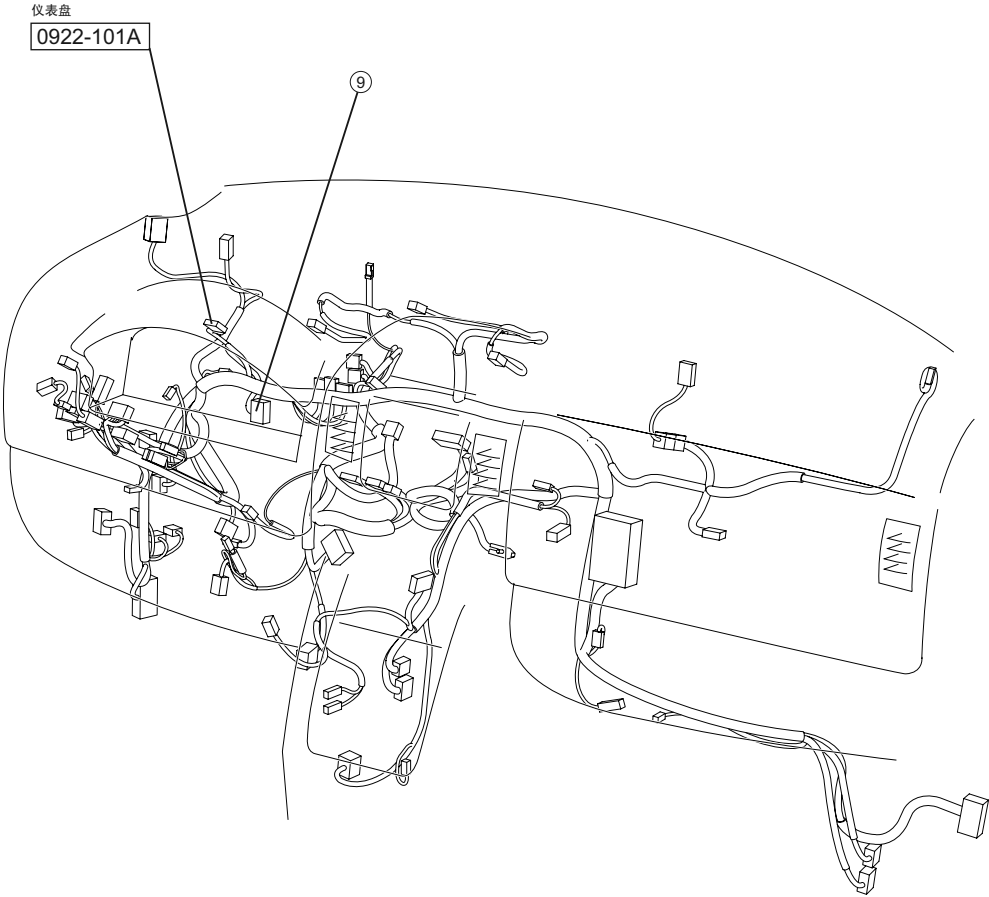


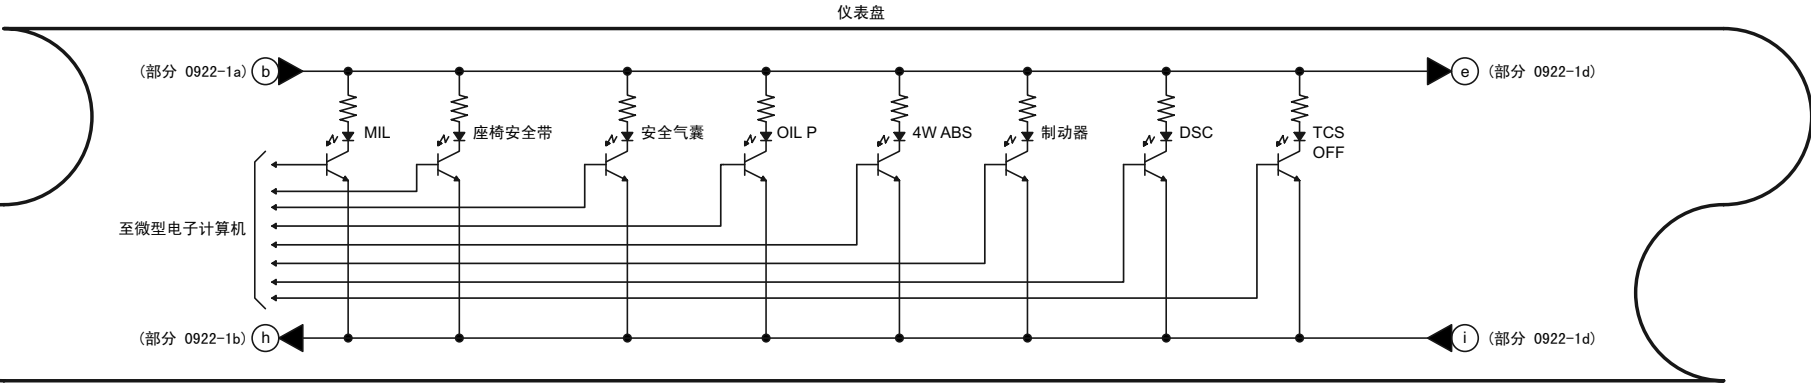


束线符号：  (F)  (E)  (R)

仪表盘

0922-101A

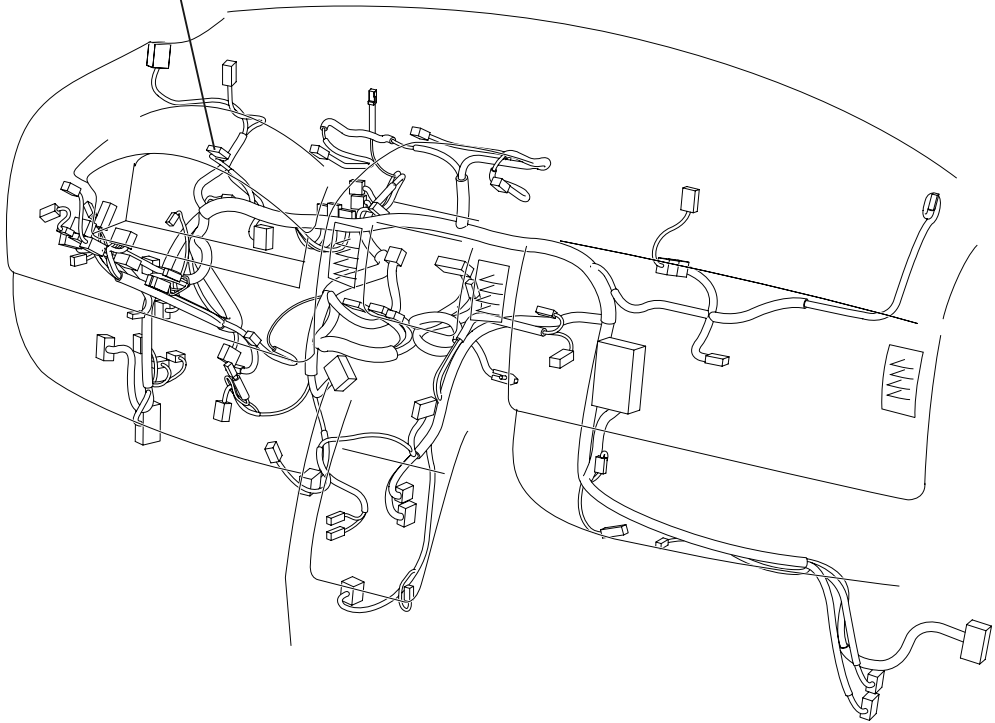


@8 : 带前雾灯
* : 排空

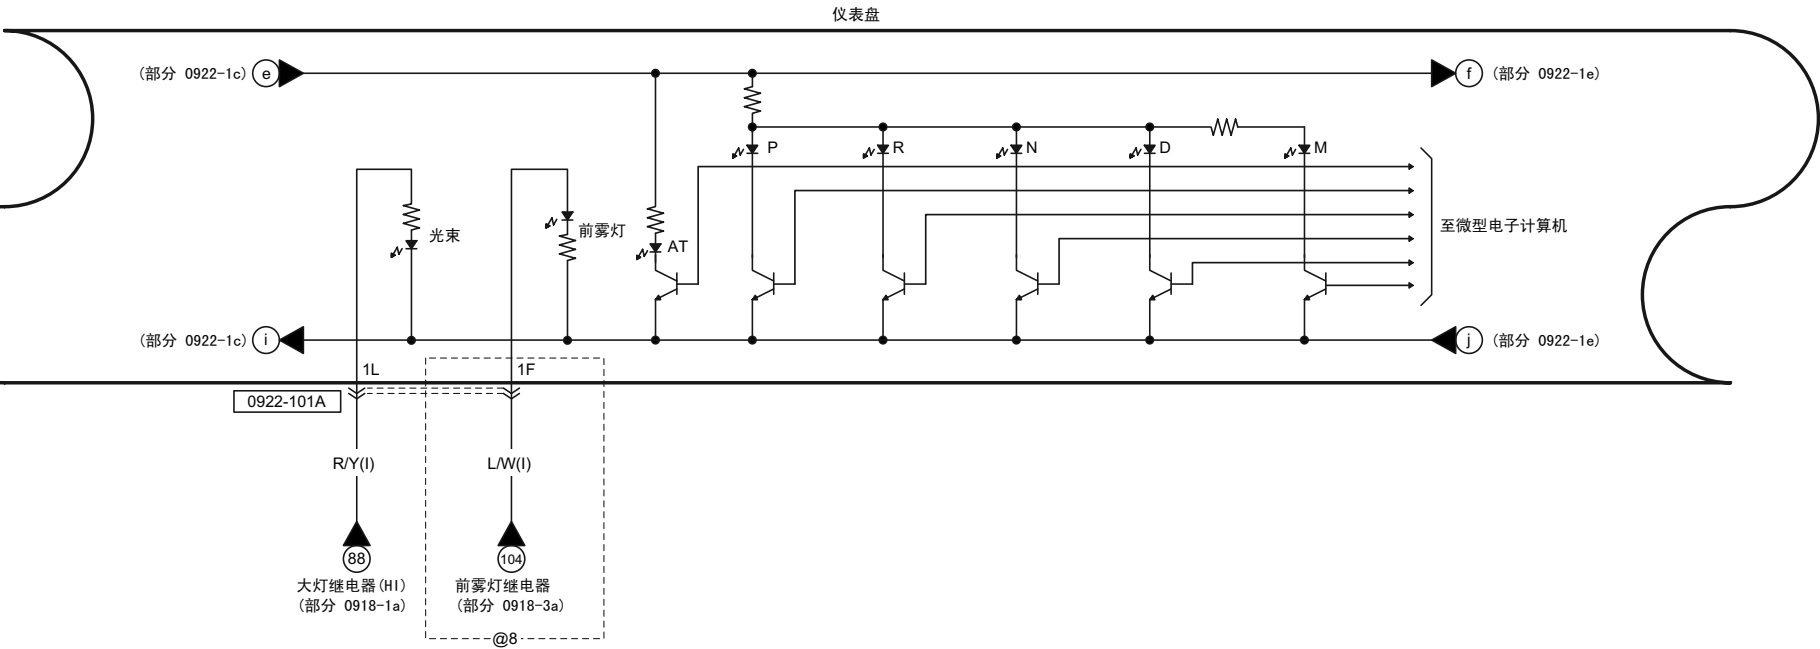

0922-101A


仪表盘 (I)

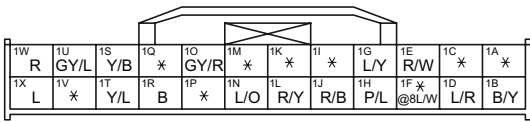


束线符号：  (F)  (E)  (R)

仪表盘


0922-101A

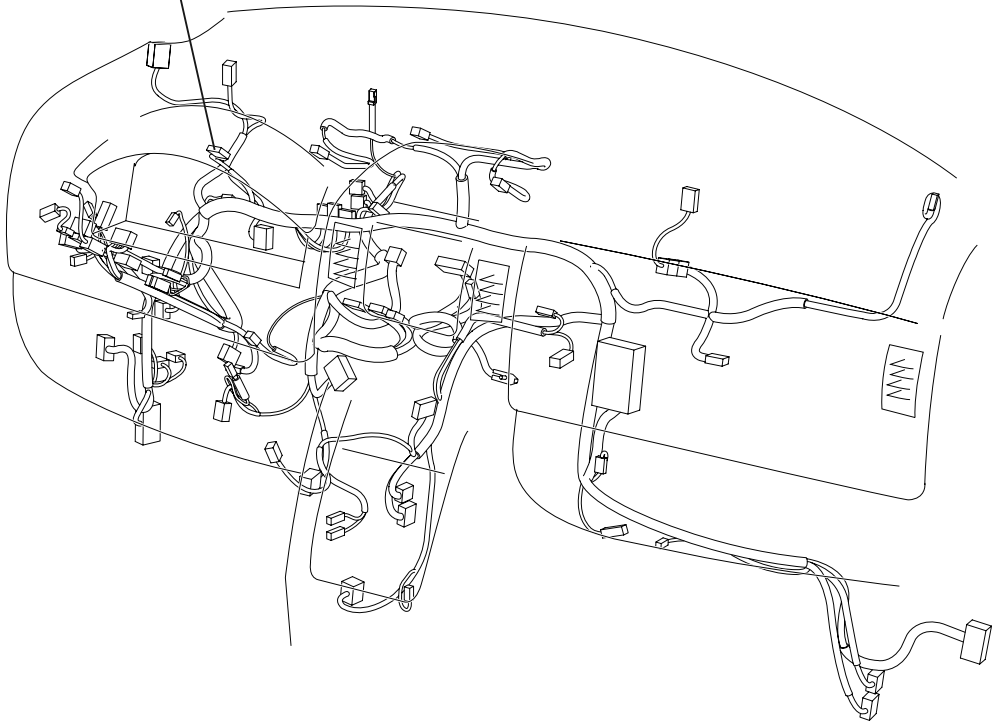

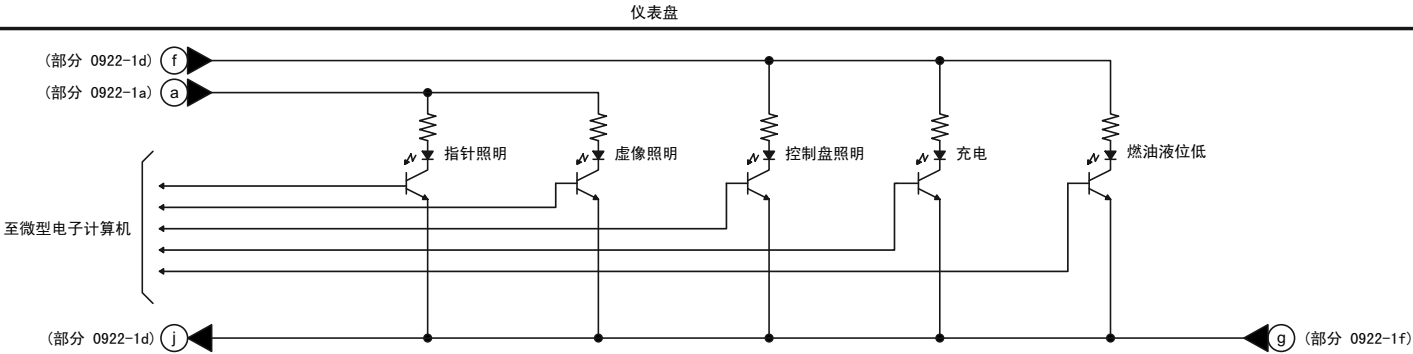


束线符号：  (F)  (E)  (R)

209

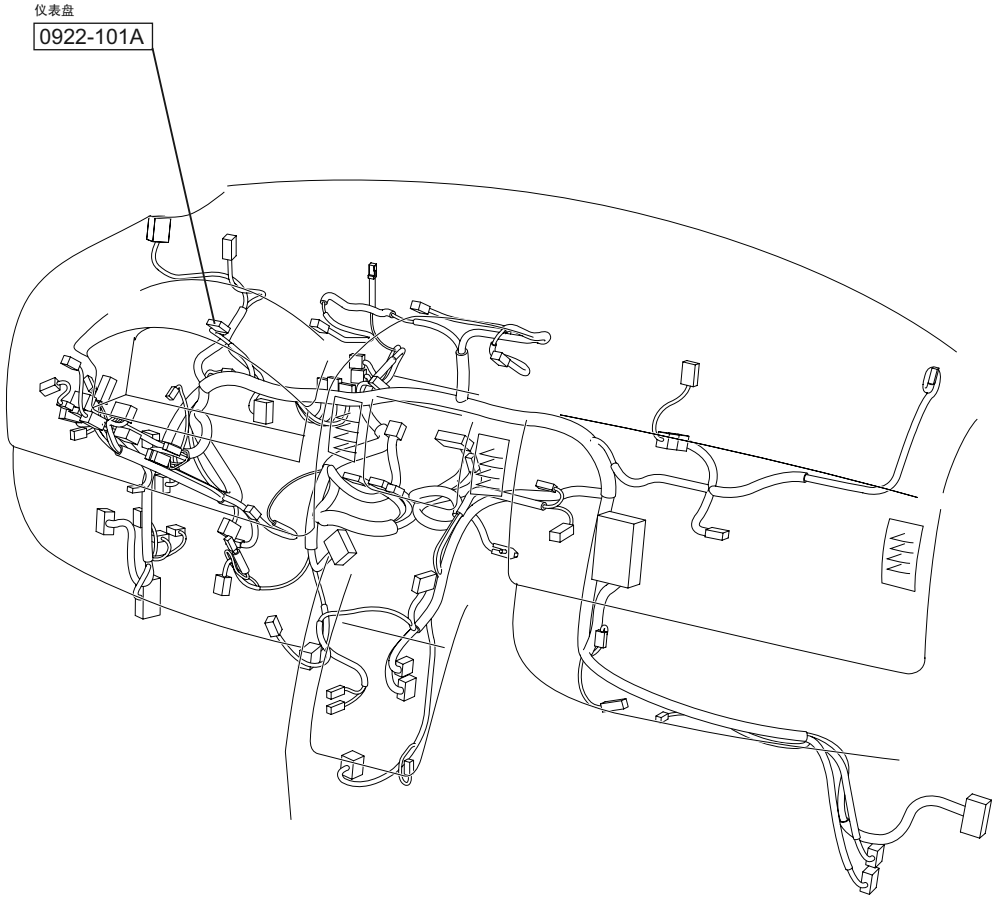

@8 : 带前雾灯
* : 排空

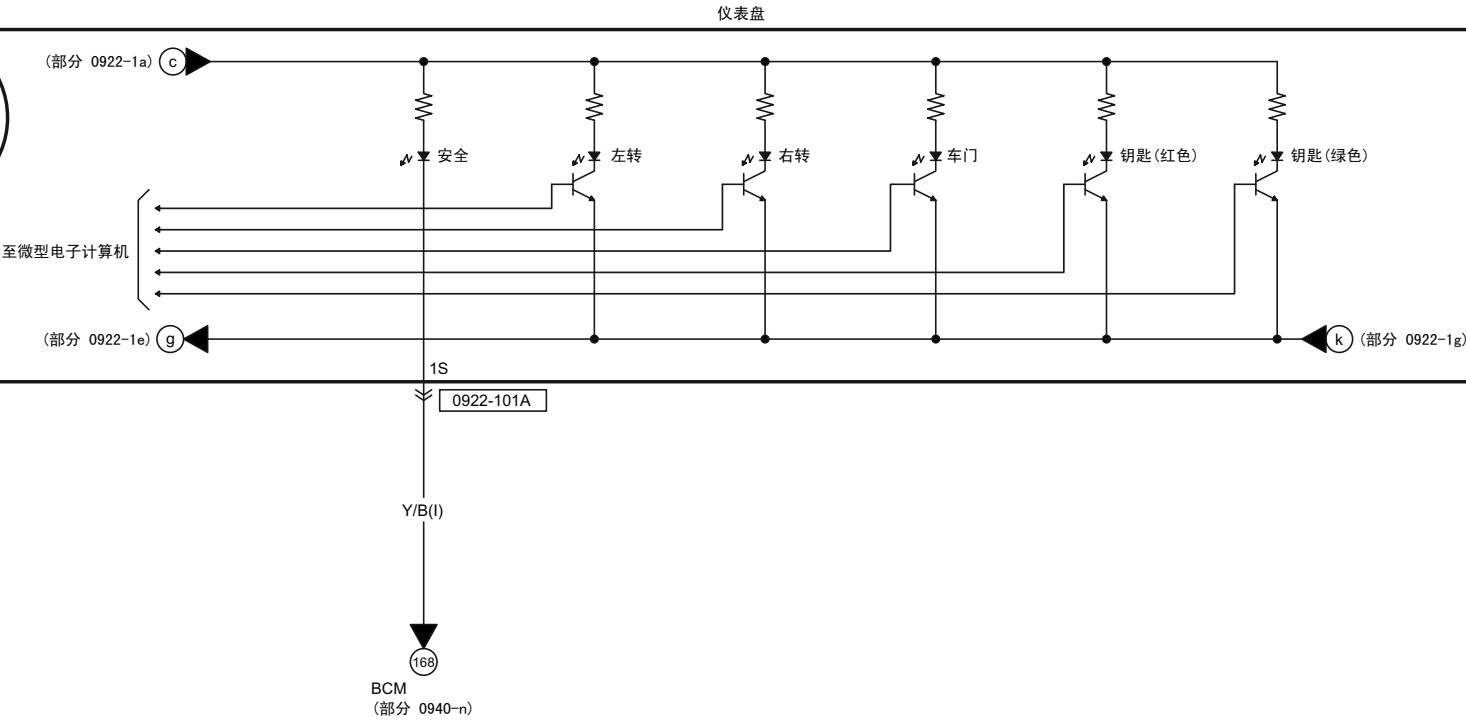

0922-101A


仪表盘 (I)

1W	1U	1S	1O	1O	1M	1K	1I	1G	1E	1C	1A
R	GY/L	Y/B	*	GY/R	*	*	*	L/Y	R/W	*	*
1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B
L	*	Y/L	B	*	L/O	R/Y	R/B	P/L	@8L/W	L/R	B/Y


束线符号：  (F)  (E)  (R)

仪表盘

0922-101A

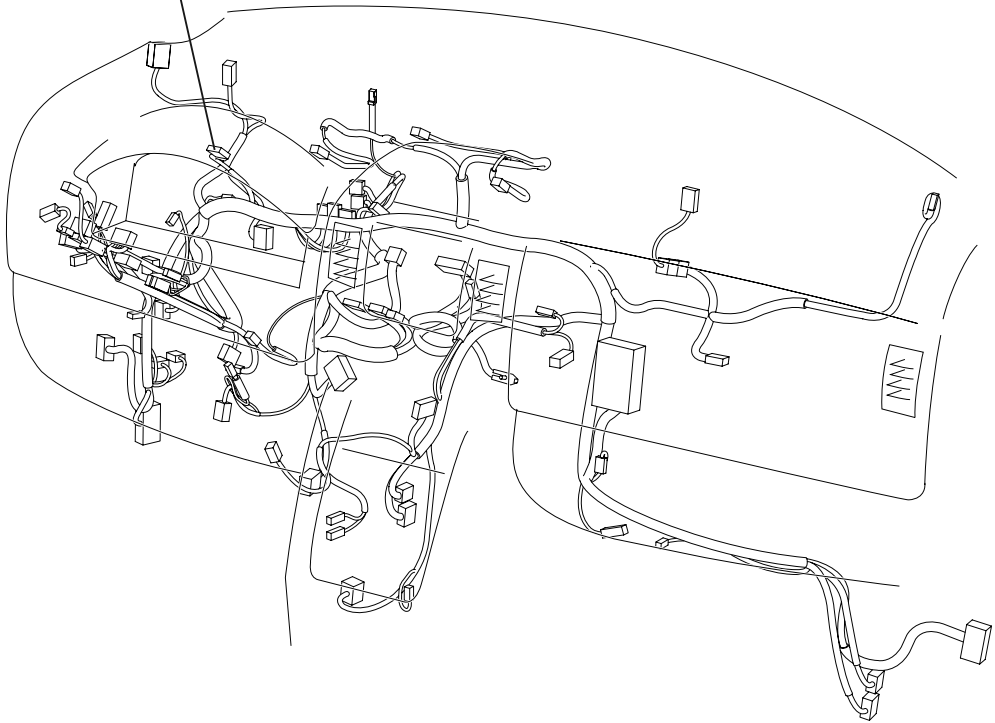


@8 : 带前雾灯
* : 排空

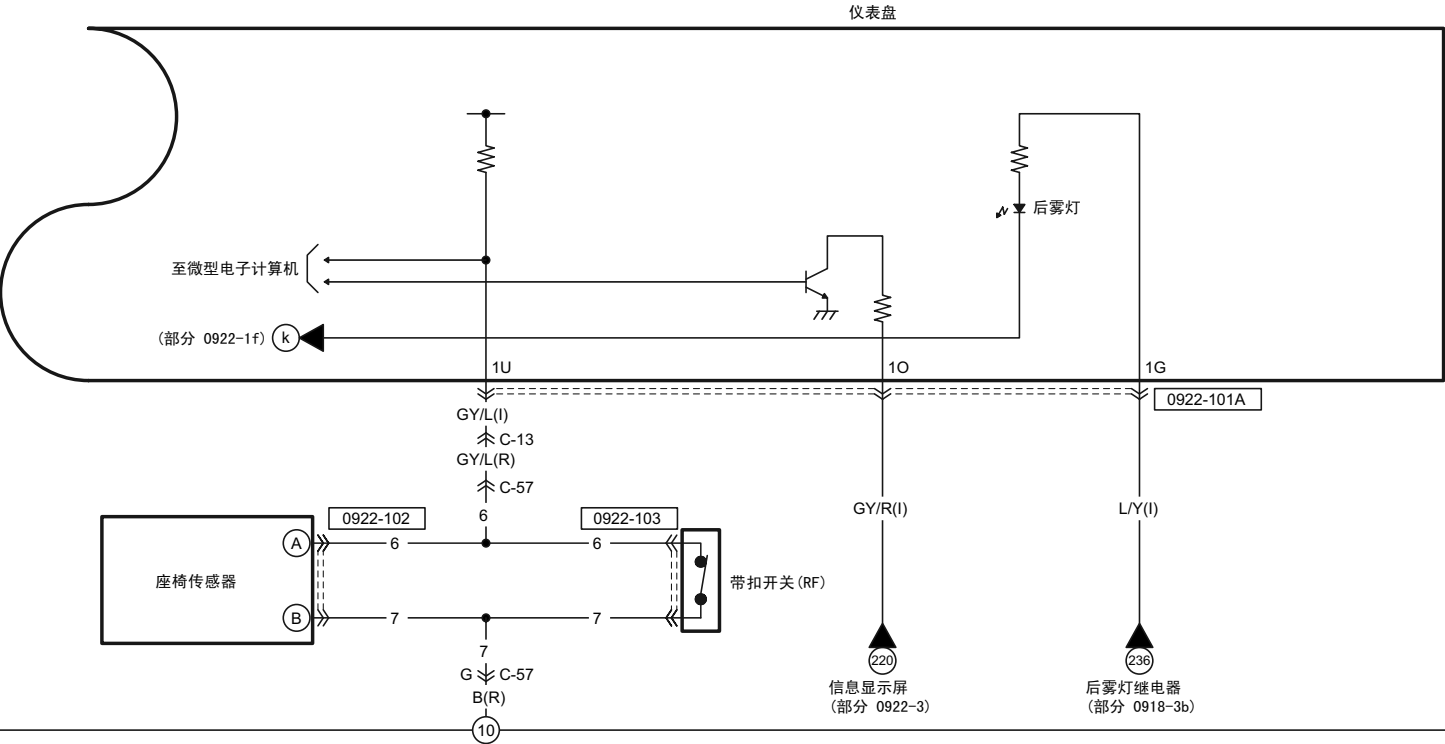


0922-101A
仪表盘 (I)

1W	1U	1S	1Q	1O	1M	1K	1J	1G	1E	1C	1A
R	GY/L	Y/B	*	GY/R	*	*	*	L/Y	R/W	*	*
1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B
L	*	Y/L	B	*	L/O	R/Y	R/B	P/L	@8L/W	L/R	B/Y

 0922-102
座椅传感器 (短线)



0922-103
带扣开关 (RF) (短线)

 

束线符号： (F) (E) (R)

