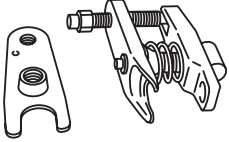
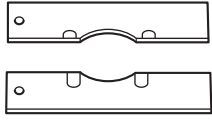
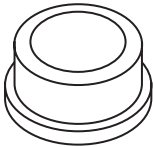
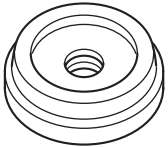
 
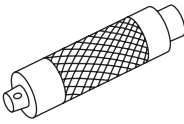
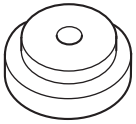
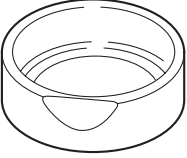
 
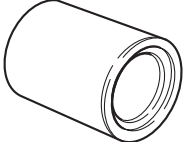
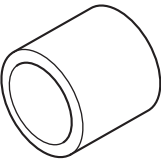
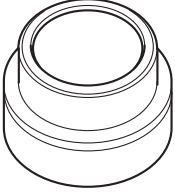
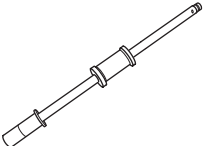
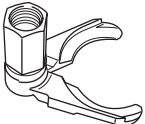
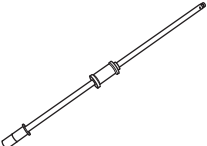
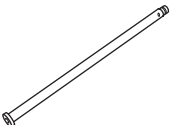
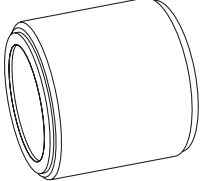


03-60 维修工具

传动系 / 车桥 SST 03-60-1

传动系 / 车桥 SST

id036000800200

49 T028 3A0 万向节拉拔器装置 	49 G033 105 固定器 	49 F026 103 轮毂拉器 
49 G033 102 手柄 	49 F027 009 附件 $\phi 68$ & 77 	49 F027 004 固定器 $\phi 80$ 
49 T025 001 套夹压紧钳 	49 G030 797 手柄 	49 G033 106 固定器 
49 G033 107A 防尘盖安装用工具 	49 F027 003 手柄 	49 B025 004 防尘密封圈安装工具 
49 W034 301 支承块 	49 W027 003 轴承安装用工具 	49 F401 336B 附件 B 
49 0223 630B 后轴拆卸器主体 	49 B025 010 固定器 (零件编号 49 B025 0A1) 	49 B025 017 滑动锤 
49 B025 016 伸展杆 	49 B014 001 油封安装器 	—

