


 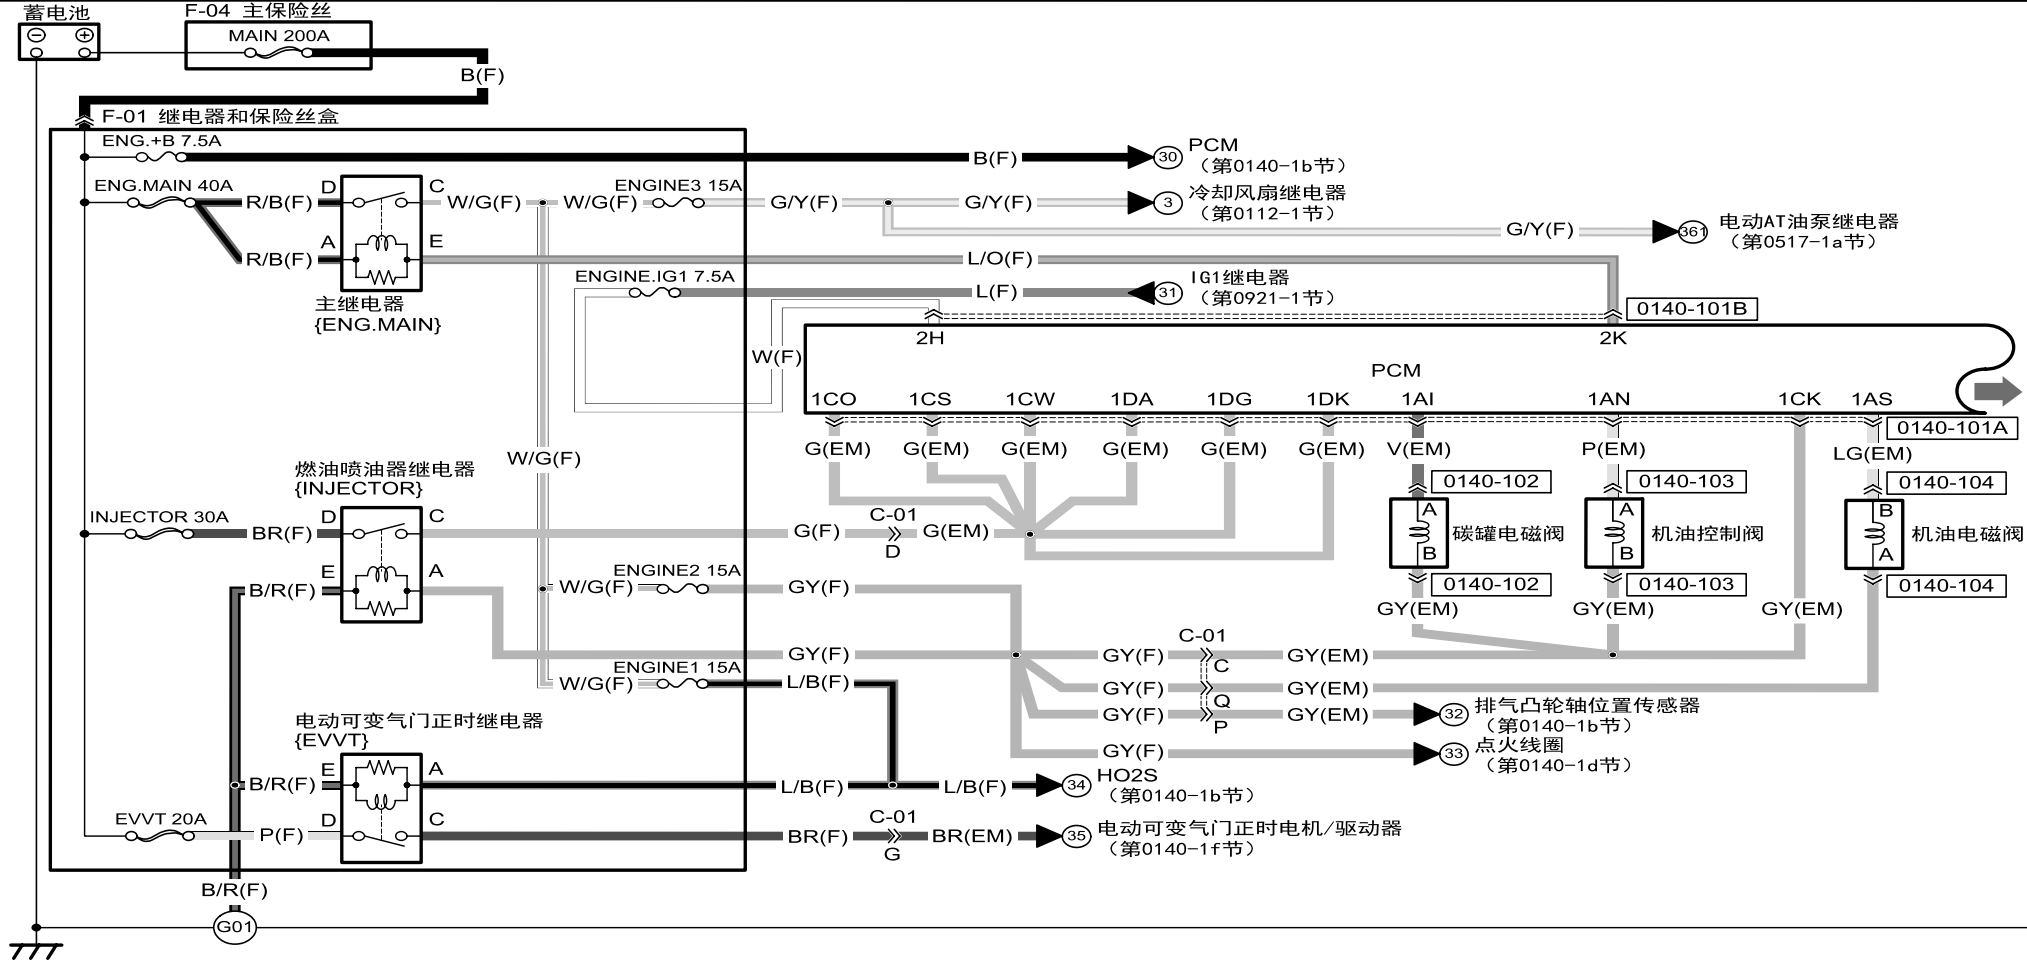
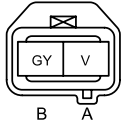
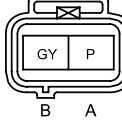





0140-102 碳罐电磁阀	0140-103 机油控制阀	0140-104 机油电磁阀				
						

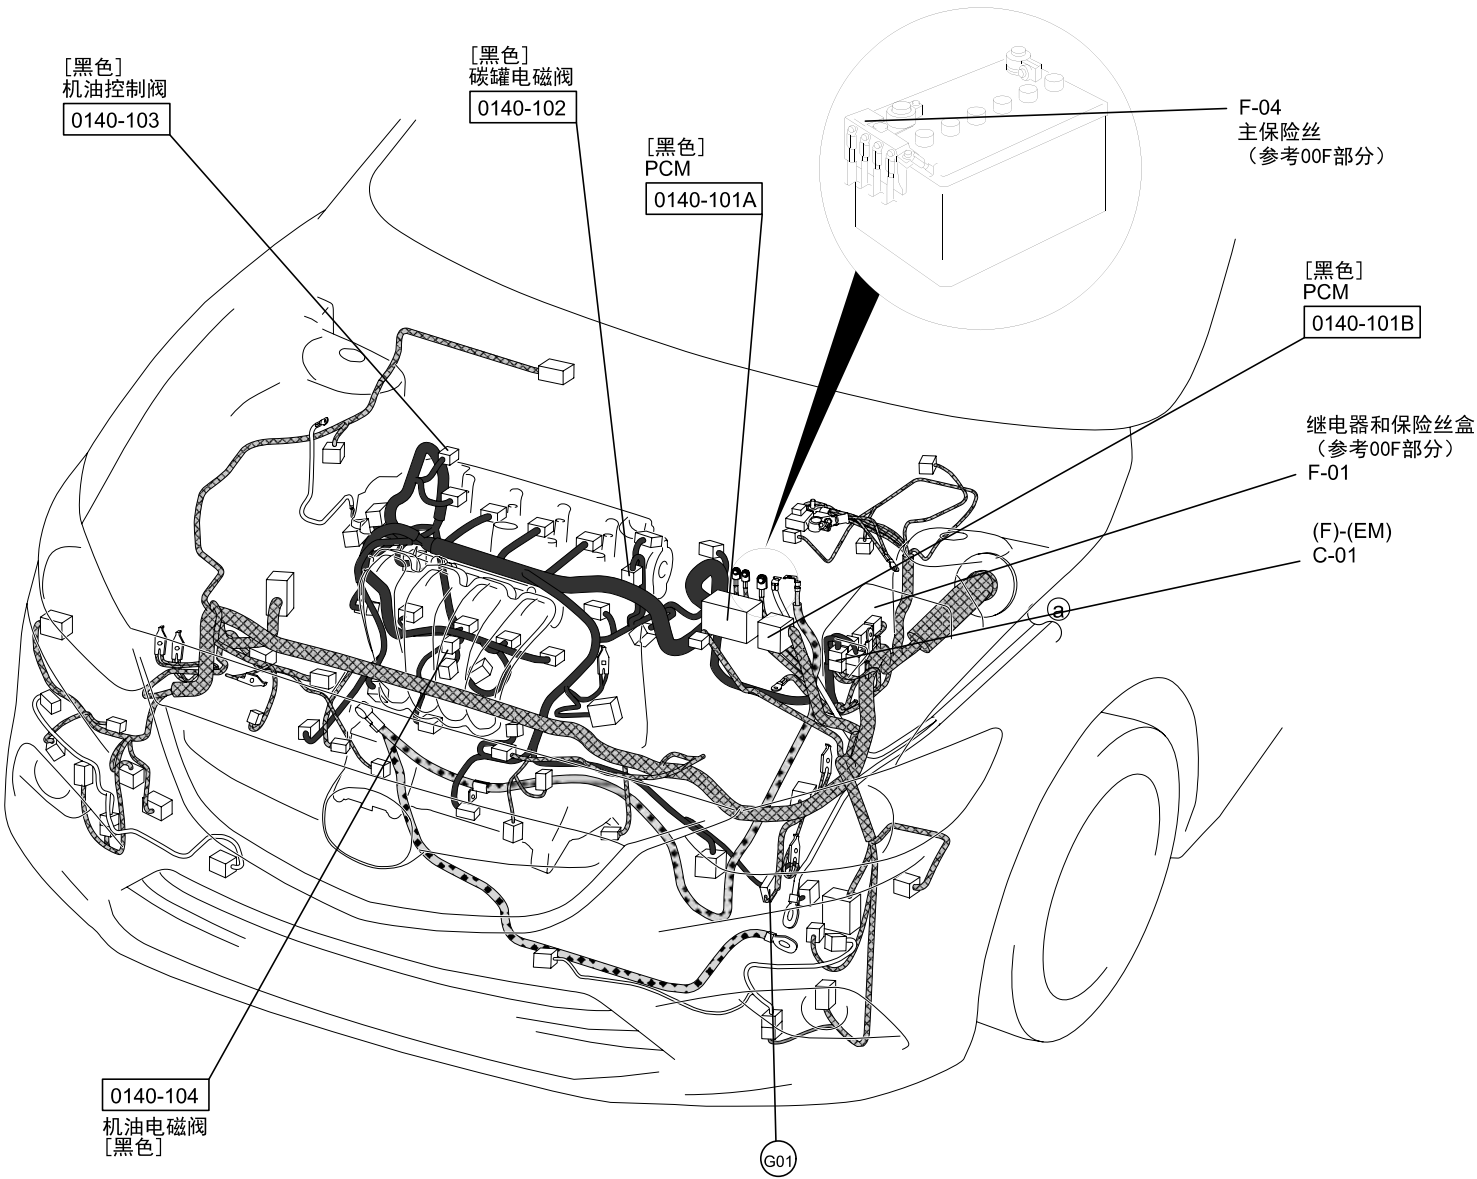


- ：前端线束
- ：发动机线束
2号发动机线束
- ：排放线束

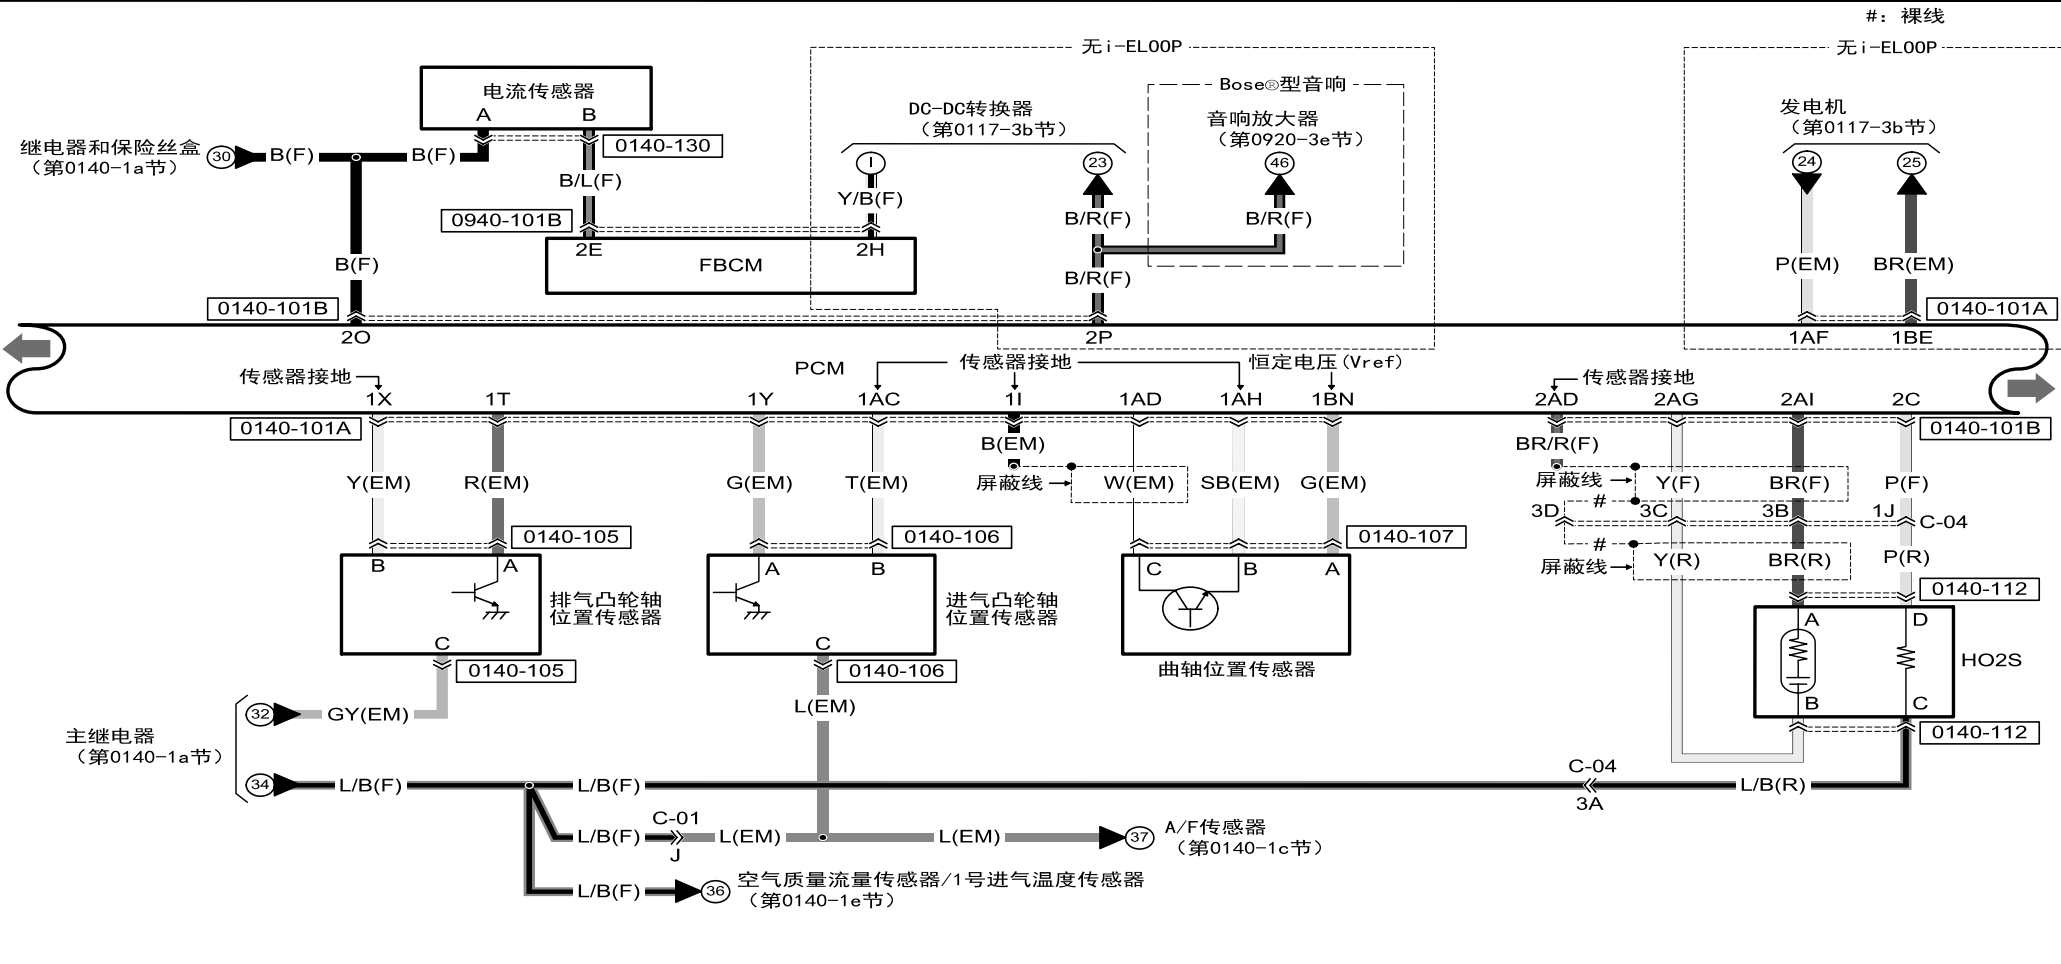


0140-105 排气凸轮轴位置传感器	0140-106 进气凸轮轴位置传感器	0140-107 曲轴位置传感器	0140-112 HO2S	0940-101B FBCM
			0140-130 电流传感器	

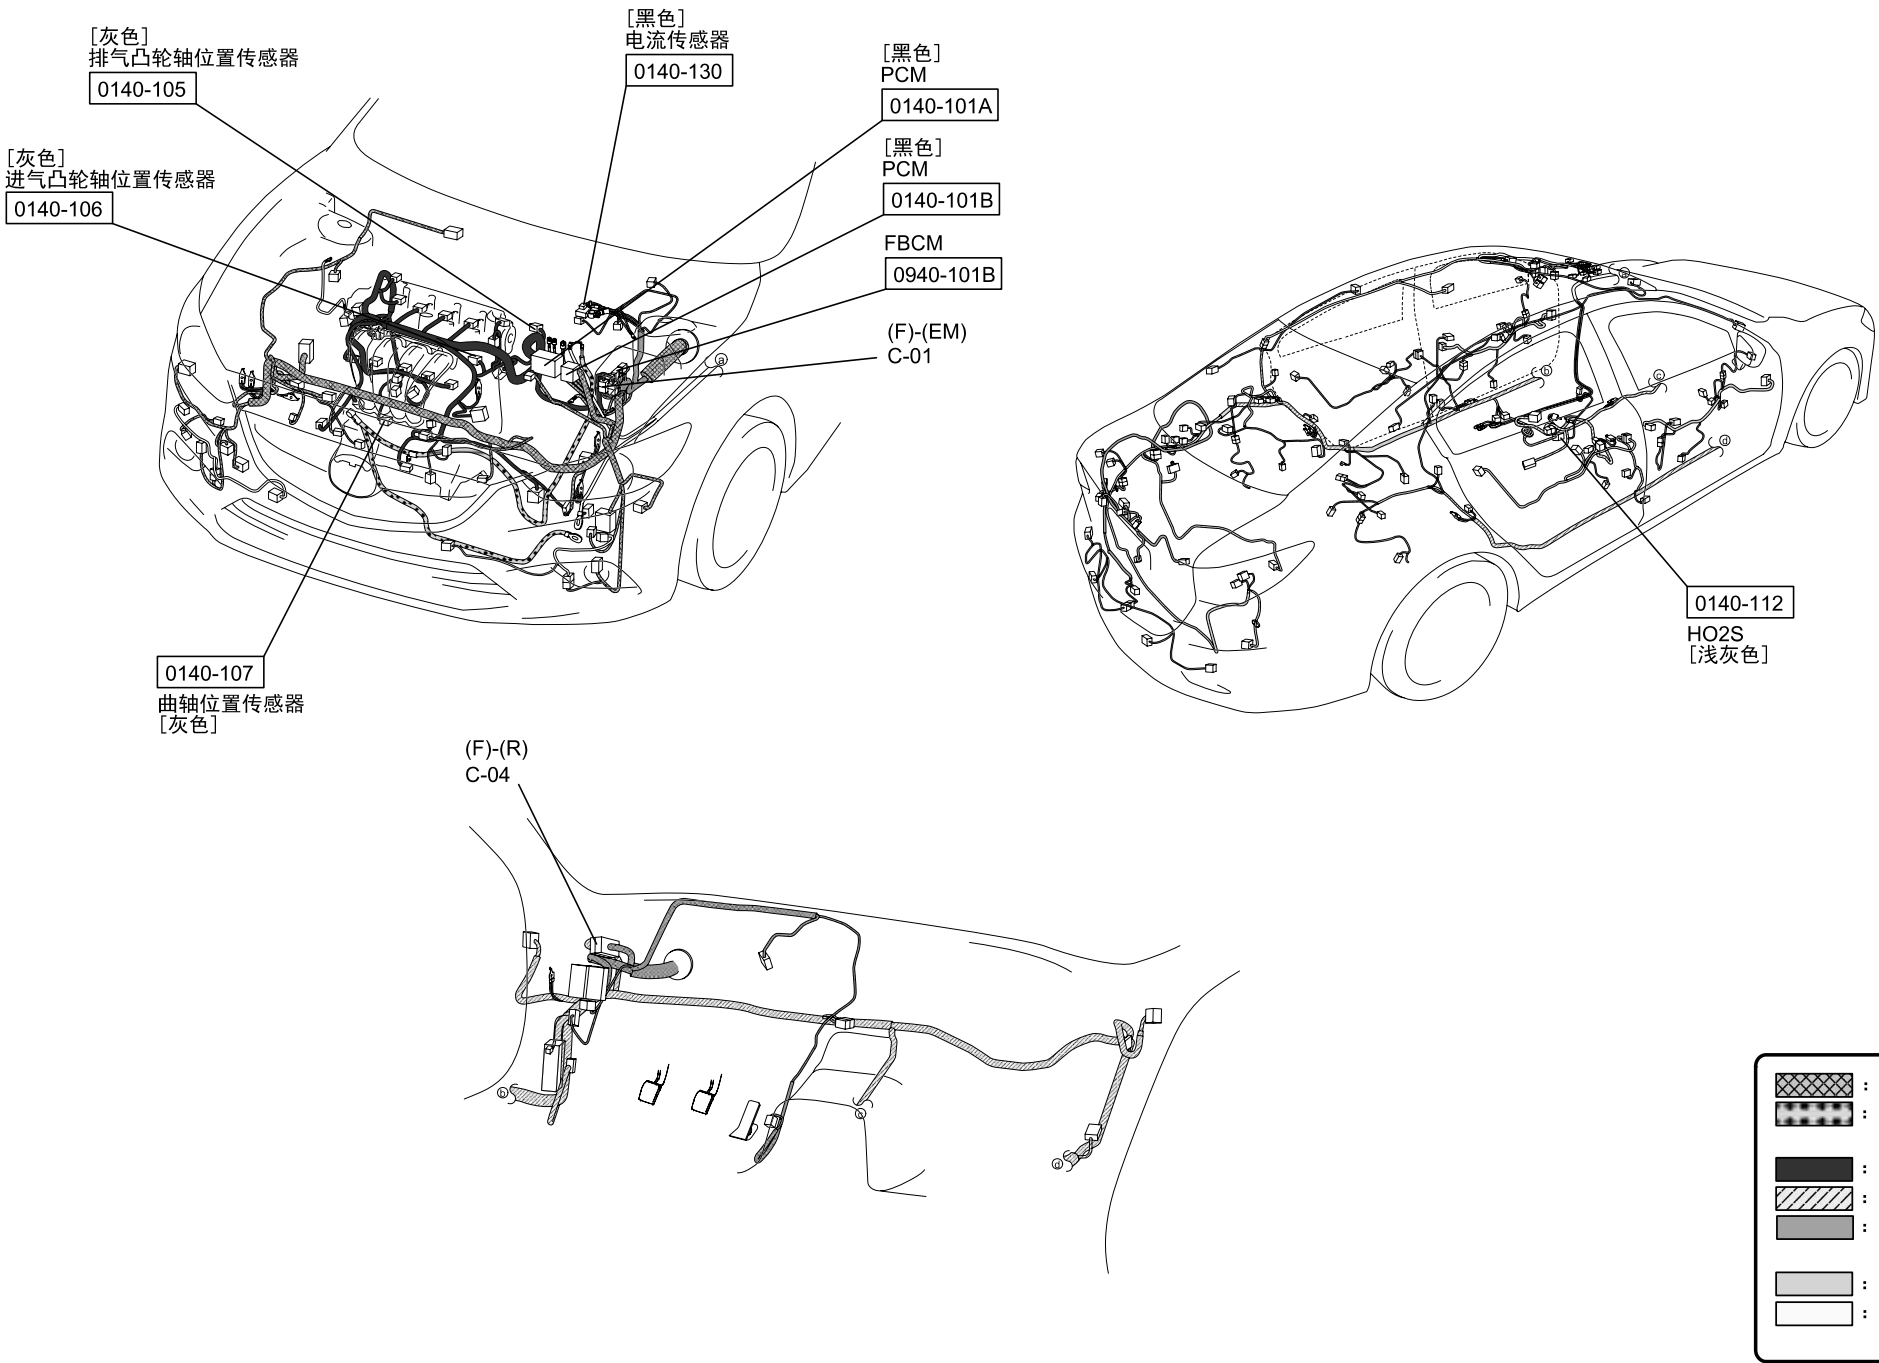


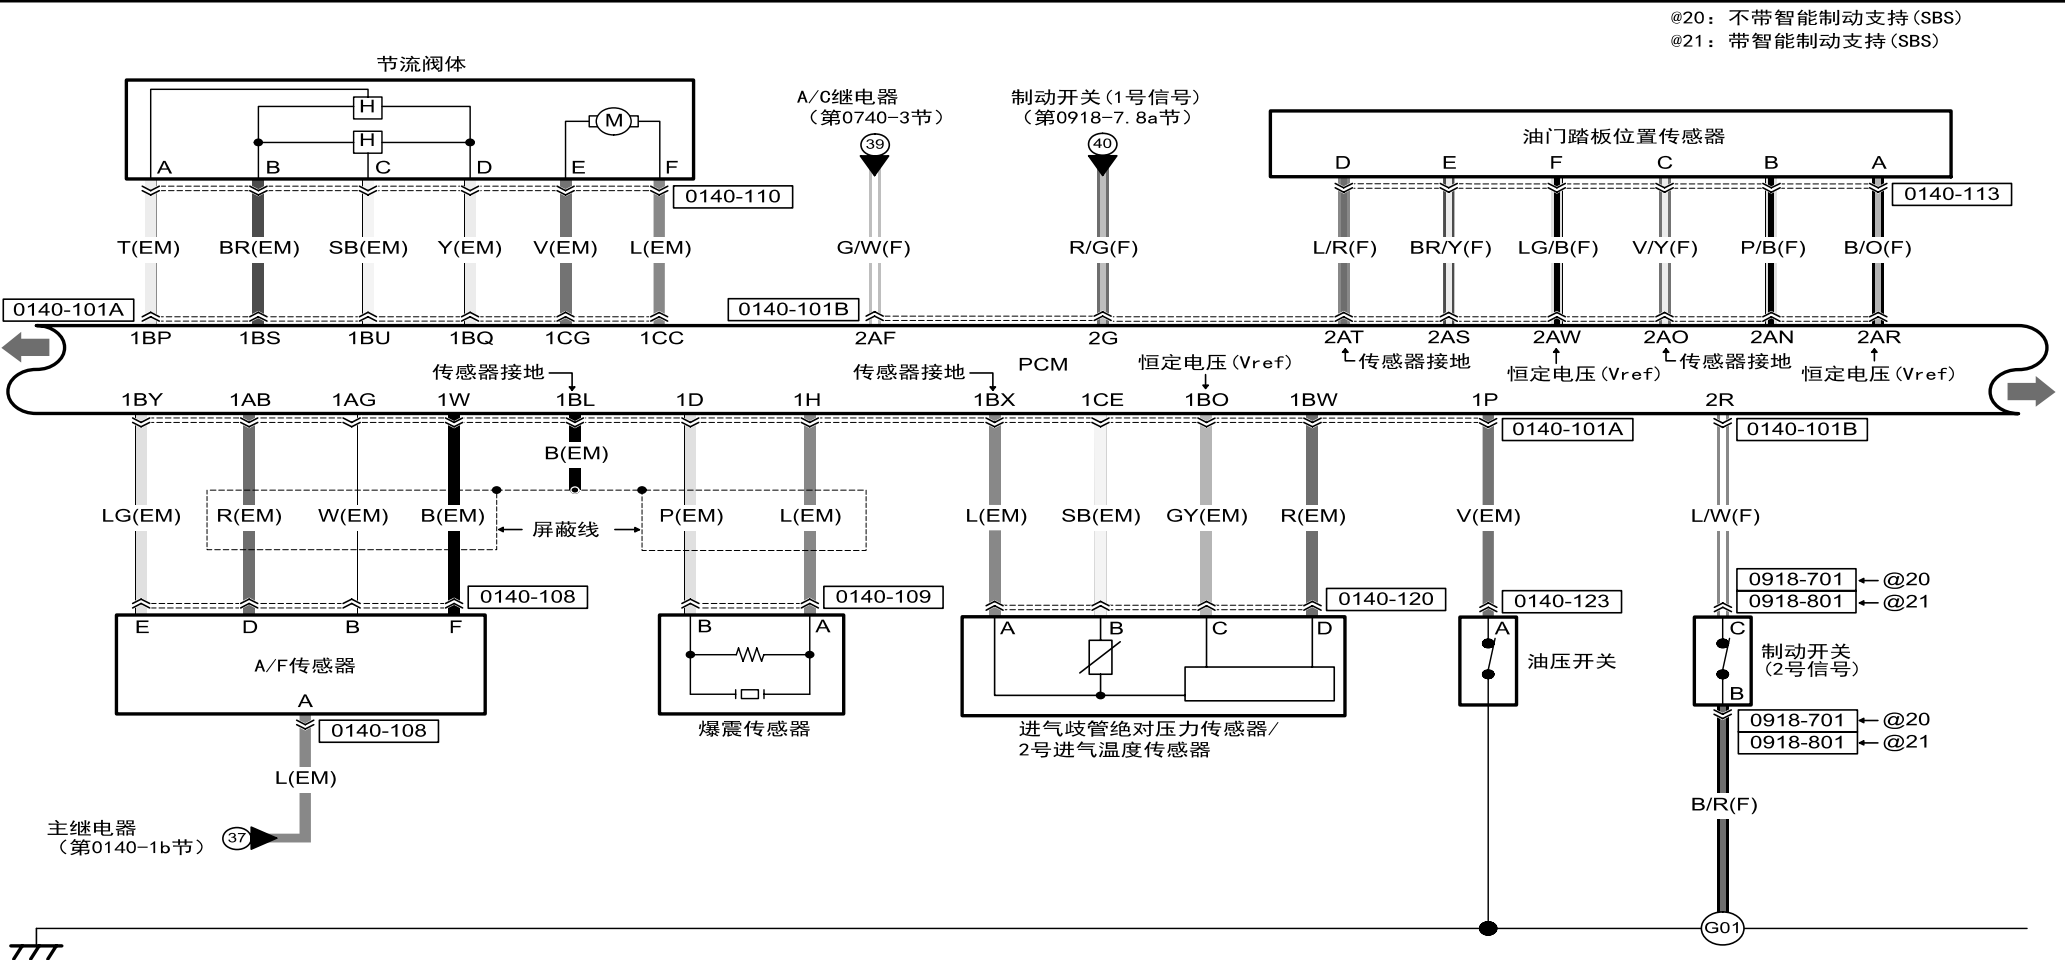

0140-108 A/F传感器	0140-110 节流阀体	0140-120 进气歧管绝对压力传感器/ 2号进气温度传感器	0140-123 油压开关	0918-701 制动开关	0918-801 制动开关
0140-109 爆震传感器	0140-113 油门踏板位置传感器				


关于保险丝盒请参考第00F节，关于PCM连接器和常用连接器列表请参考第00C节。

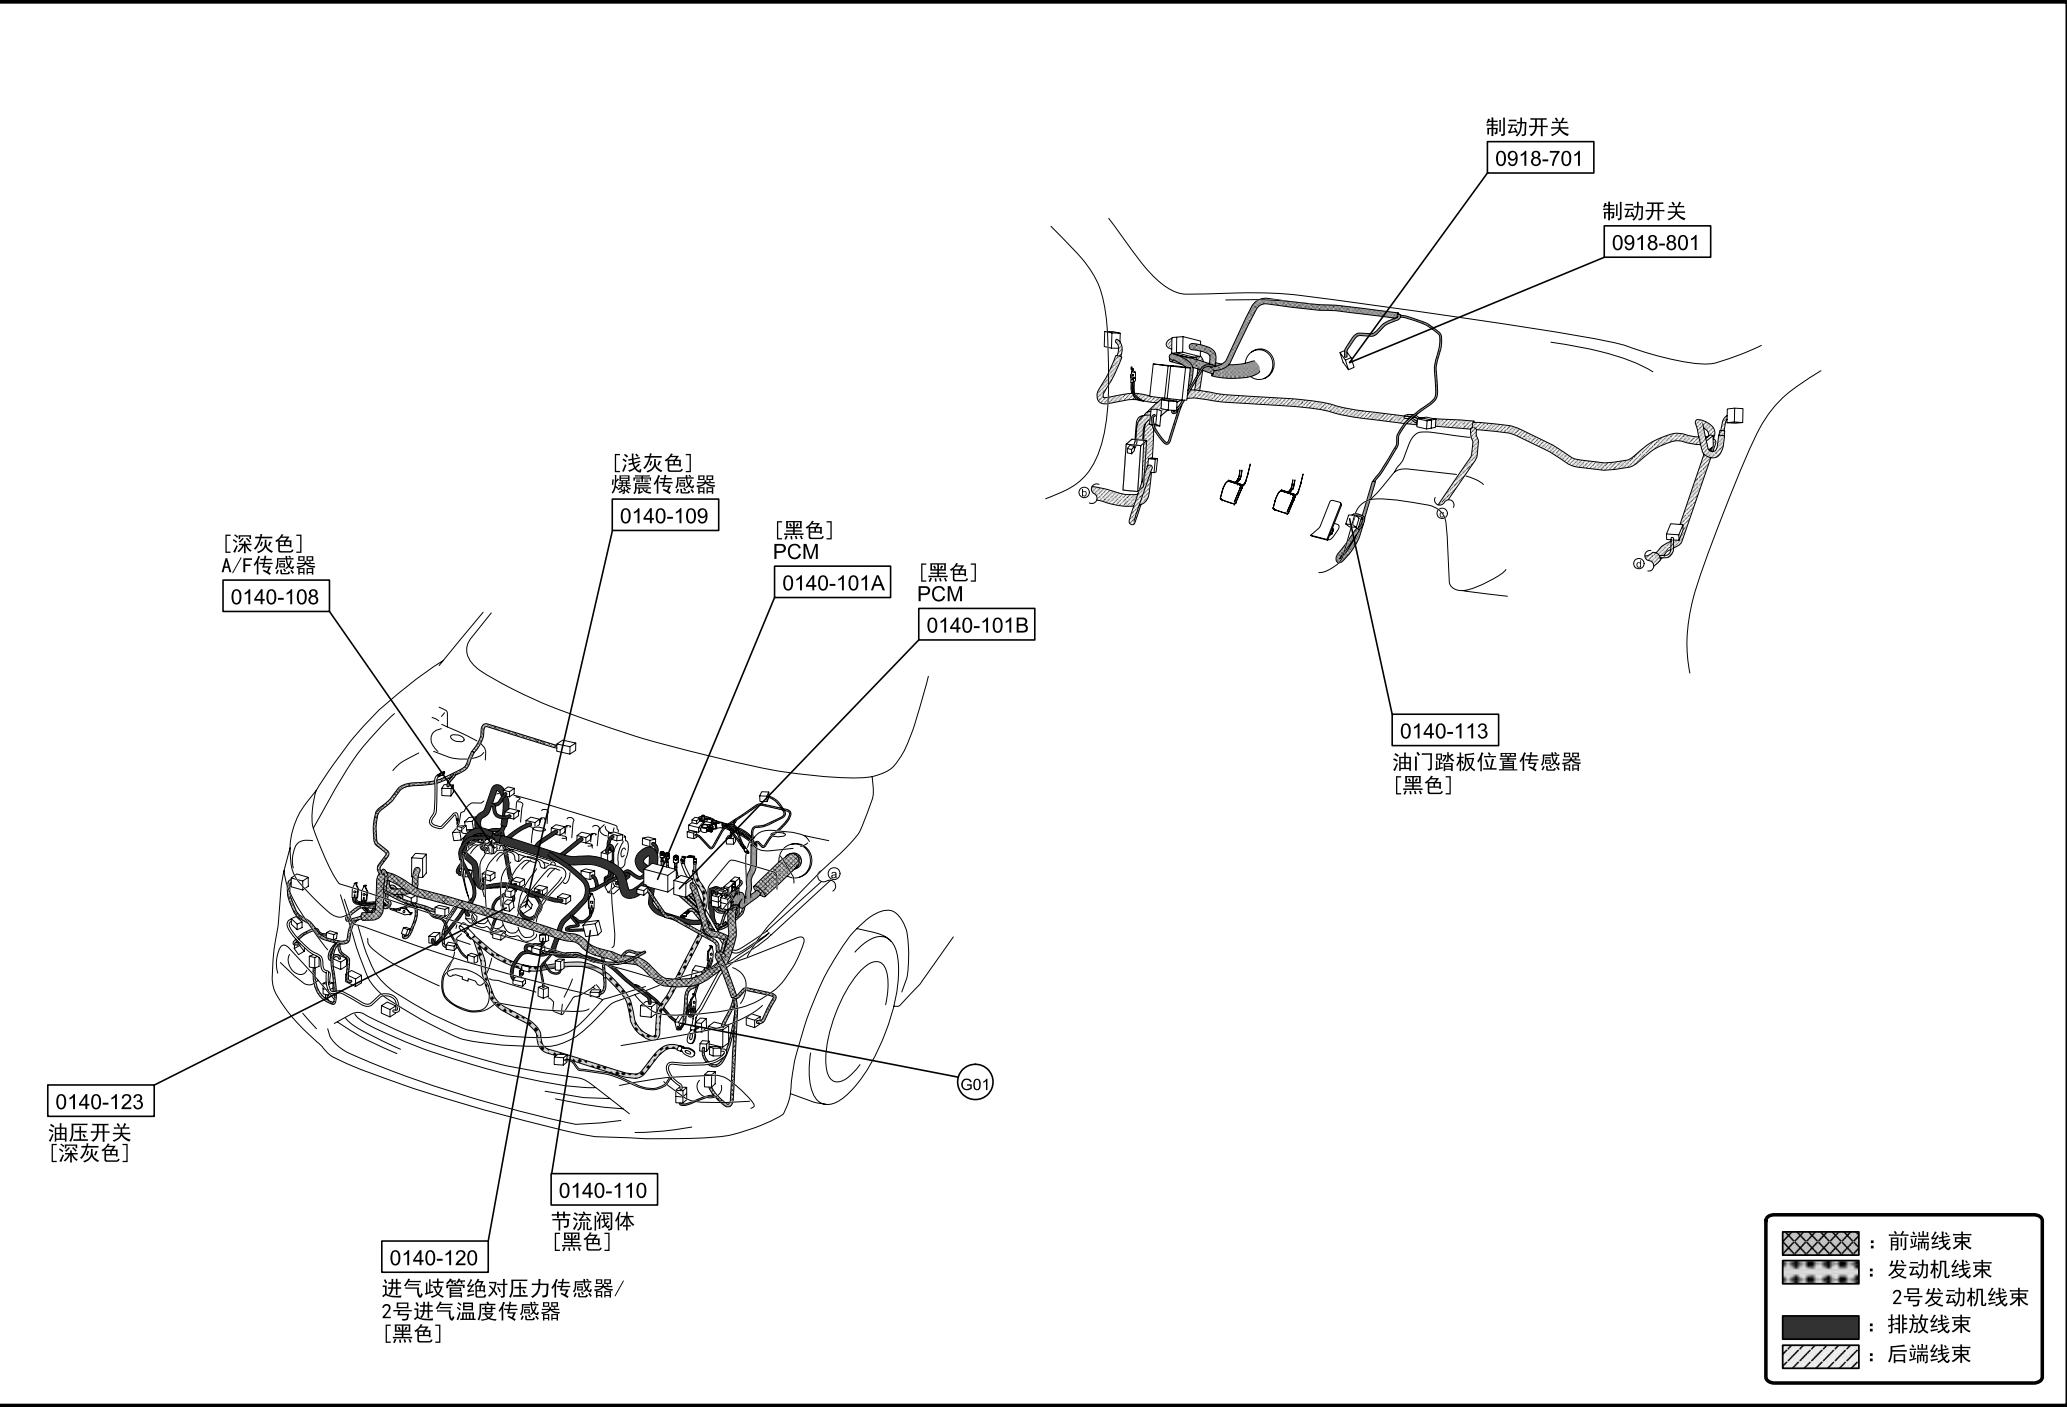

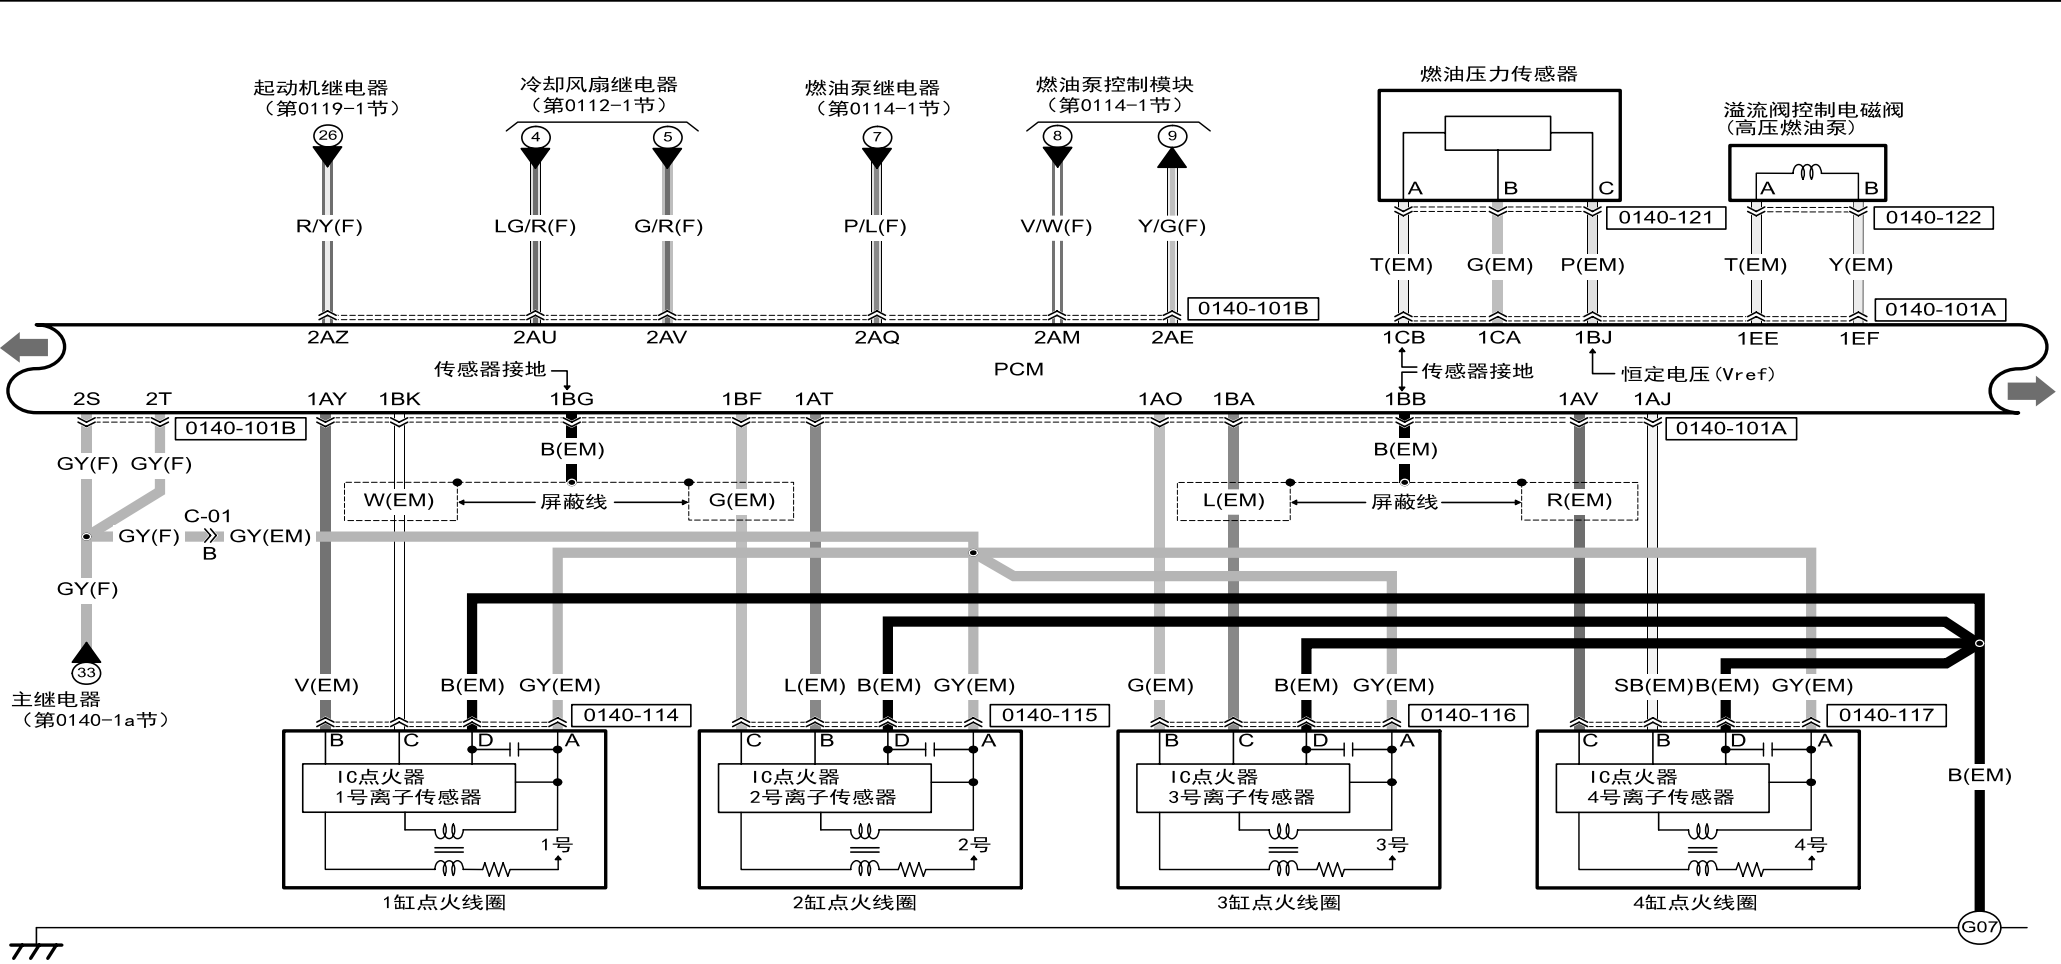






0140-114 1缸点火线圈	0140-115 2缸点火线圈	0140-116 3缸点火线圈	0140-117 4缸点火线圈	0140-121 燃油压力传感器	0140-122 溢流阀控制电磁阀 (高压燃油泵)

关于保险丝盒请参考第00F节，关于PCM连接器和常用连接器列表请参考第00C节。

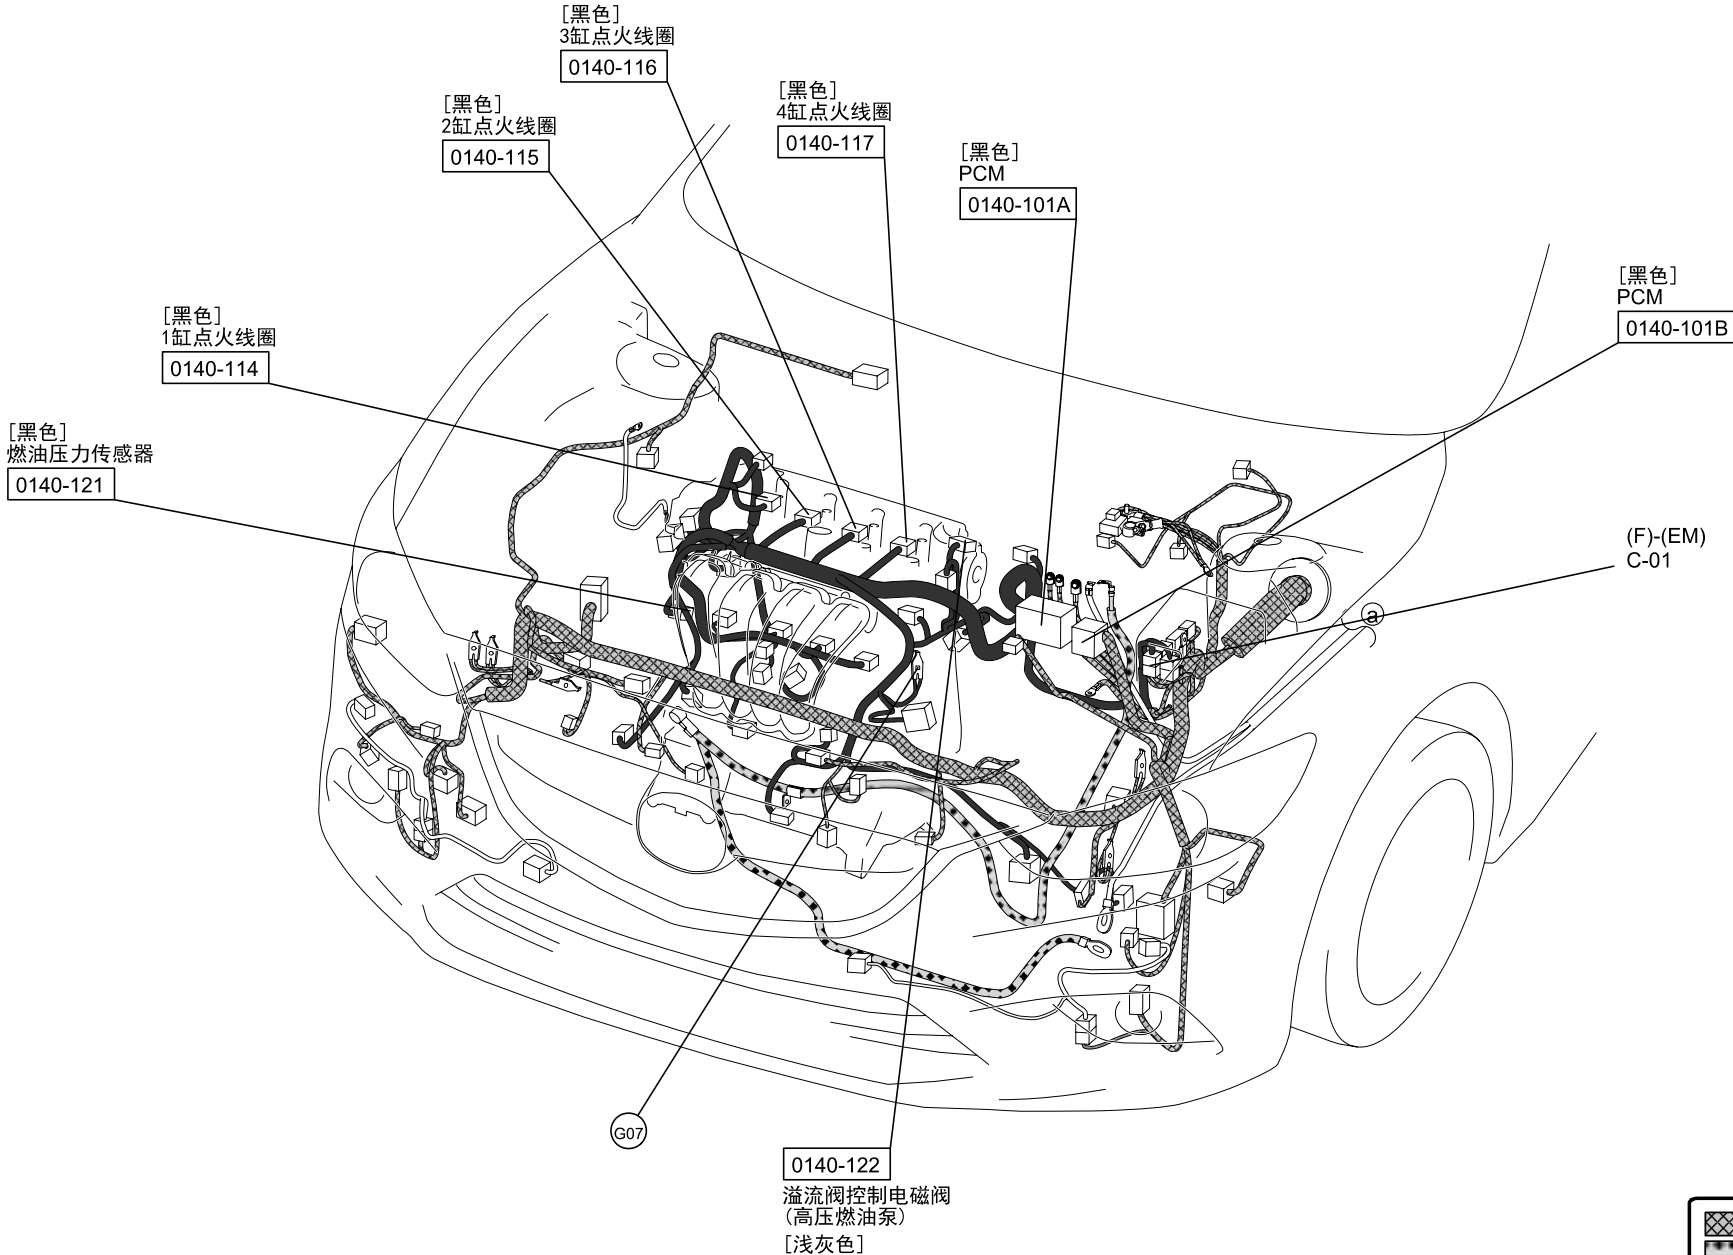



- 前端线束
- 发动机线束
- 2号发动机线束
- 排放线束



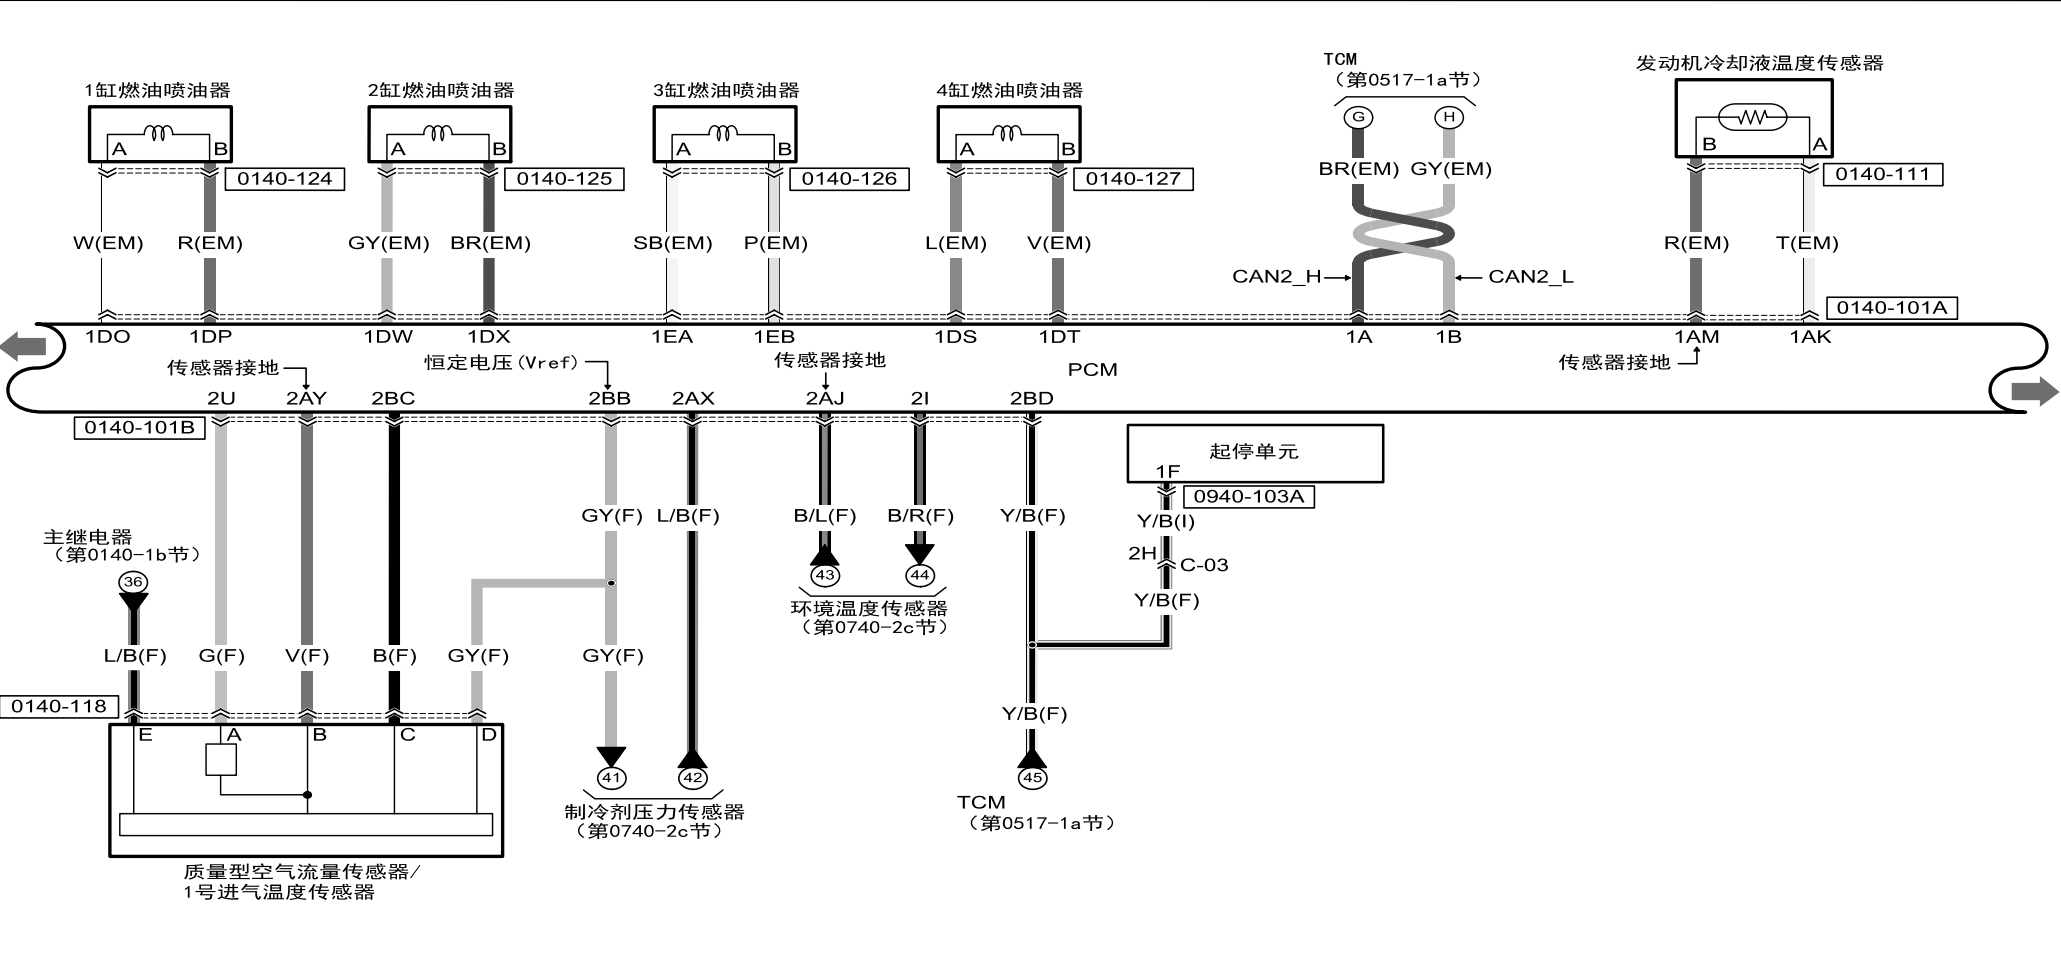


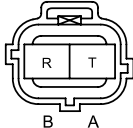   
0140-111 发动机冷却液温度传感器 	0140-118 质量型空气流量传感器/ 1号进气温度传感器 	0140-124 1缸燃油喷油器 	0140-126 3缸燃油喷油器 	0940-103A 起停单元 <table><tr><td colspan="2">1AE</td><td colspan="2">1AC</td><td colspan="2">1AA</td><td colspan="2">1Y</td><td colspan="2">1W</td><td colspan="2">1U</td><td colspan="2">1S</td><td colspan="2">1Q</td><td colspan="2">1O</td><td colspan="2">1M</td><td colspan="2">1K</td><td colspan="2">1I</td><td colspan="2">1G</td><td colspan="2">1E</td><td colspan="2">1C</td><td colspan="2">1A</td></tr><tr><td>G</td><td>BR</td><td>W</td><td>B</td><td>P</td><td>B</td><td>R</td><td>L</td><td>W</td><td>G</td><td>O</td><td>*</td><td>GY</td><td>P</td><td>L</td><td>Y</td><td>W</td><td>L</td><td>GY</td><td>R</td><td>G</td><td>L</td><td>R</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>B</td><td>*</td><td>R</td><td>W</td><td>LG</td><td>B</td><td>G</td><td>Y</td><td>B</td><td>O</td><td>LG</td><td>*</td><td>Y</td><td>R</td><td>V</td><td>G</td><td>V</td><td>R</td><td>V</td><td>LG</td><td>R</td><td>Y</td><td>B</td><td>R</td><td>Y</td><td>V</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>1AF</td><td>1AD</td><td>1AB</td><td>1Z</td><td>1X</td><td>1V</td><td>1T</td><td>1R</td><td>1P</td><td>1N</td><td>1L</td><td>1J</td><td>1H</td><td>1F</td><td>1D</td><td>1B</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>	1AE		1AC		1AA		1Y		1W		1U		1S		1Q		1O		1M		1K		1I		1G		1E		1C		1A		G	BR	W	B	P	B	R	L	W	G	O	*	GY	P	L	Y	W	L	GY	R	G	L	R										B	*	R	W	LG	B	G	Y	B	O	LG	*	Y	R	V	G	V	R	V	LG	R	Y	B	R	Y	V						1AF	1AD	1AB	1Z	1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B																
1AE		1AC		1AA		1Y		1W		1U		1S		1Q		1O		1M		1K		1I		1G		1E		1C		1A																																																																																																					
G	BR	W	B	P	B	R	L	W	G	O	*	GY	P	L	Y	W	L	GY	R	G	L	R																																																																																																													
B	*	R	W	LG	B	G	Y	B	O	LG	*	Y	R	V	G	V	R	V	LG	R	Y	B	R	Y	V																																																																																																										
1AF	1AD	1AB	1Z	1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B																																																																																																																				

 关于保险丝盒请参考第00F节，关于PCM连接器和常用连接器列表请参考第00C节。

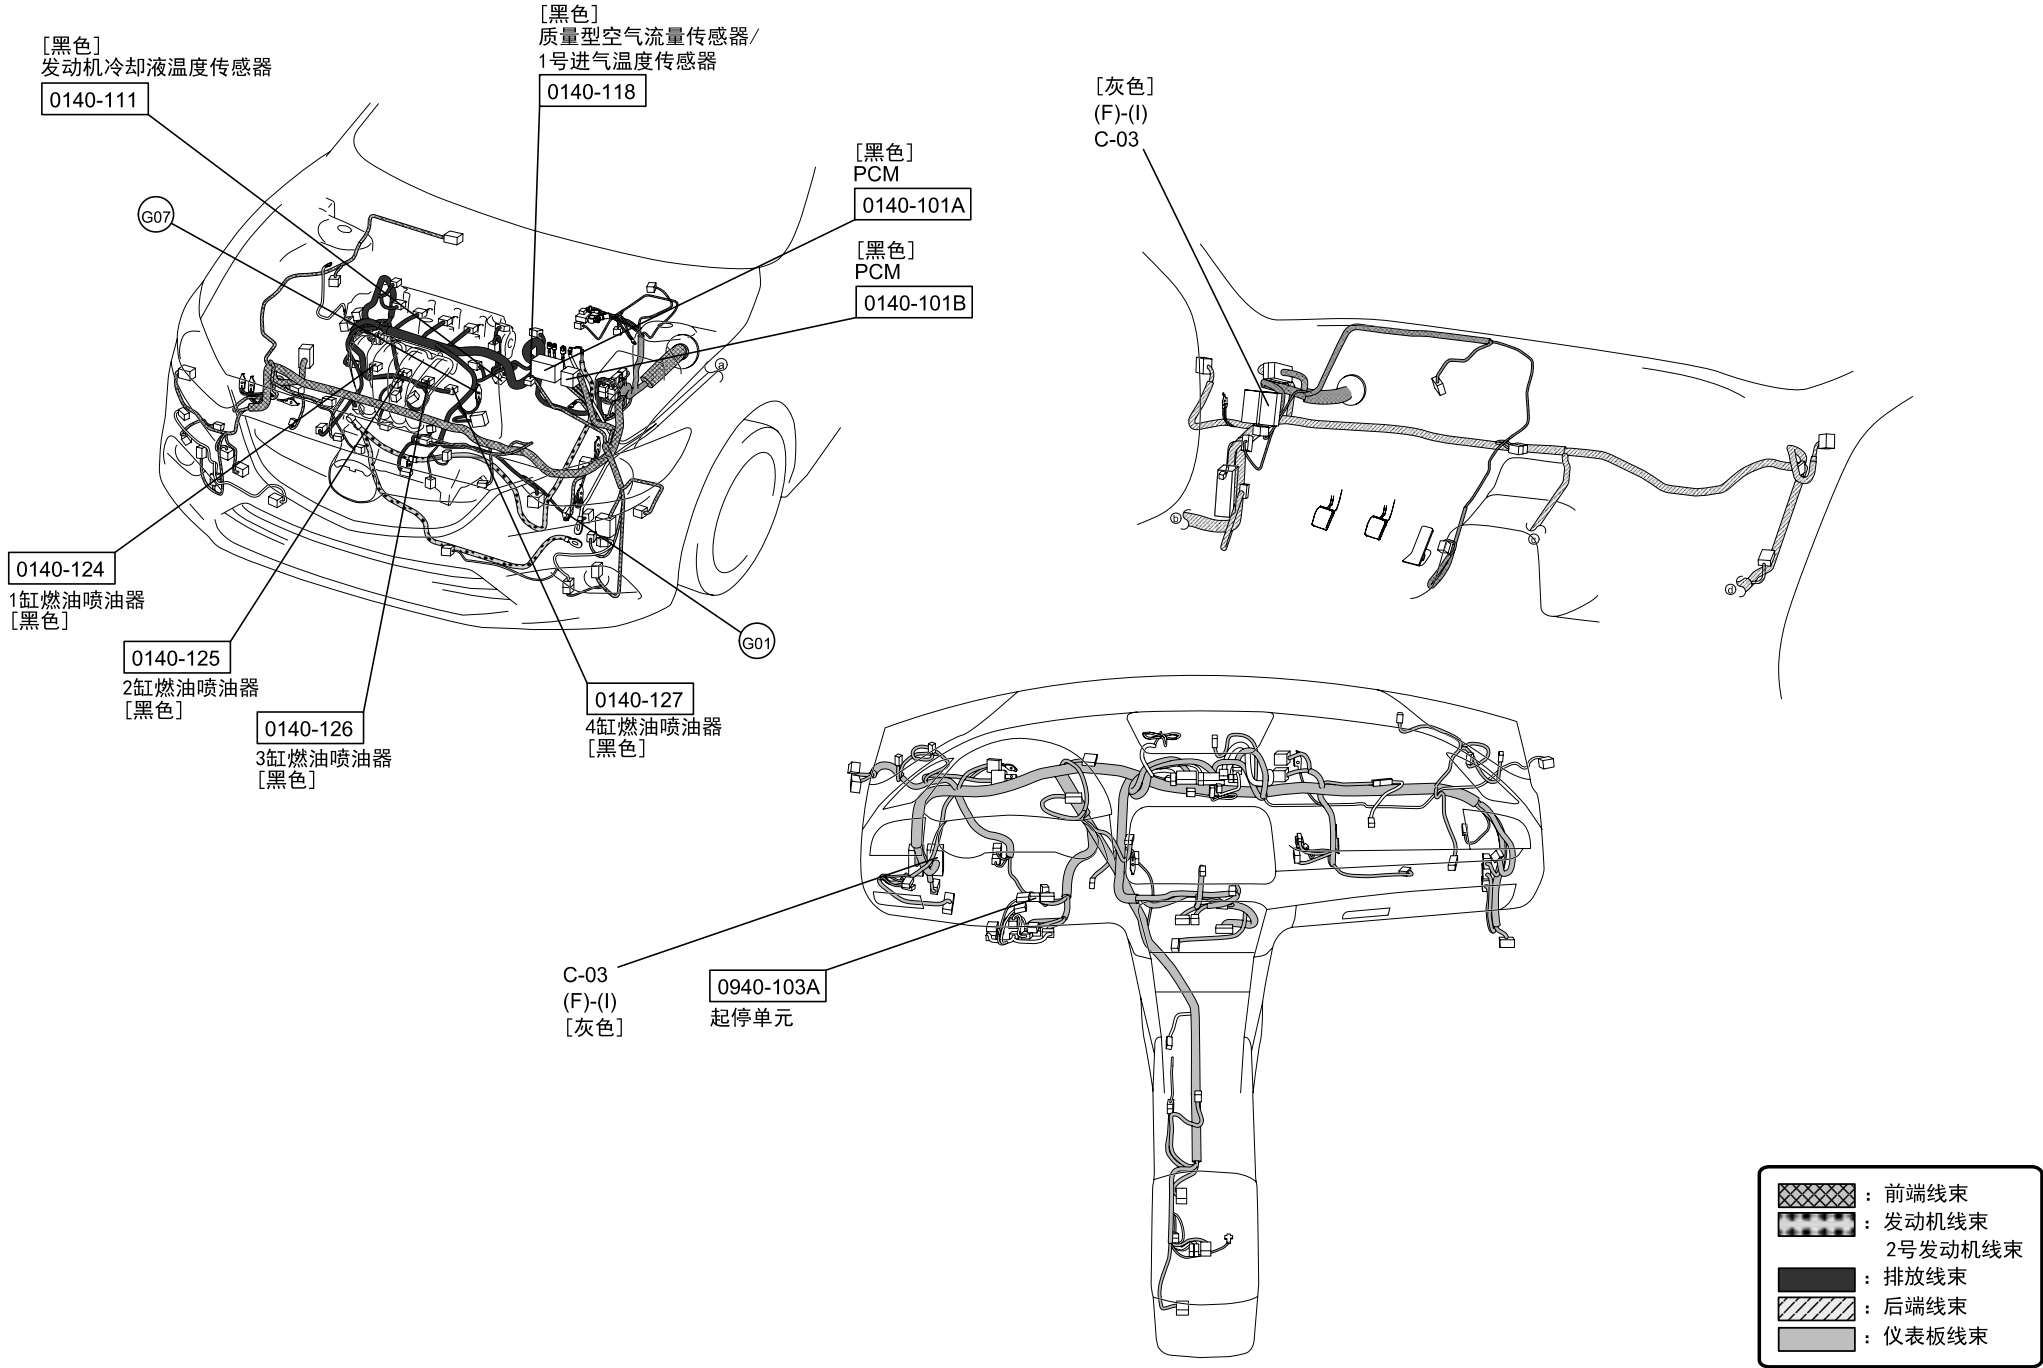

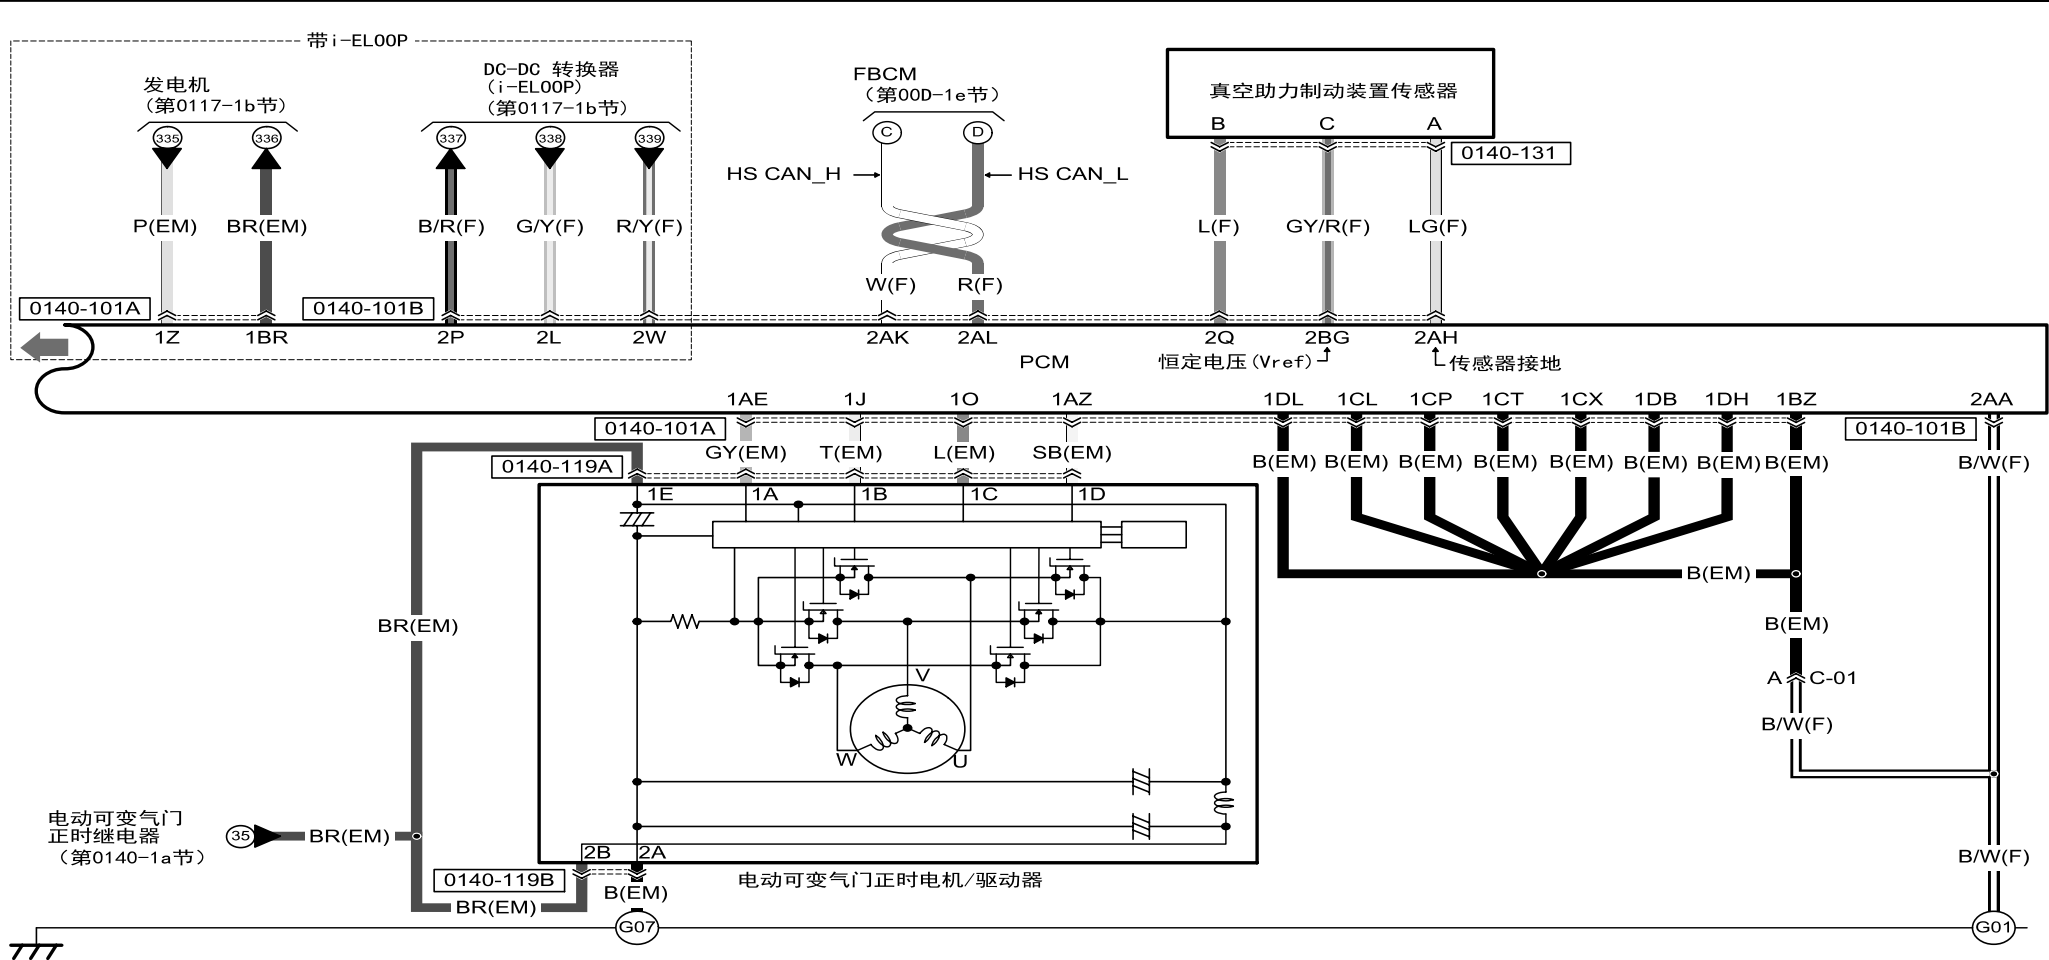

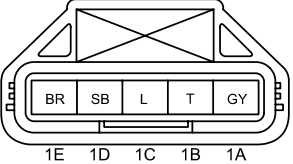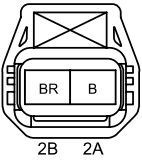0140-119A 电动可变气门正时电机/驱动器 	0140-119B 电动可变气门正时电机/驱动器 	0140-131 真空助力制动装置传感器 	

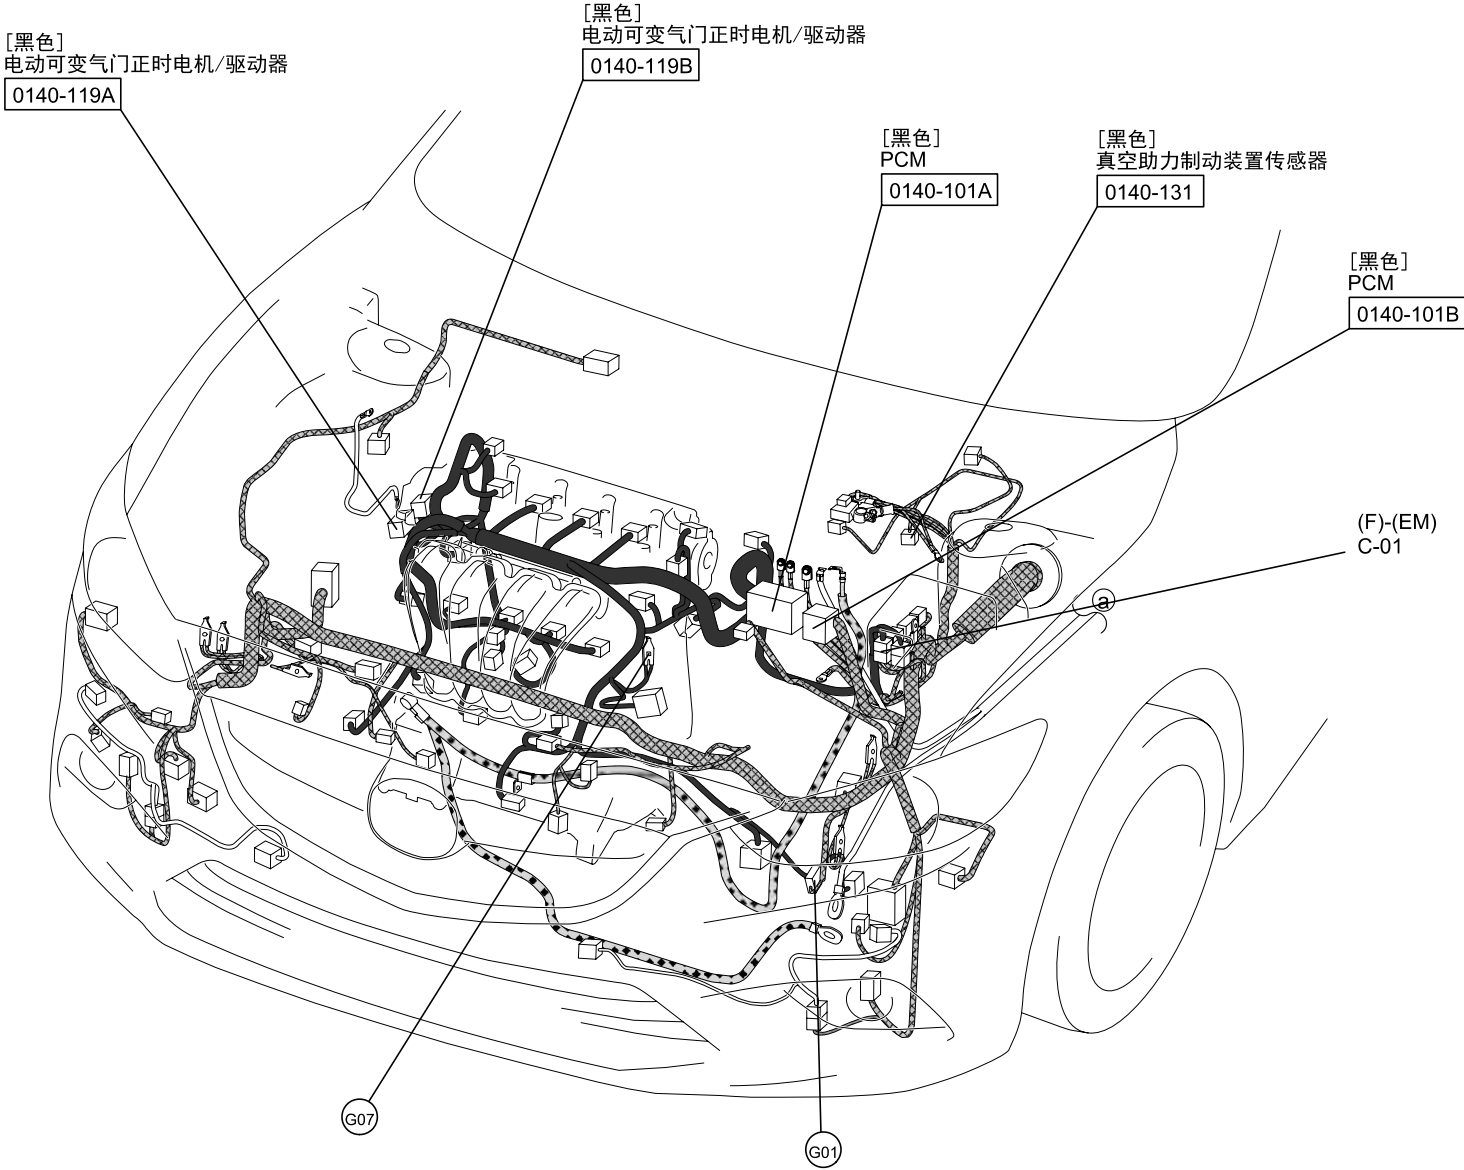

- 前端线束
- 发动机线束
- 2号发动机线束
- 排放线束