
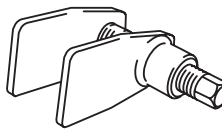
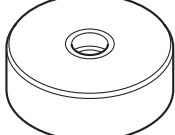
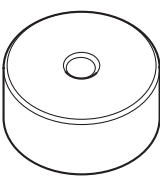

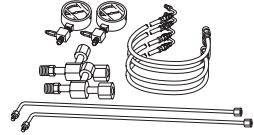
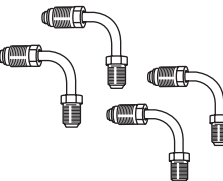
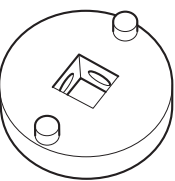


04-60 维修工具

制动 SST 04-60-1

制动 SST

e3i046000000w01

<p>49 0259 770B</p> <p>油管螺母扳手</p> 	<p>49 0221 600C</p> <p>盘式制动器扩展工具</p> 	<p>49 B033 001</p> <p>安装工具</p> 
<p>49 B026 301</p> <p>安装工具</p> 	<p>49 G033 102</p> <p>手柄</p> 	<p>49 U043 0A0A</p> <p>机油压力表套件</p> 
<p>49 D043 0A0</p> <p>转接器套件</p> 	<p>49 F043 002</p> <p>扳手</p> 	<p>WDS</p> 