




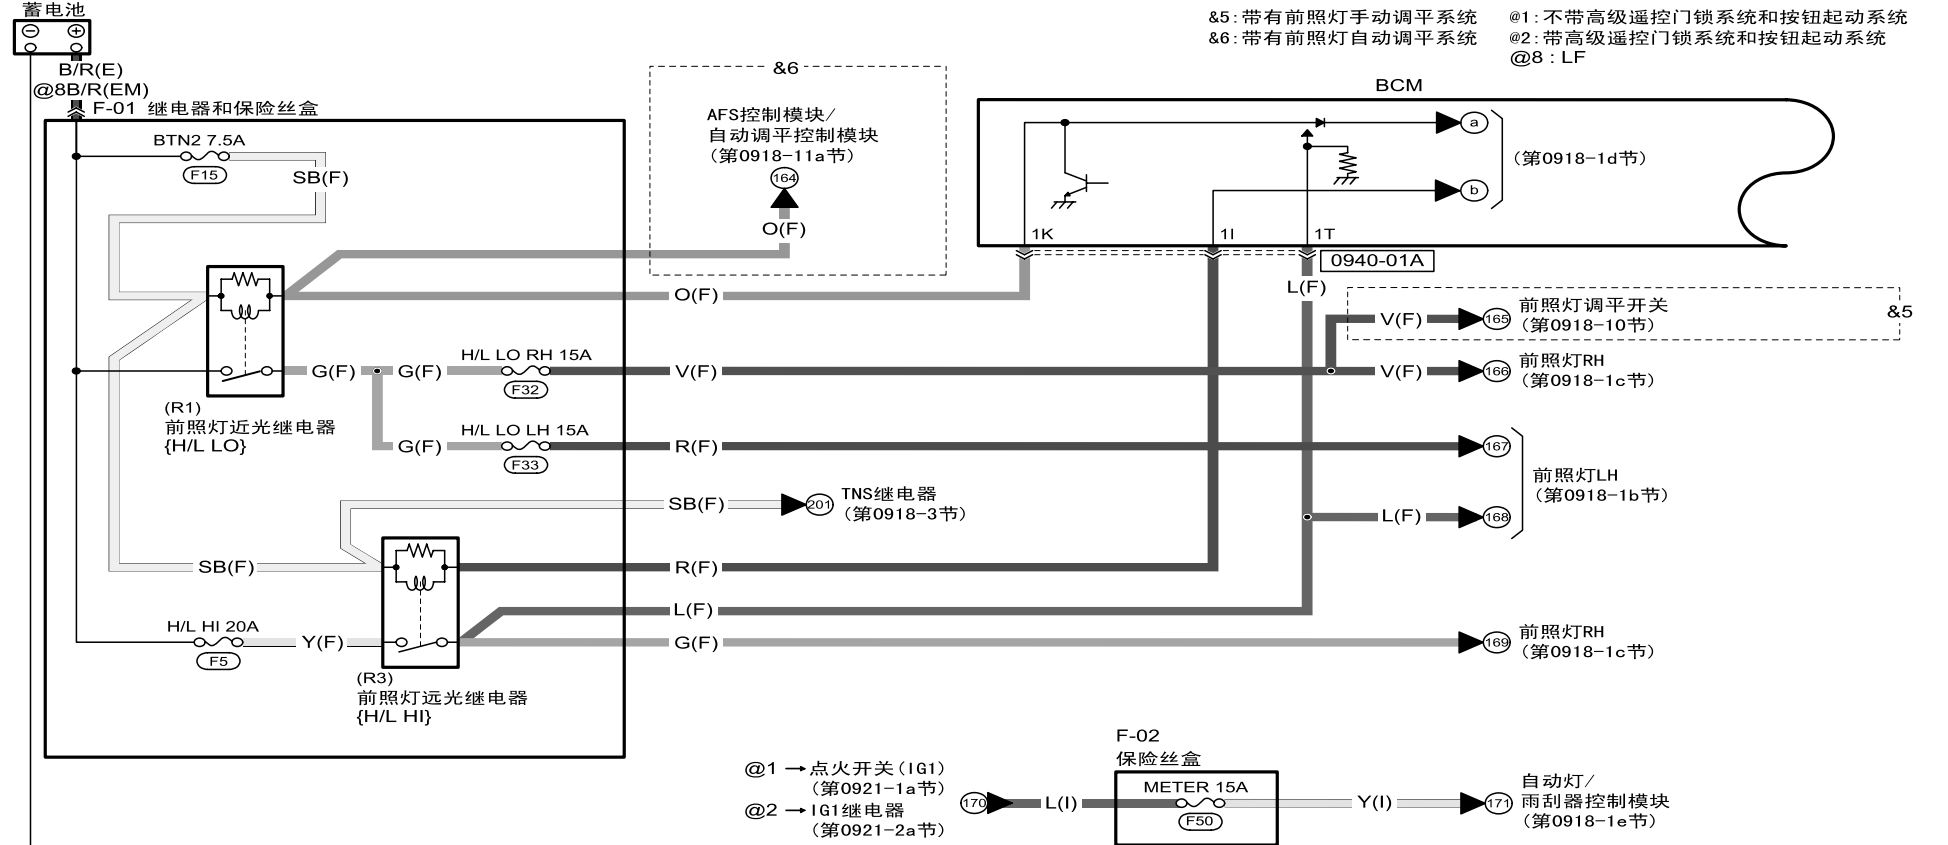


0940-01A
BCM

1W	1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A
LG	*	*	W	*	G	O	R	GY	Y	O	W
GY	*	L	*	*	V	LG	O	BR	*	SB	R
1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B

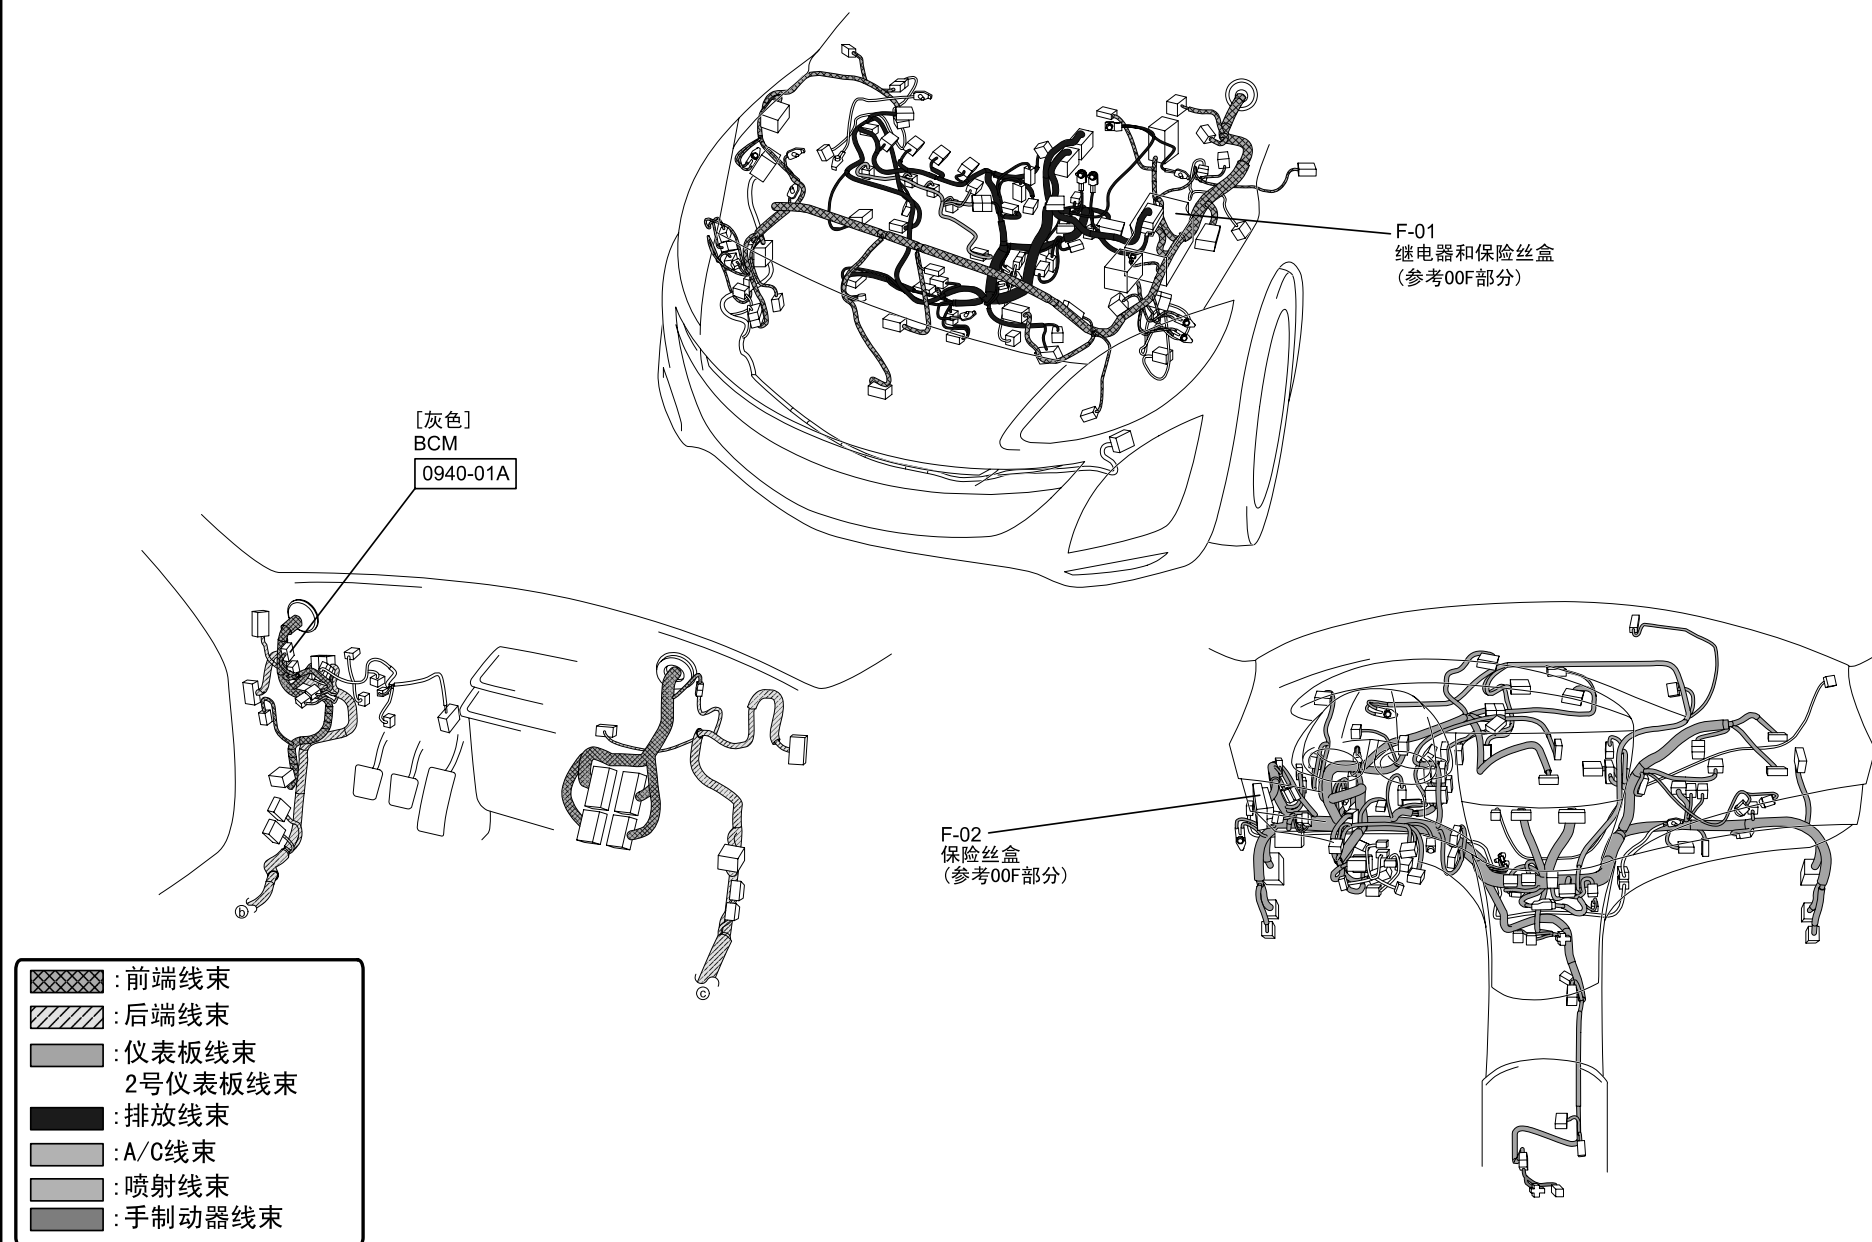


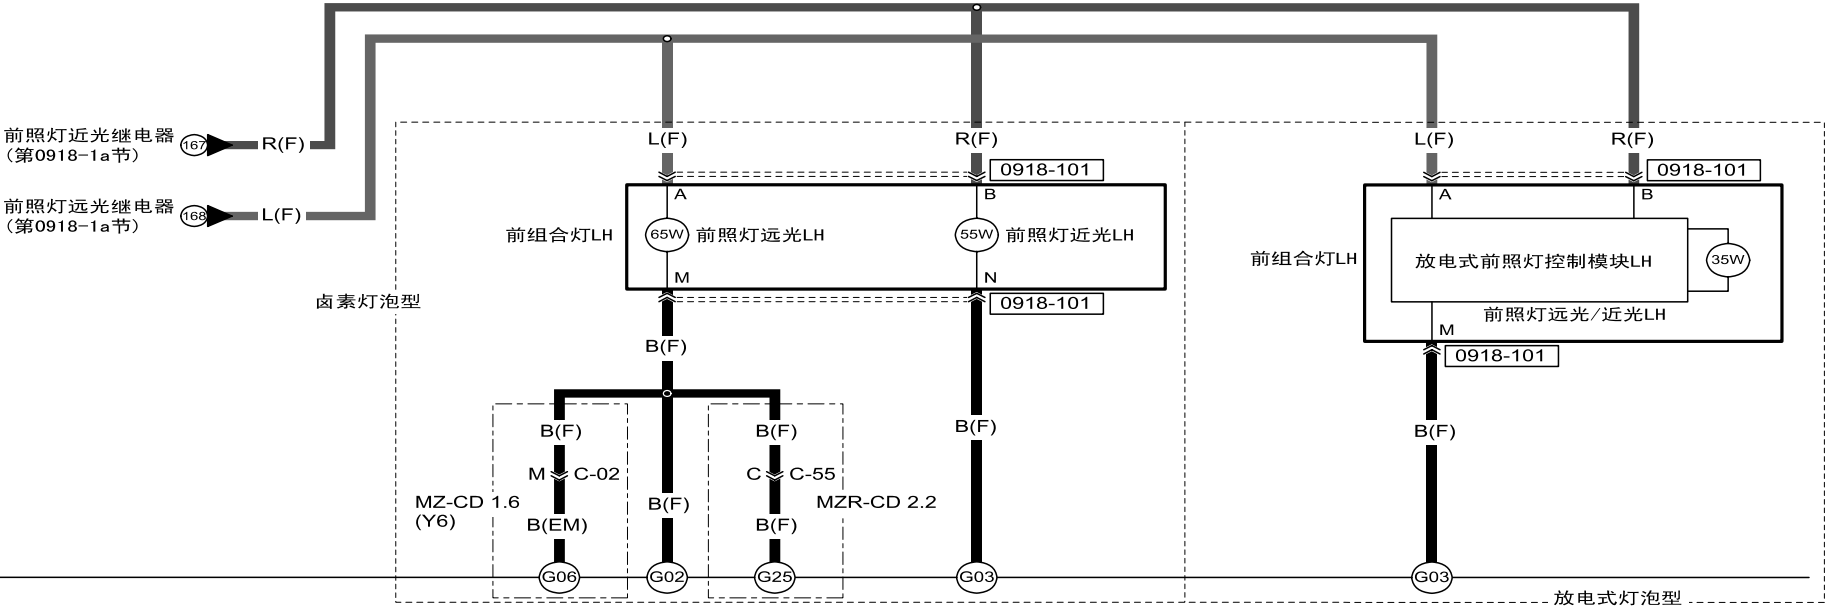



0918-101
前组合灯LH/
前照灯调平执行器LH/
回旋执行器LH

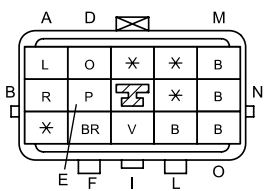

(卤素灯泡型)

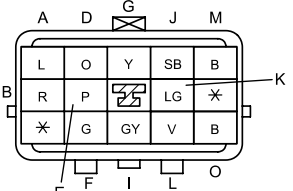


(放电式)

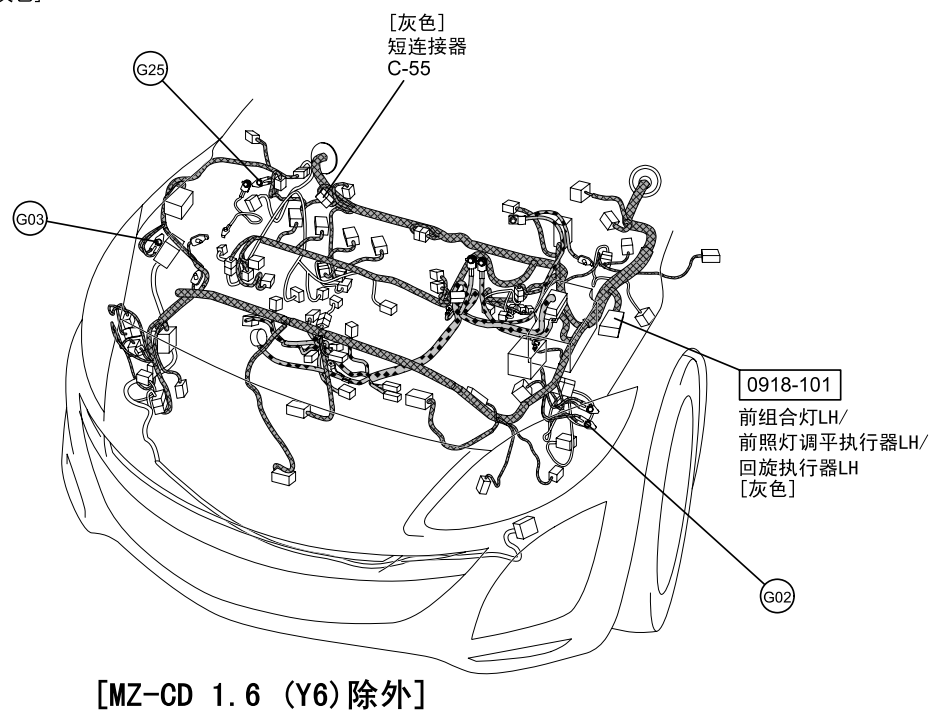
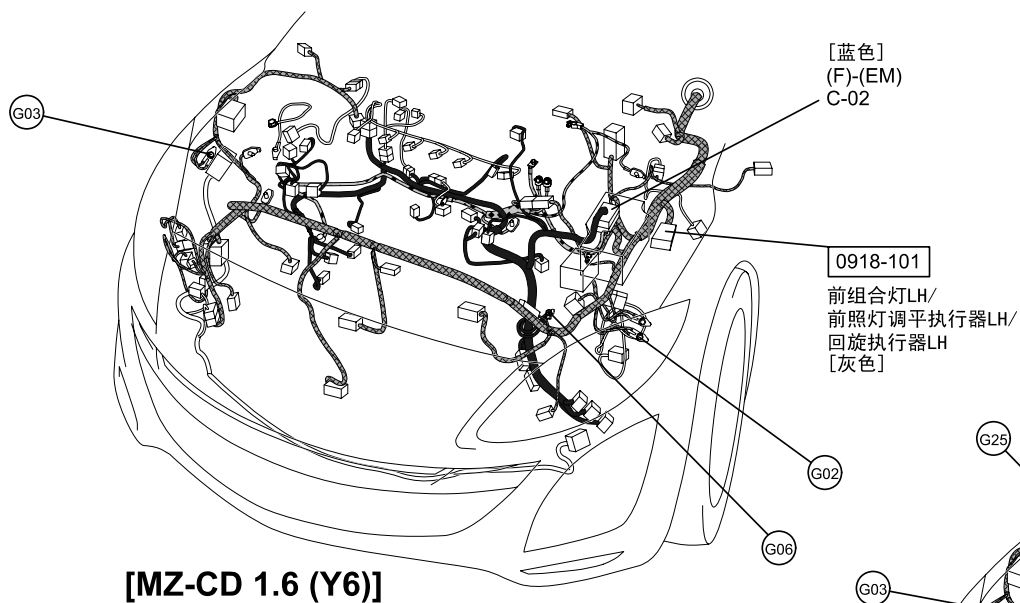




-  : 前端线束
-  : 发动机线束
-  : 排放线束

前照灯近光继电器
(第0918-1a节)
前照灯远光继电器
(第0918-1a节)

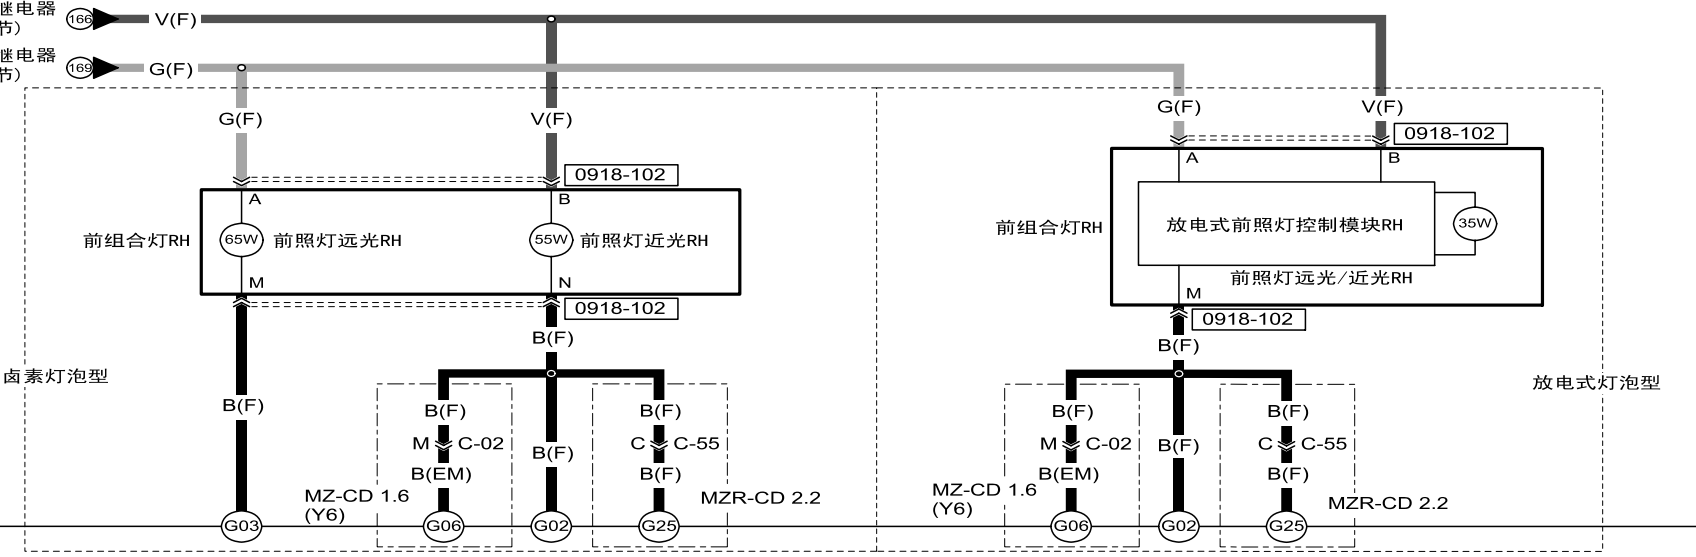


0918-102
前组合灯RH/
前照灯调平执行器RH/
回旋执行器RH

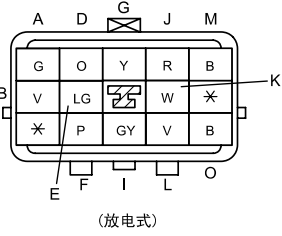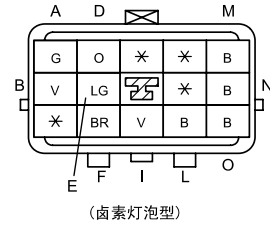

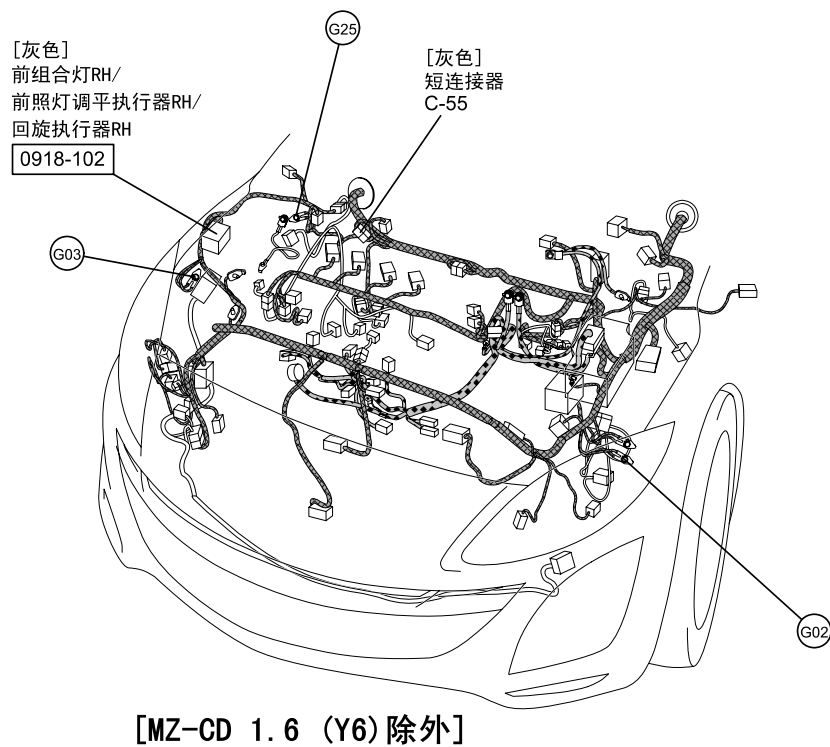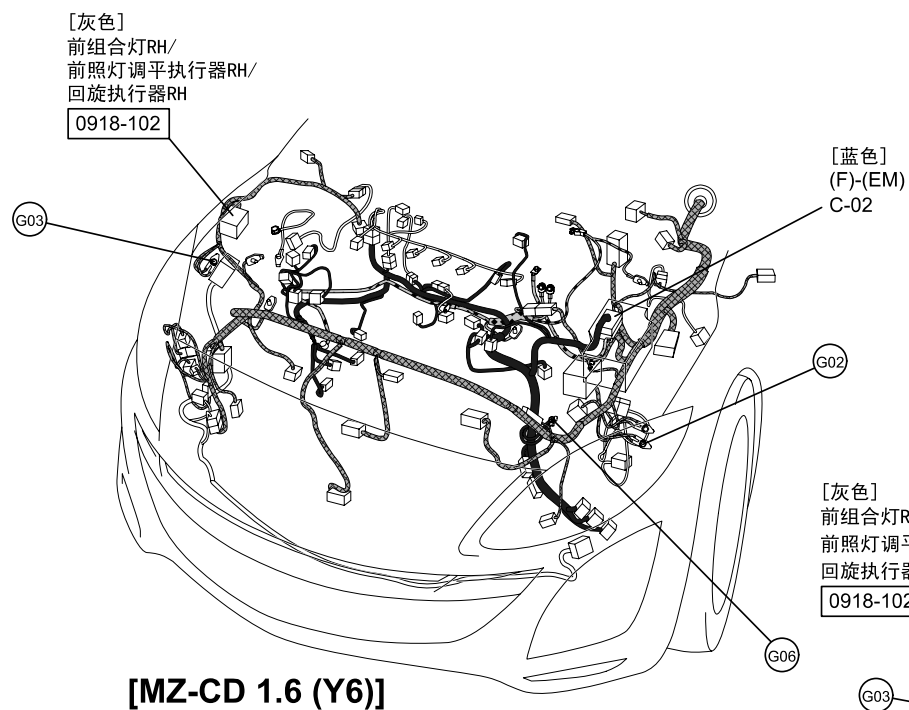

 : 前端线束
 : 发动机线束
 : 排放线束

&1: 无自动车灯系统
&14: 欧洲 (L. H. D.) 规范

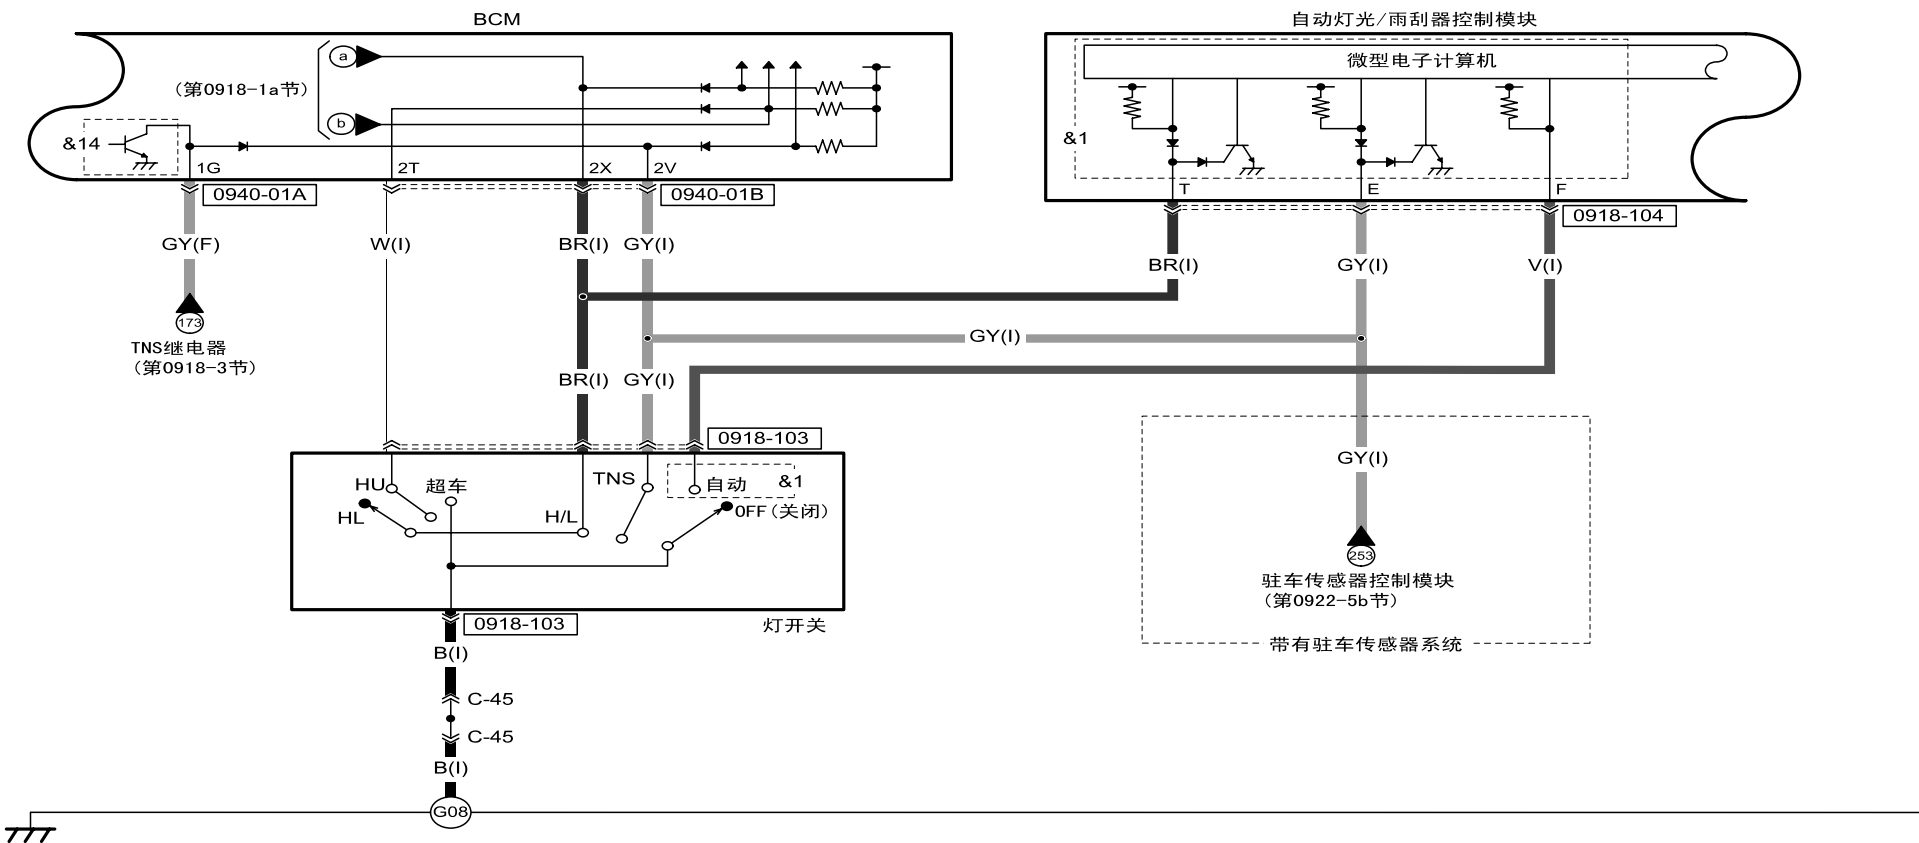

0918-103
灯开关/
雾灯开关/
转向开关

W	P	SB	B	V	GY
G	*	O	*	*	BR

0918-104
自动灯光/雨刮器控制模块


W	U	S	Q	O	M	K	I	G	E	C	A
R	SB	W	L	LG	SB	Y	*	*	GY	*	Y
O	GY	BR	*	GY	W	B	*	*	V	*	*
X	V	T	R	P	N	L	J	H	F	D	B

0940-01A
BCM


1W	1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A
LG	*	*	W	*	G	O	R	GY	Y	O	W
GY	*	L	*	*	V	LG	O	BR	*	SB	R
1X	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B

0940-01B
BCM

2W	2U	2S	2Q	2O	2M	2K	2I	2G	2E	2C	2A
O	L	P	V	SB	W	G	L	V	SB	O	W
BR	GY	W	Y	G	B	LG	SB	Y	G	P	R
2X	2V	2T	2R	2P	2N	2L	2J	2H	2F	2D	2B

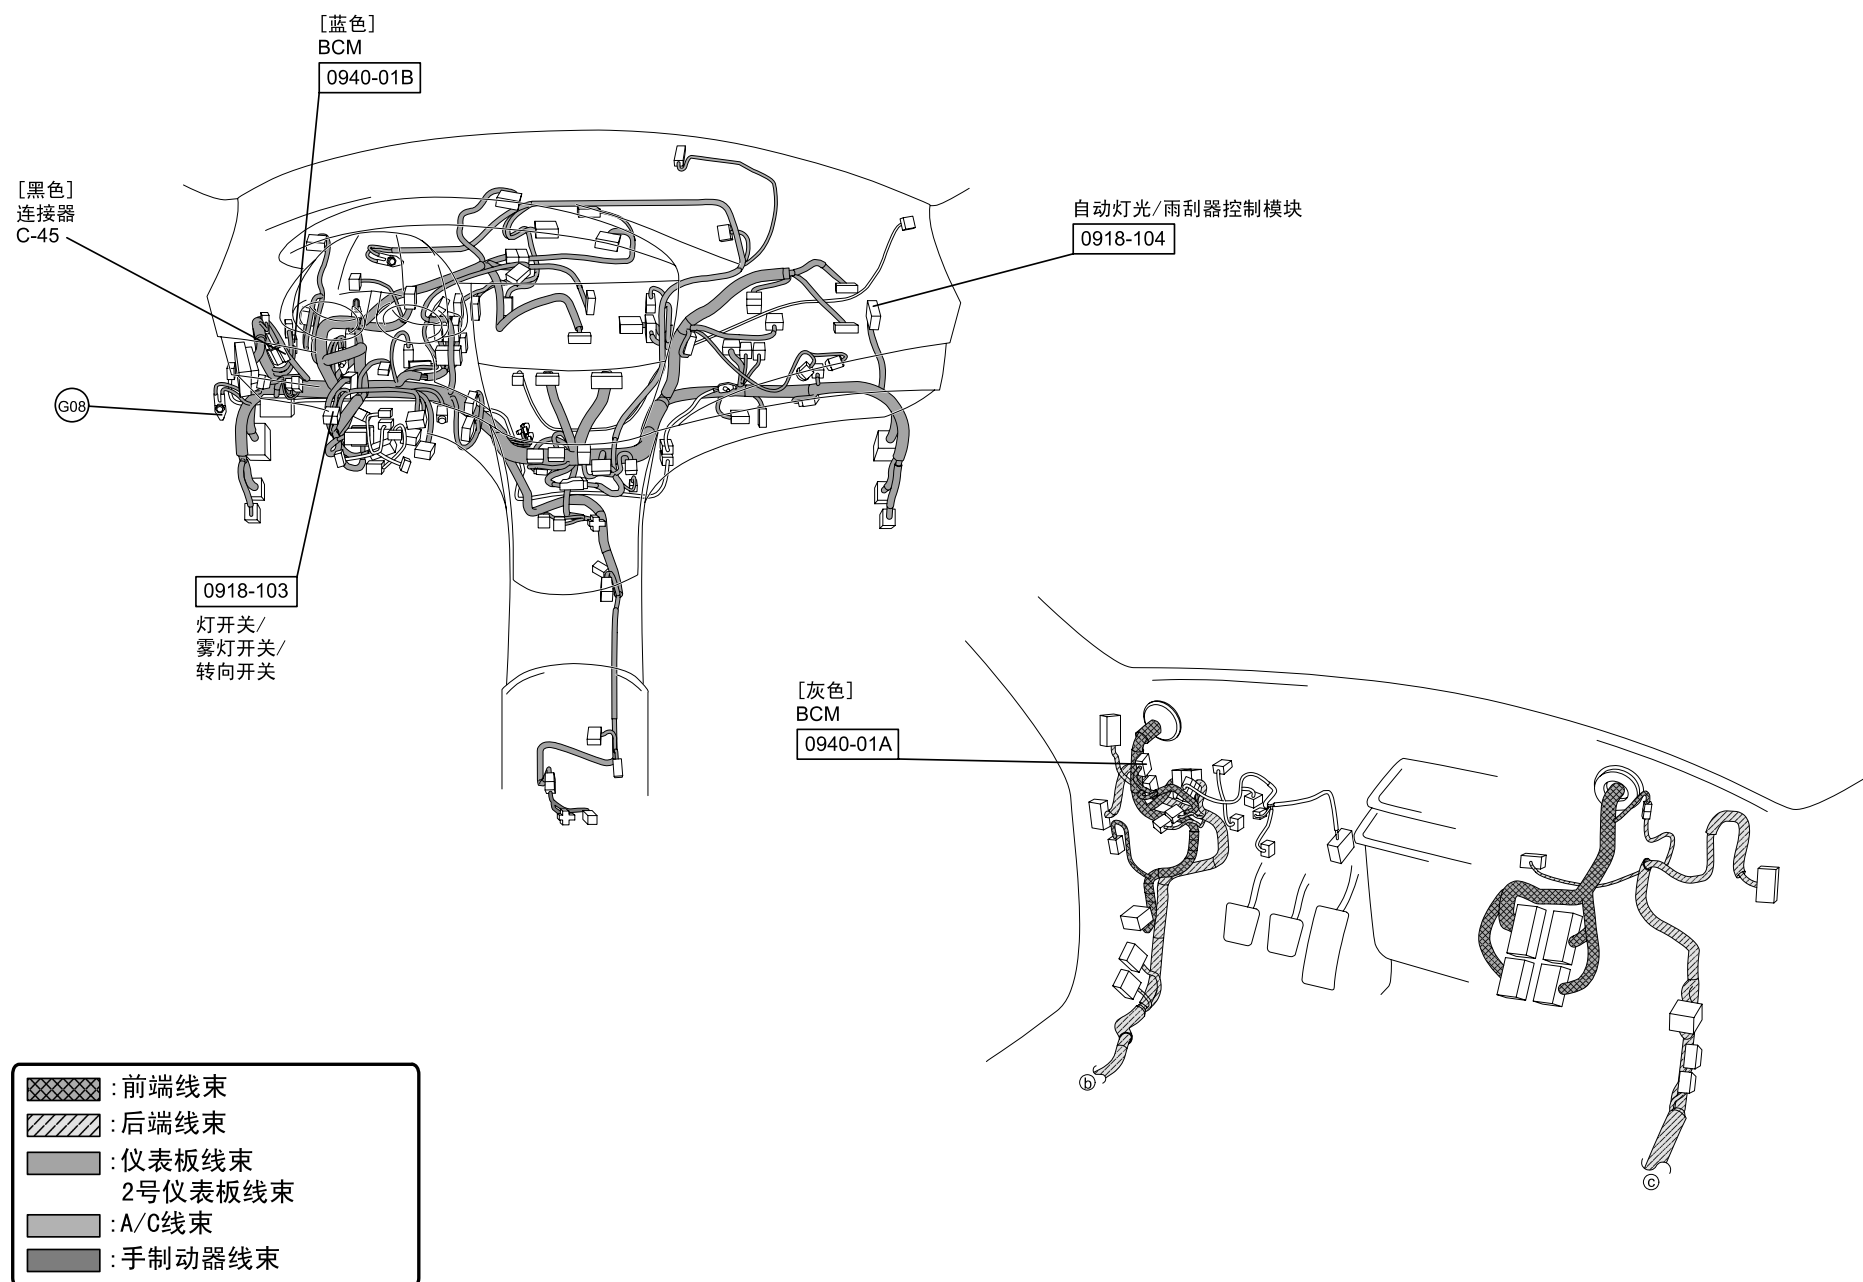

&1: 无自动车灯系统 @1: 不带高级遥控门锁系统和按钮起动系统
@2: 带高级遥控门锁系统和按钮起动系统

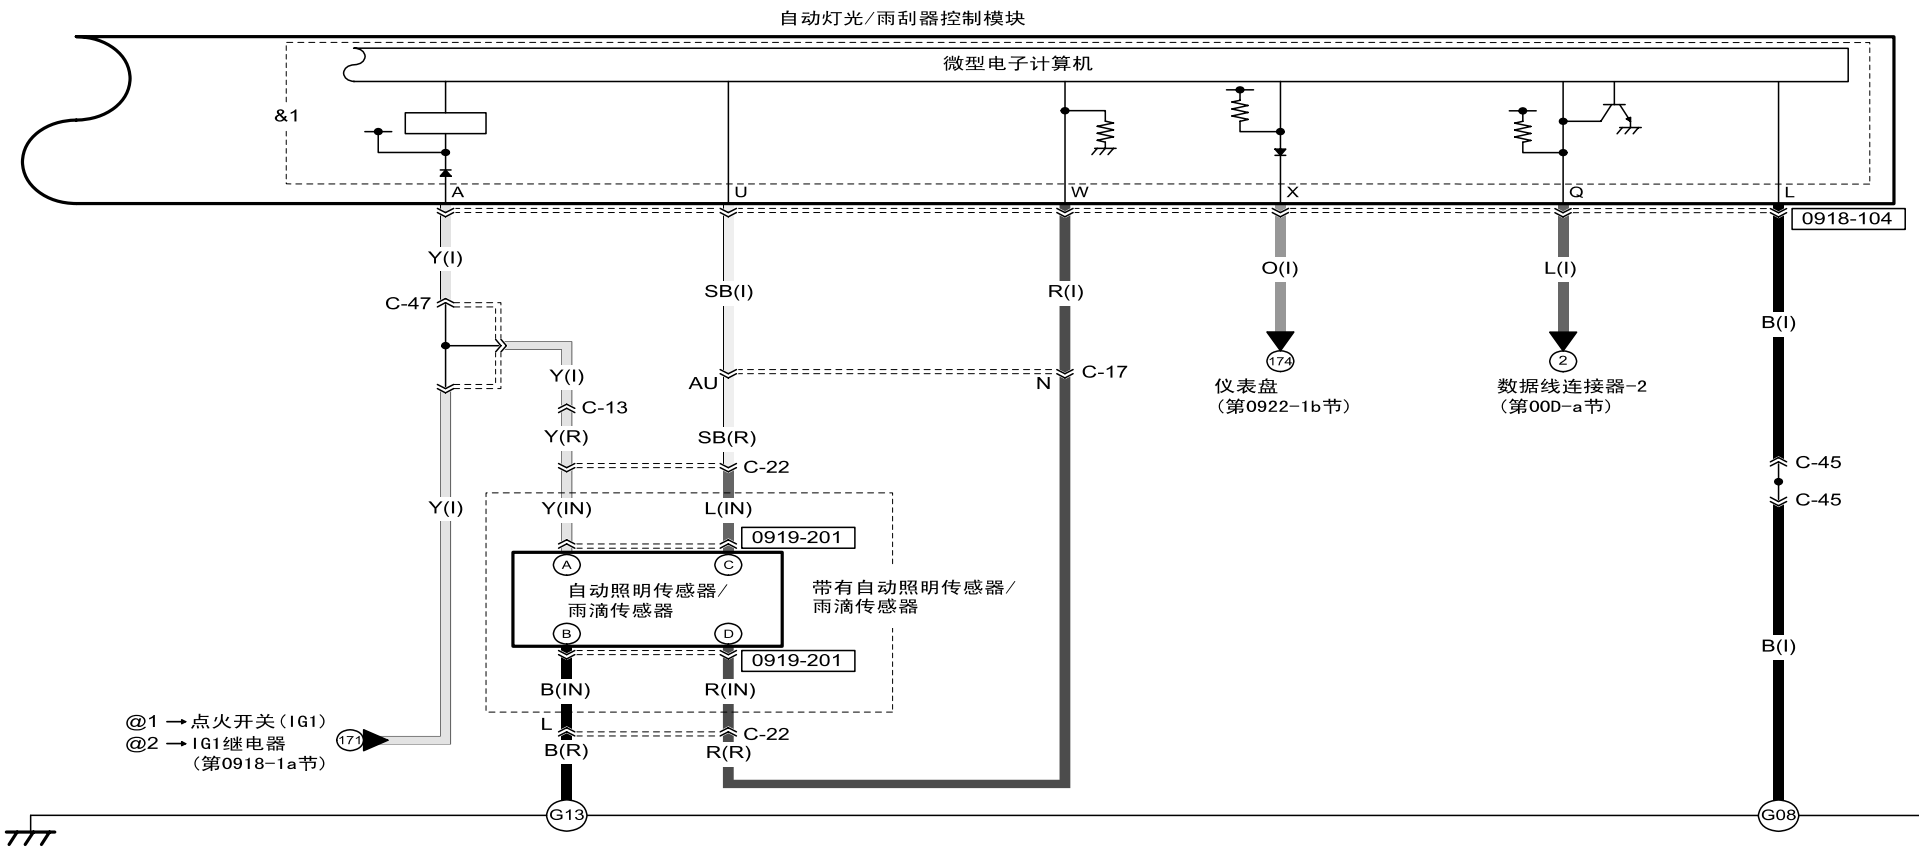






@1 → 点火开关 (IG1)
@2 → IG1继电器 (第0918-1a节)

0918-104
自动灯光/雨刮器控制模块

Q O M K I G											
W	U	S							E	C	A
R	SB	W	L	LG	SB	Y	*	*	GY	*	Y
O	GY	BR	*	GY	W	B	*	*	V	*	*
X	V	T	R	P	N	L	J	H	F	D	B

 0919-201
自动照明传感器/
雨滴传感器



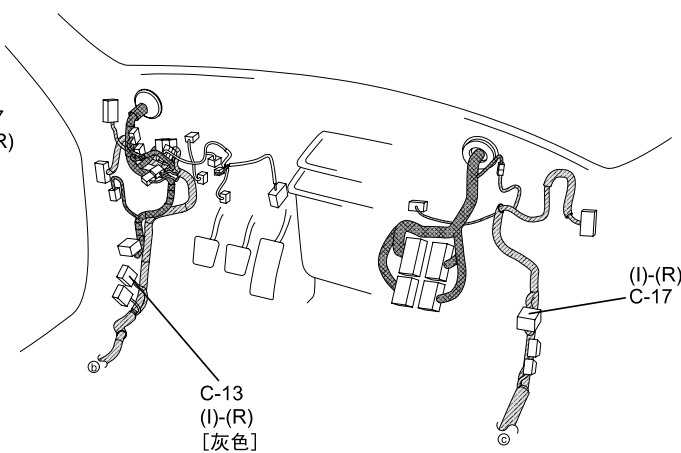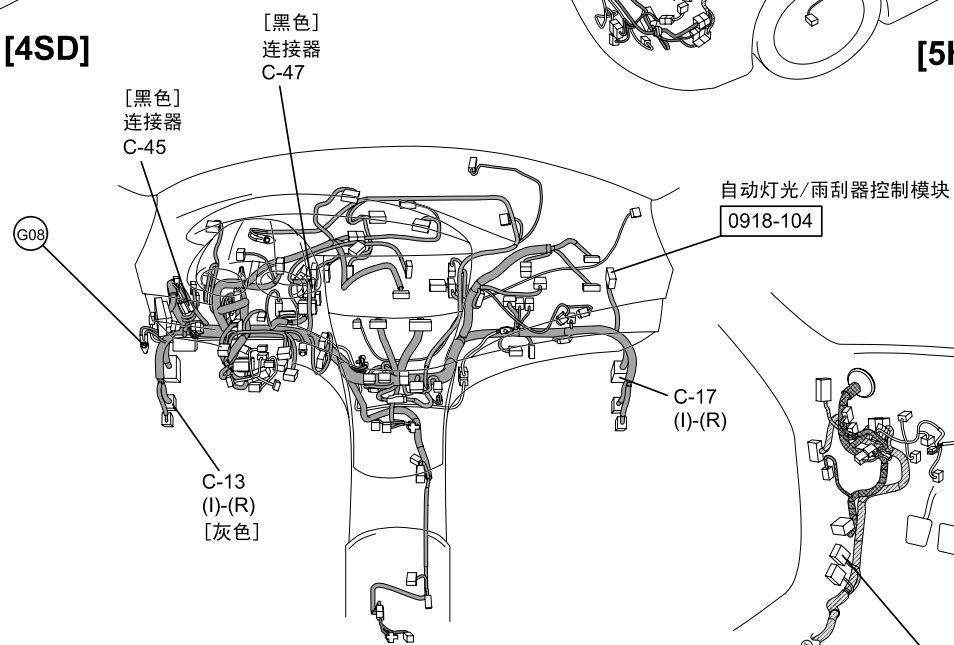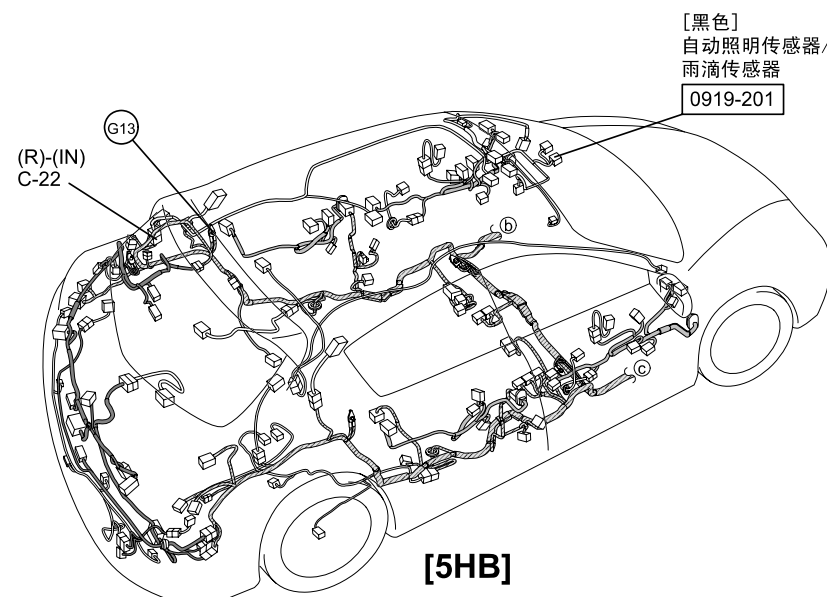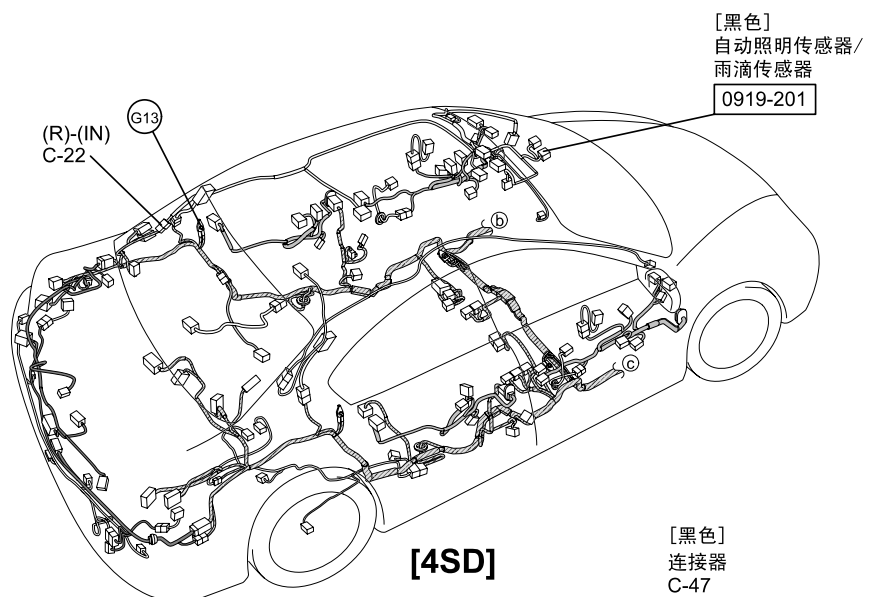

-  : 前端线束
-  : 后端线束
-  : 后2号线束
-  : 后3号线束
-  : 后4号线束
-  : 后5号线束
-  : 仪表板线束
-  : 2号仪表板线束
-  : 车门线束
-  : 车内灯线束
-  : 2号车内灯线束
-  : 地板线束
-  : A/C线束
-  : 手制动器线束