




冷却系统 (MZR 2.0)

0112-1

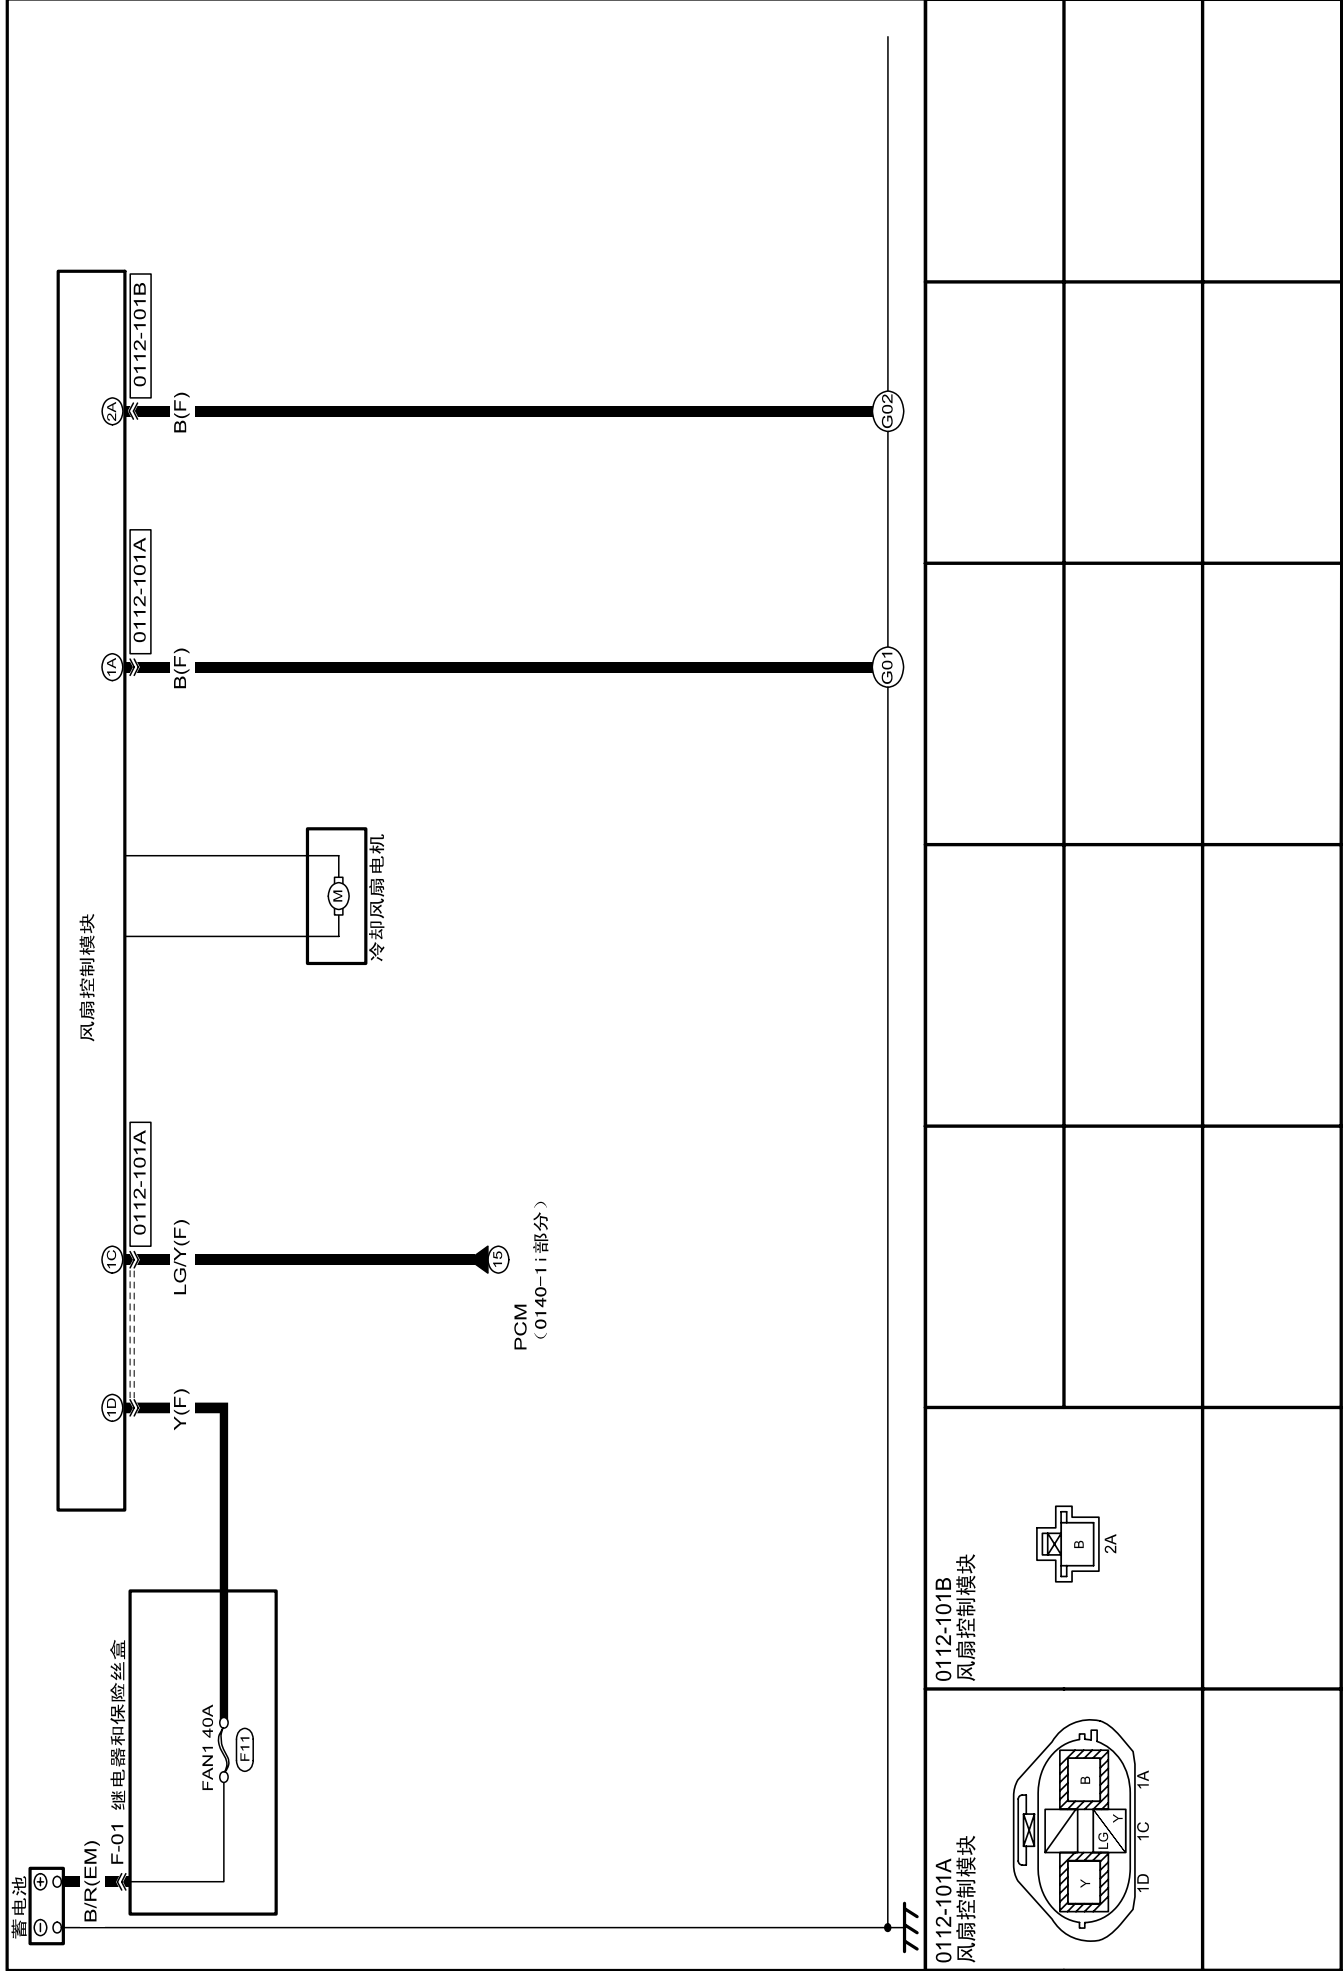


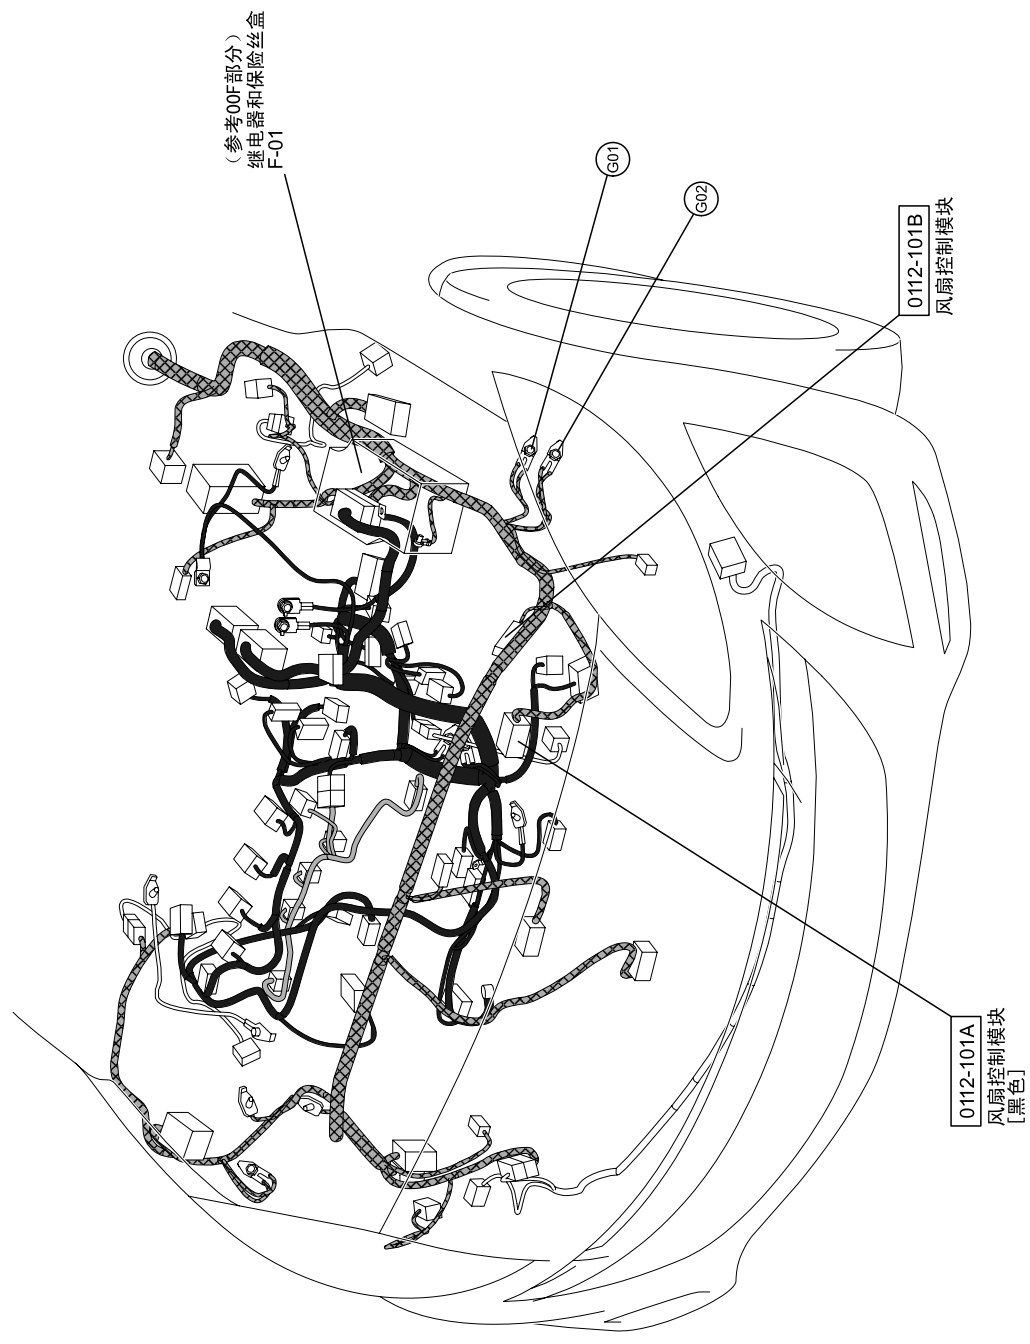

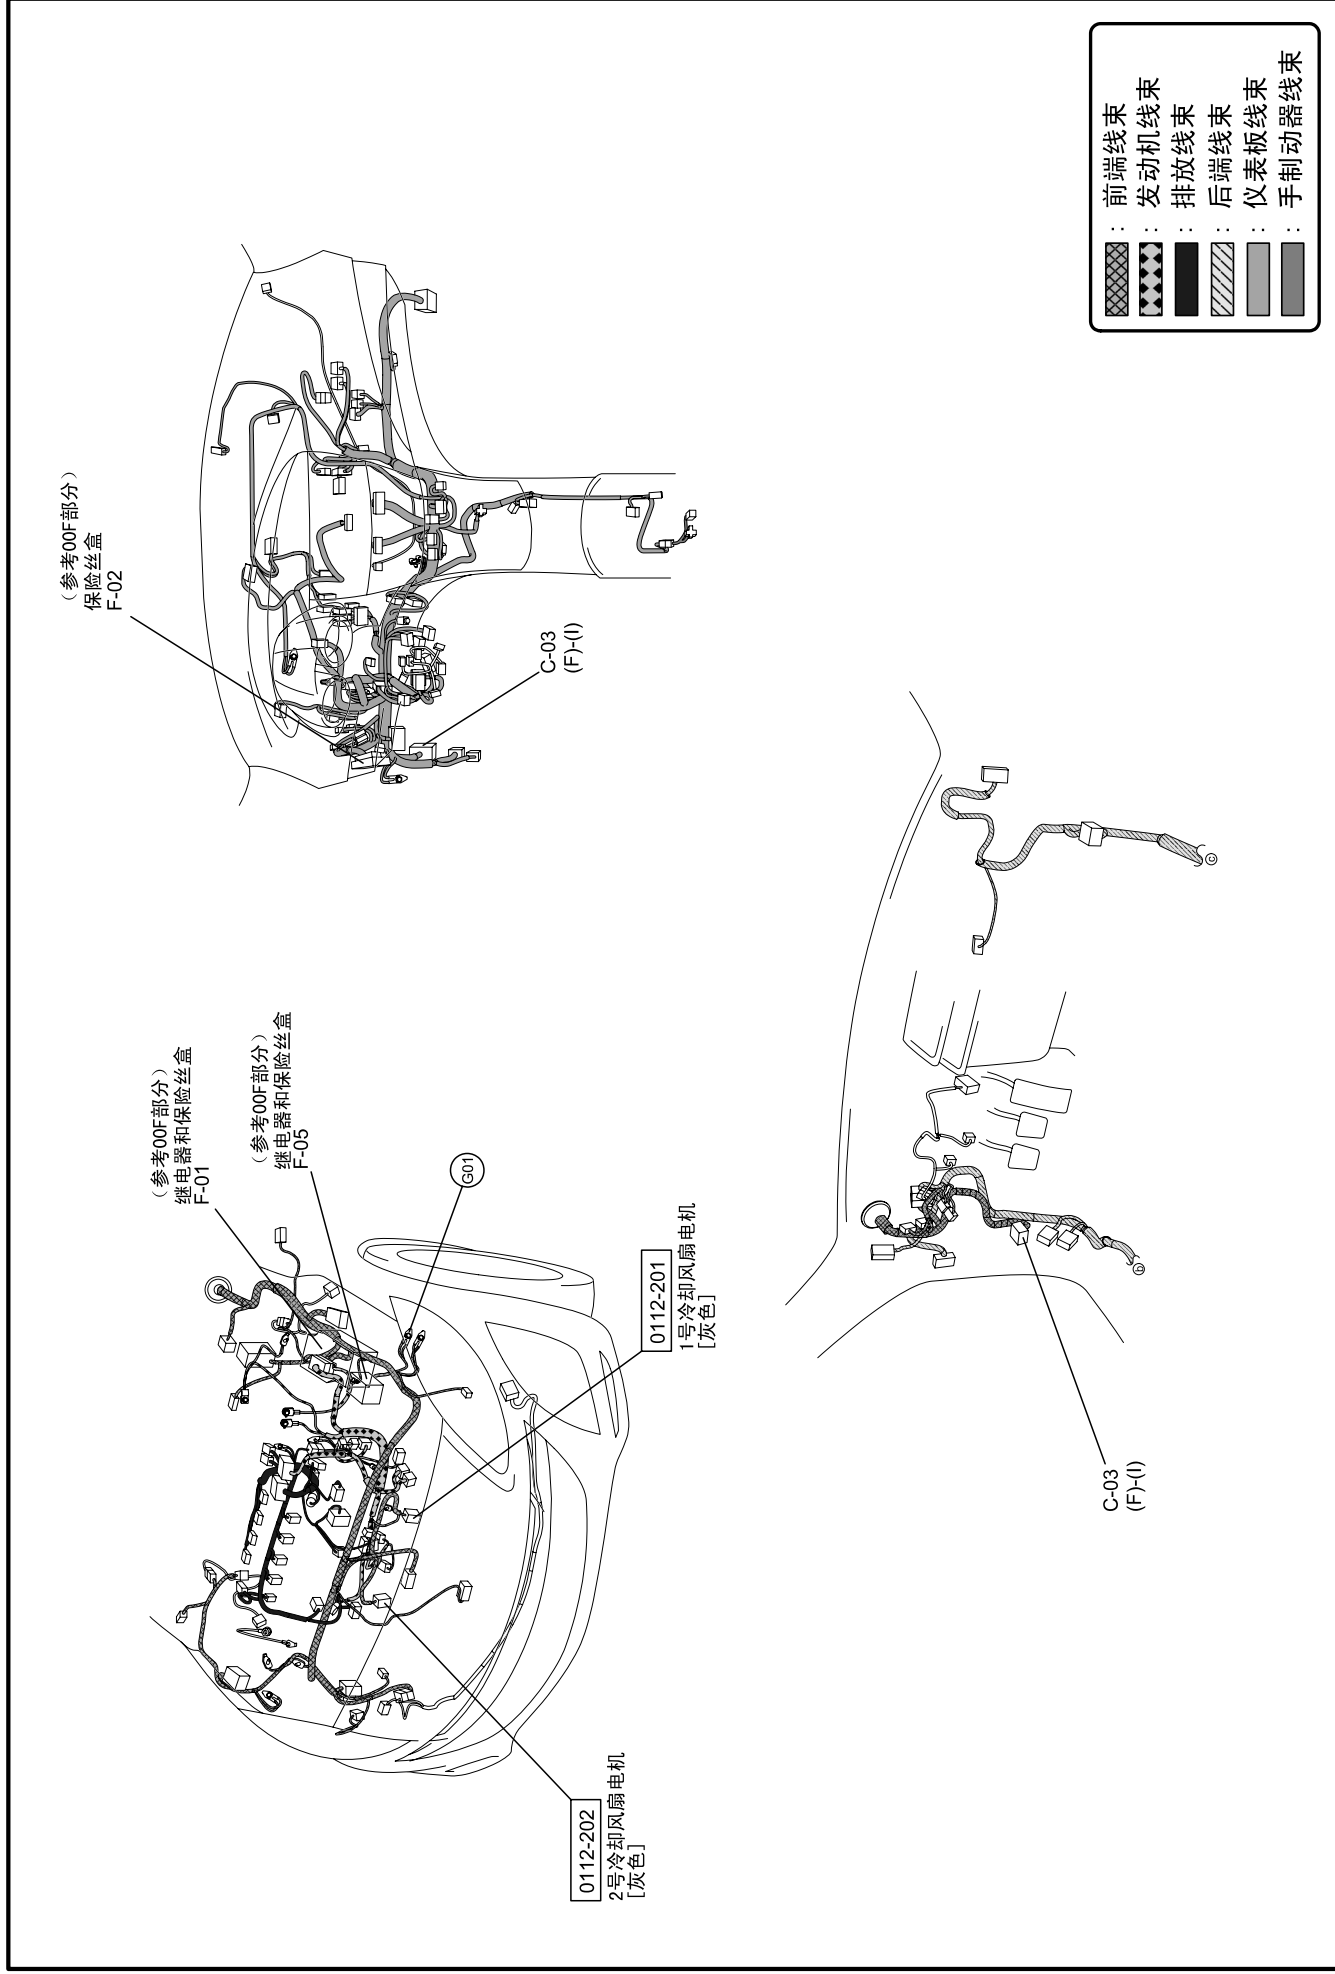



燃油系统 (MZR 2.0, MZR 1.6)

0114-1

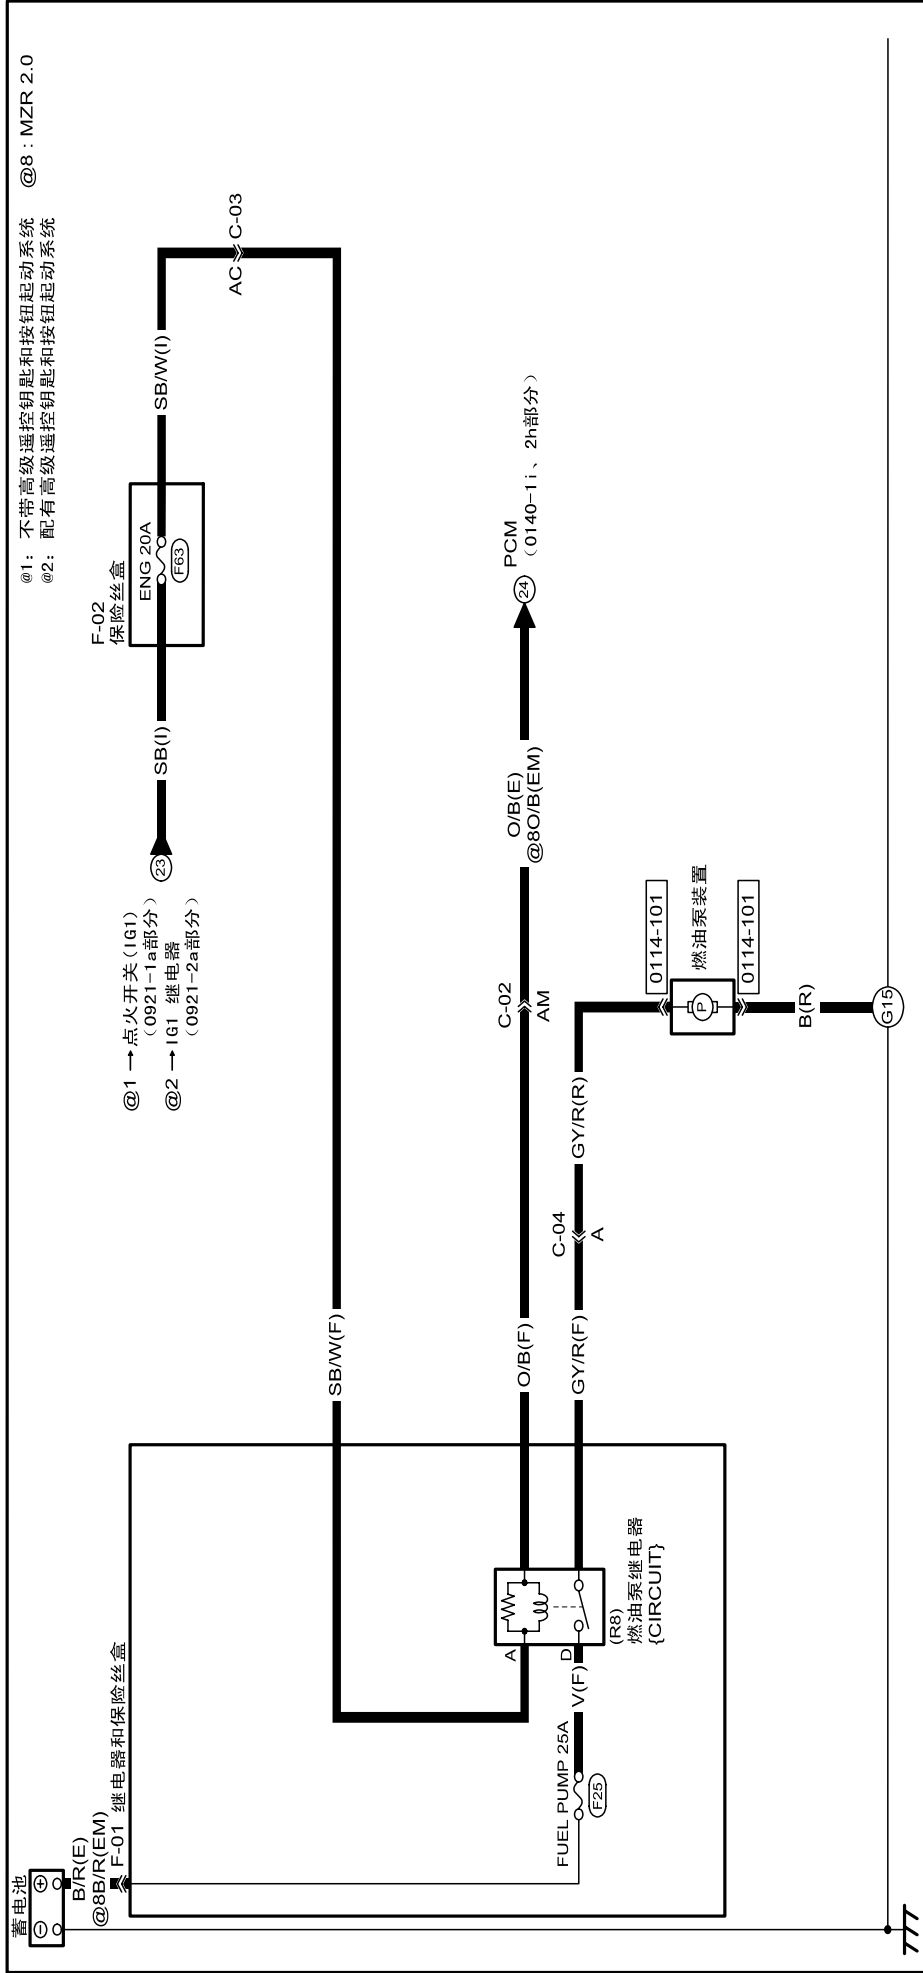


0114-101
燃油泵装置/
燃油表传感装置

 


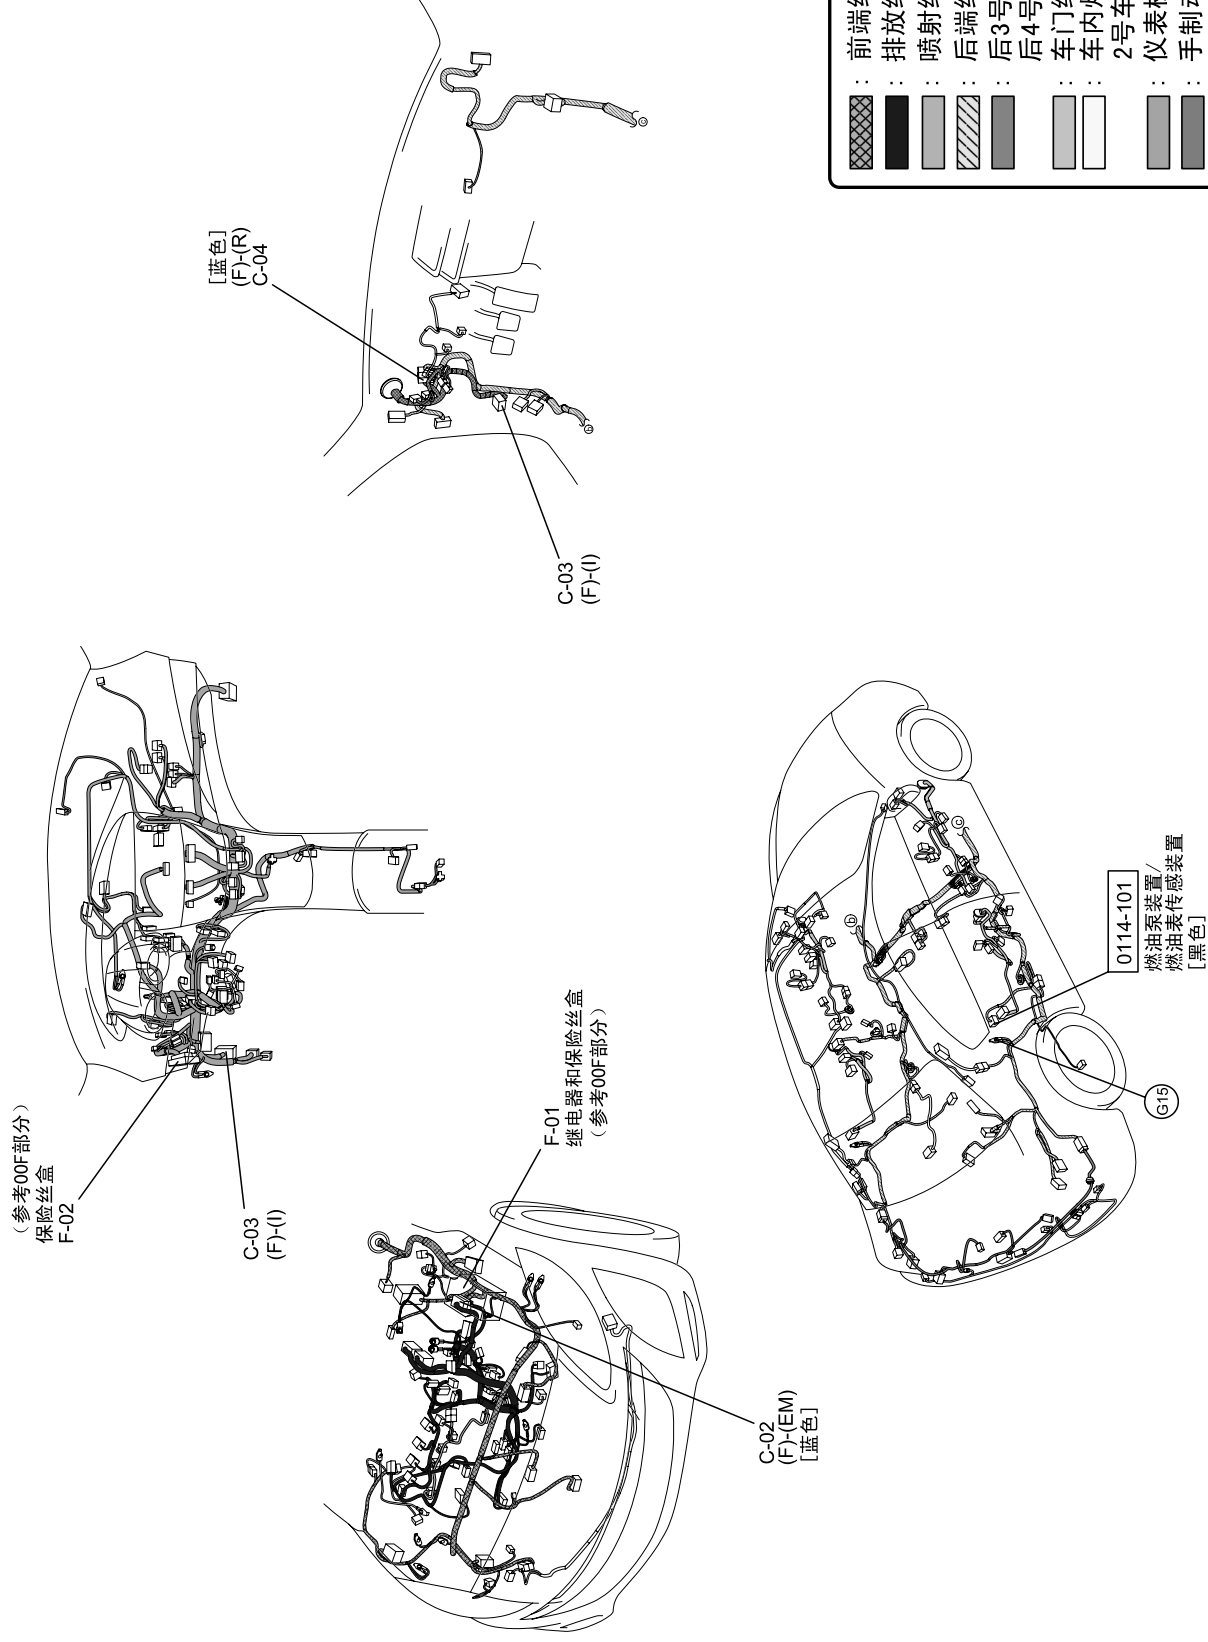


充电系统 (MZR 2.0)


0117-1

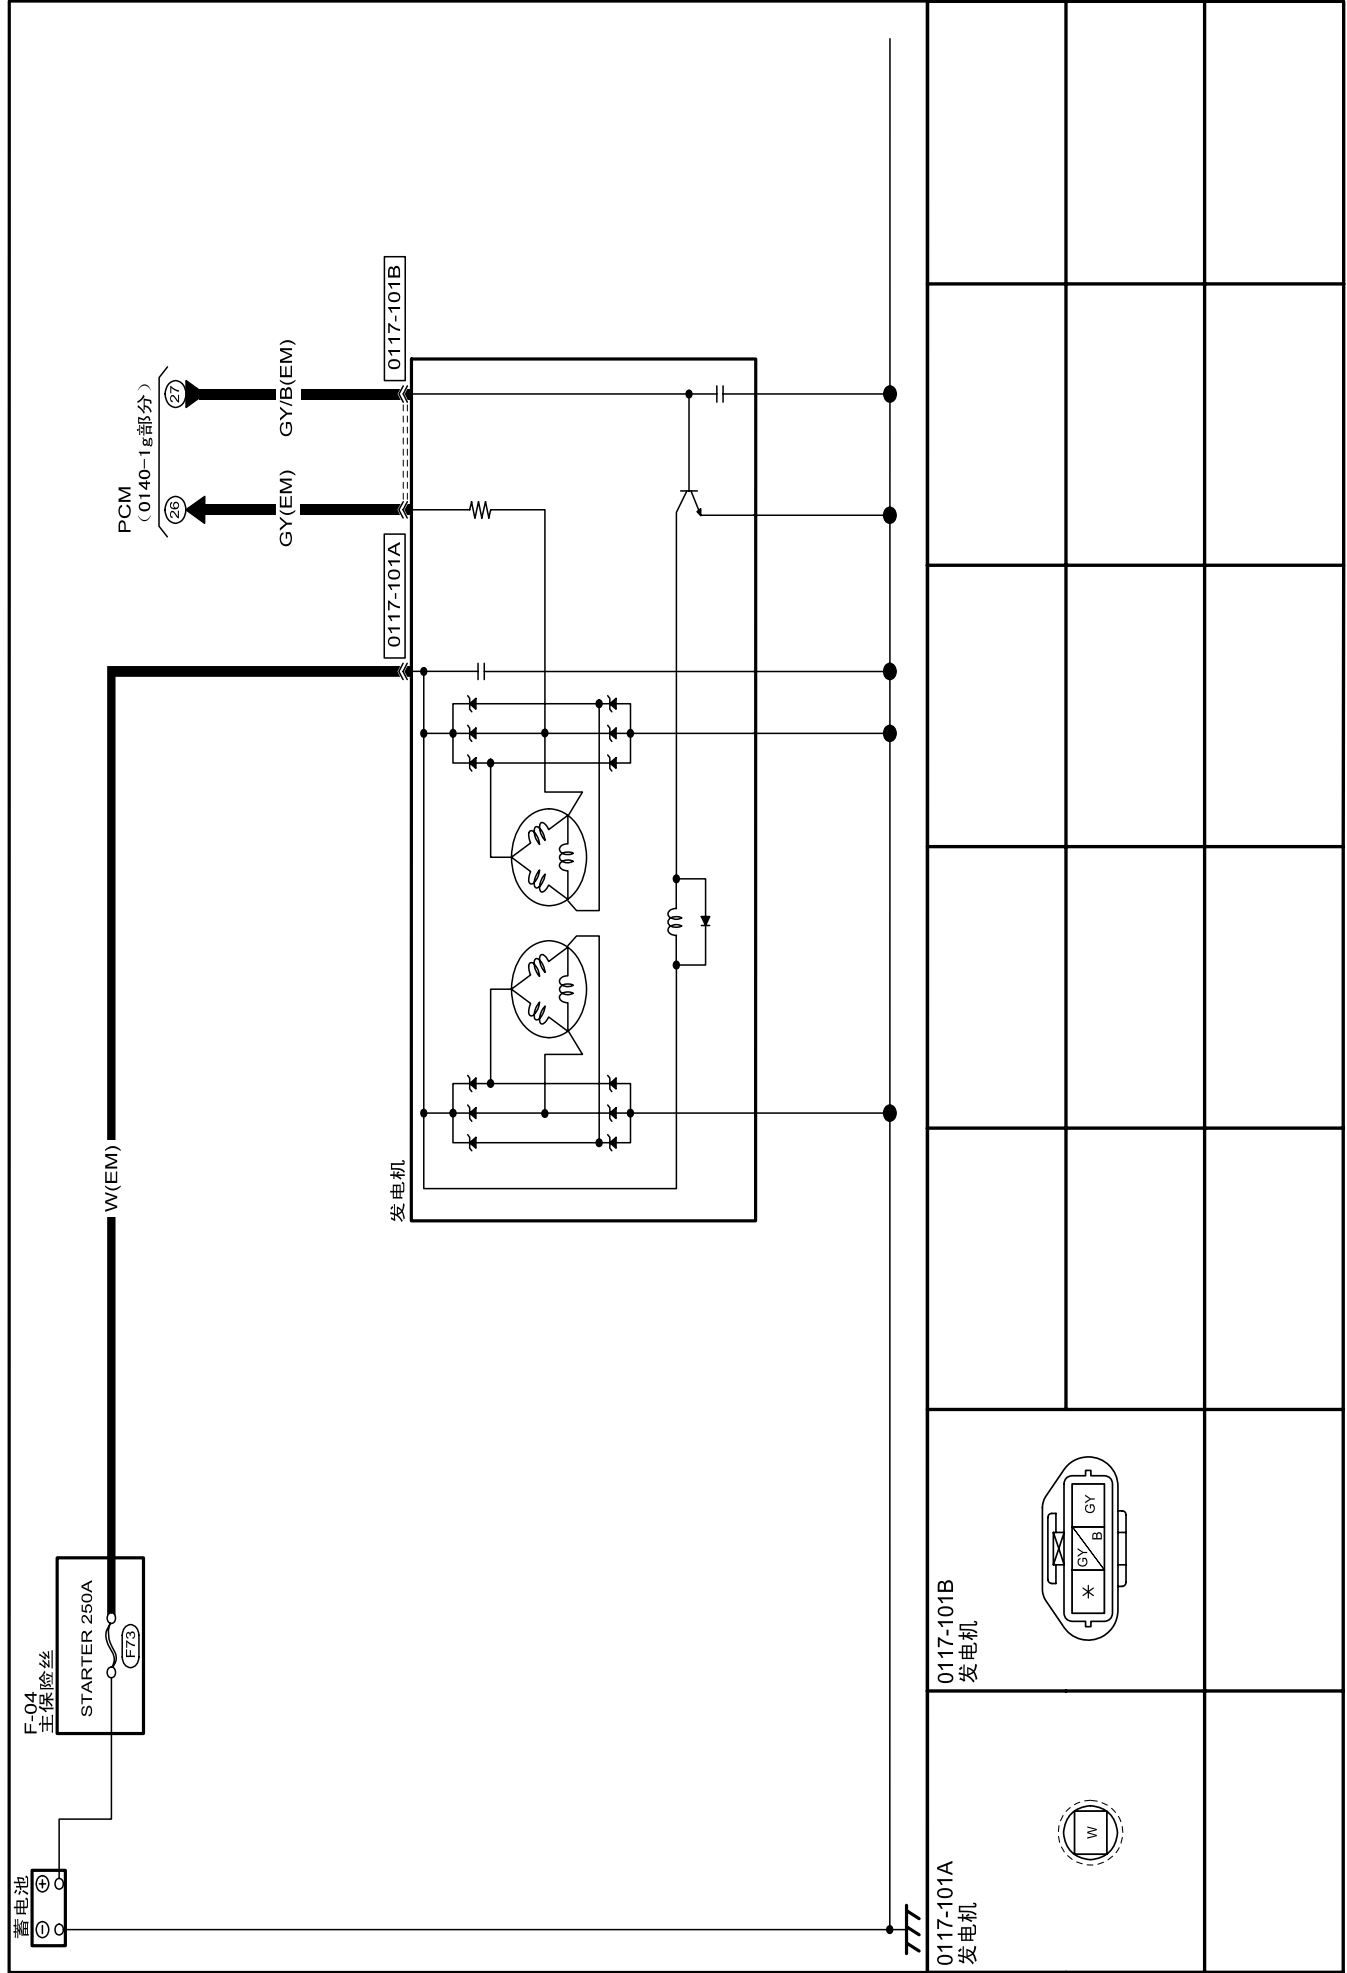

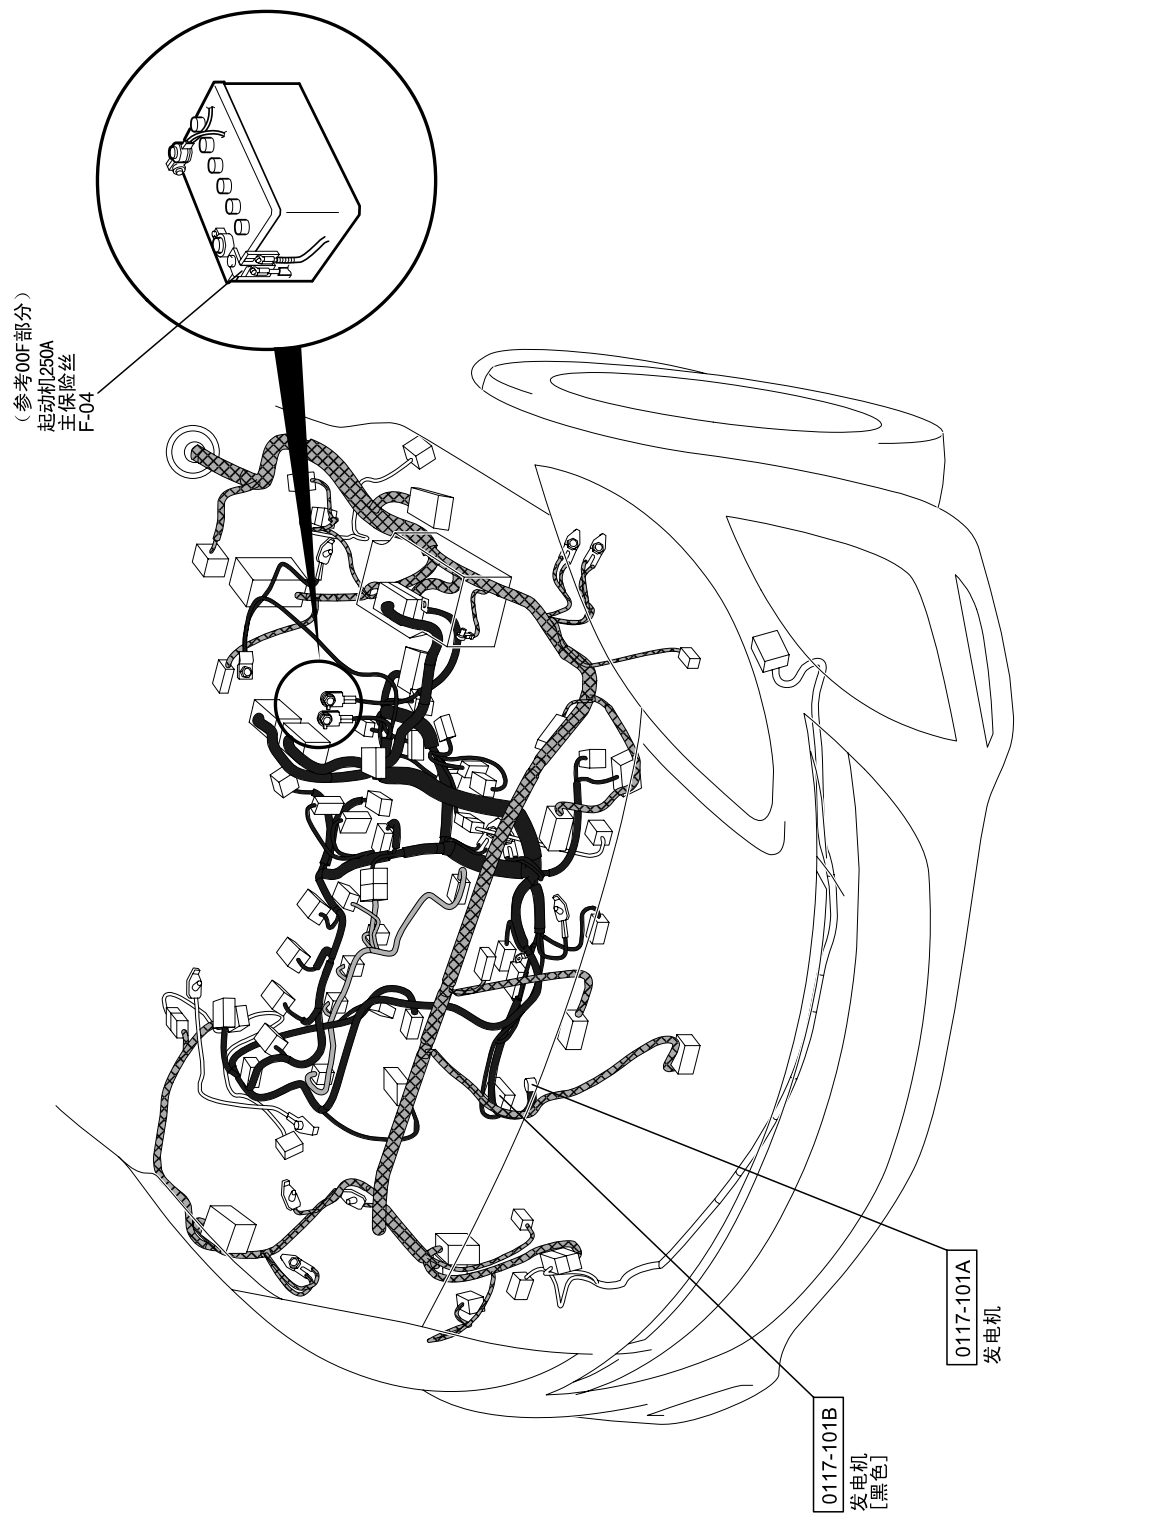


充电系统 (MZR 1.6) 0117-2

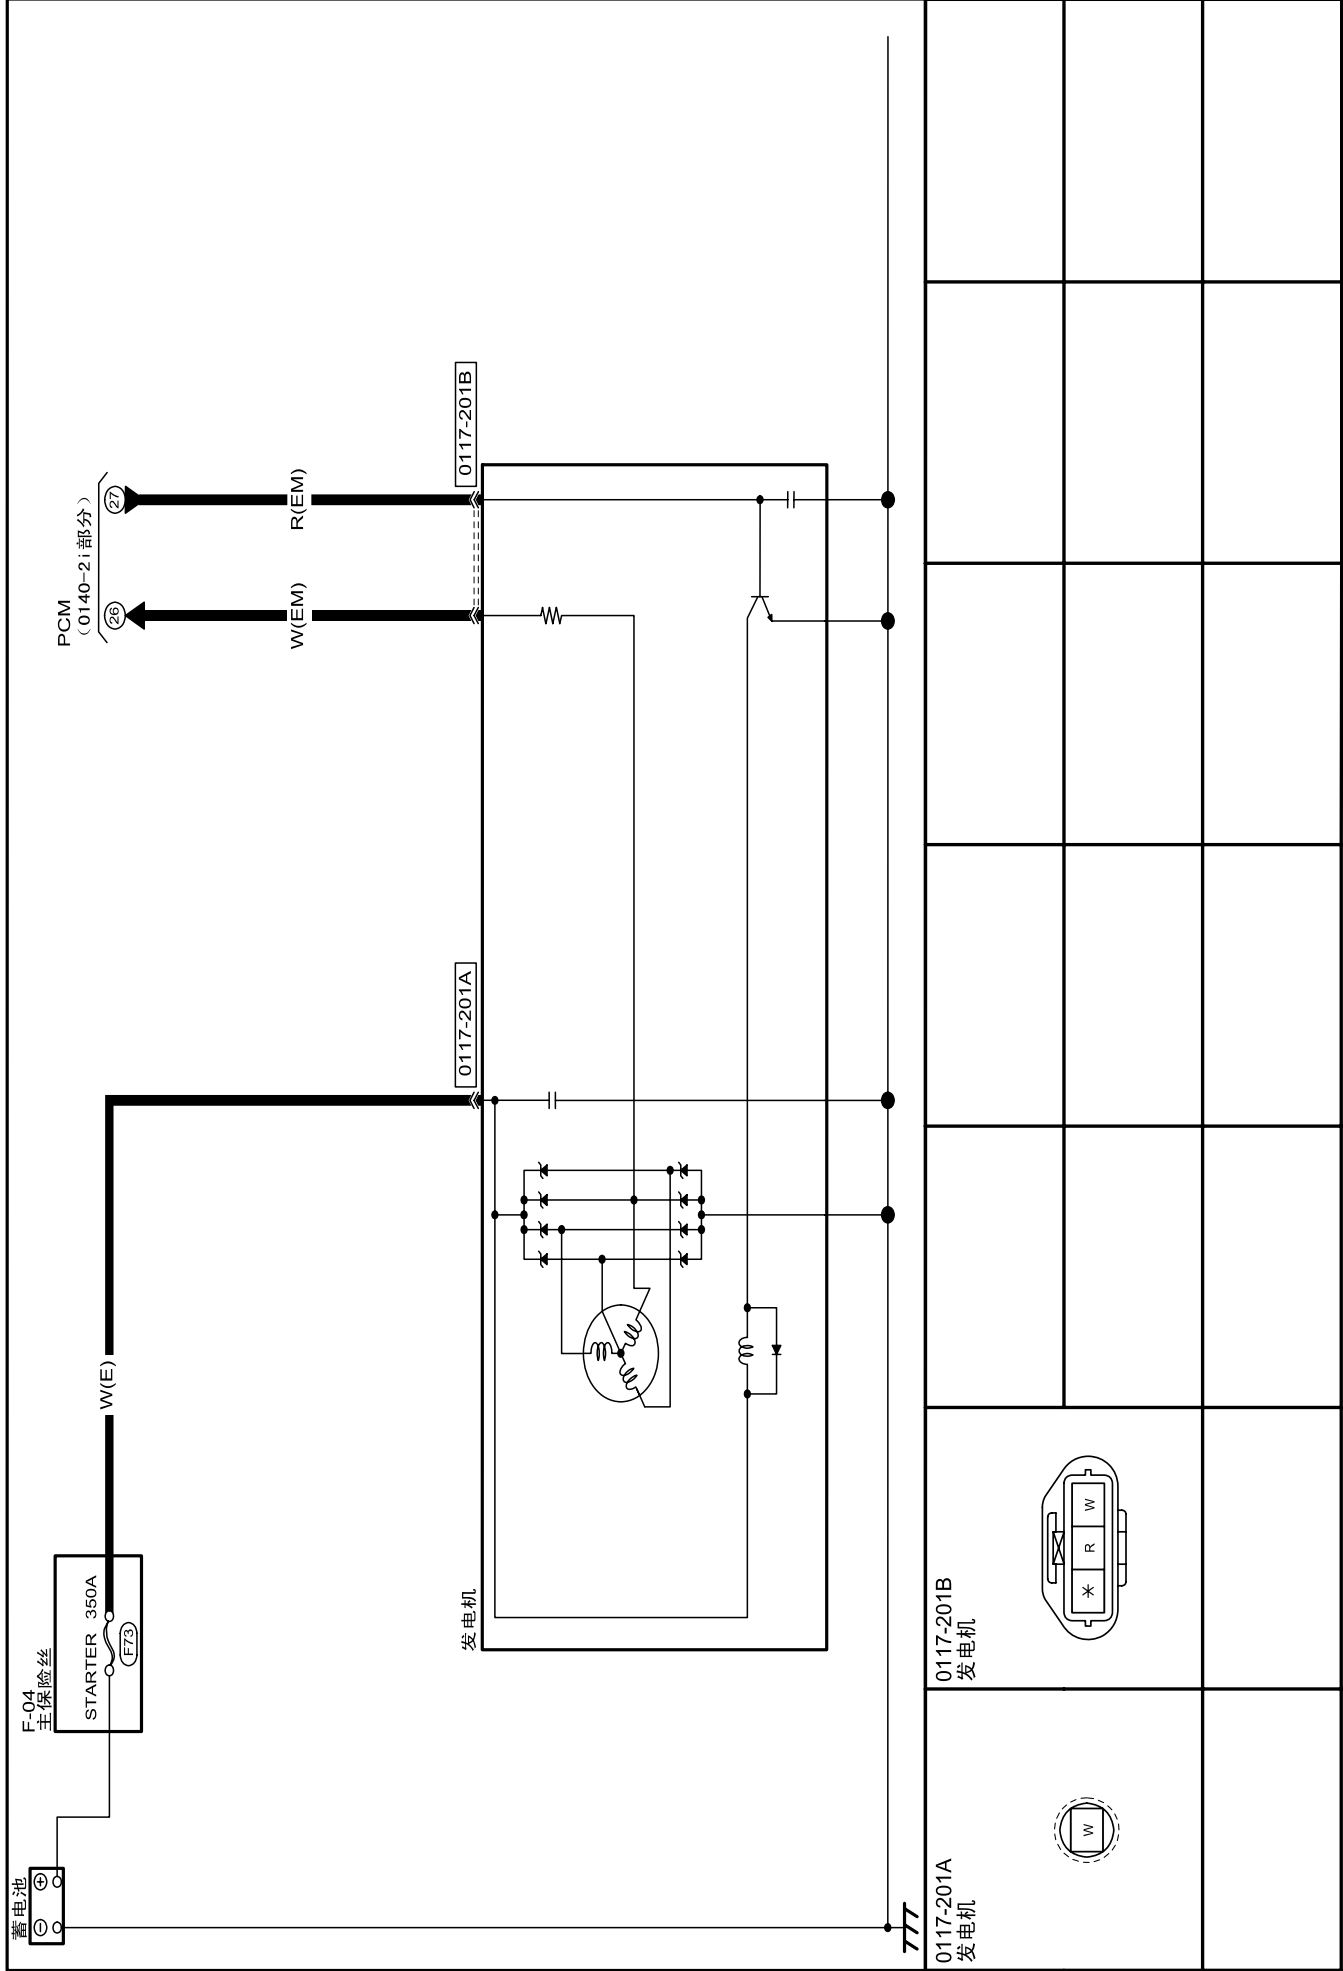

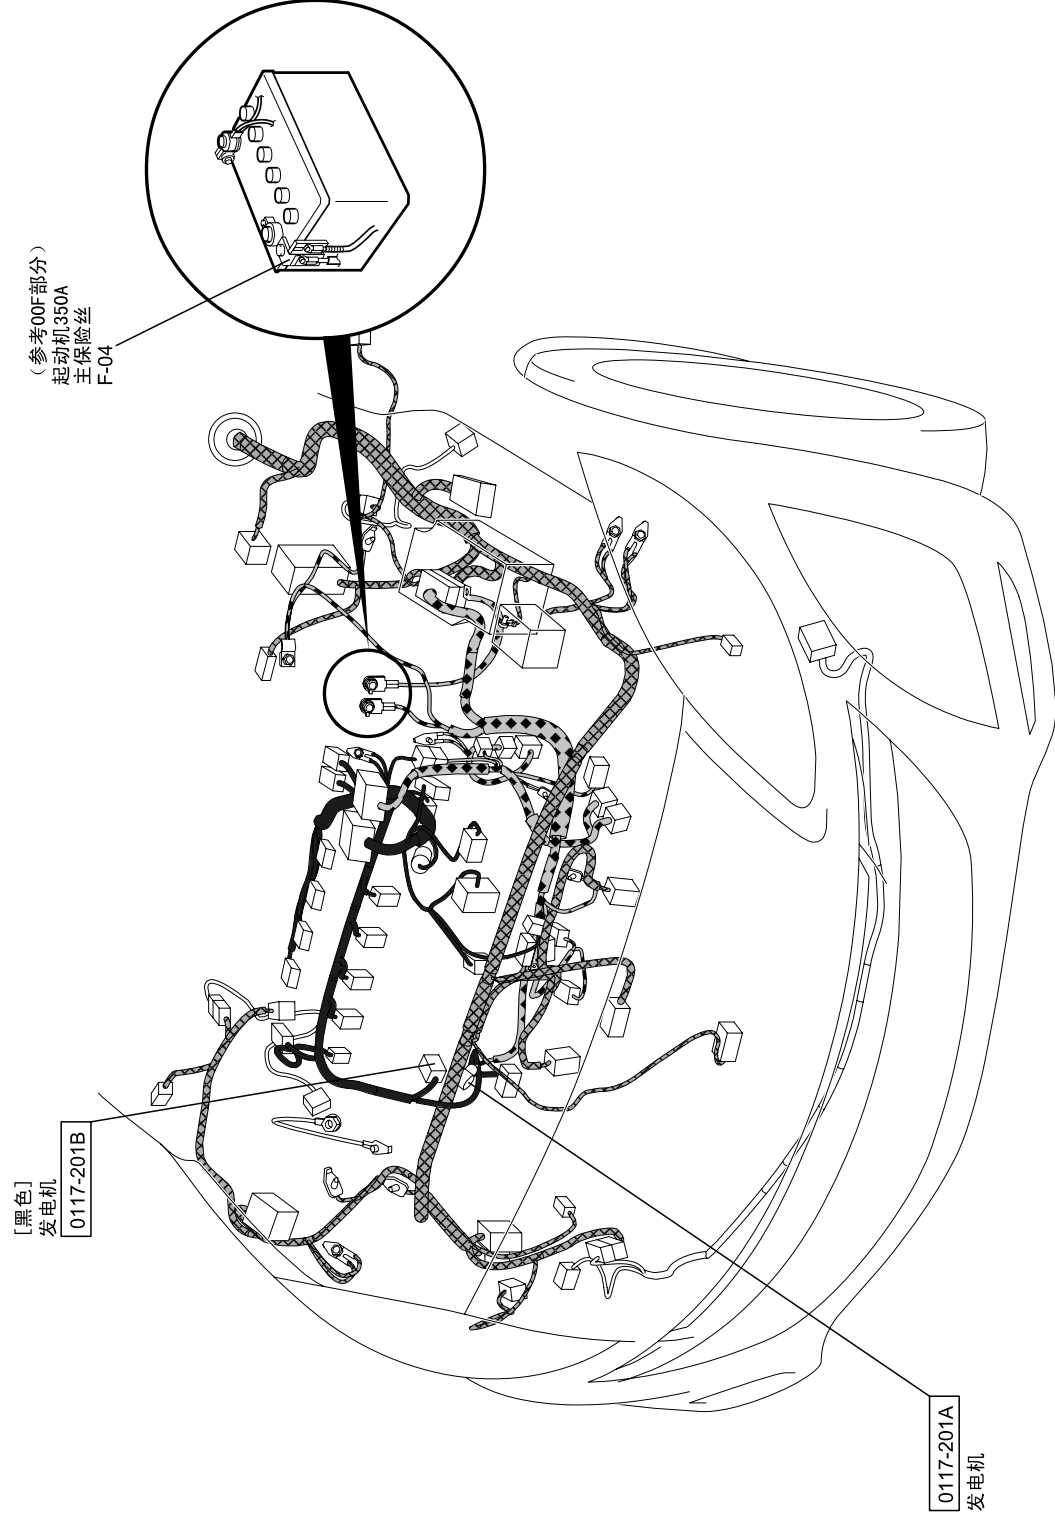


起动系统(ATX)

0119-1

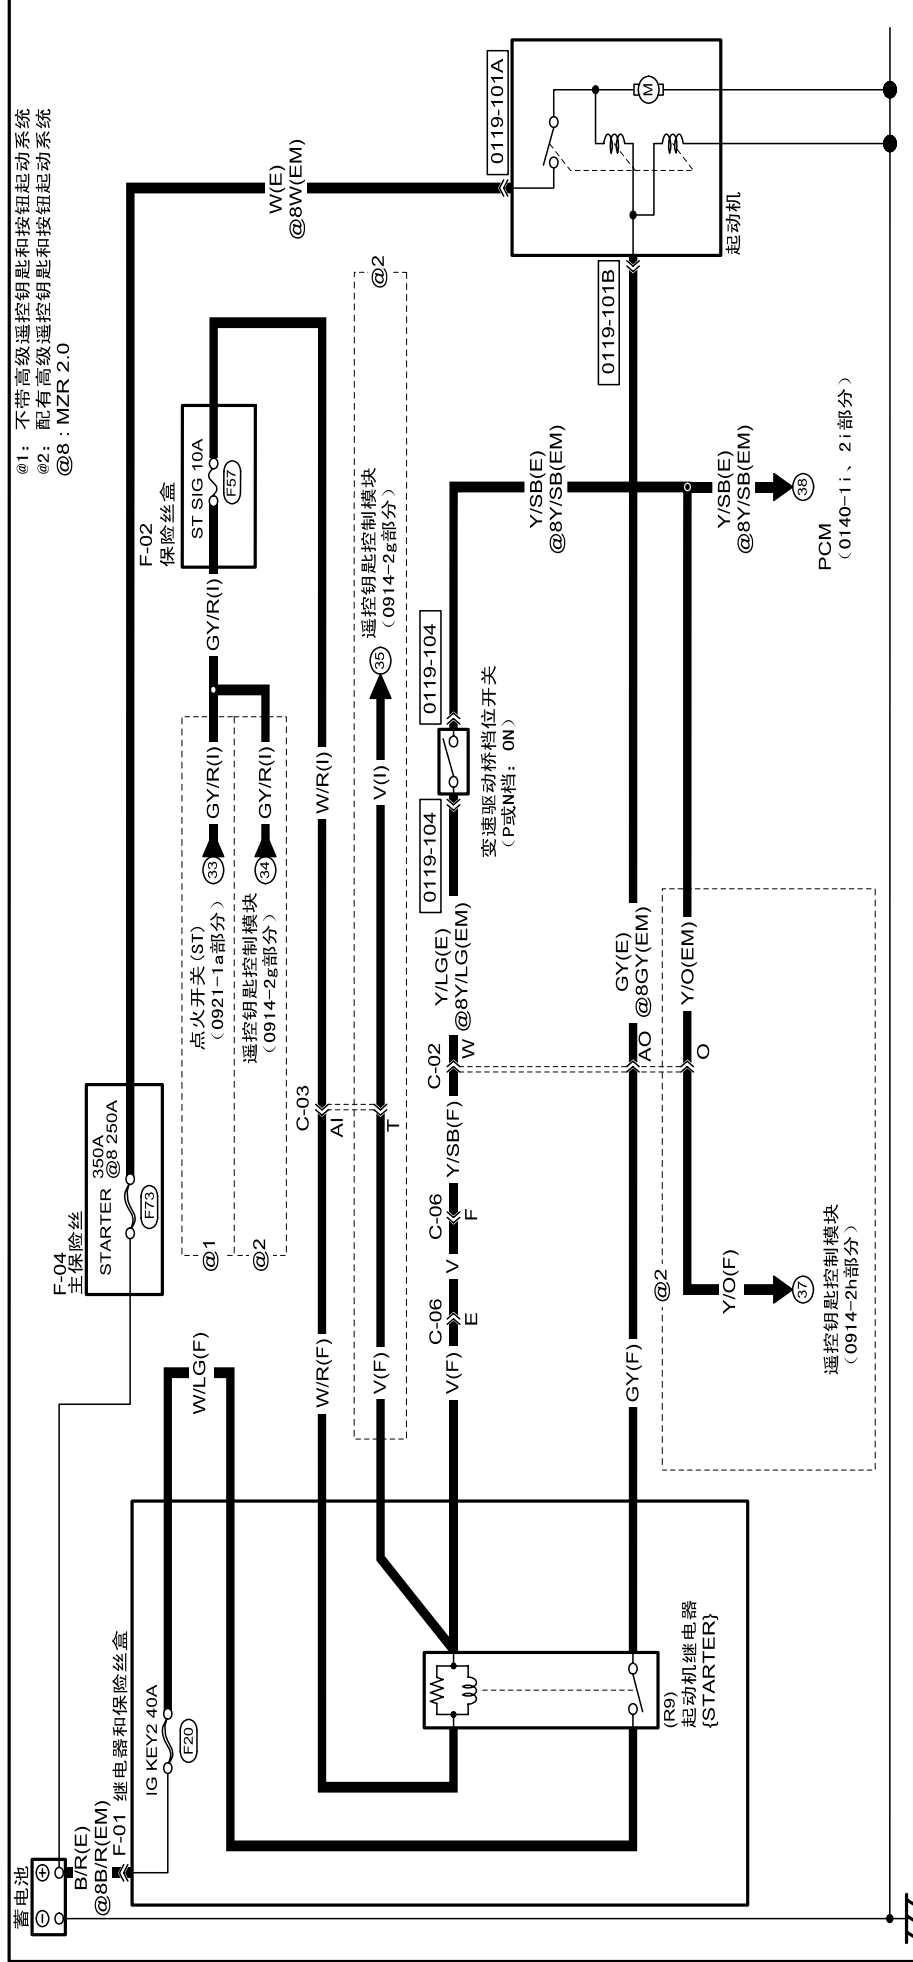[illegible]

起动系统 (ATX)


0119-1

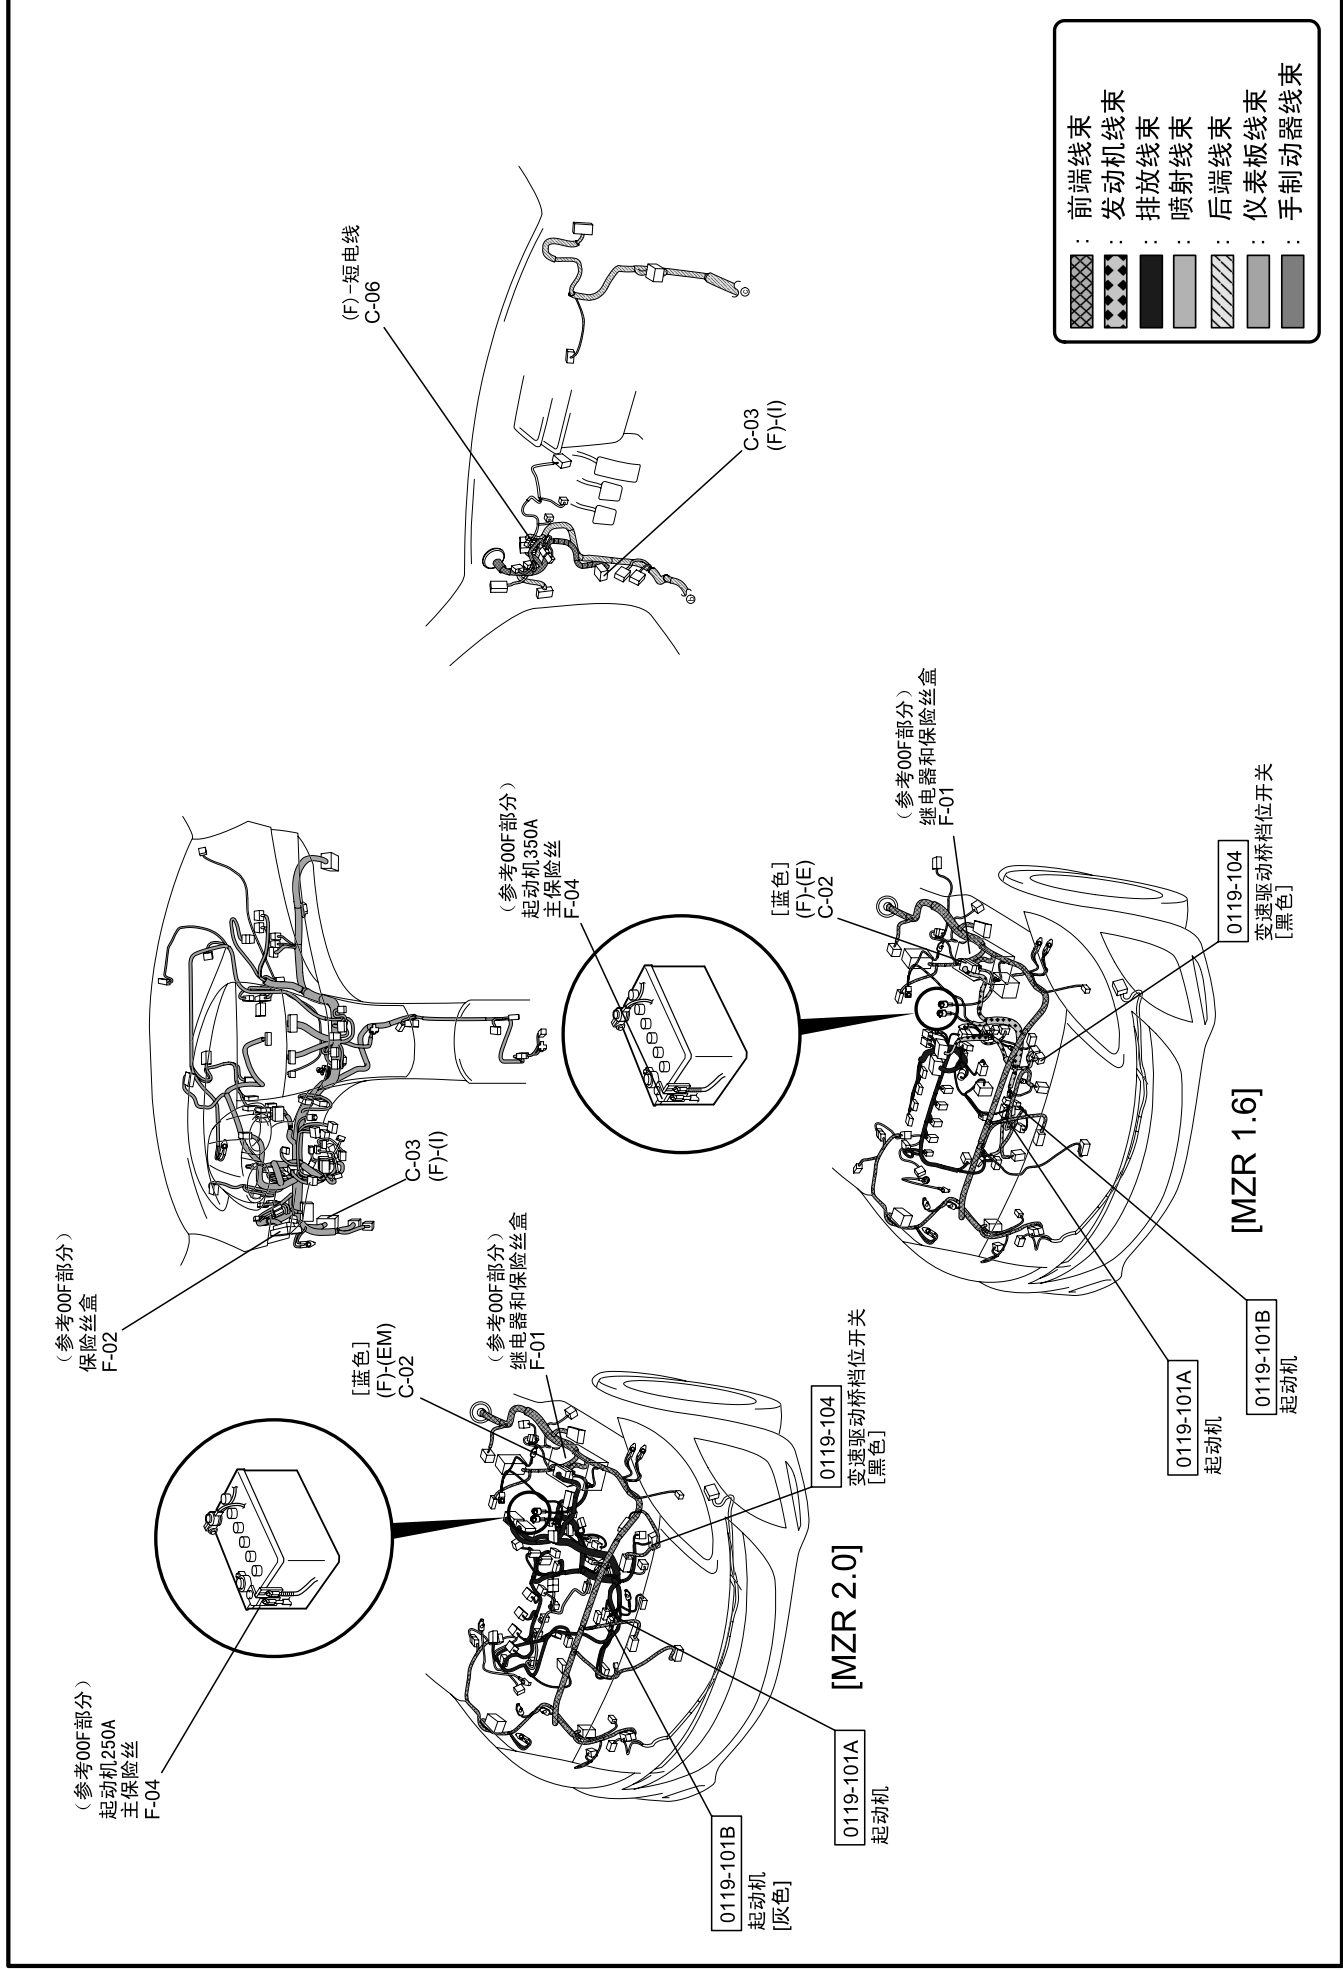

起动系统(MTX)


0119-2


@8: MZR 2.0

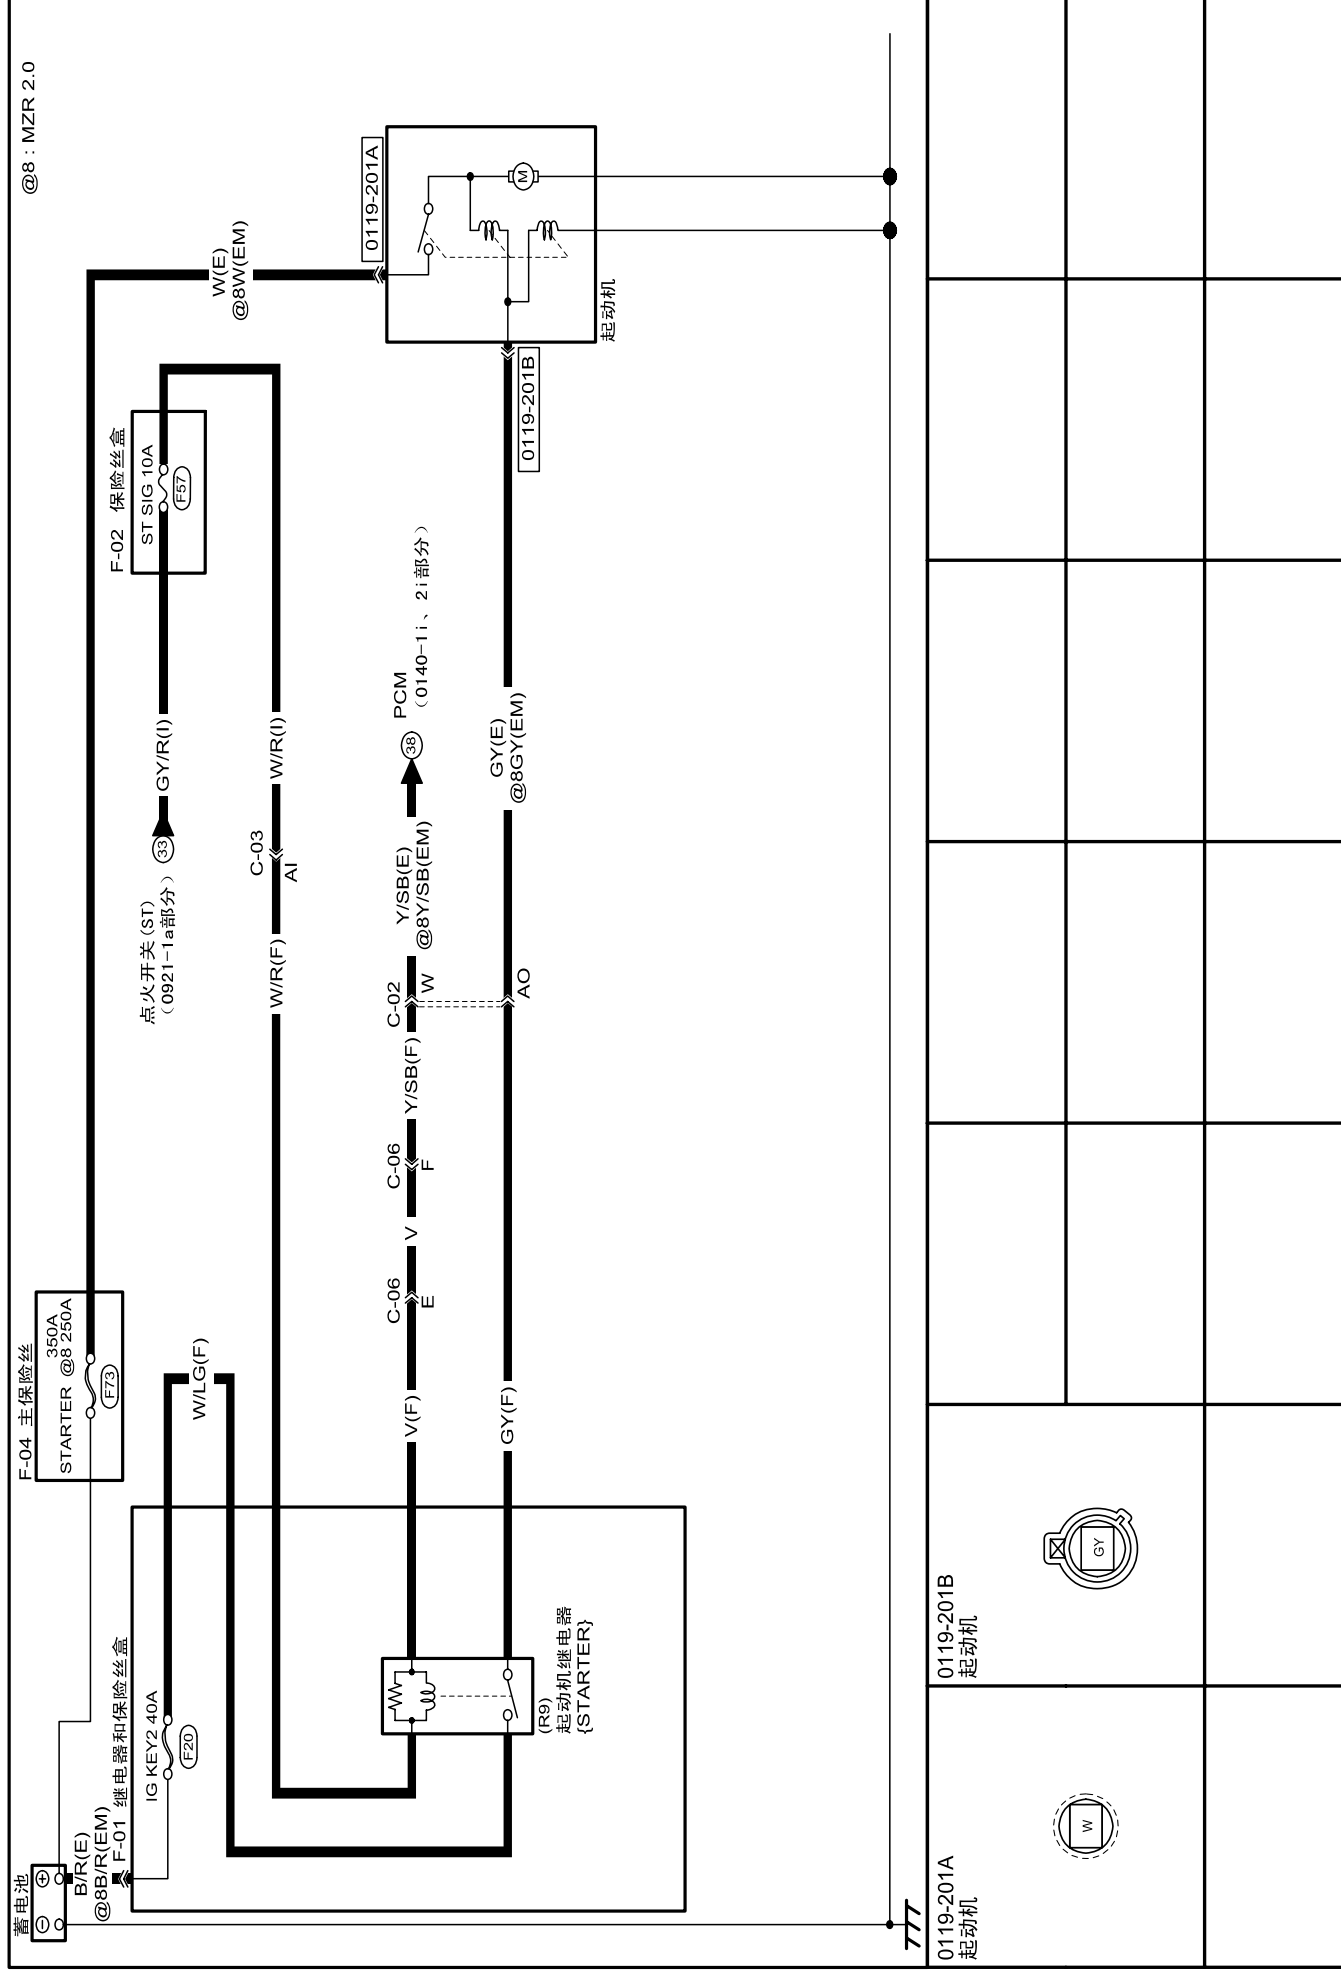

起动系统 (MTX)


0119-2

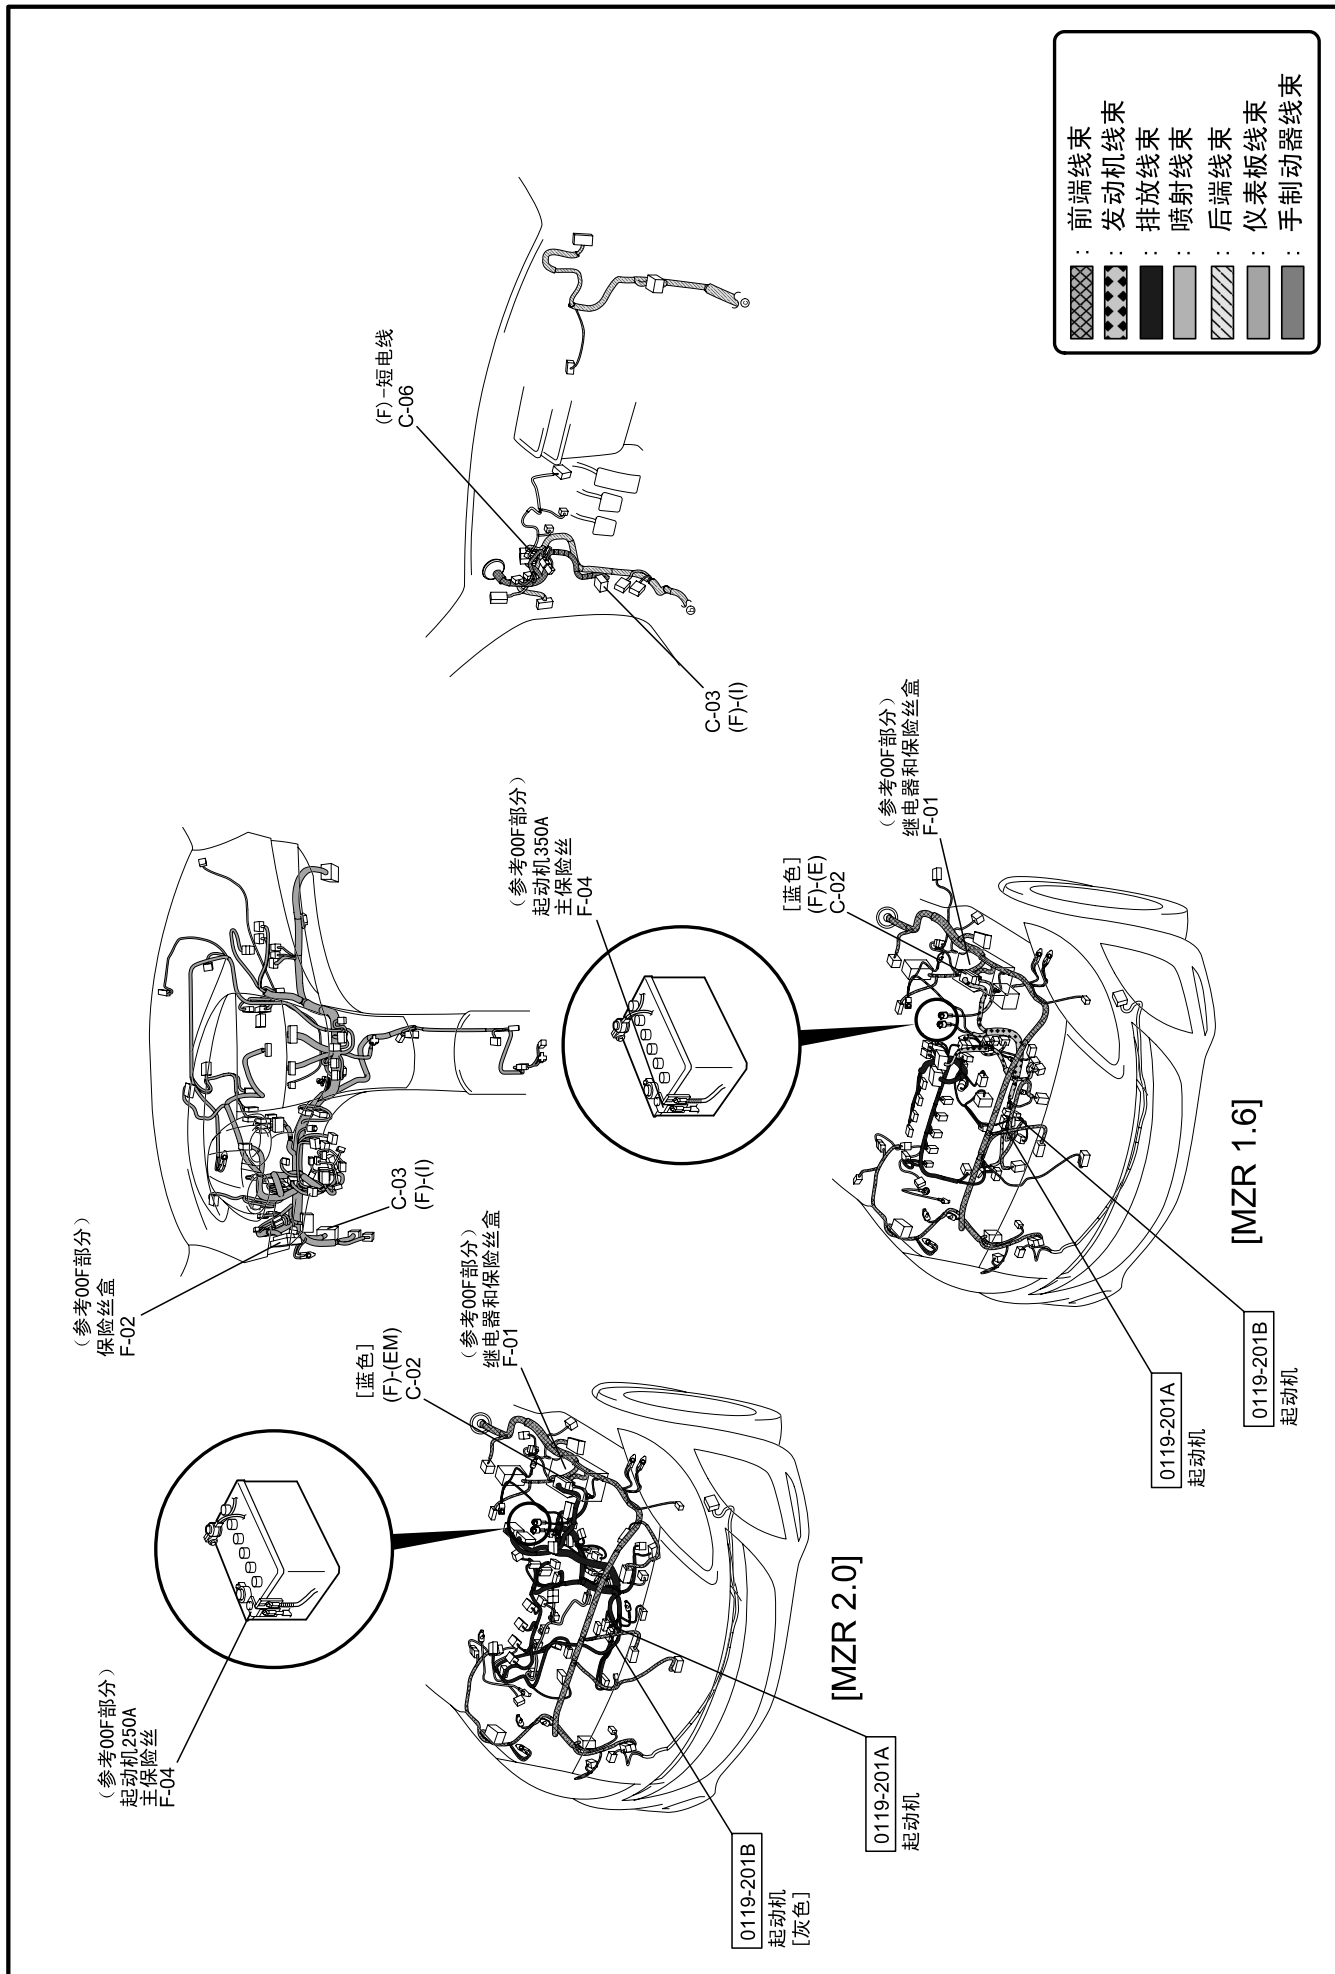


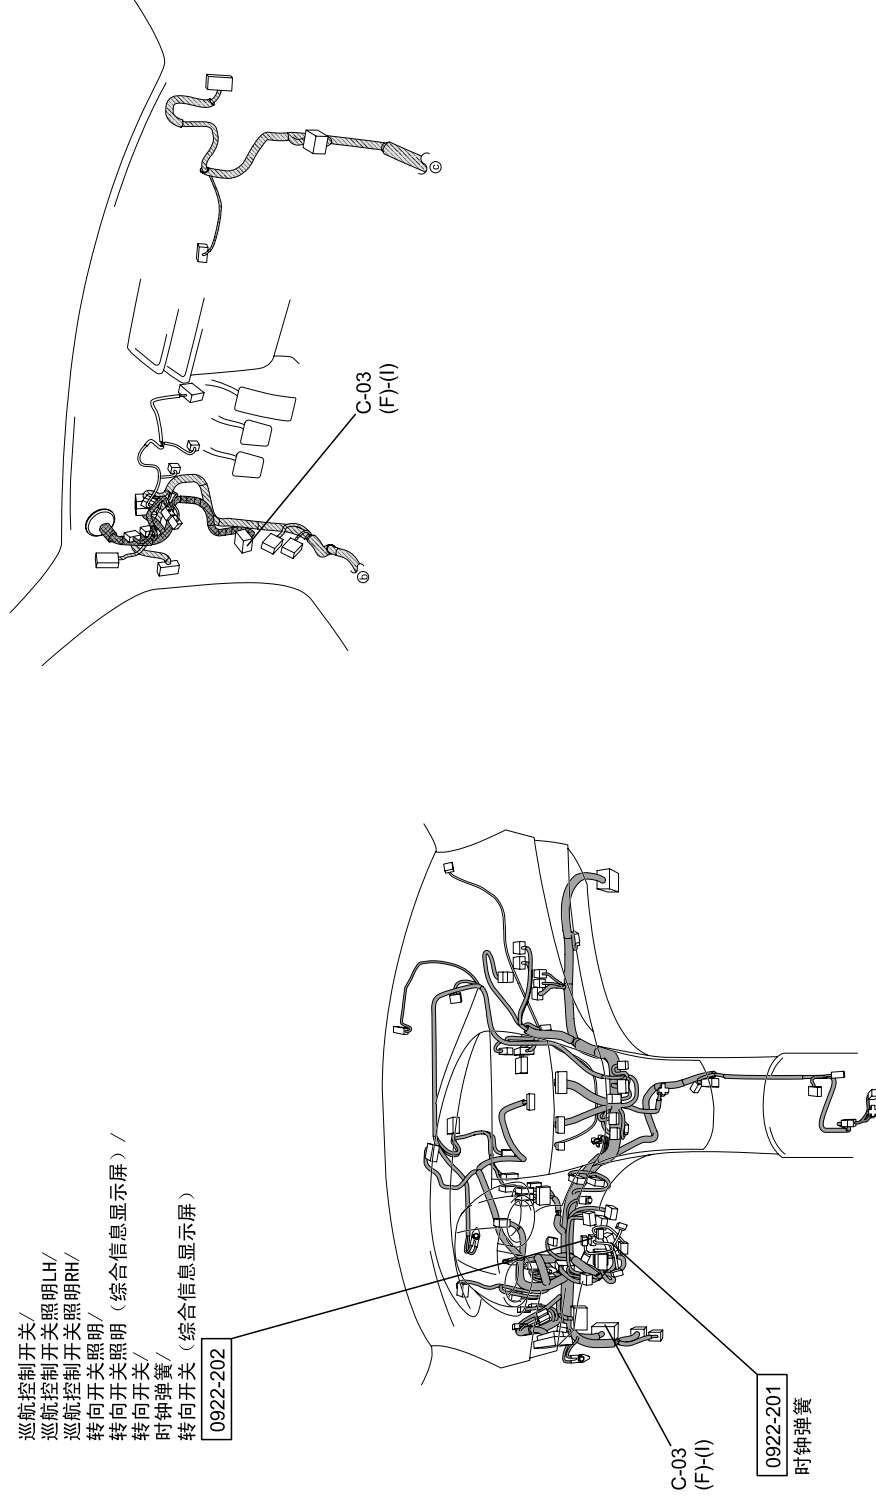



控制系统 (MZR 2.0)


0140-1a

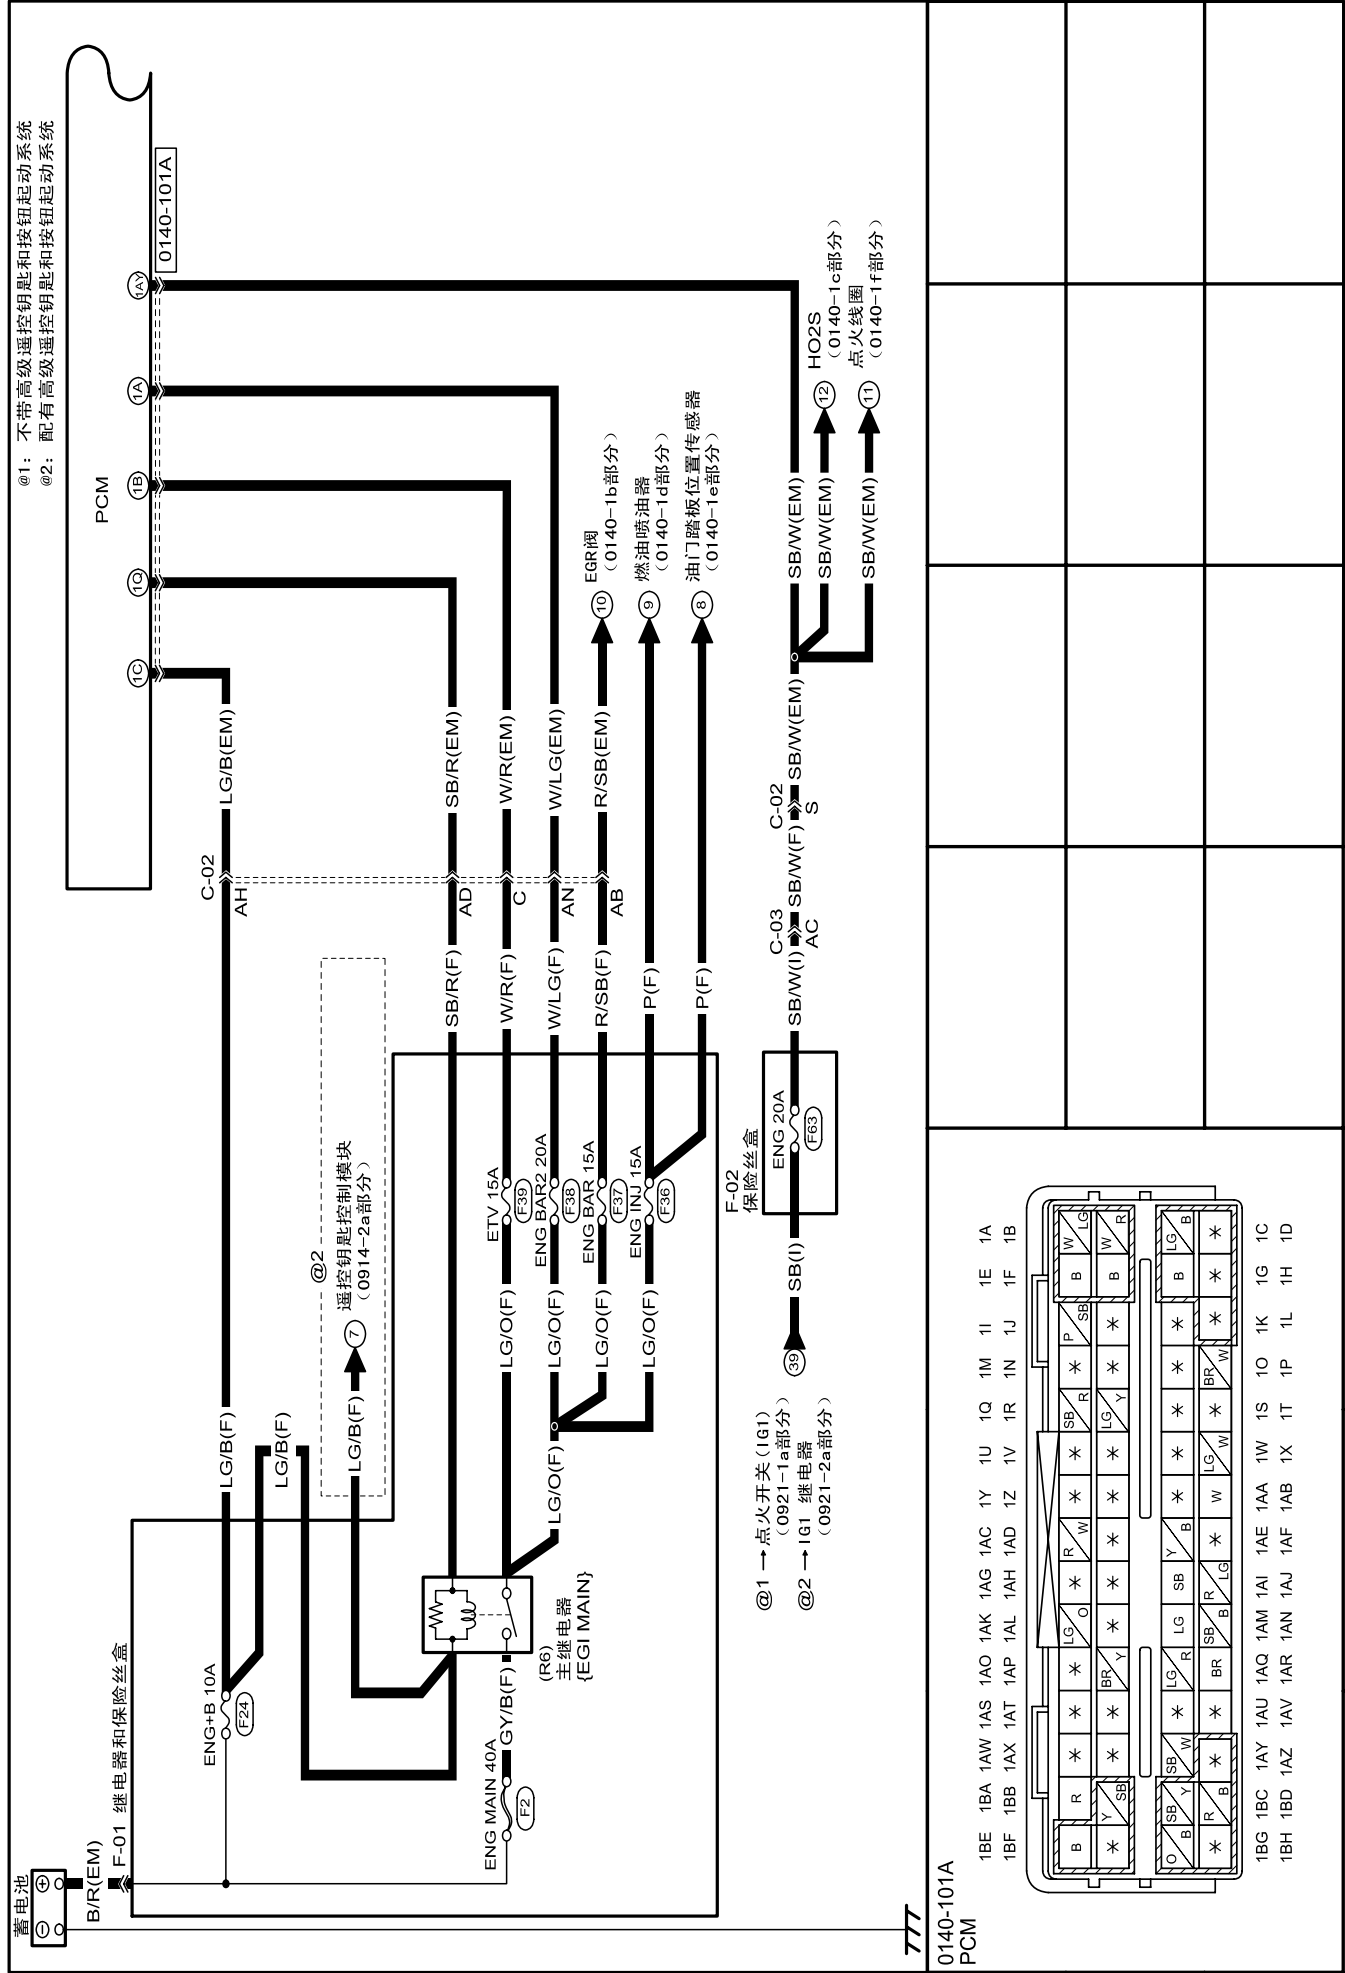

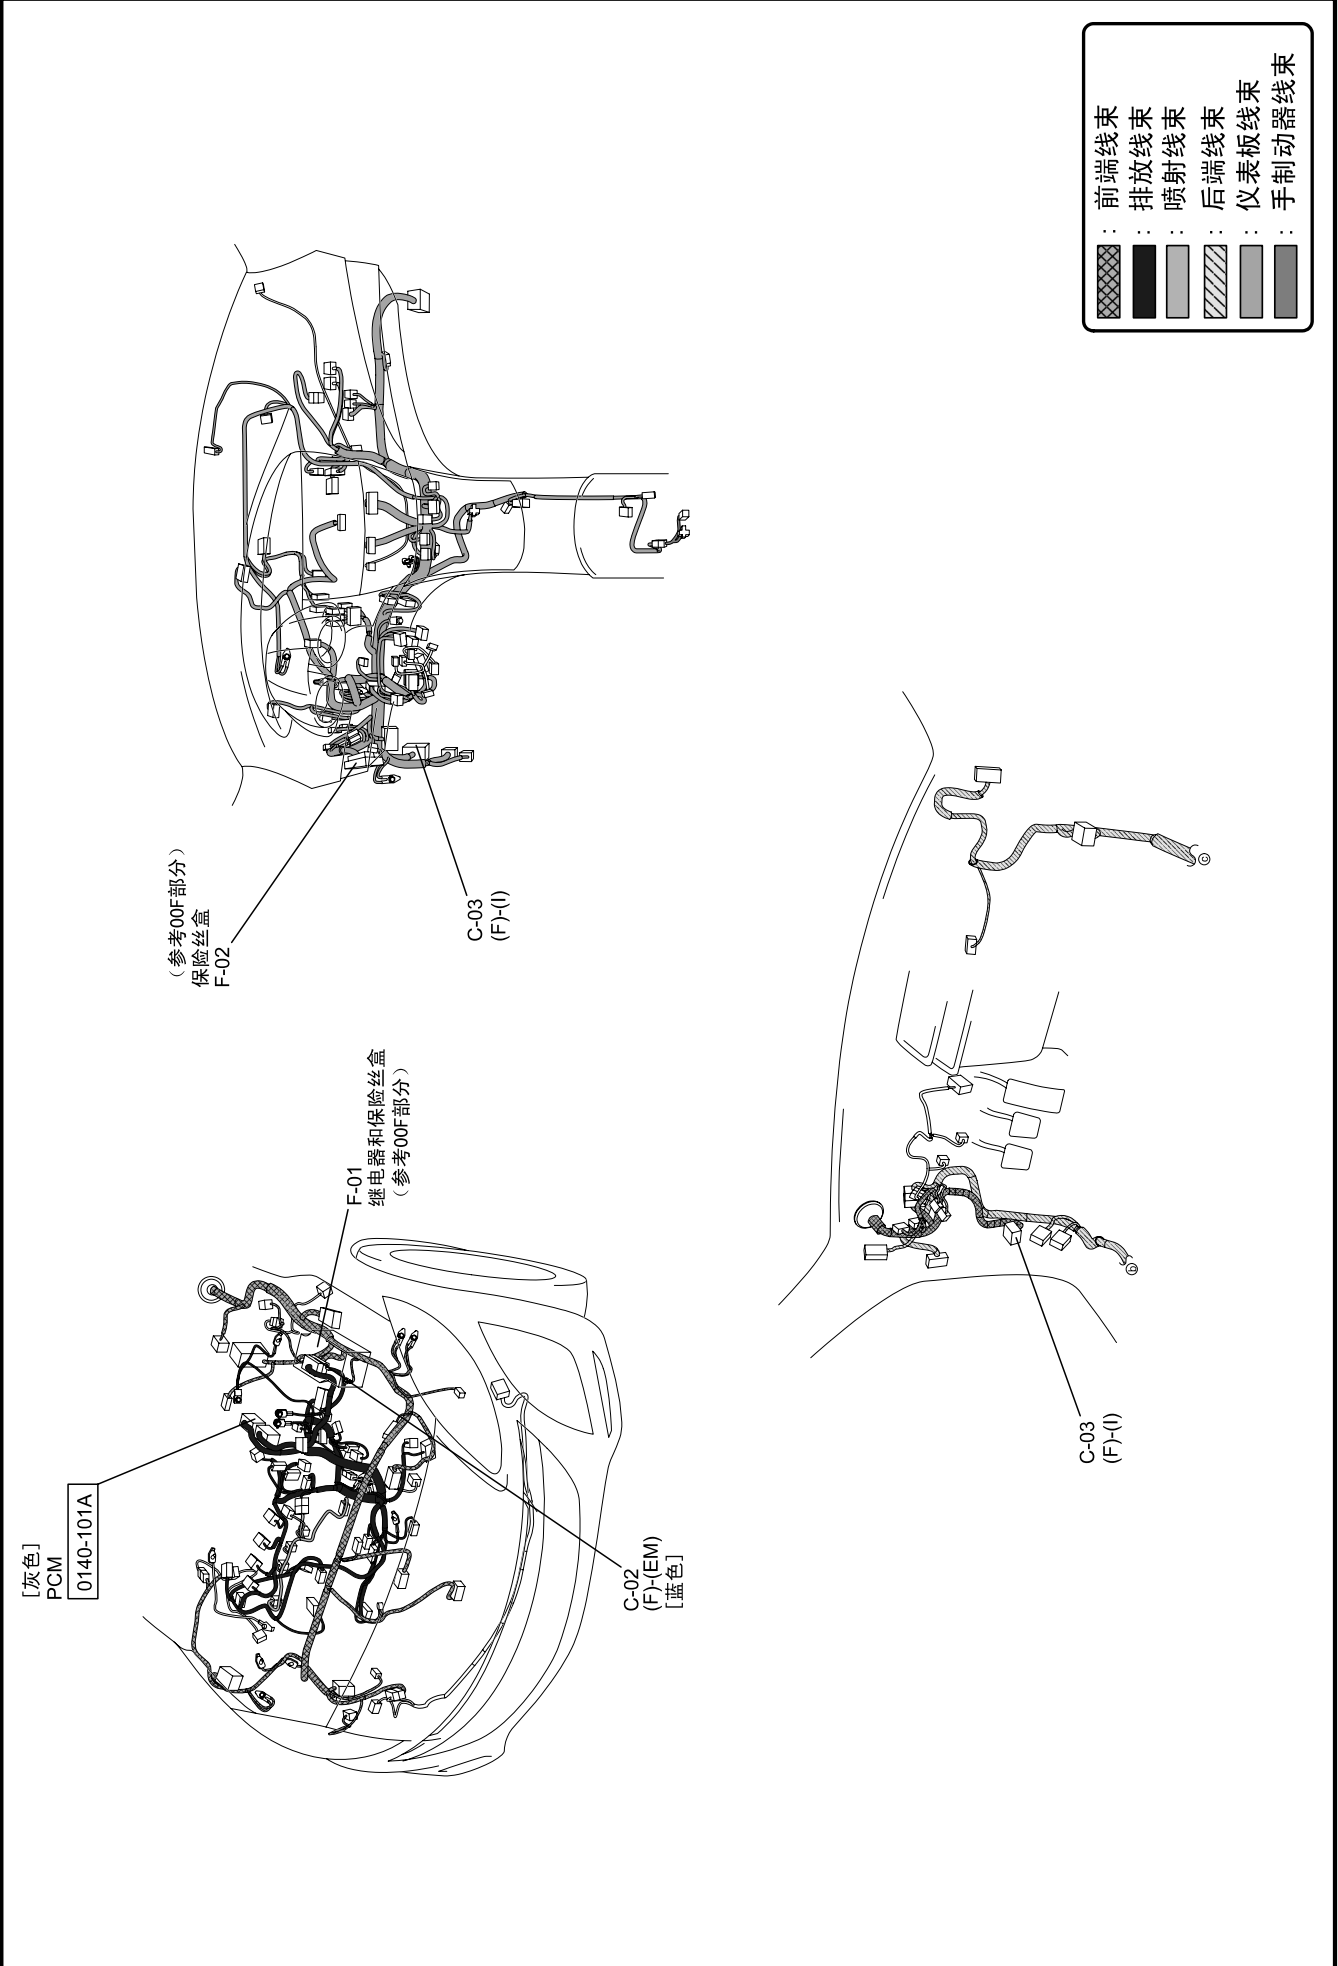


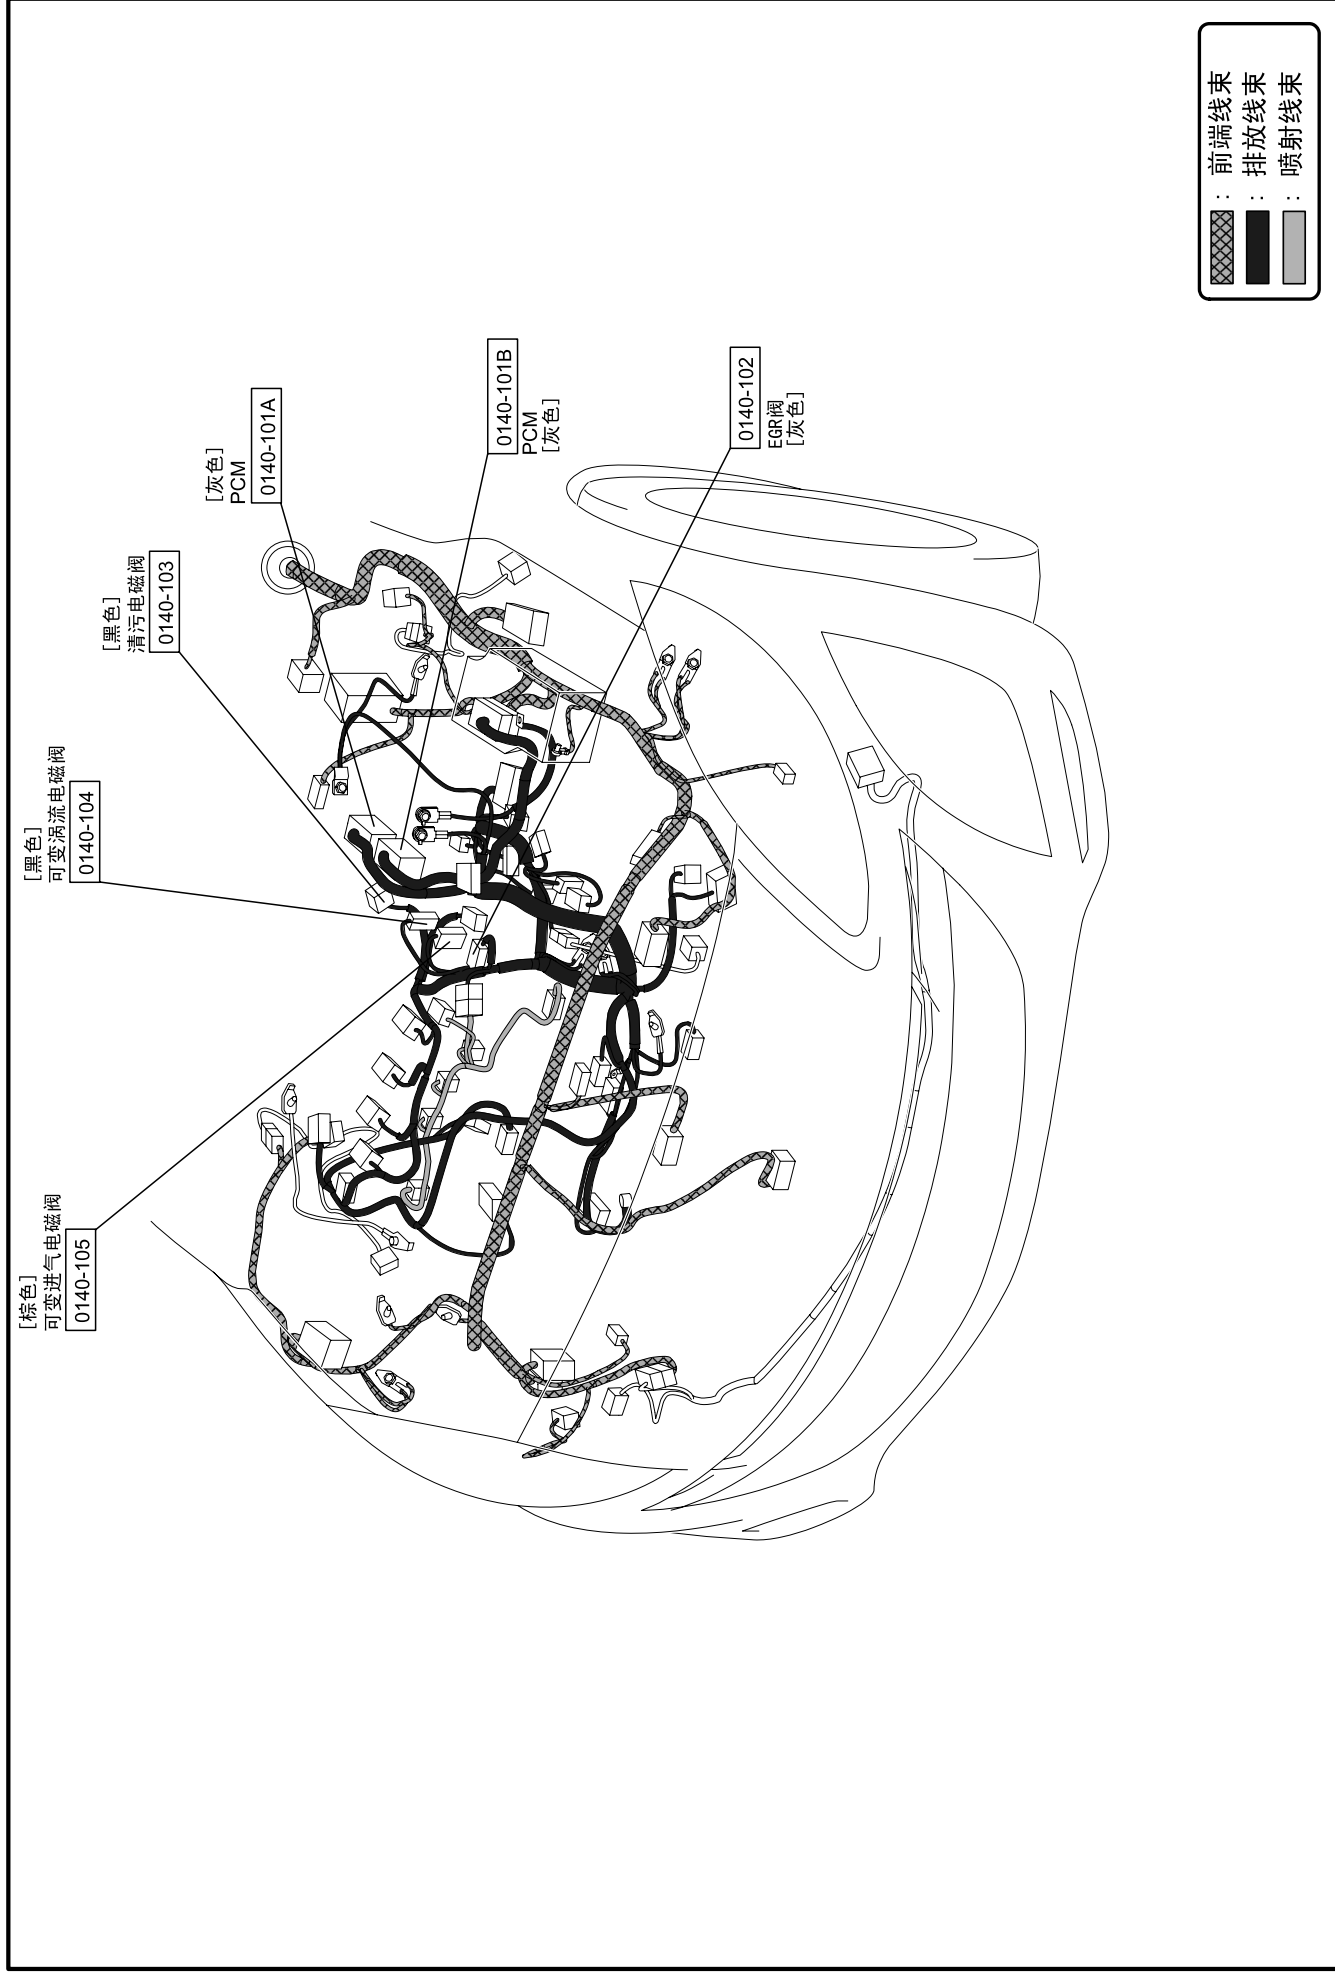


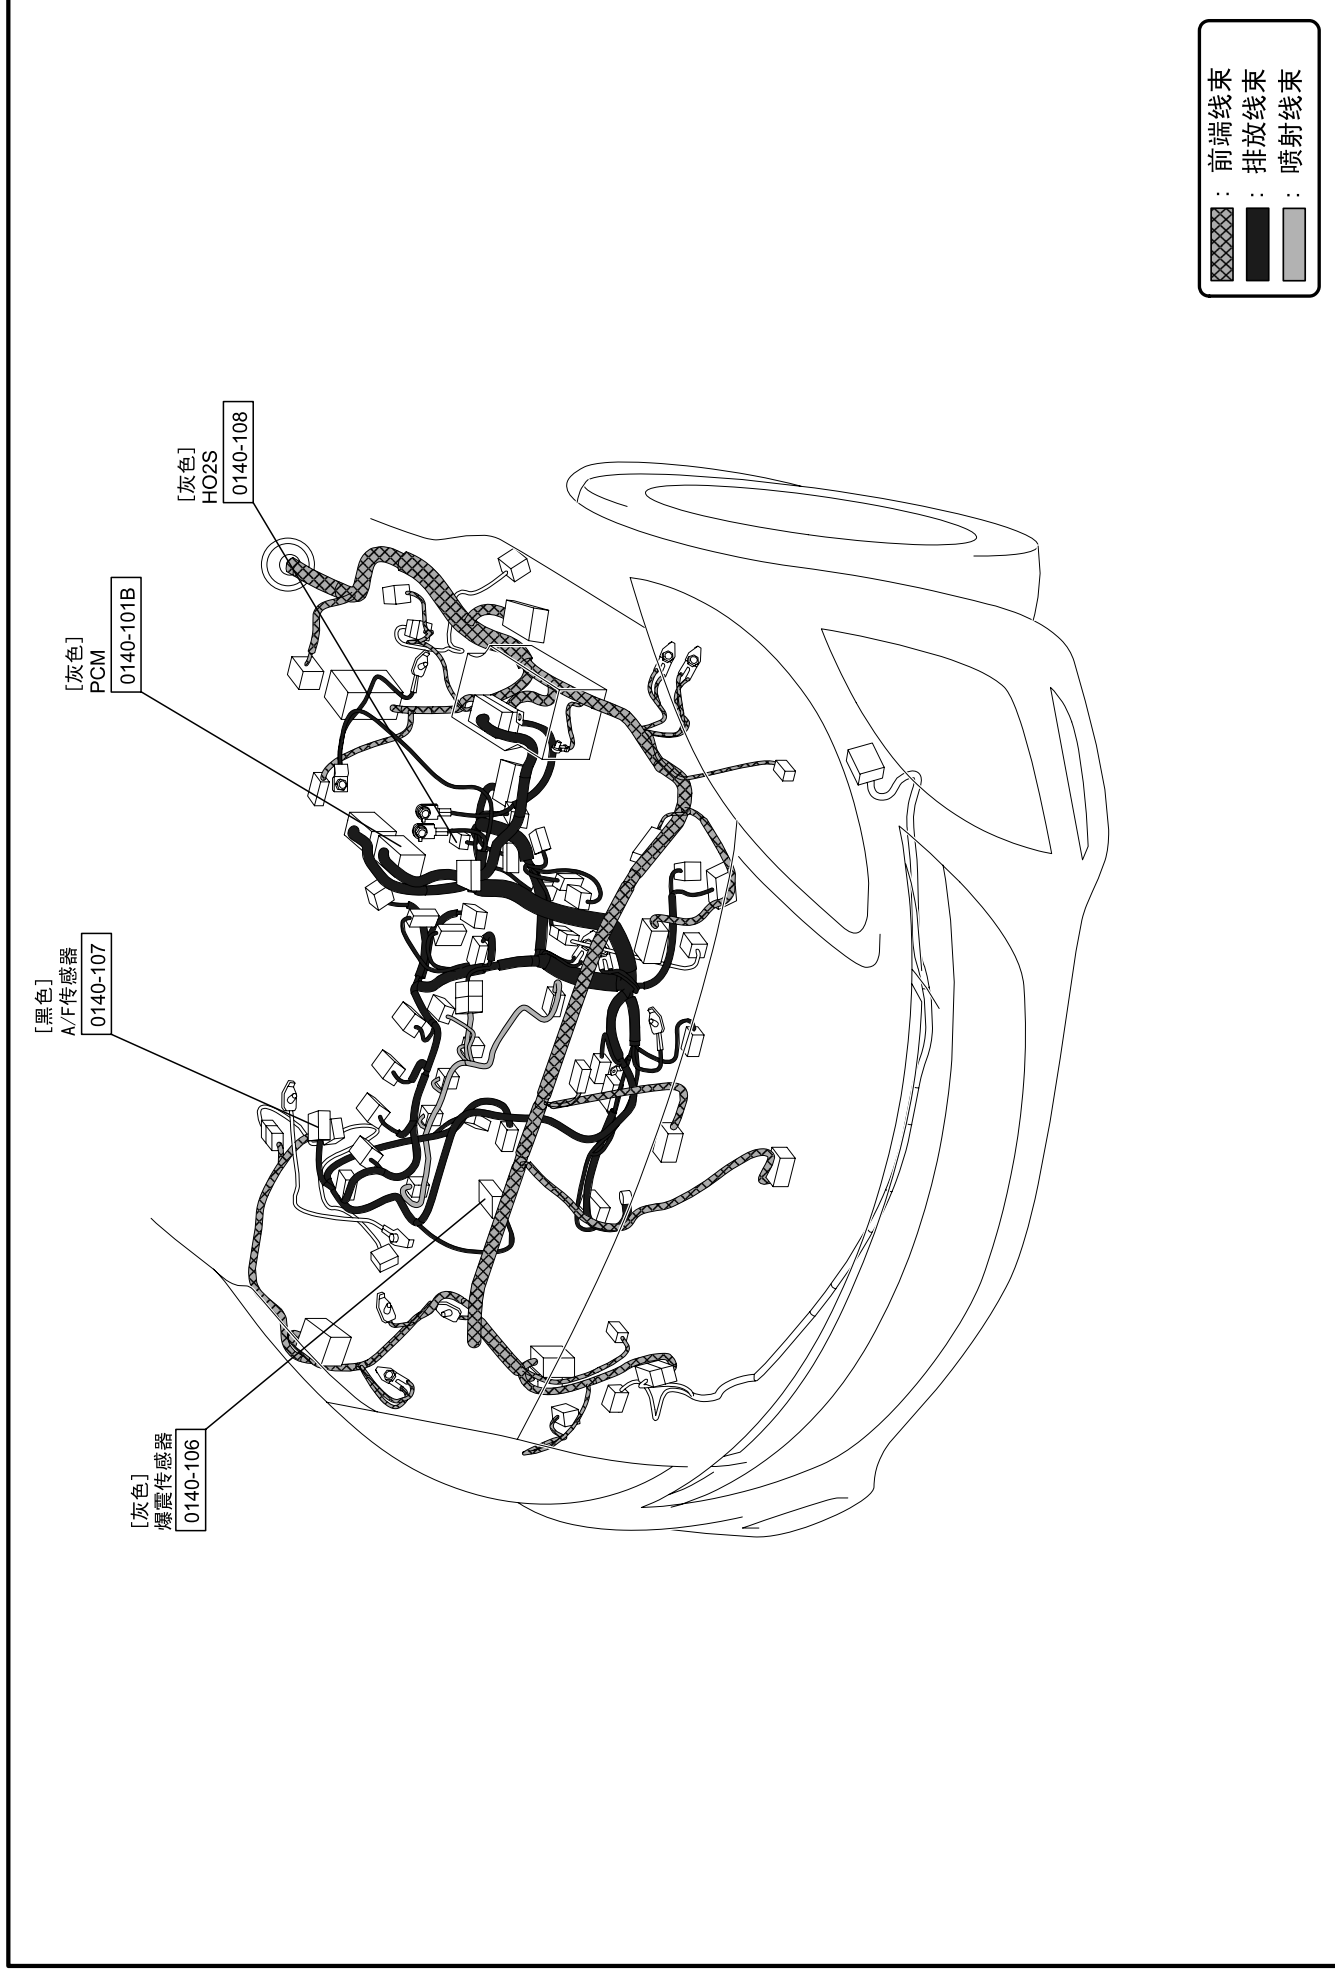

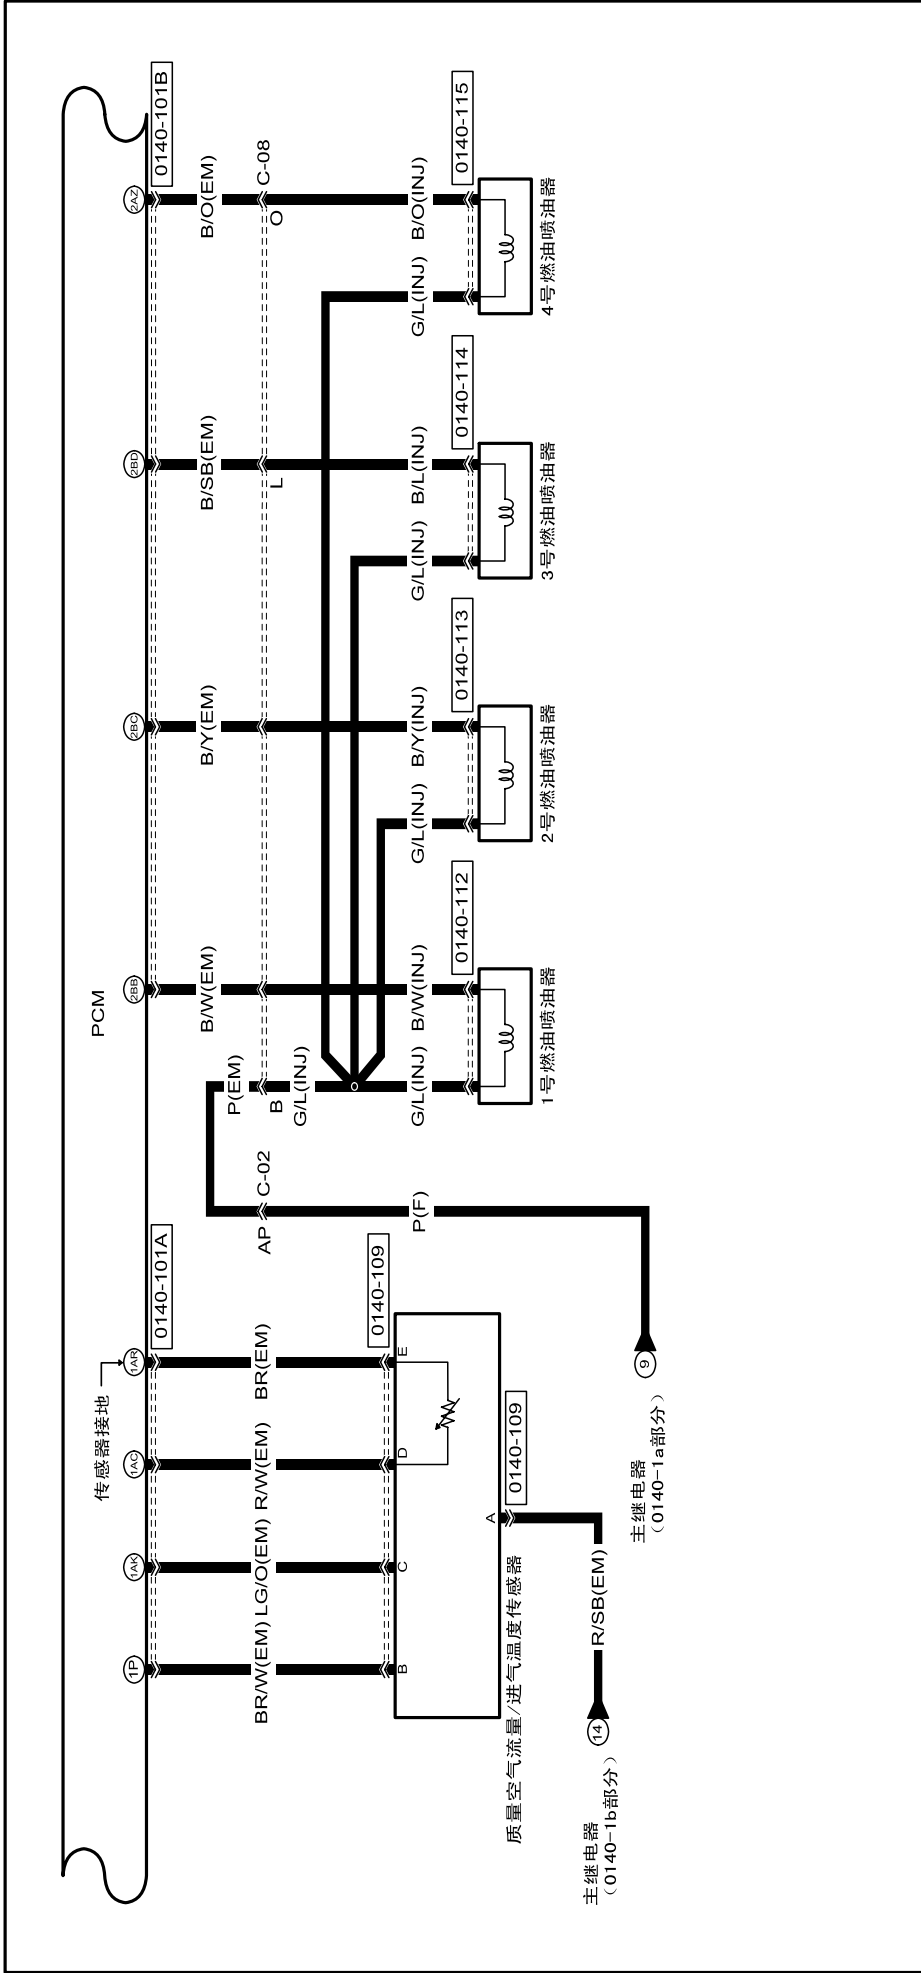

0140-101A PCM	 1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D	0140-101B PCM	 2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2A 2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2B 2BG 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2C 2BH 2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2P 2L 2H 2D	0140-109 质量空气流量/进气温度传感器			
0140-112 1号燃油喷射器		0140-113 2号燃油喷射器		0140-114 3号燃油喷射器		0140-115 4号燃油喷射器	




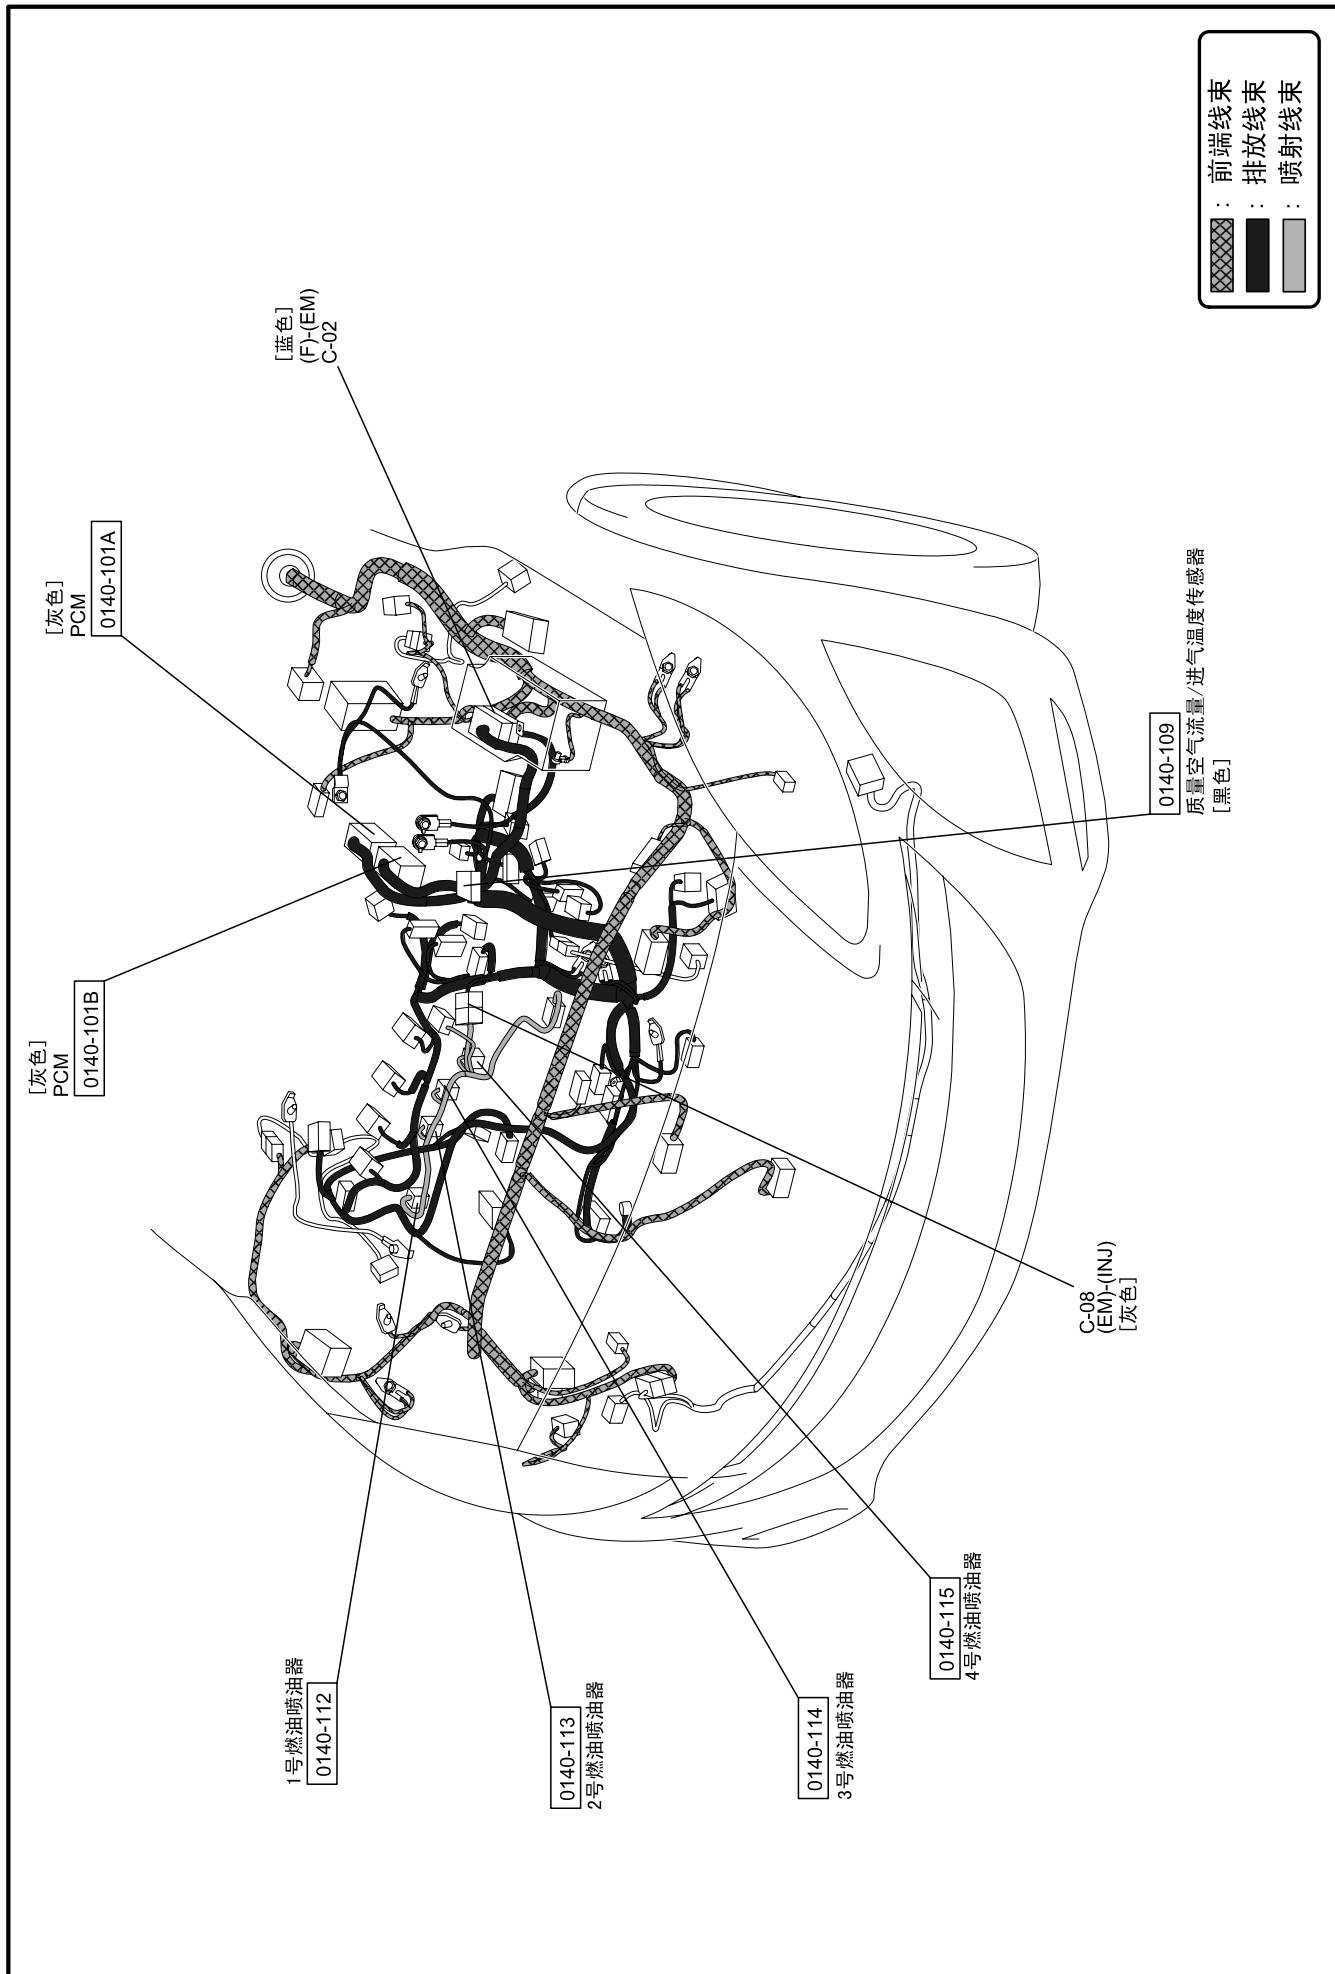


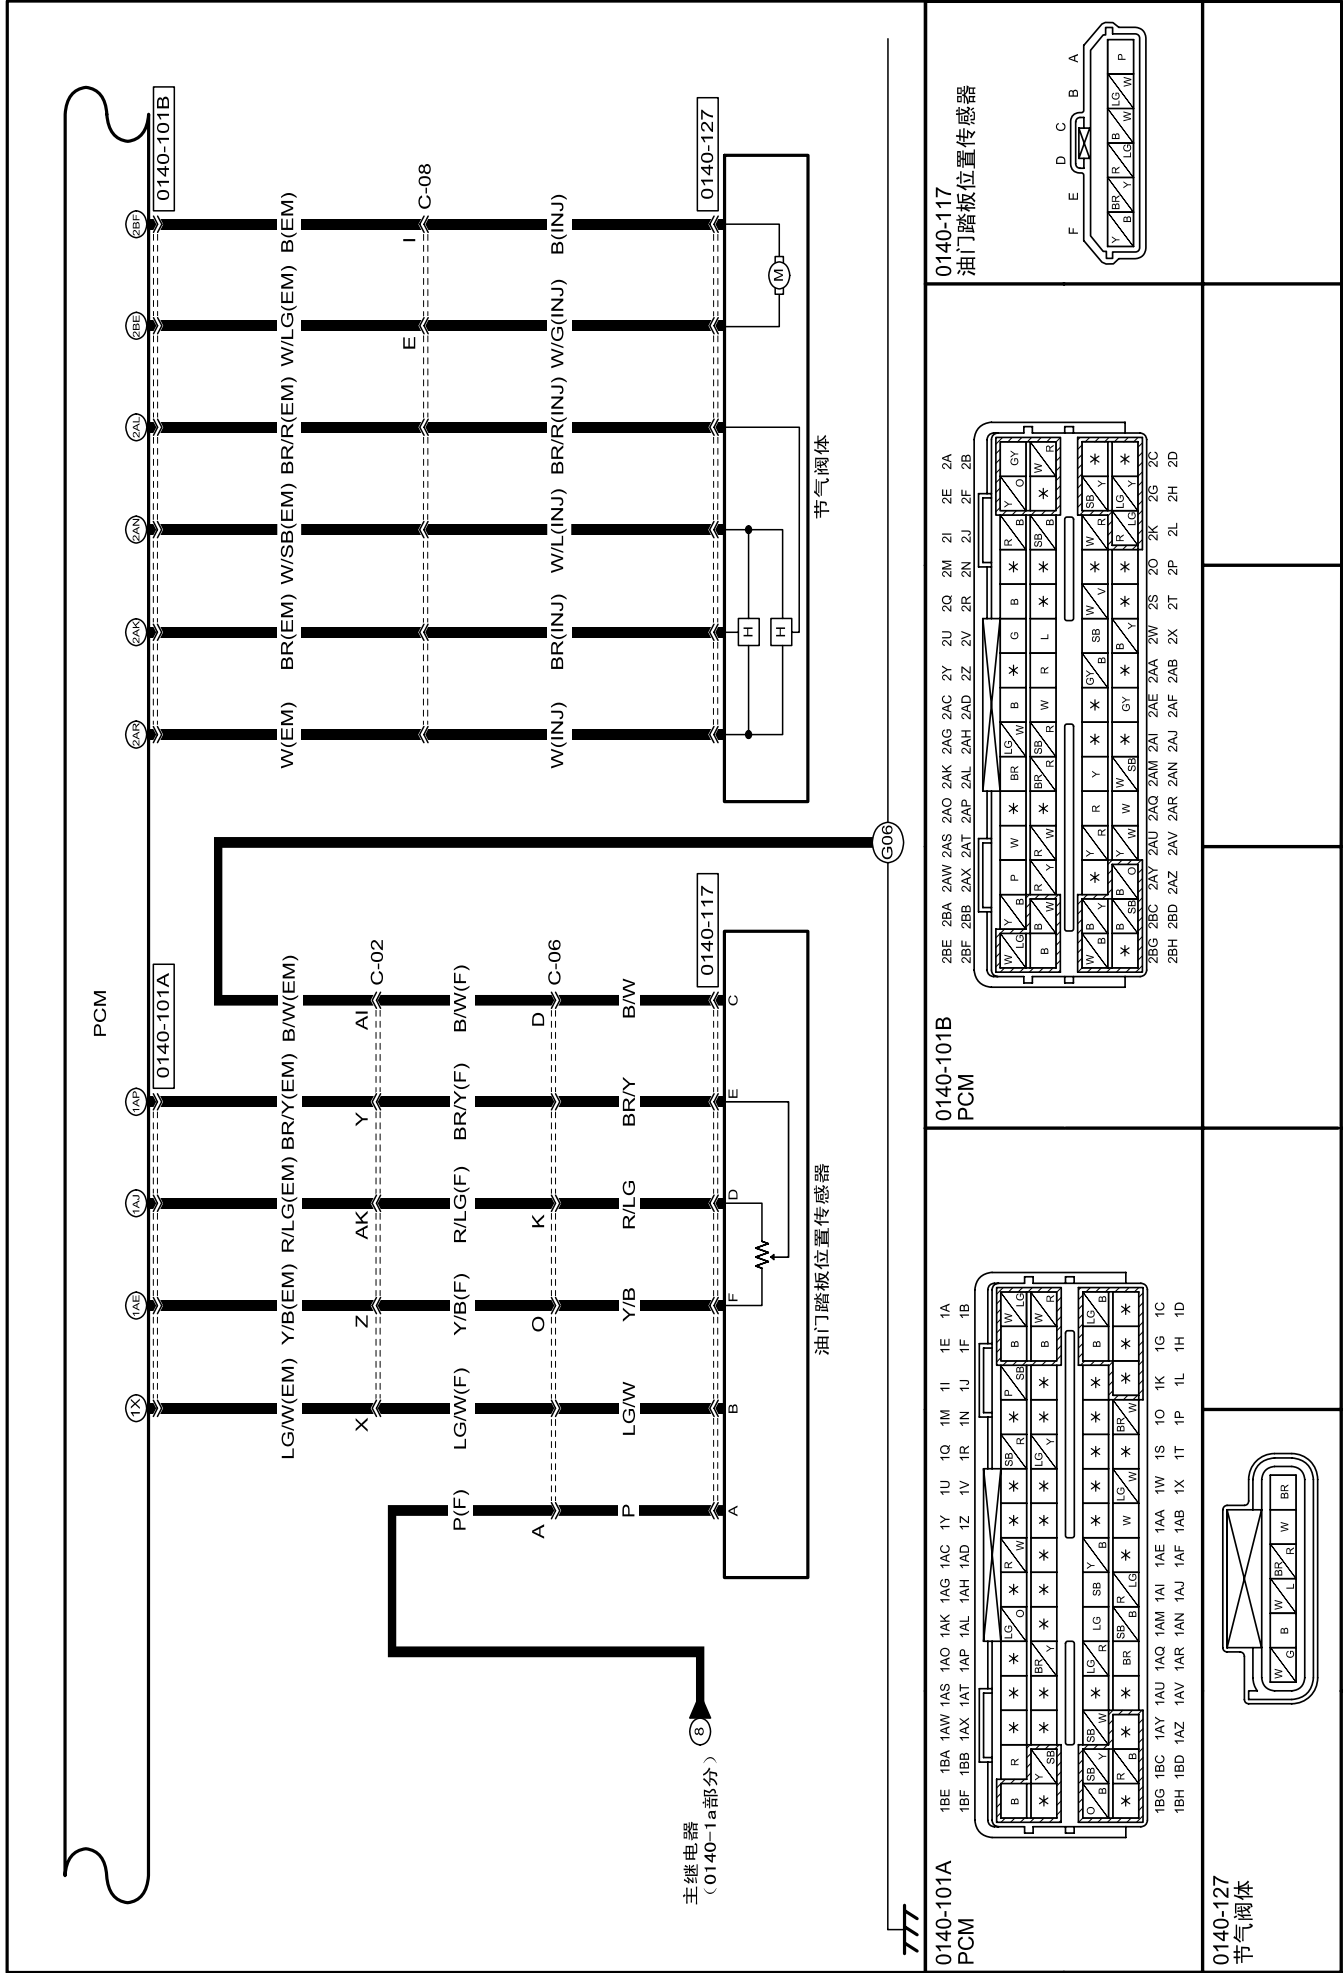


0140-101A
PCM


0140-101B
PCM

  
0140-117
油门踏板位置传感器

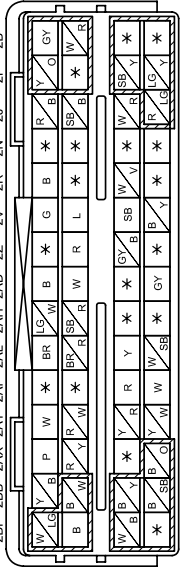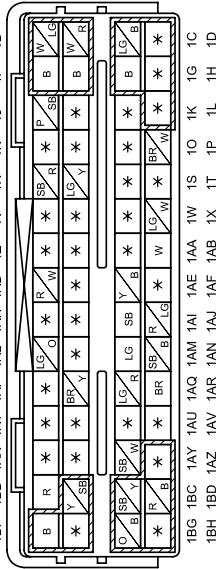


0140-127
节气阀体

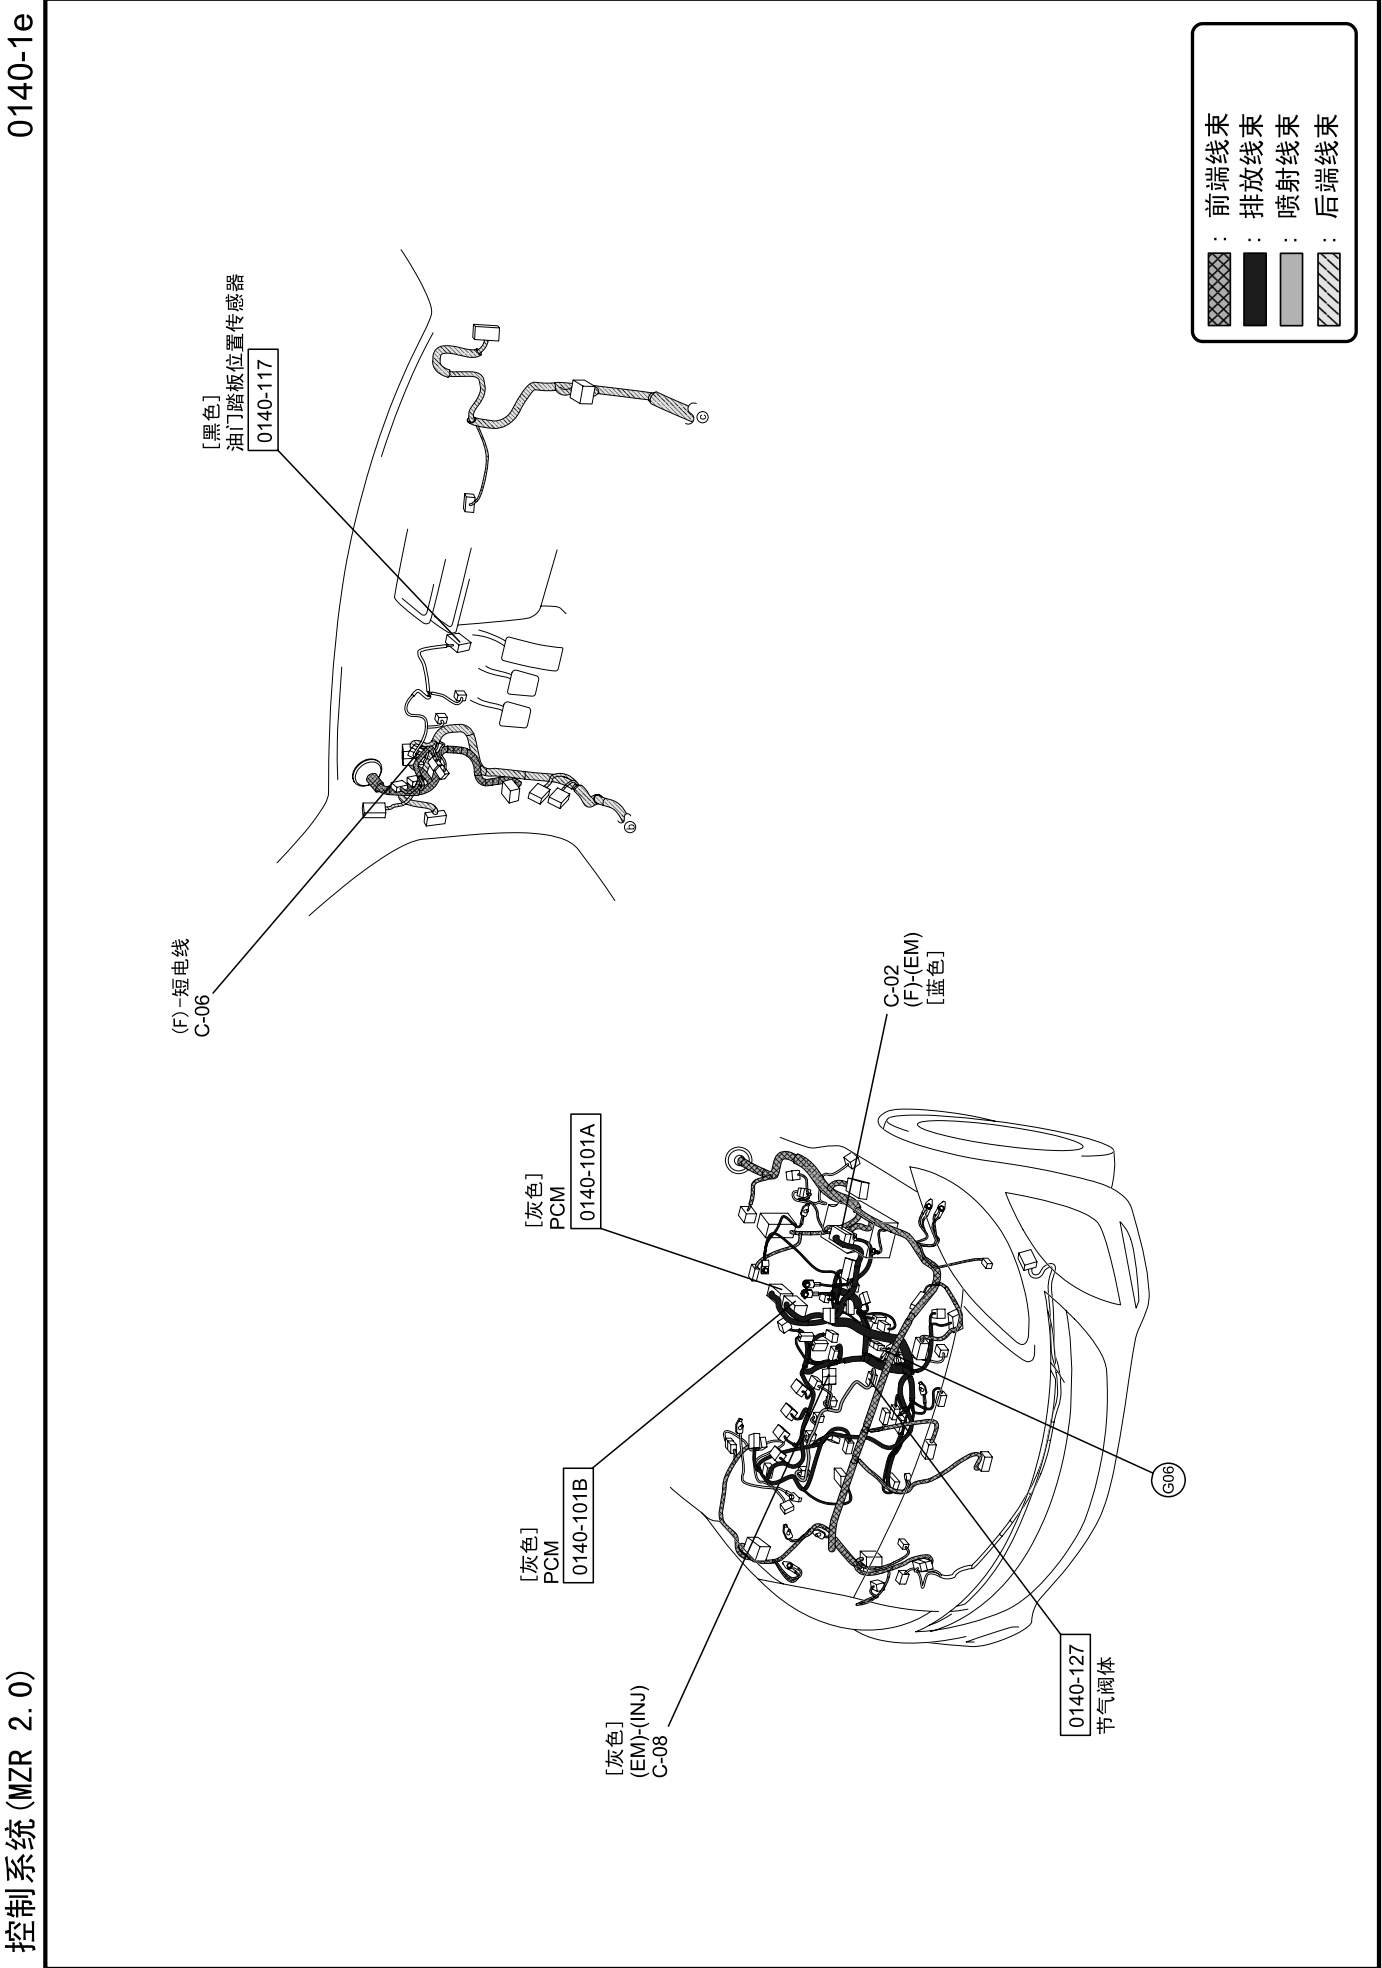


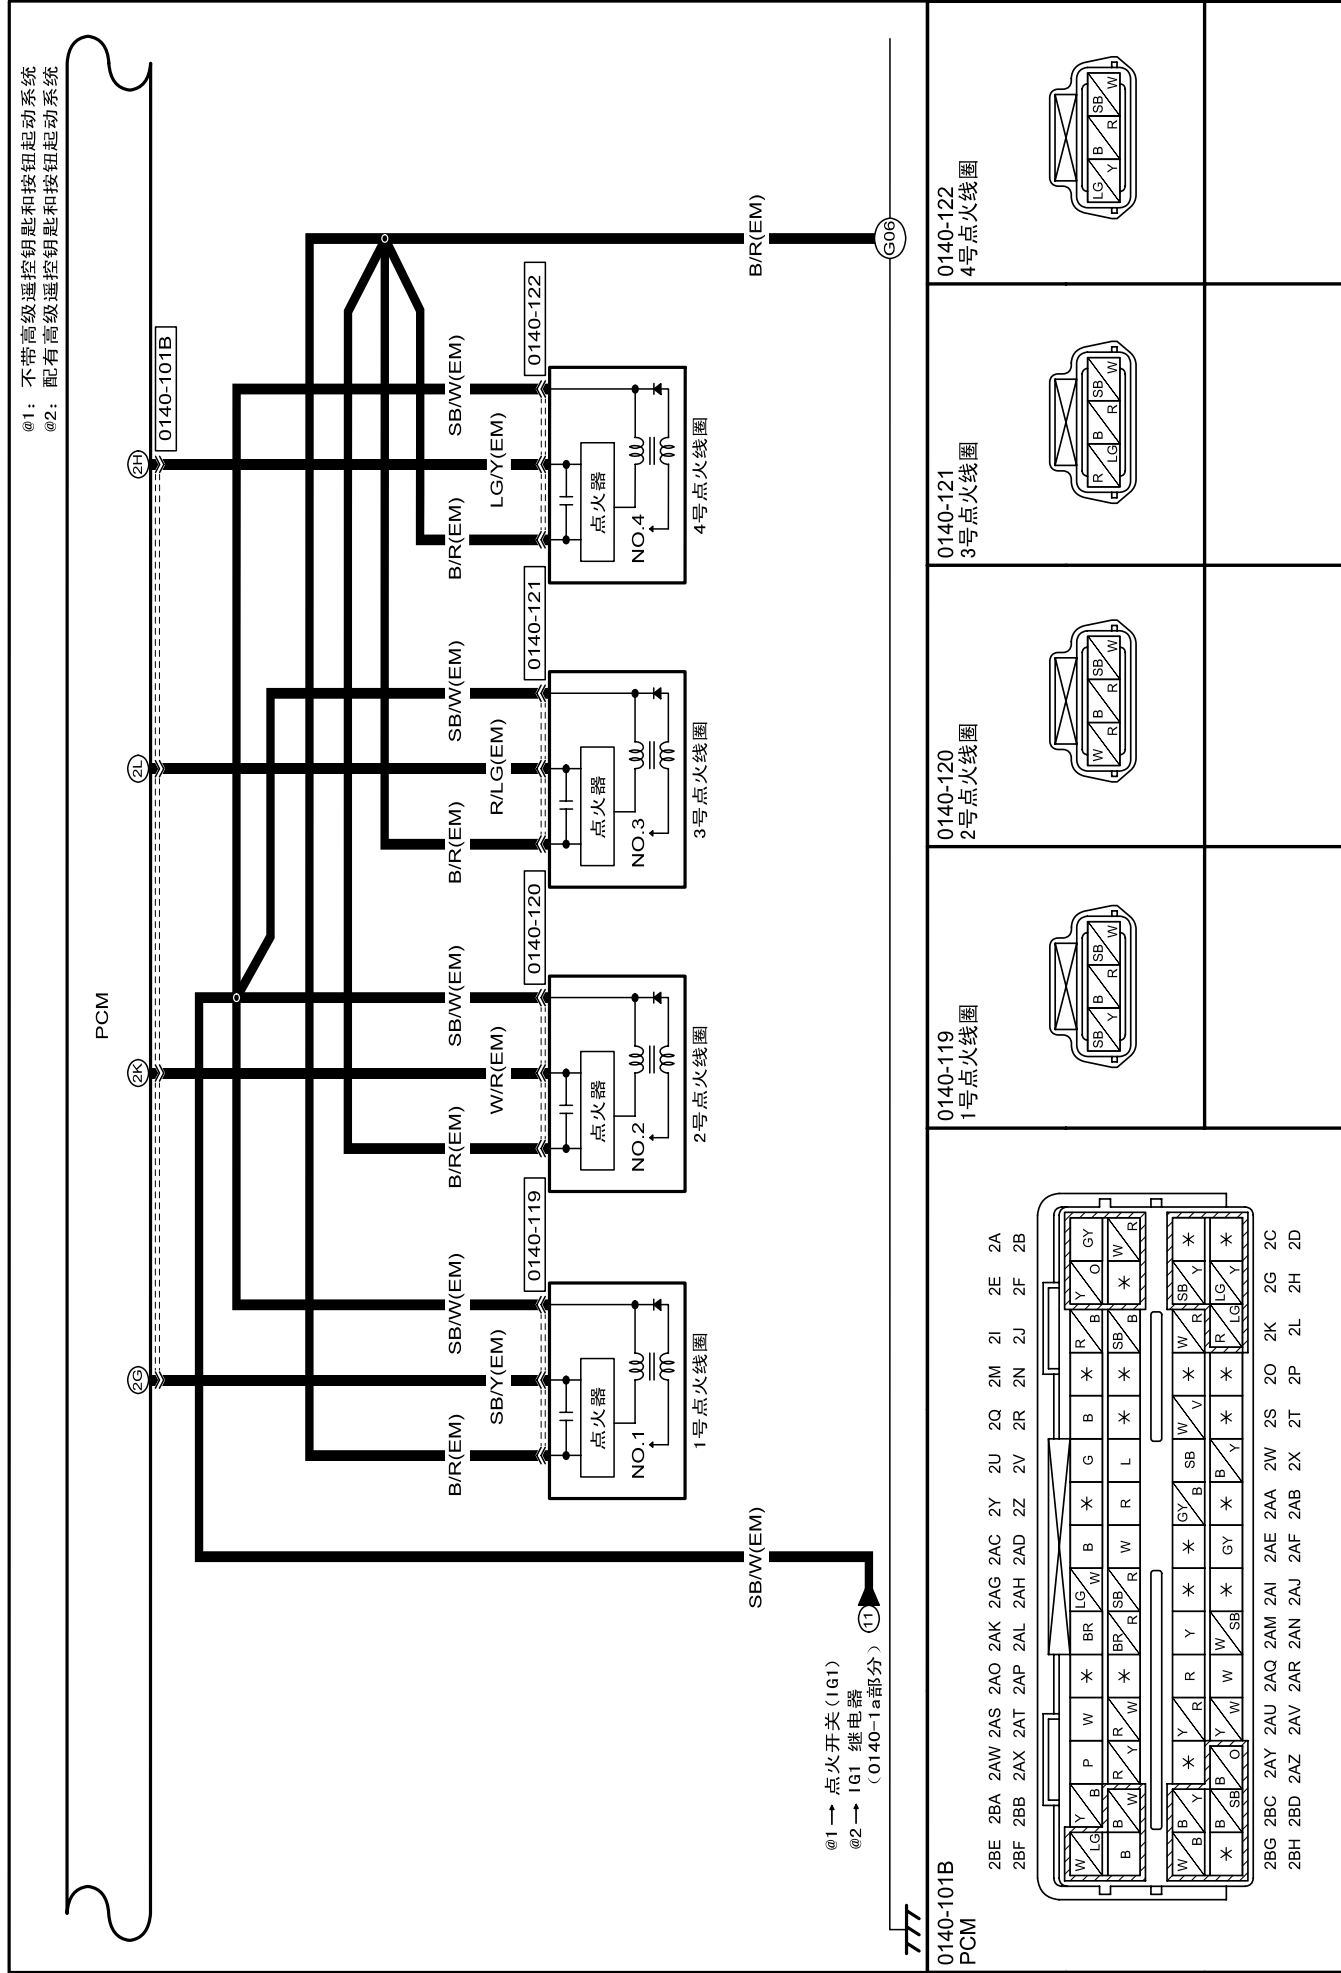


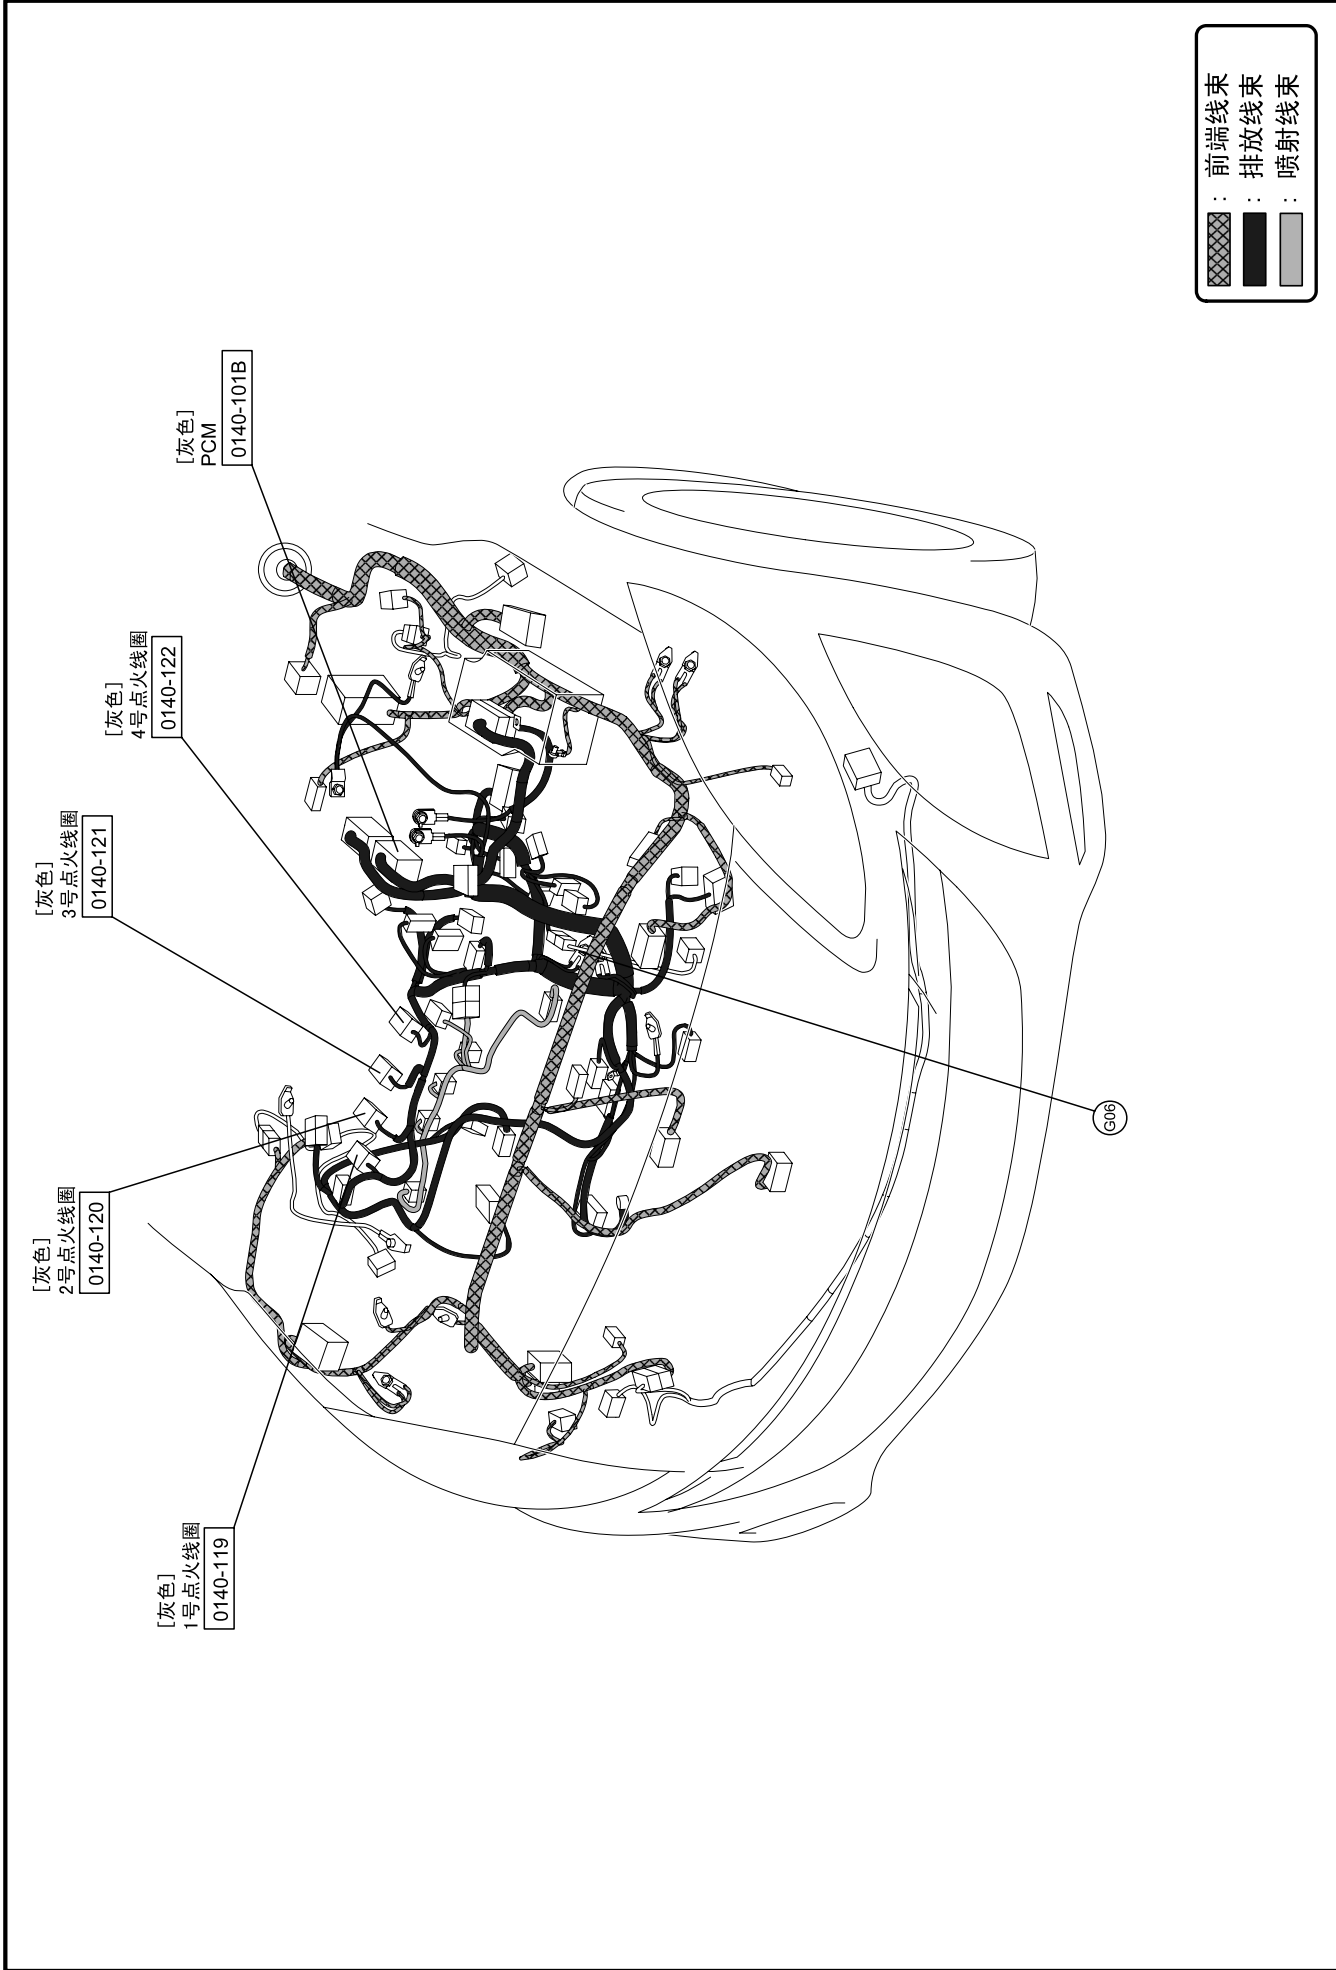

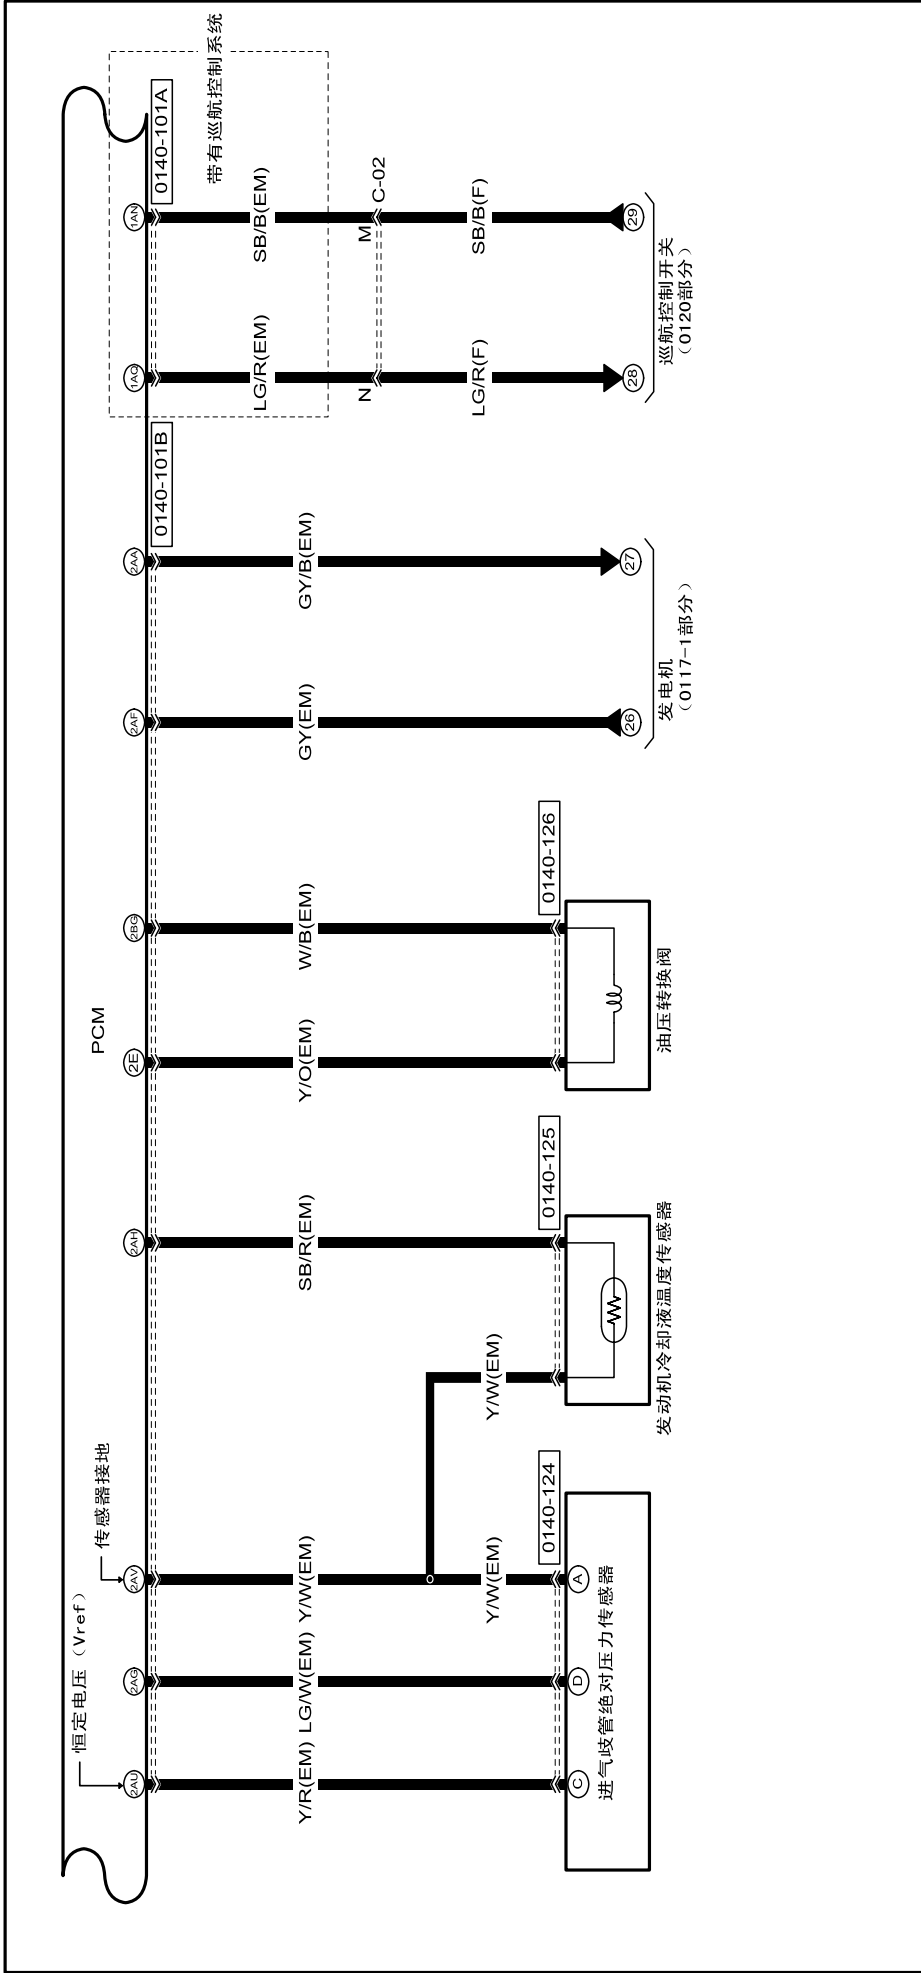


0140-101A PCM	0140-101B PCM	0140-124 进气歧管绝对压力传感器
1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A 1B 1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B 1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1AW 1S 1O 1K 1G 1C 1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D	2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2A 2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2B 2BG 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2AW 2S 2O 2K 2G 2C 2BH 2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2D	
0140-125 发动机冷却液温度传感器	0140-126 油压转换阀	

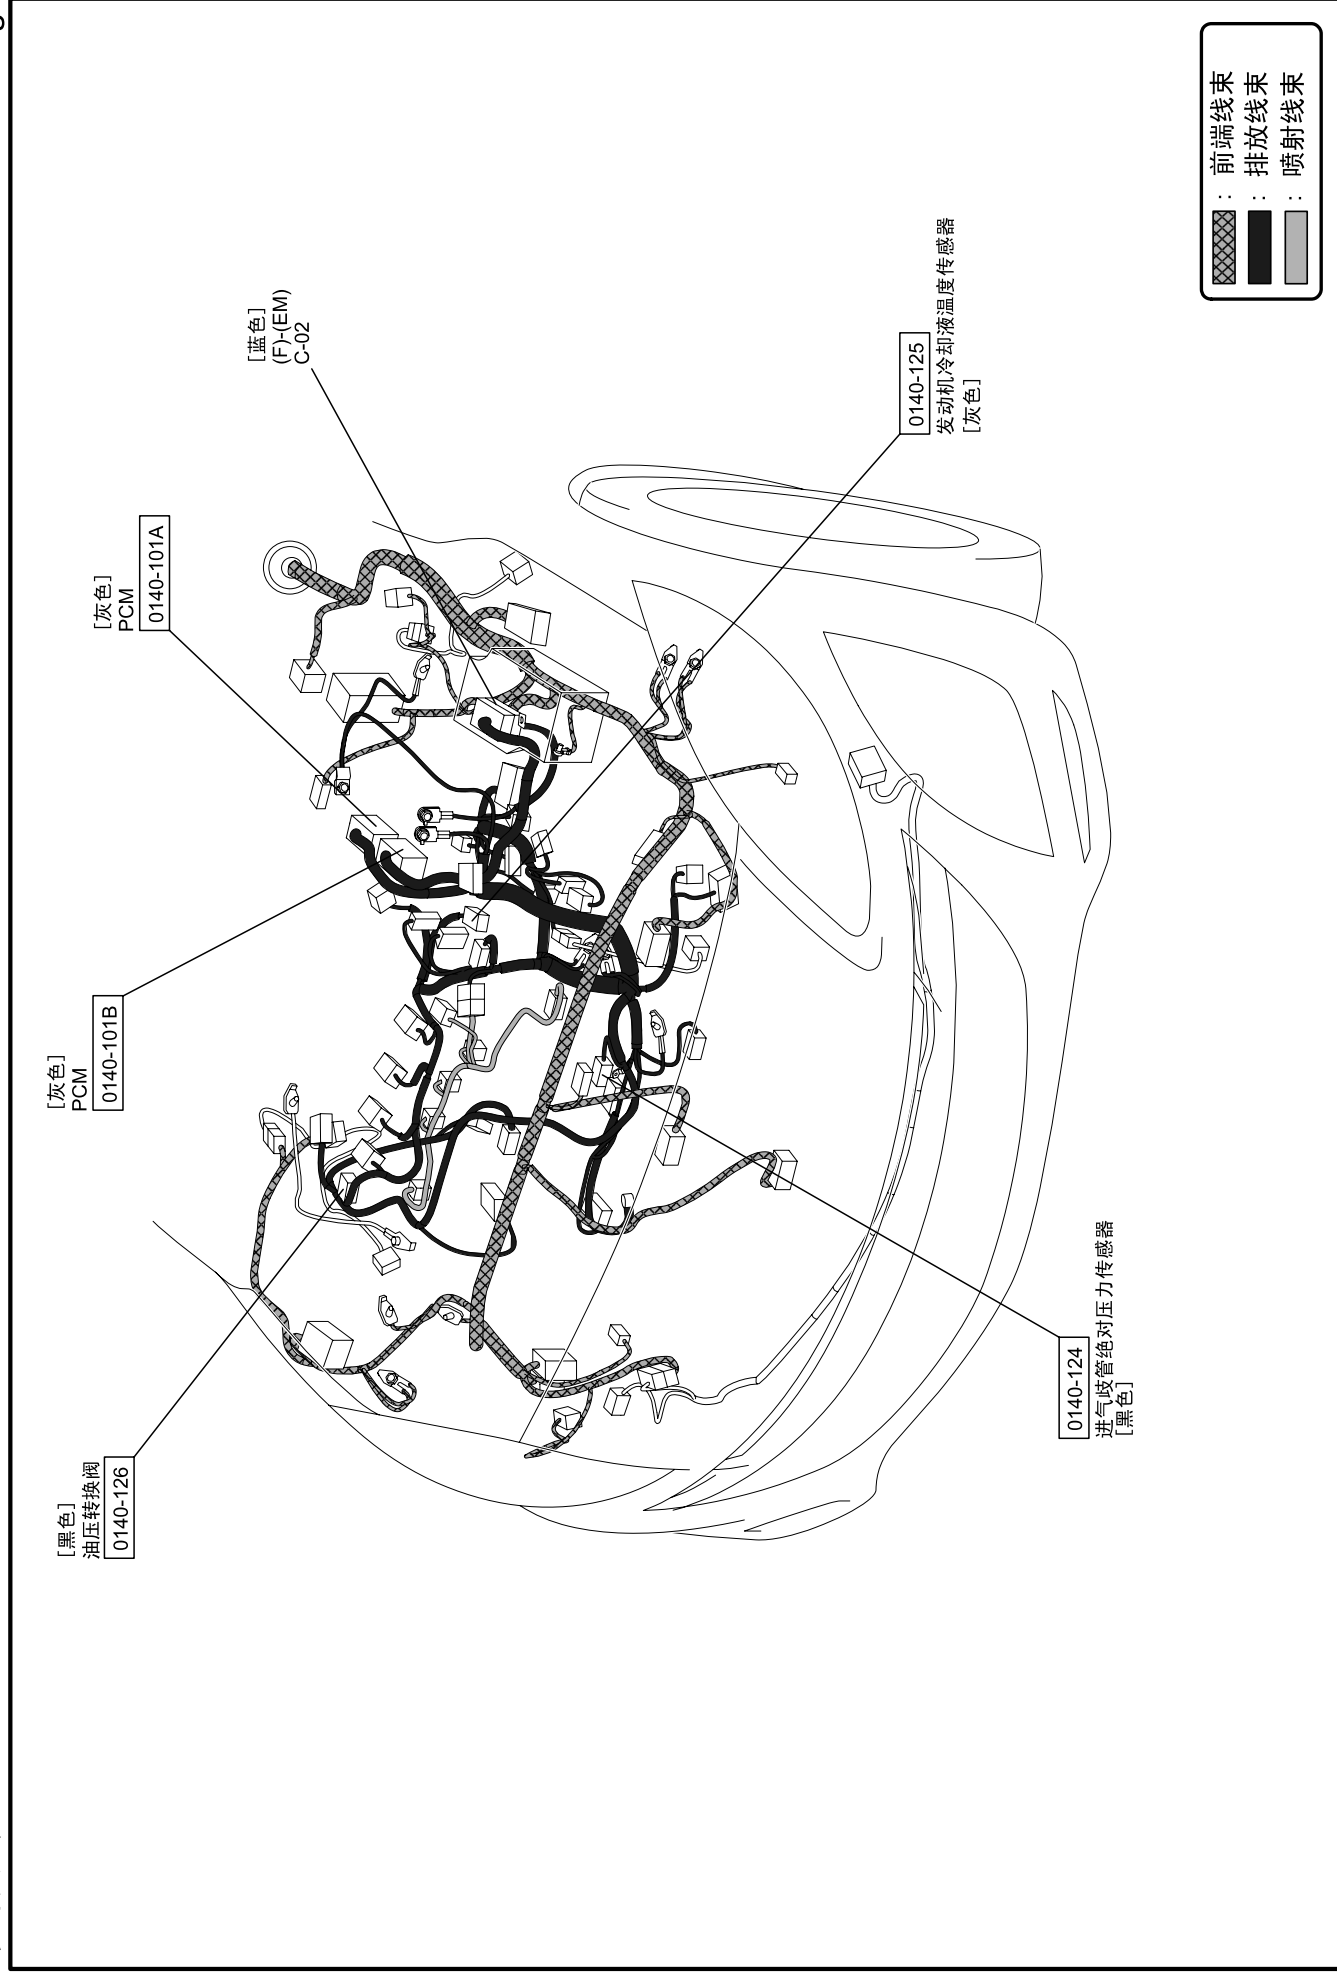


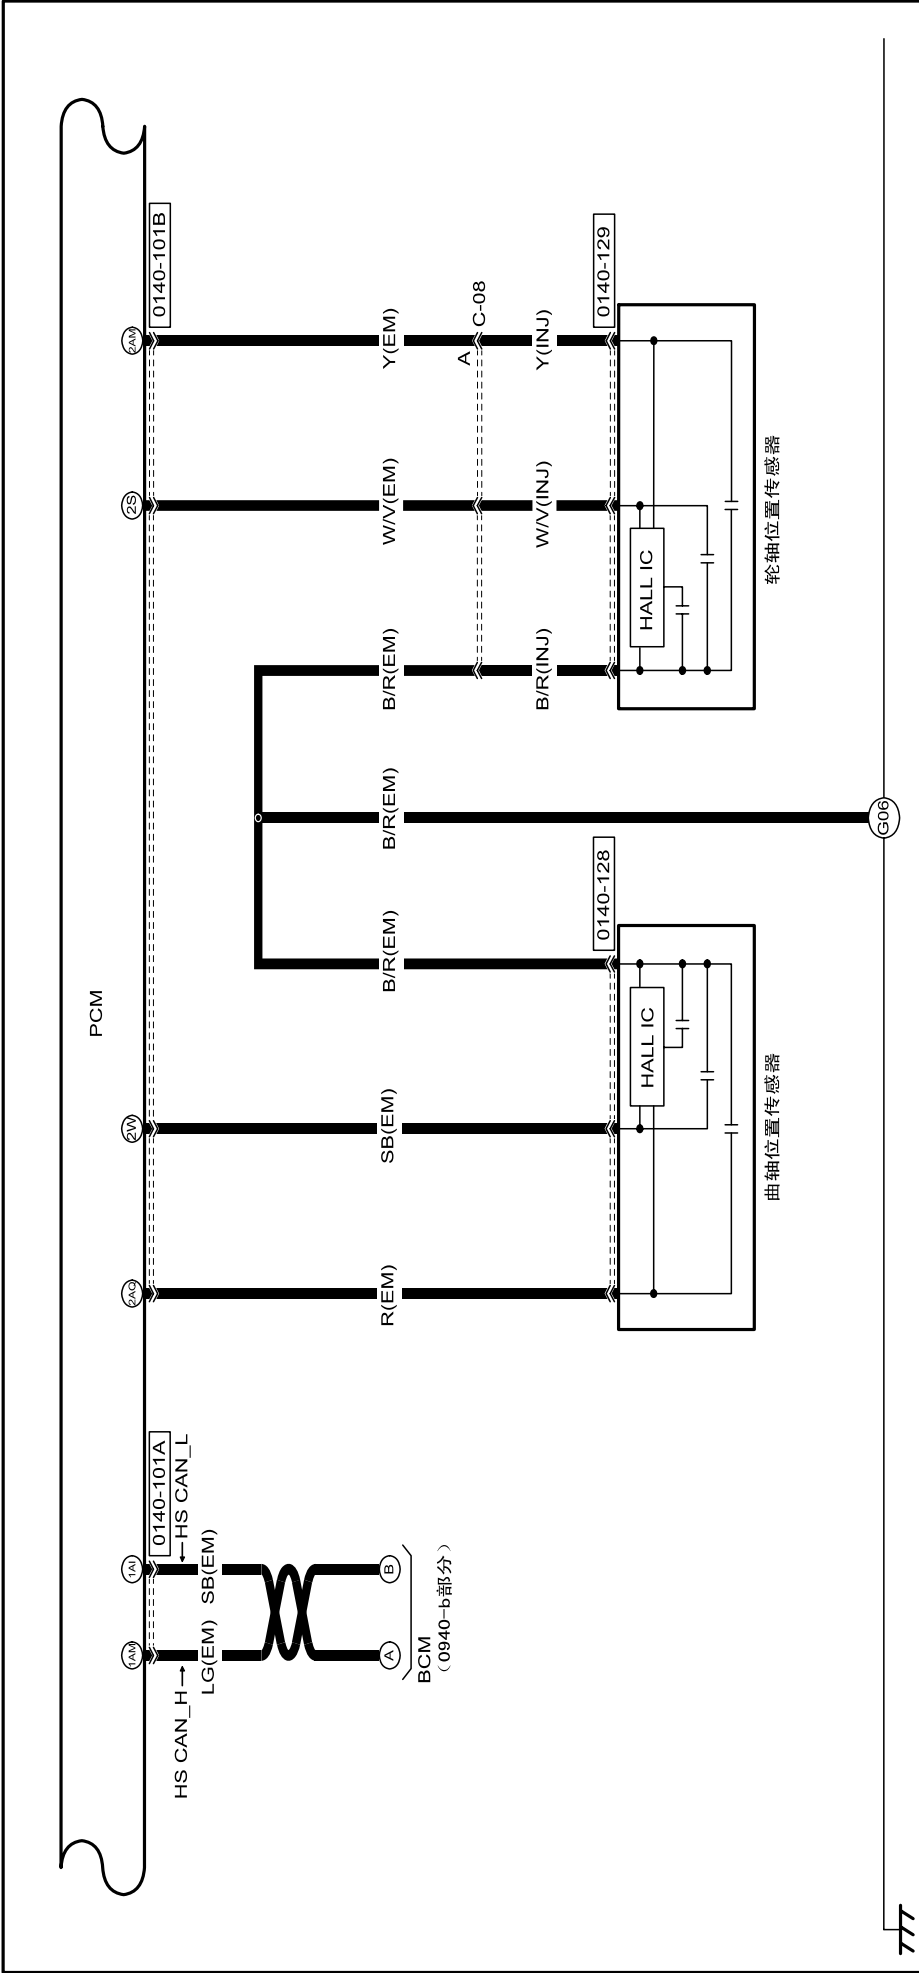


0140-101A
PCM

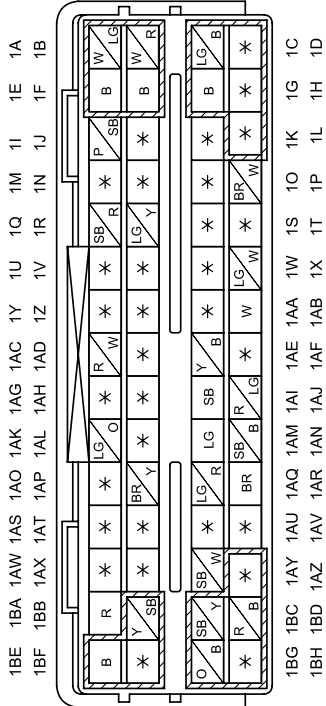


0140-101B
PCM

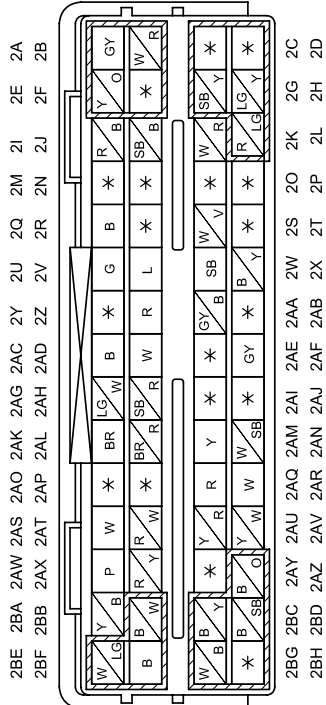



0140-128
曲轴位置传感器

 


0140-129
轮轴位置传感器

 


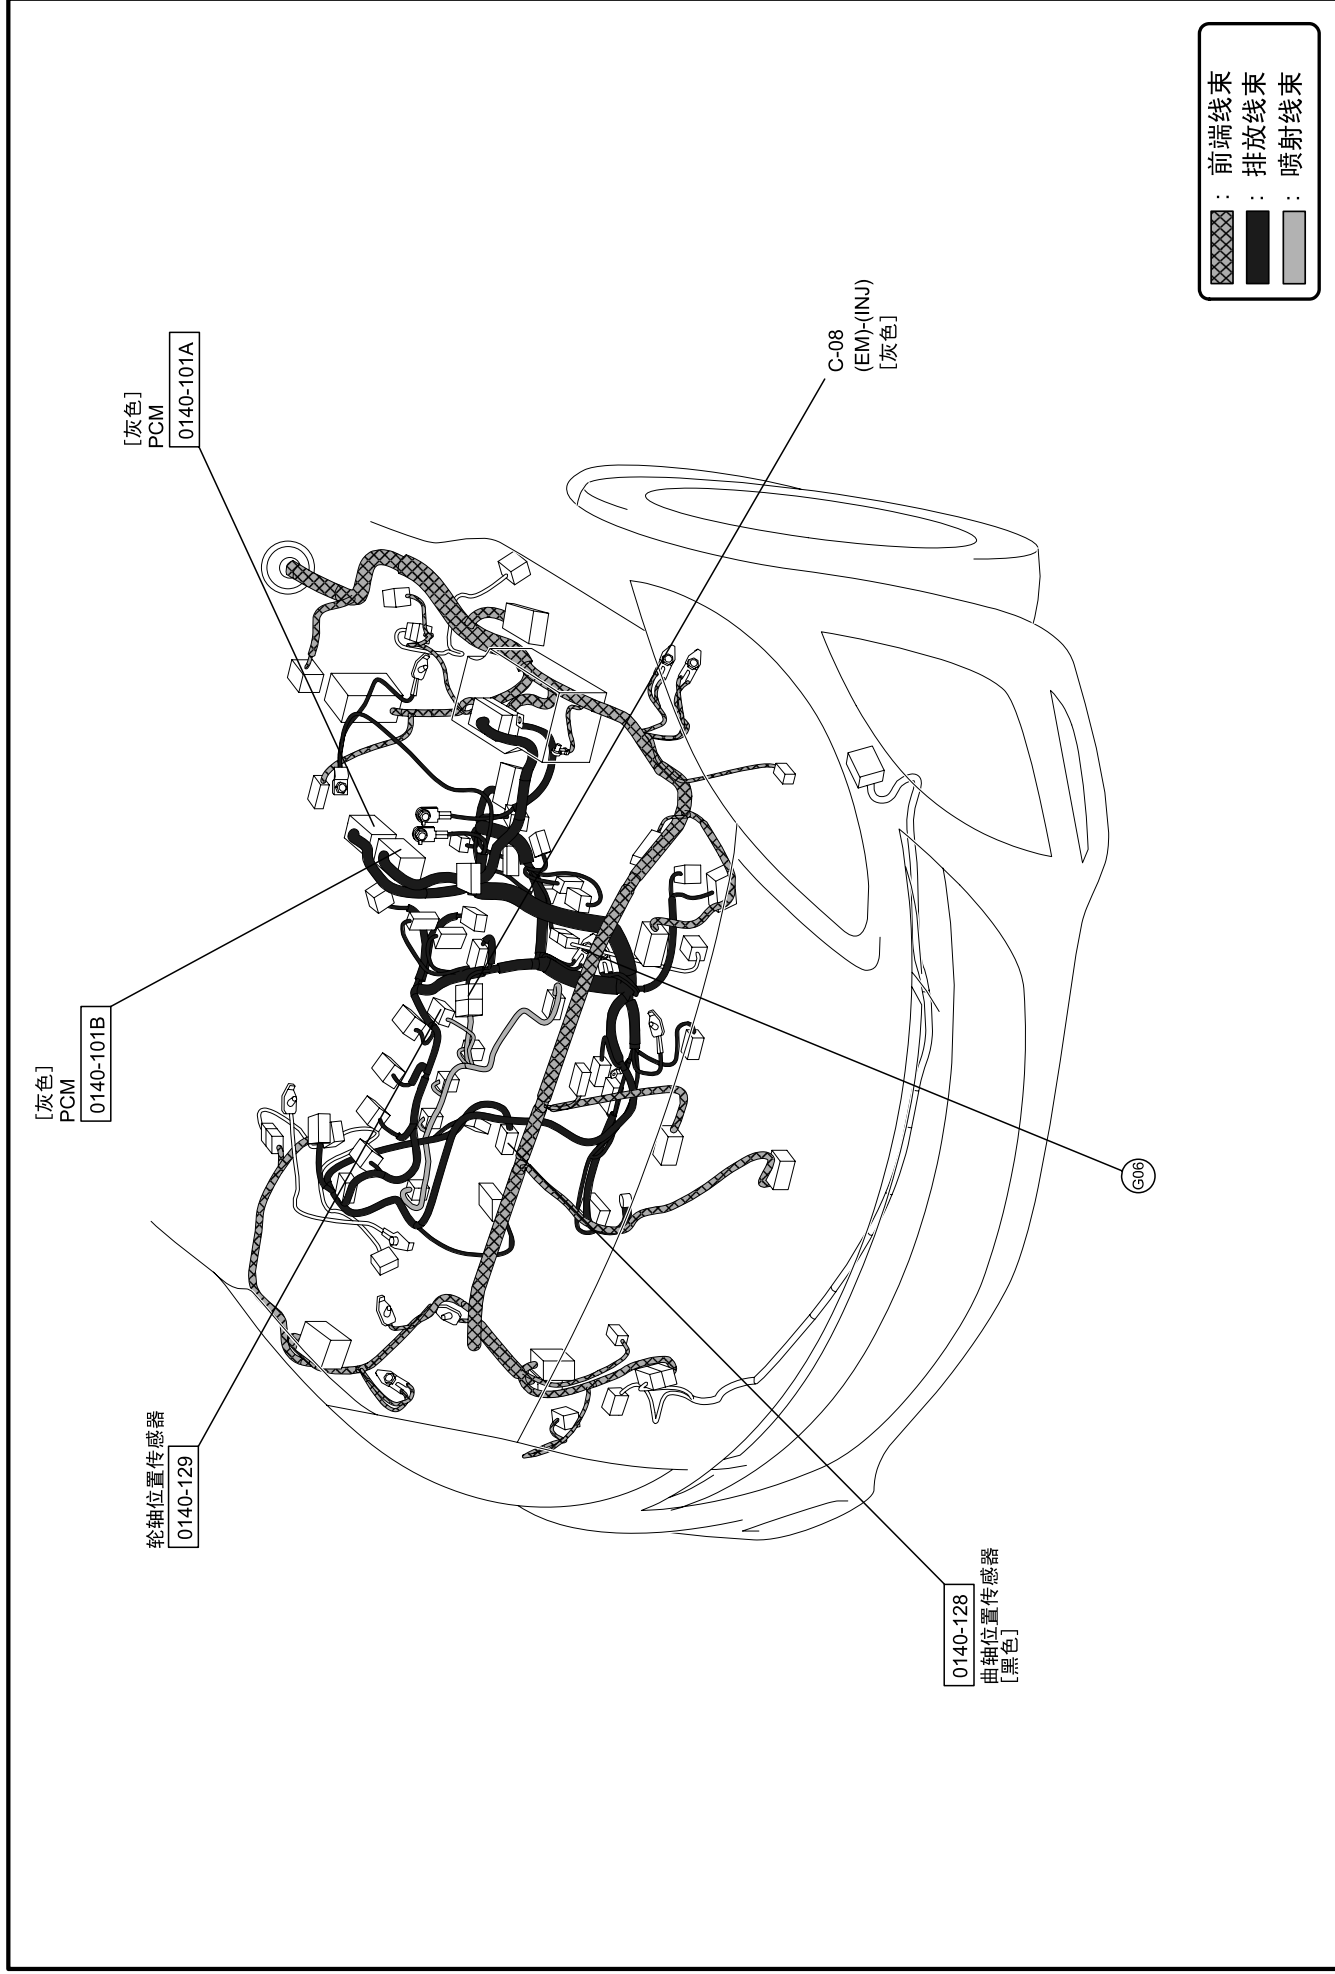


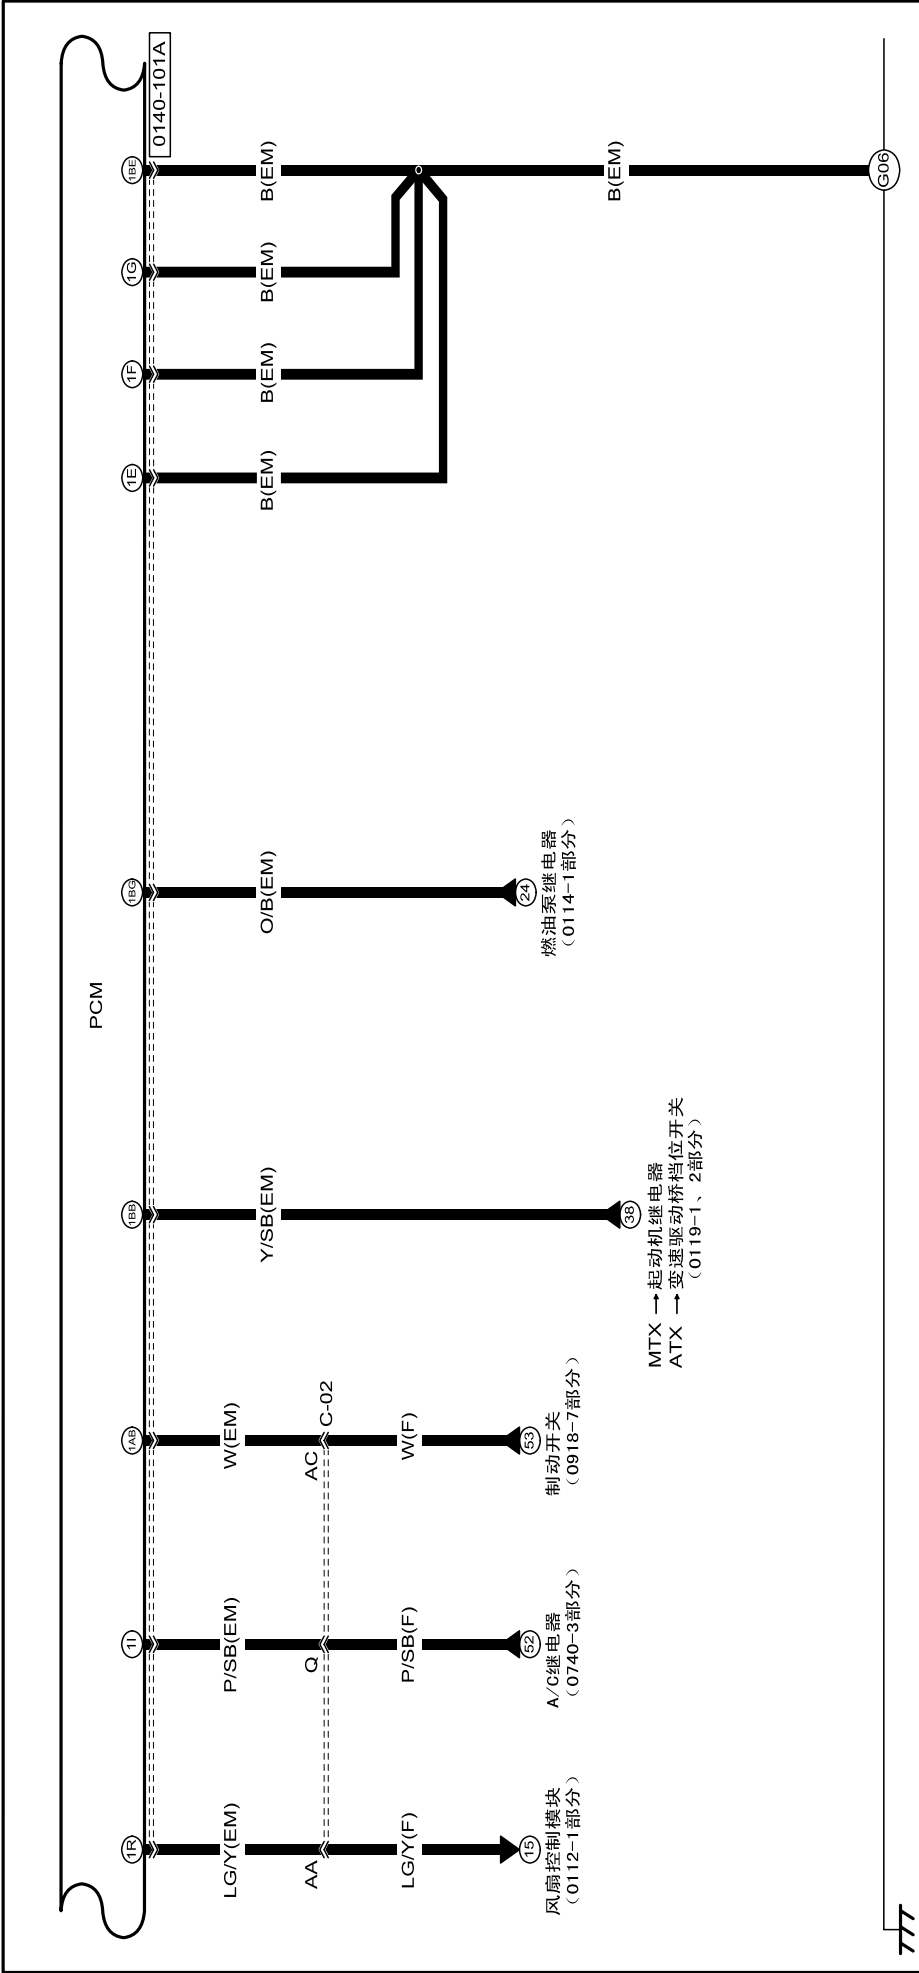



0140-101A
PCM

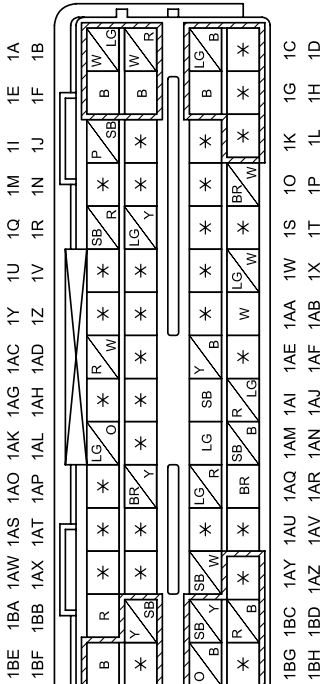

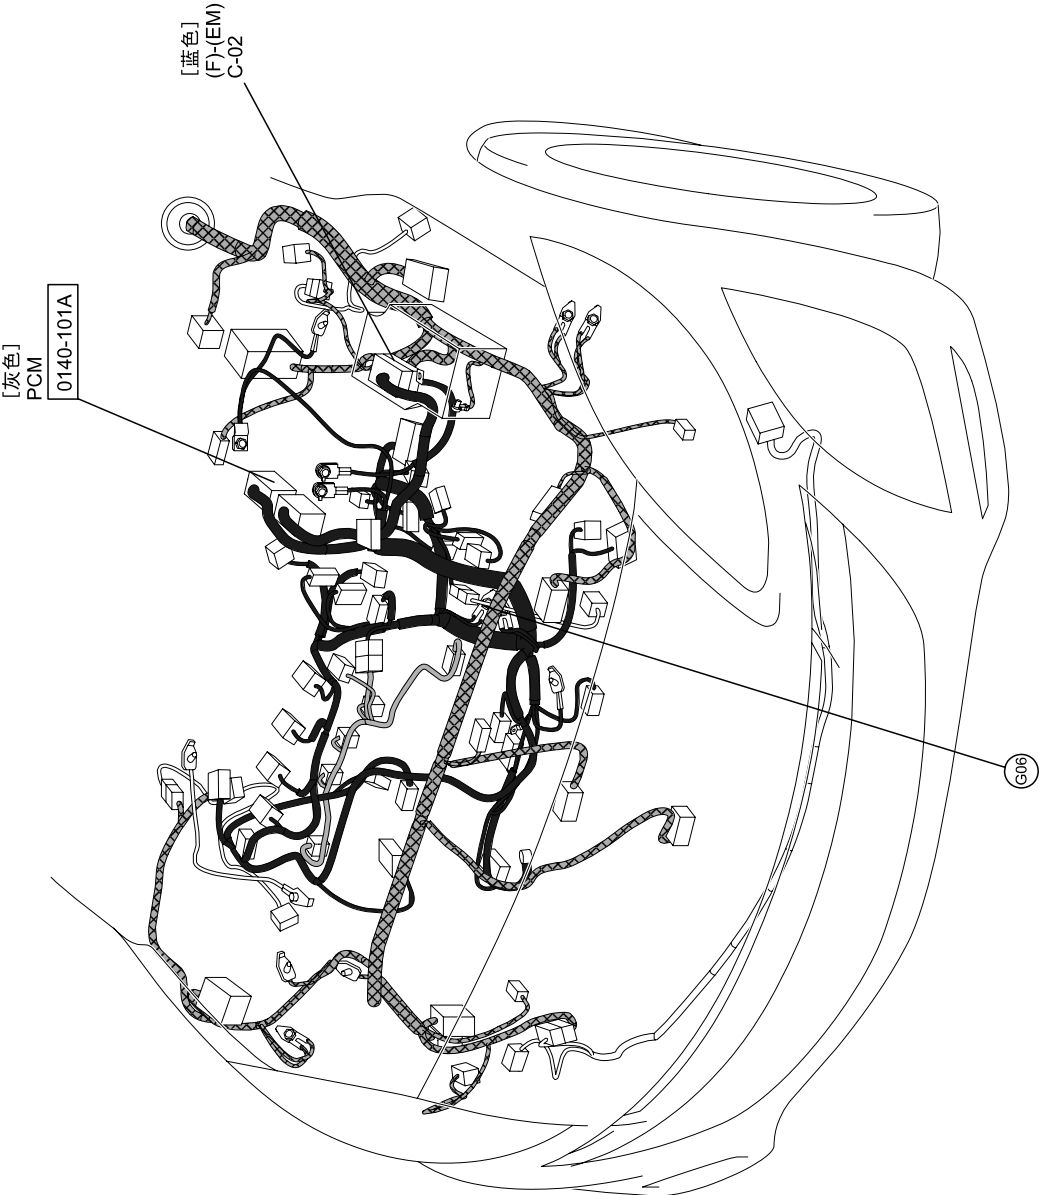

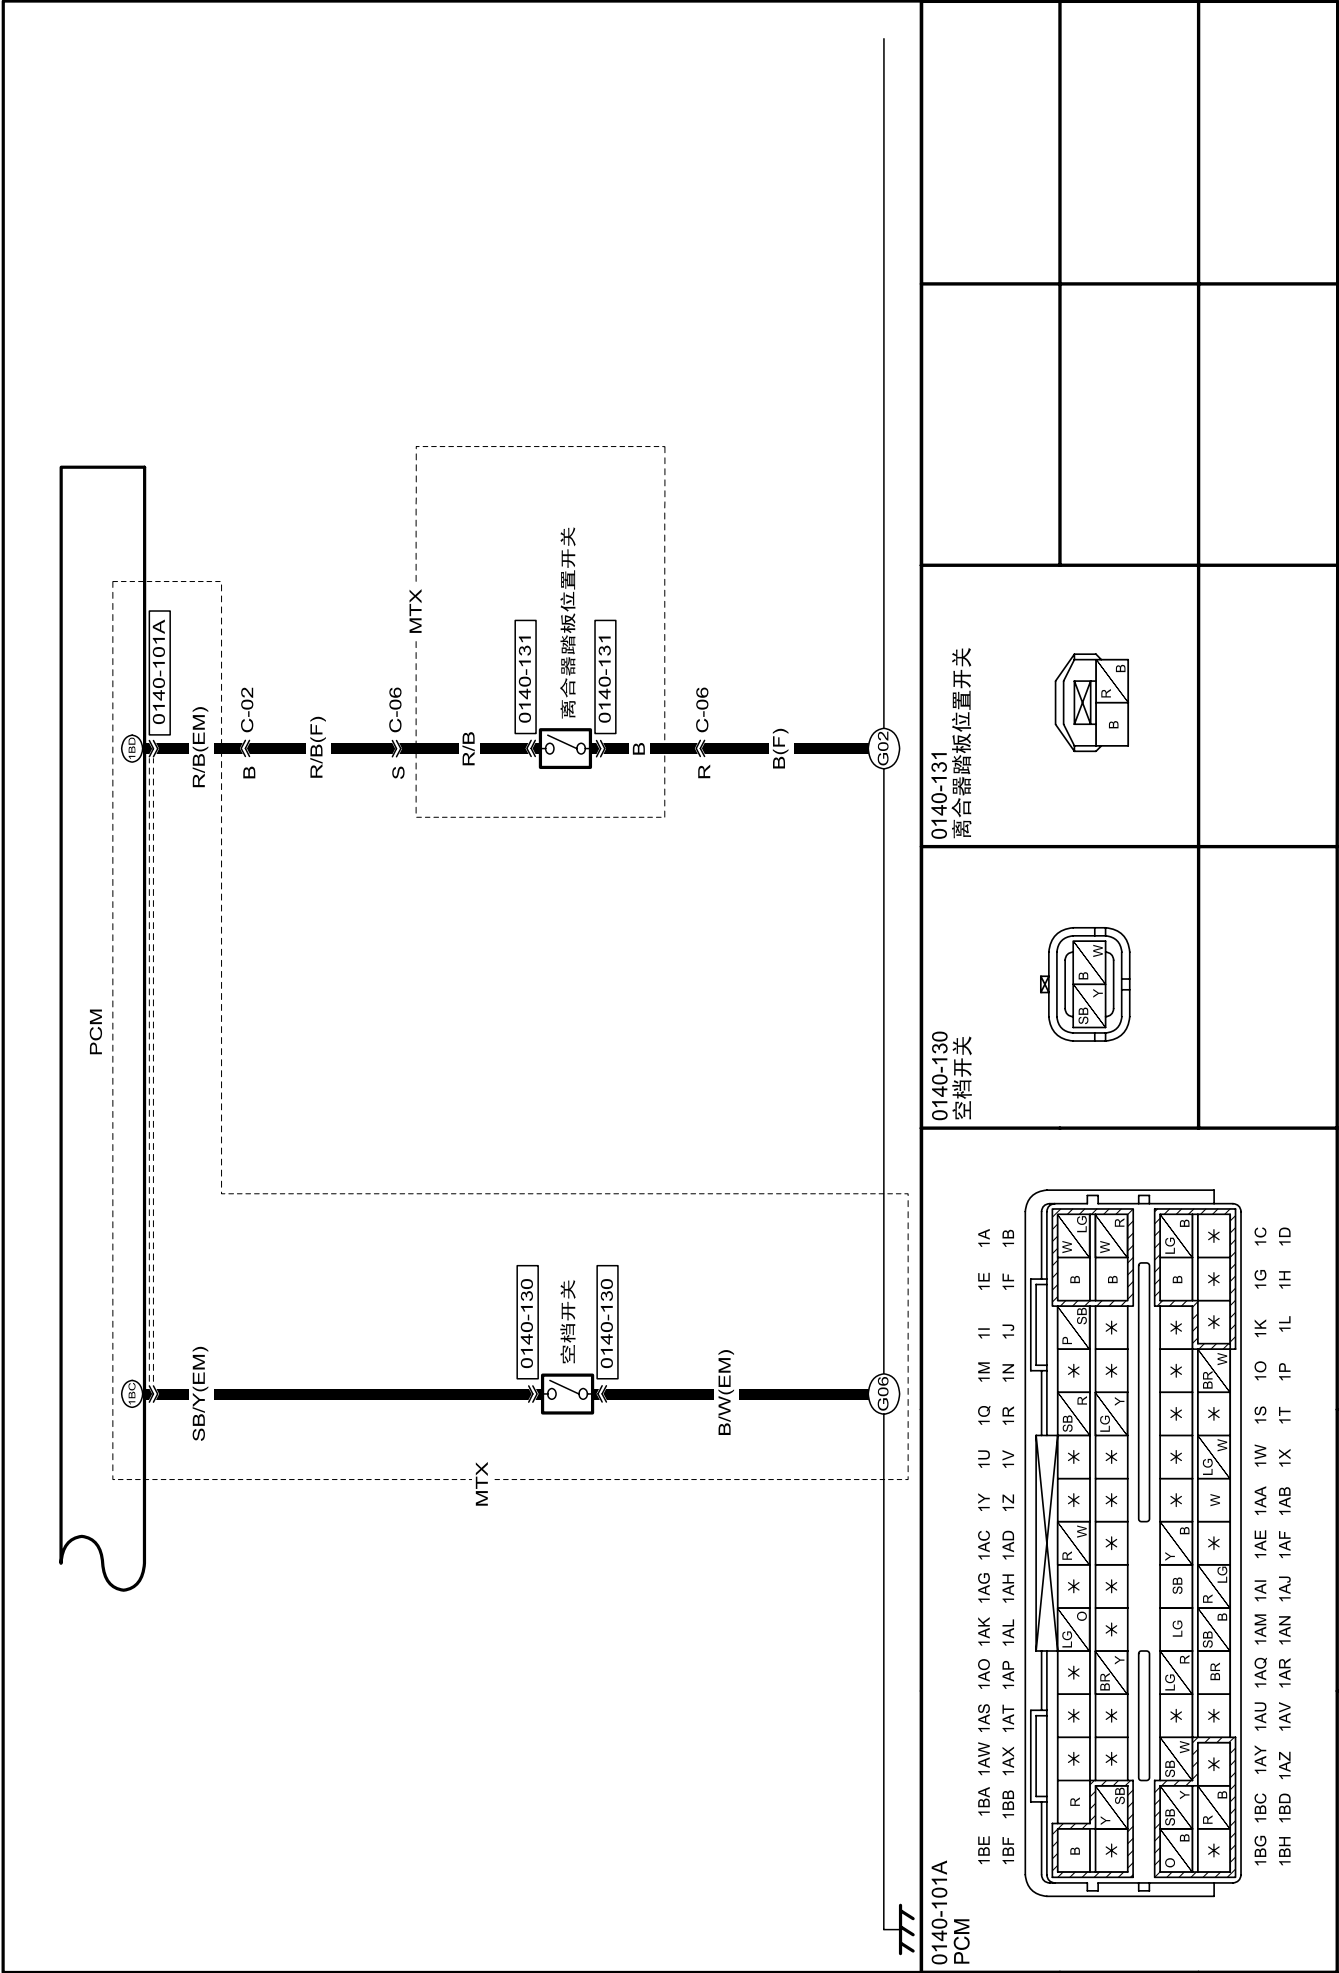


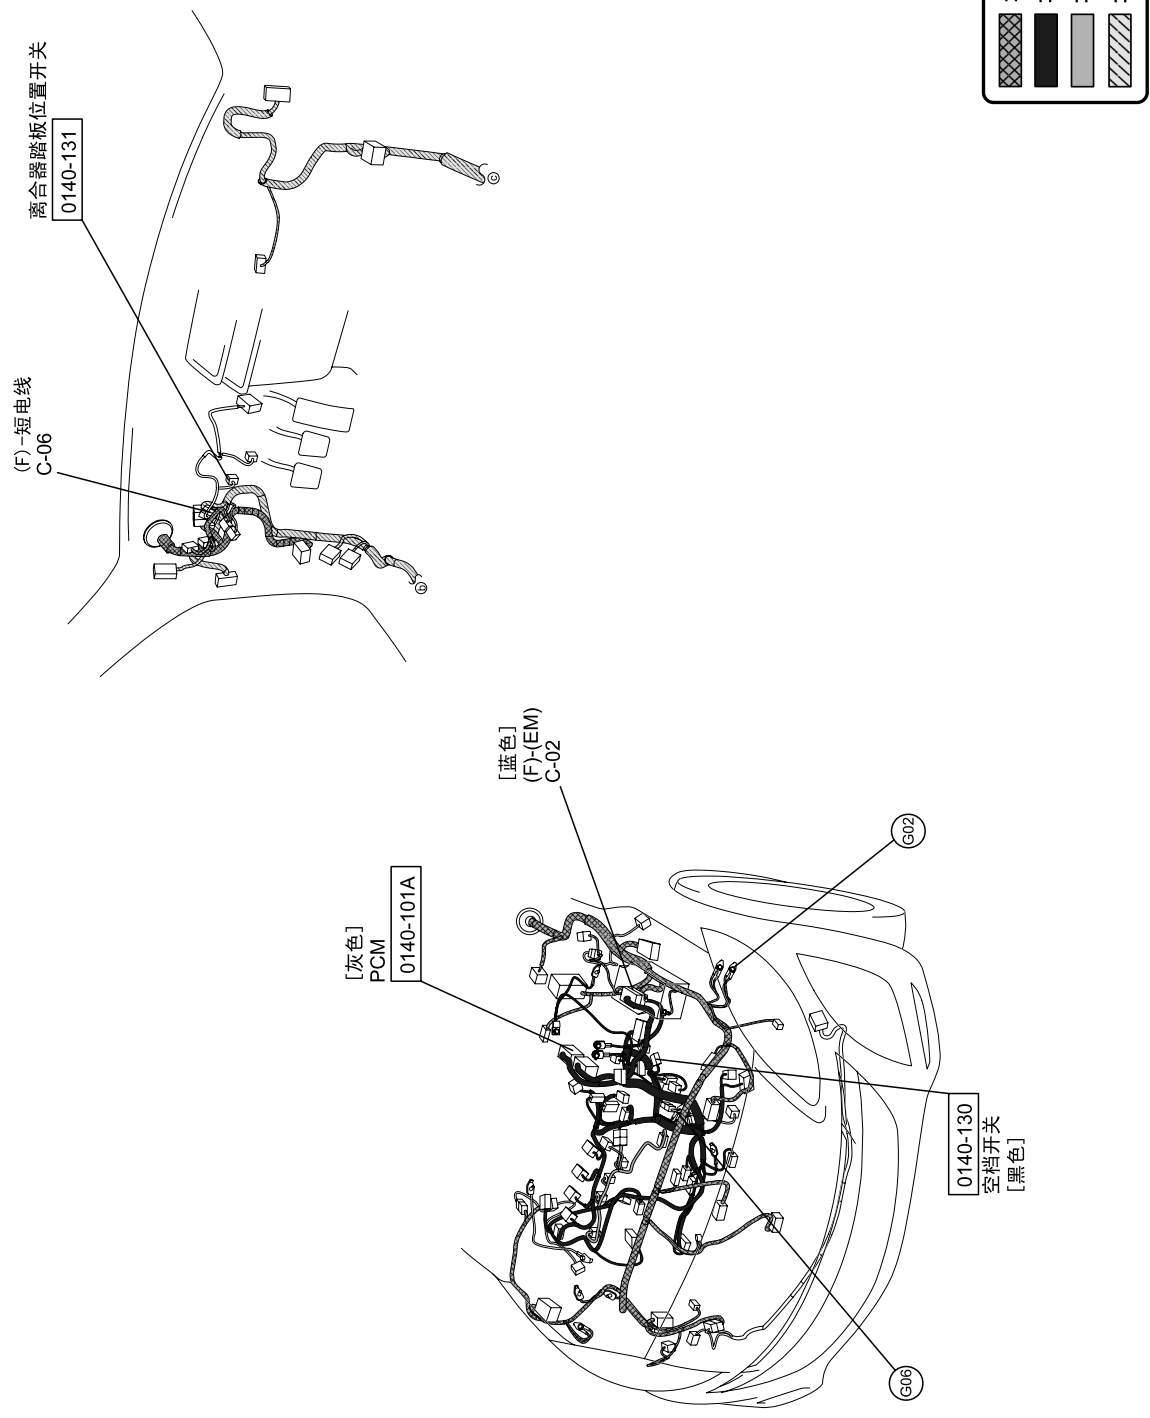


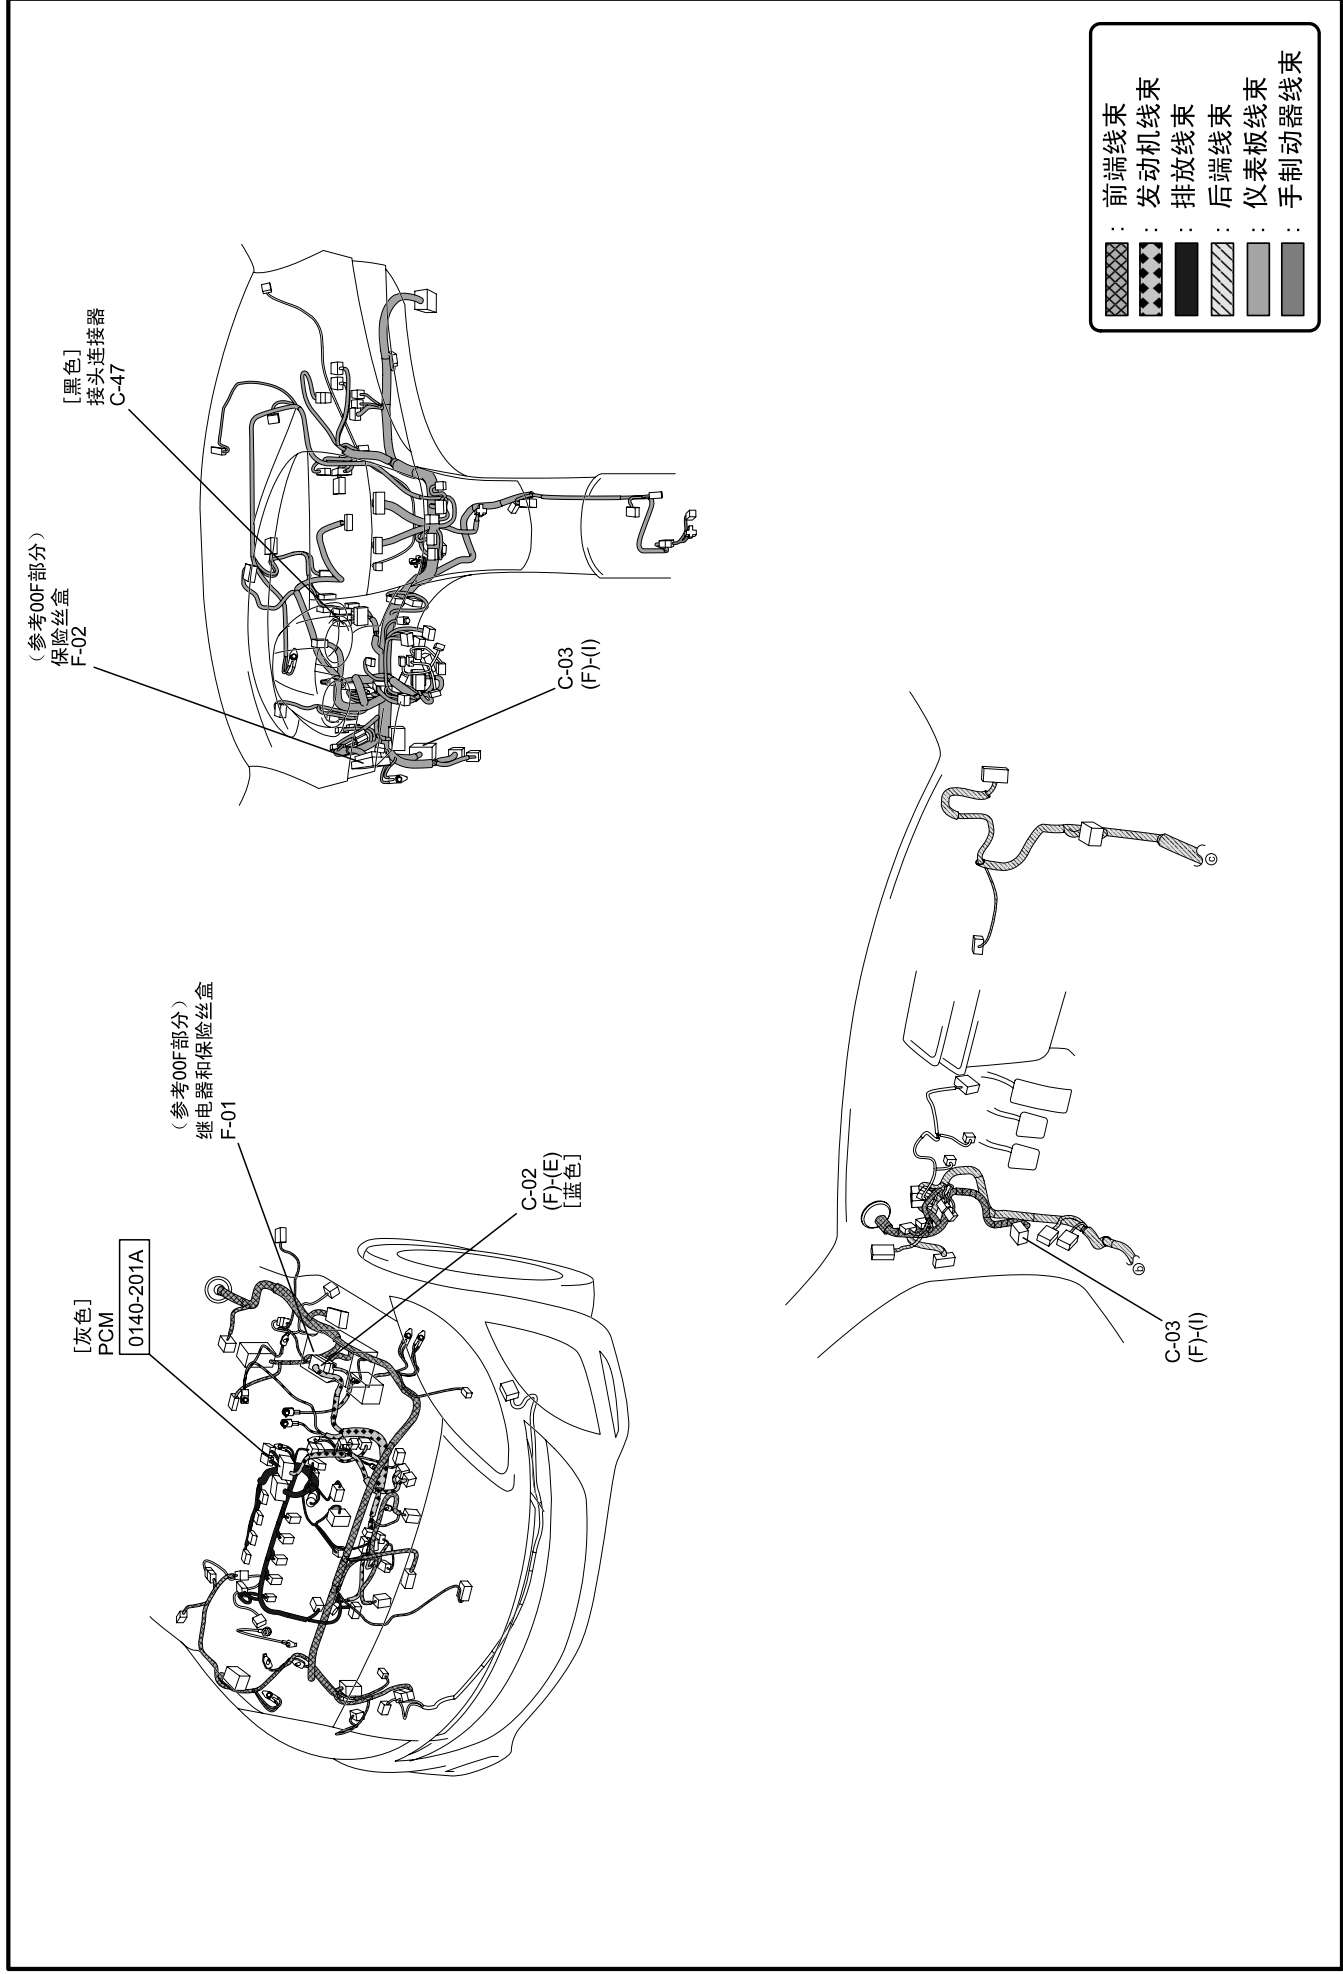


控制系统 (MZR 1.6) (包括自动变速器控制信息)

0140-2b

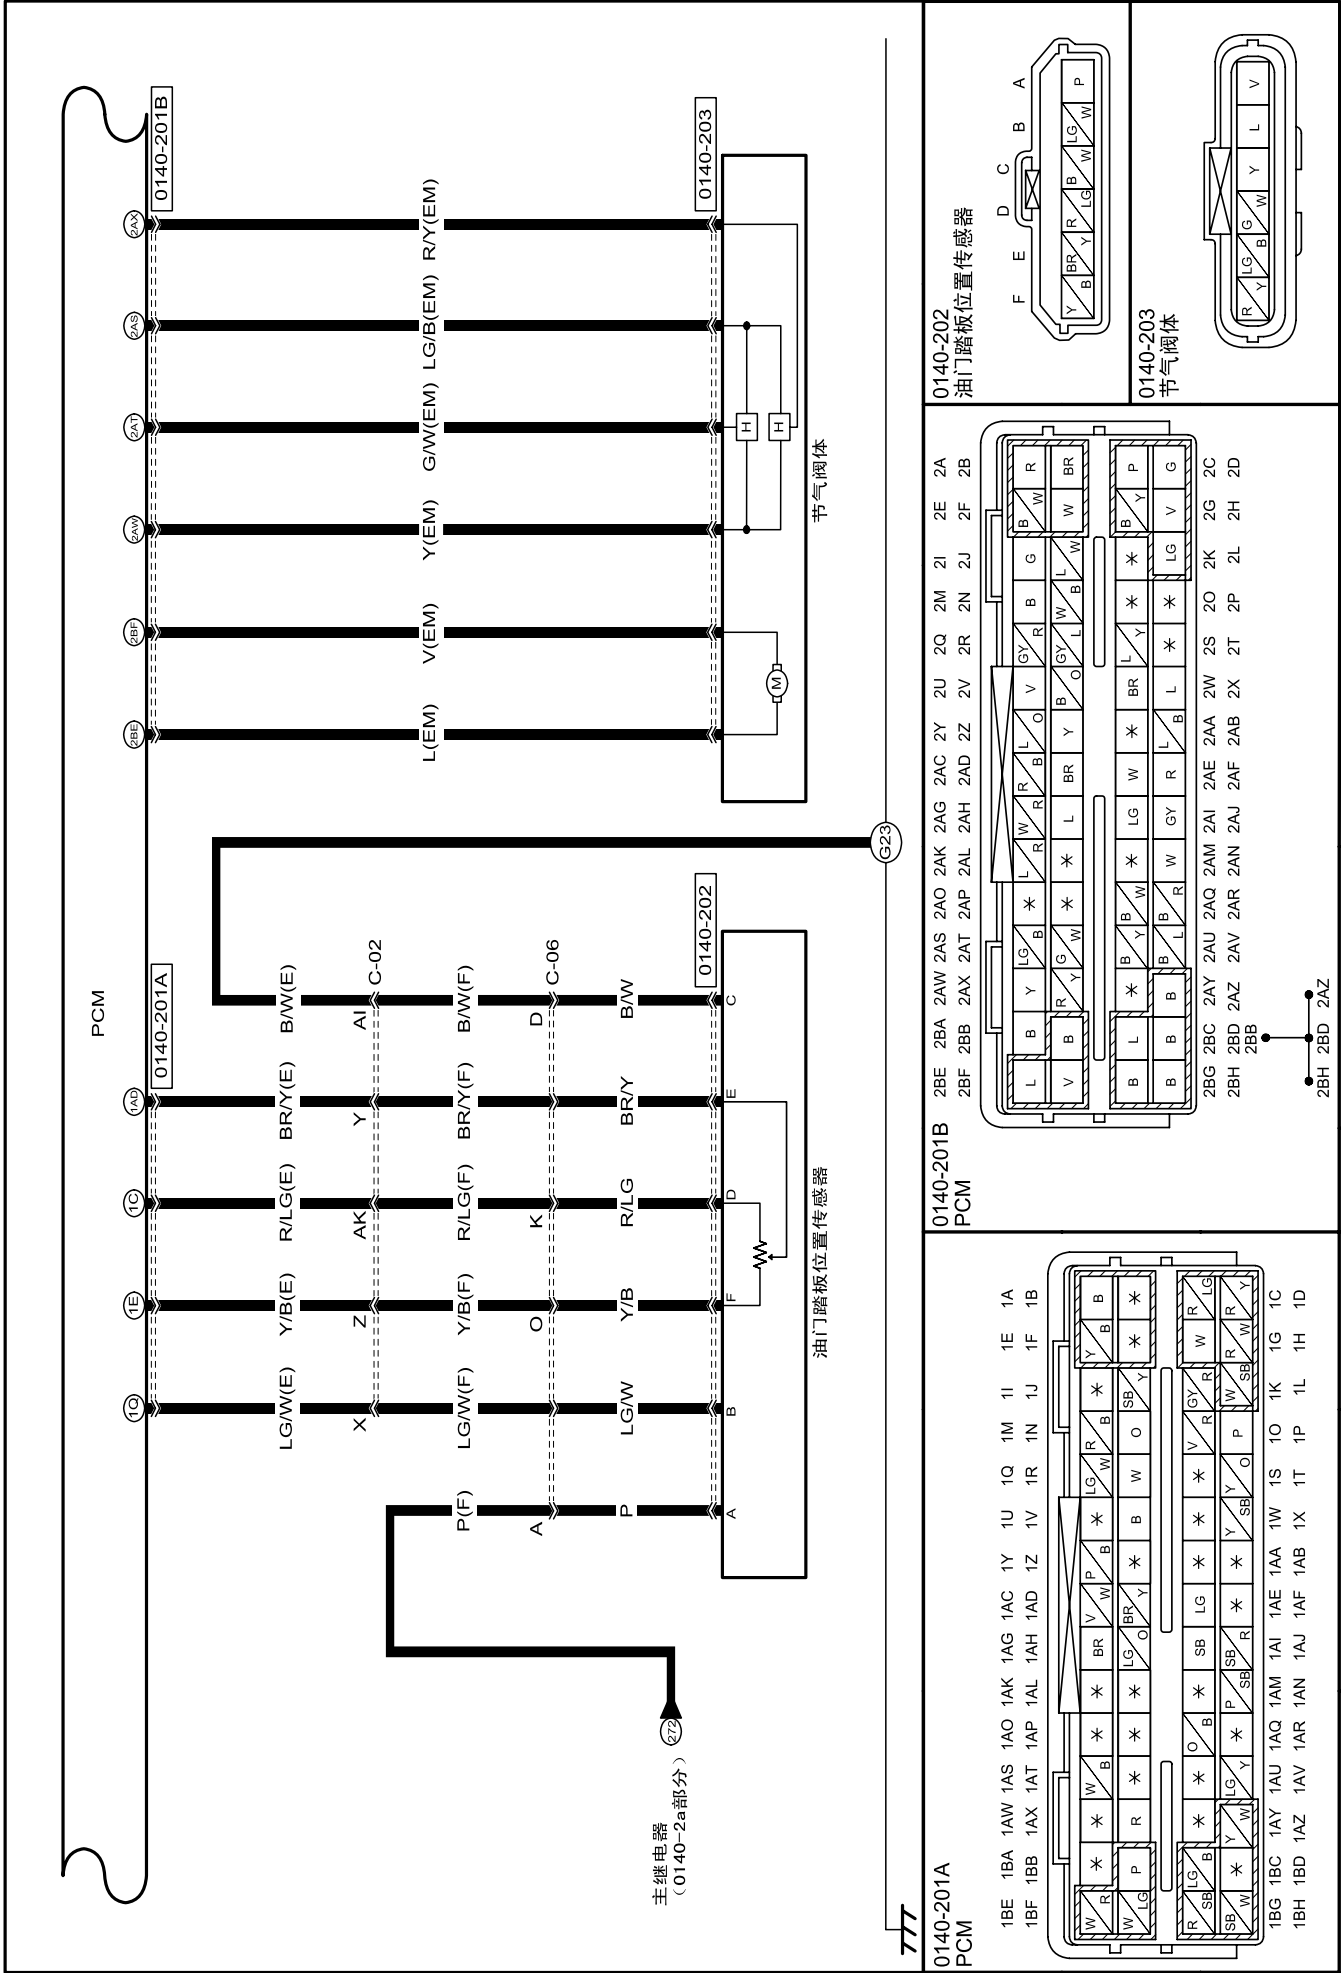


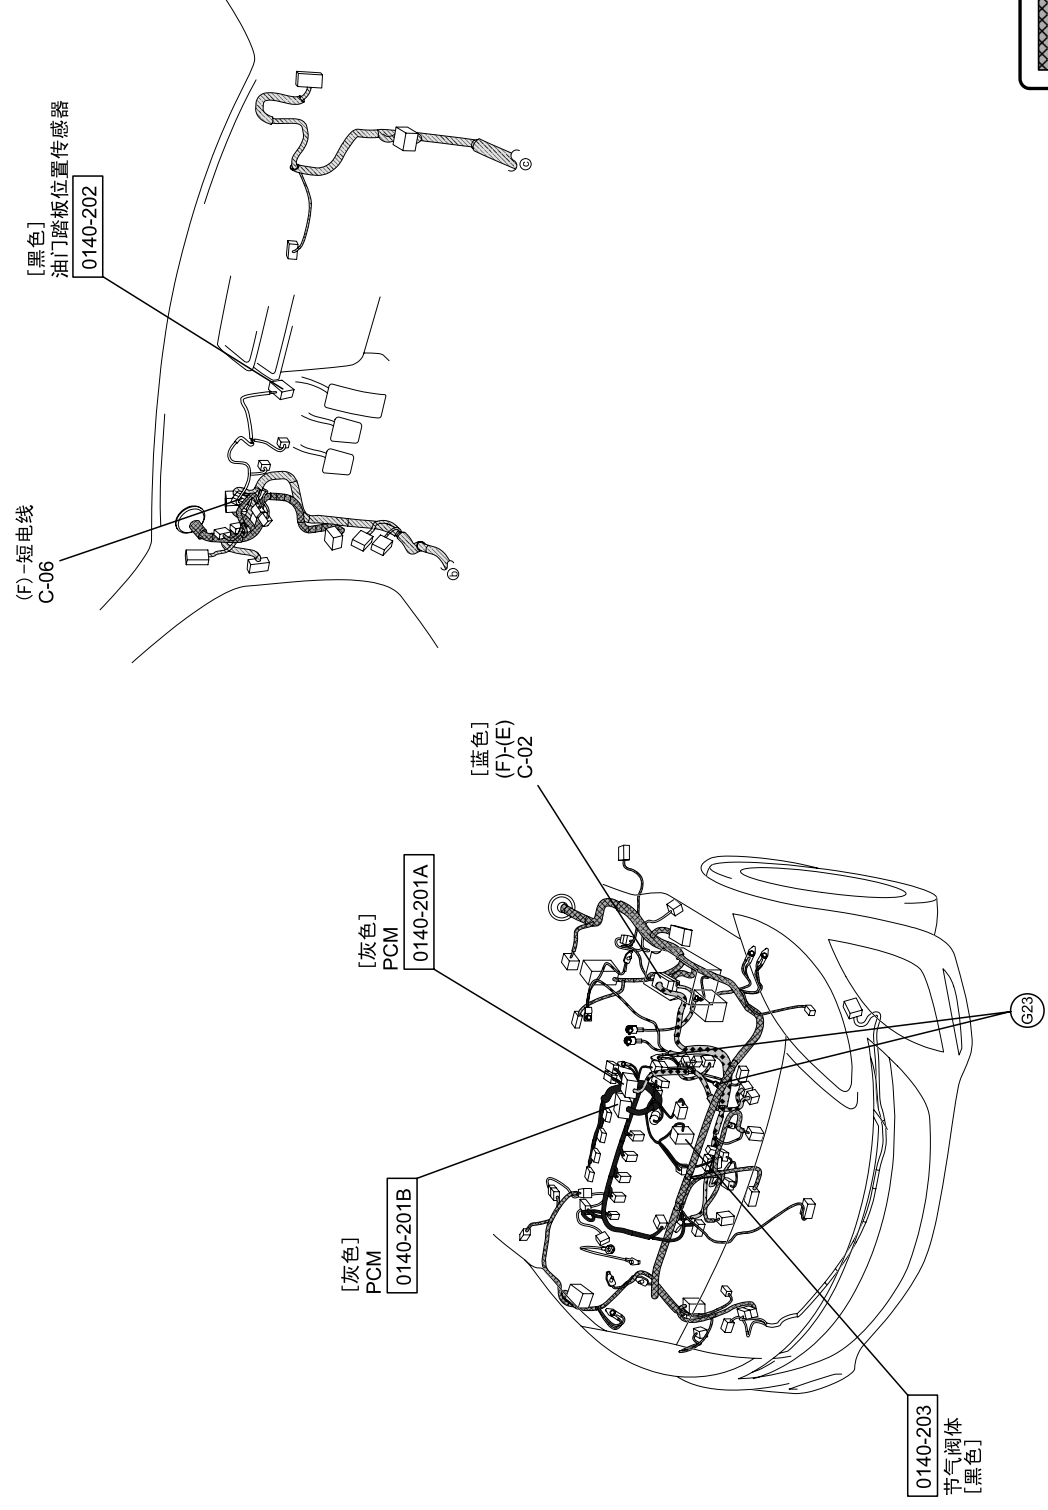


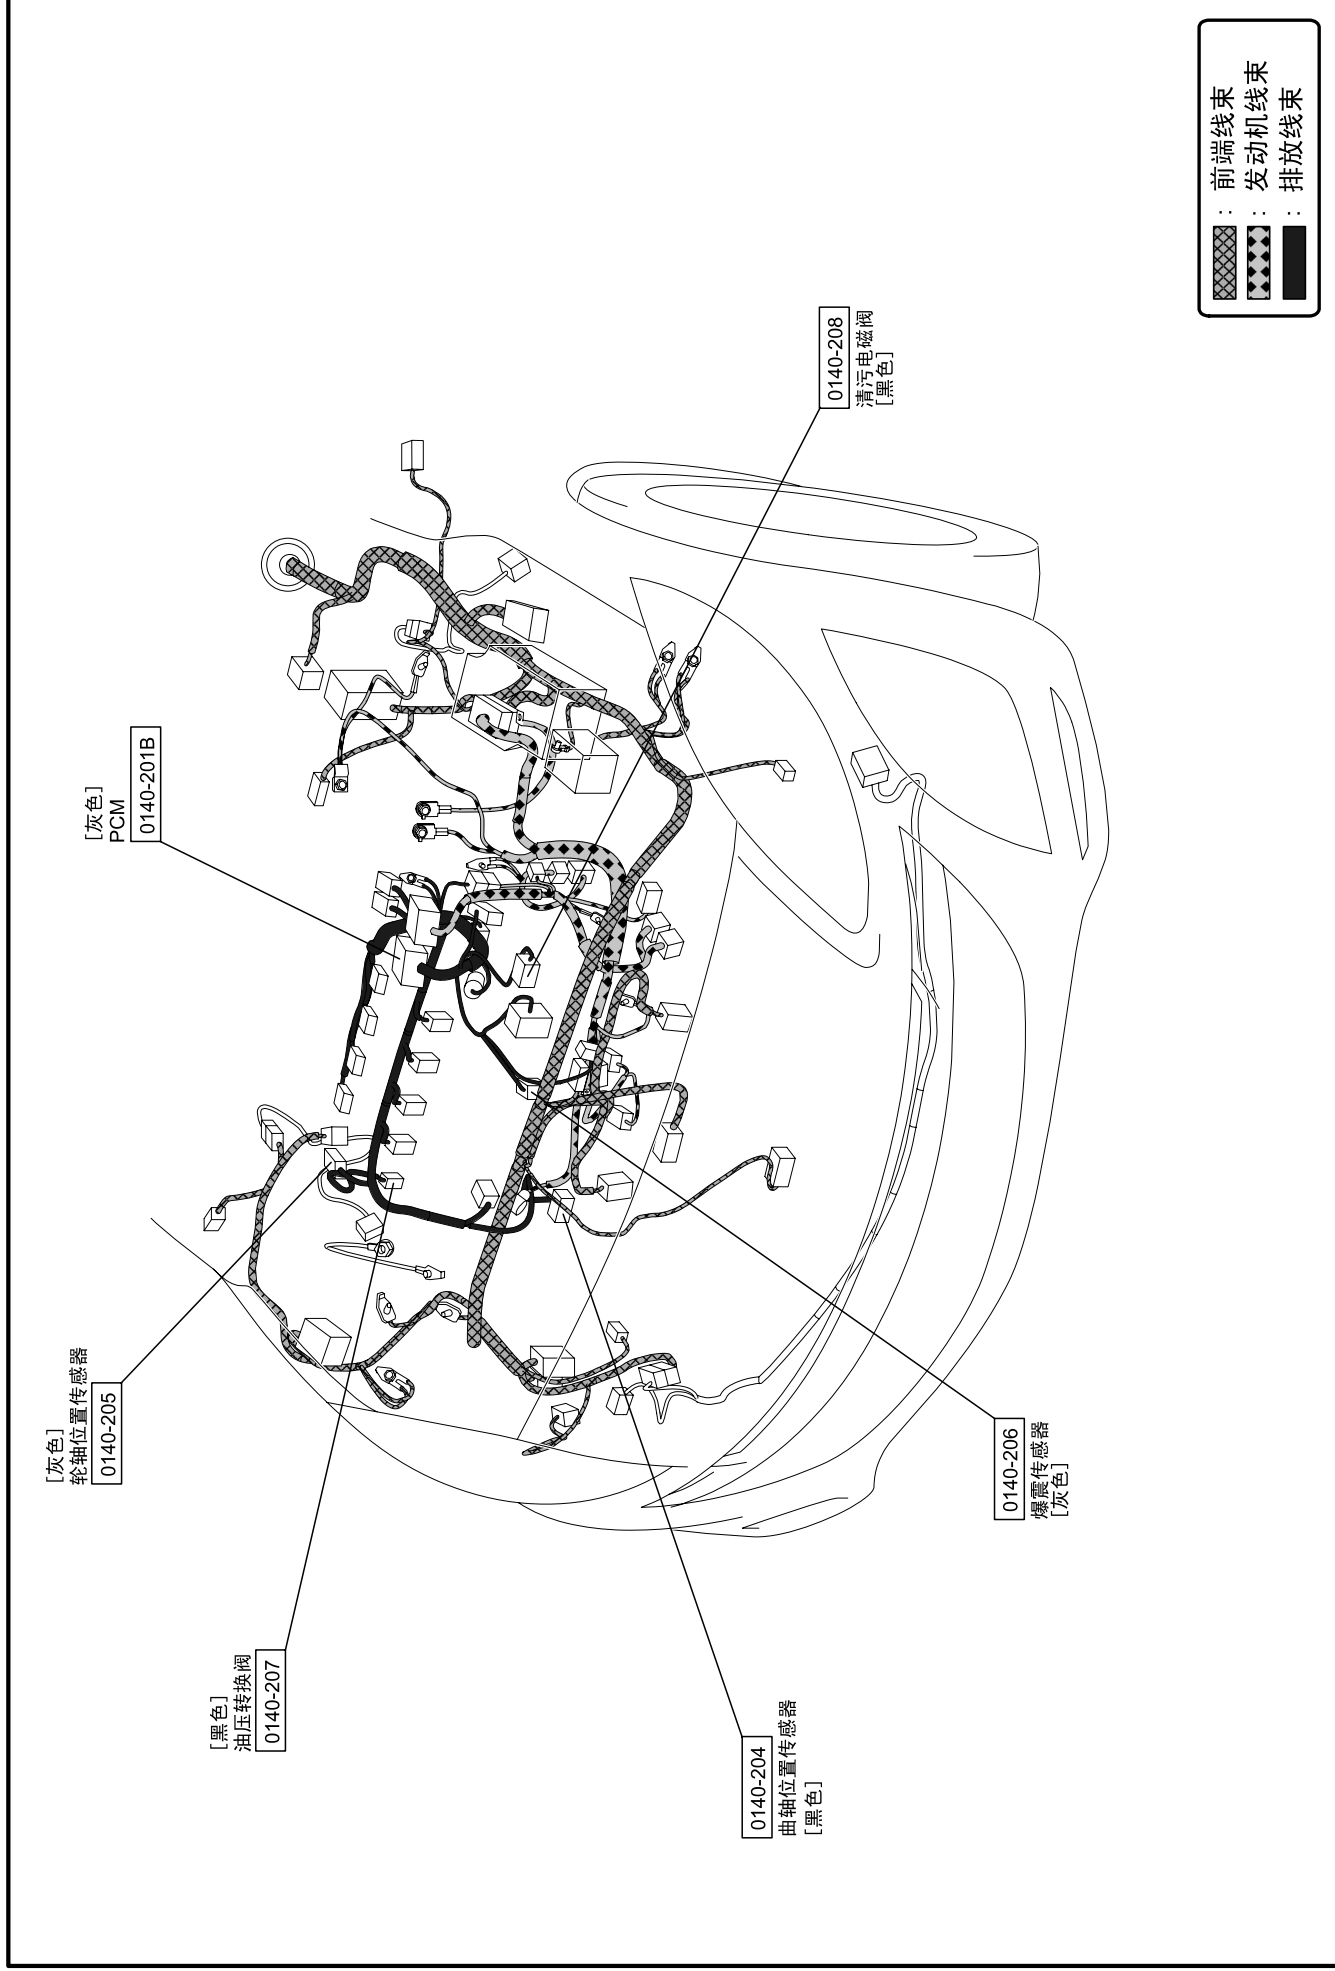



控制系统 (MZR 1.6) (包括自动变速器控制信息)

0140-2d

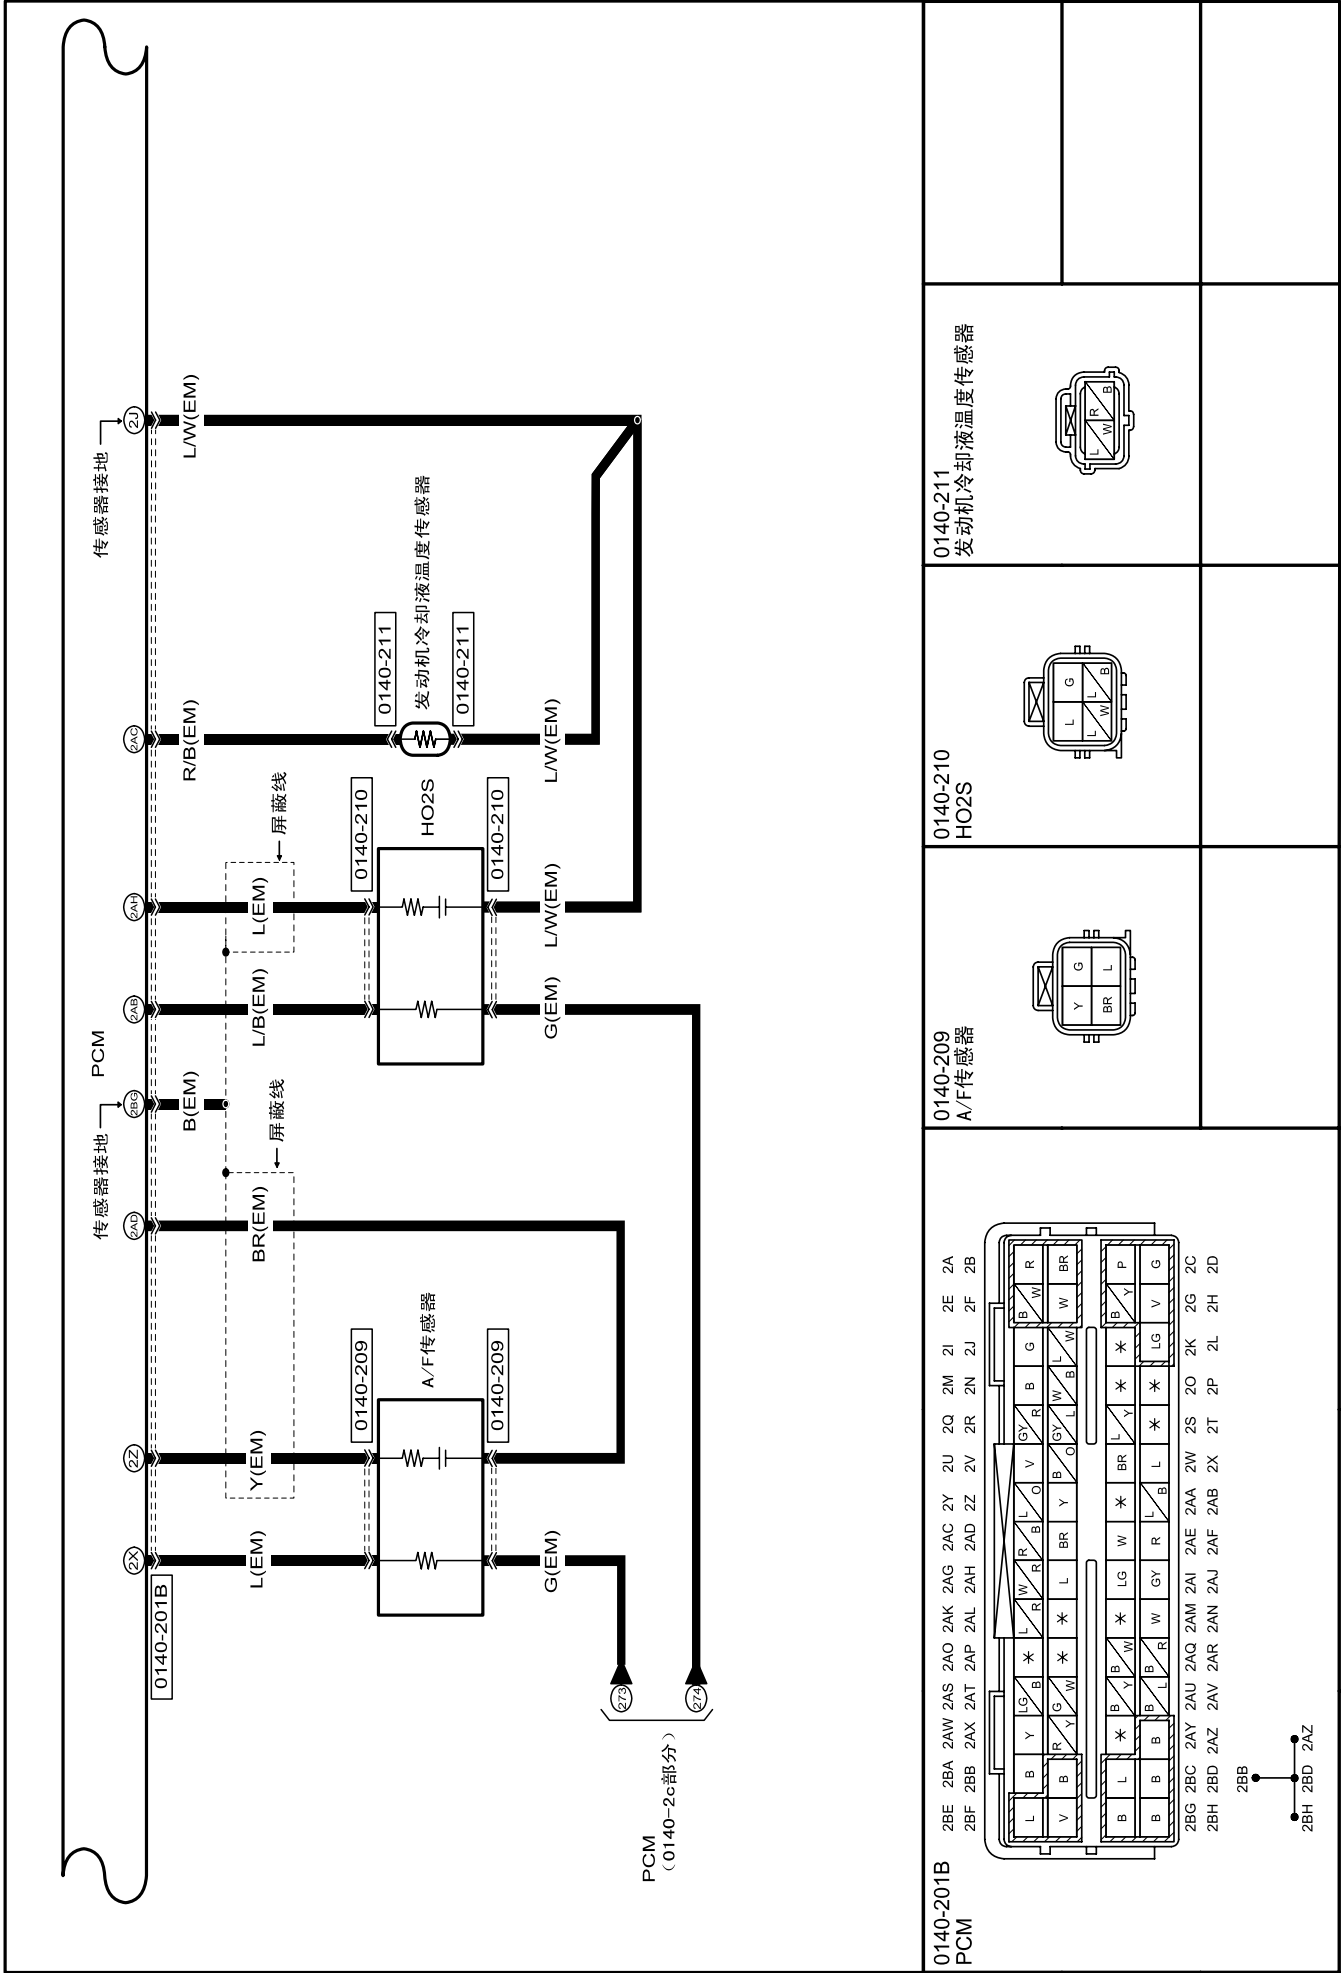

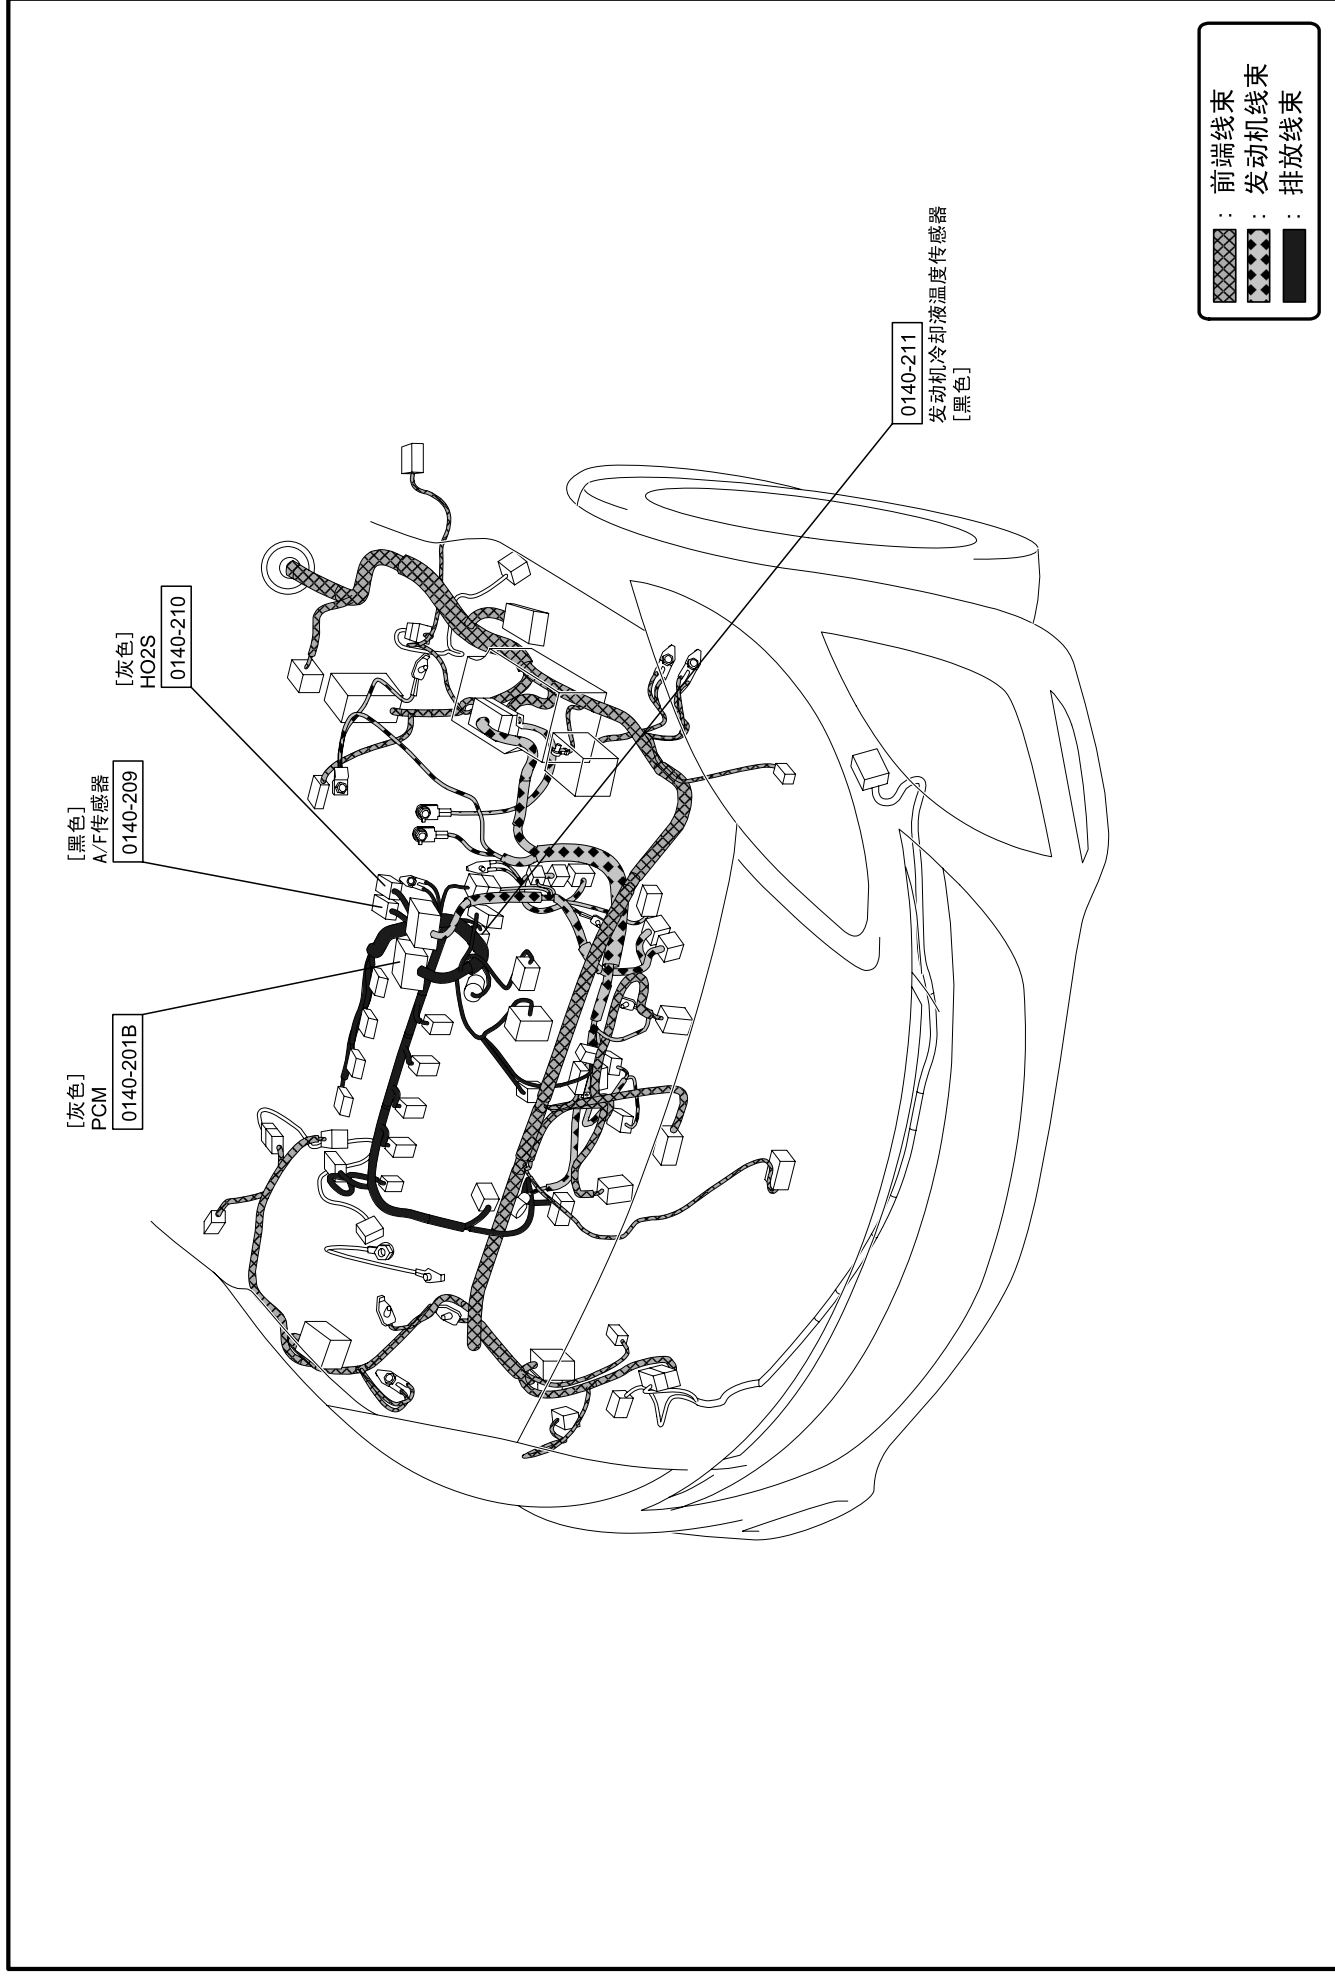


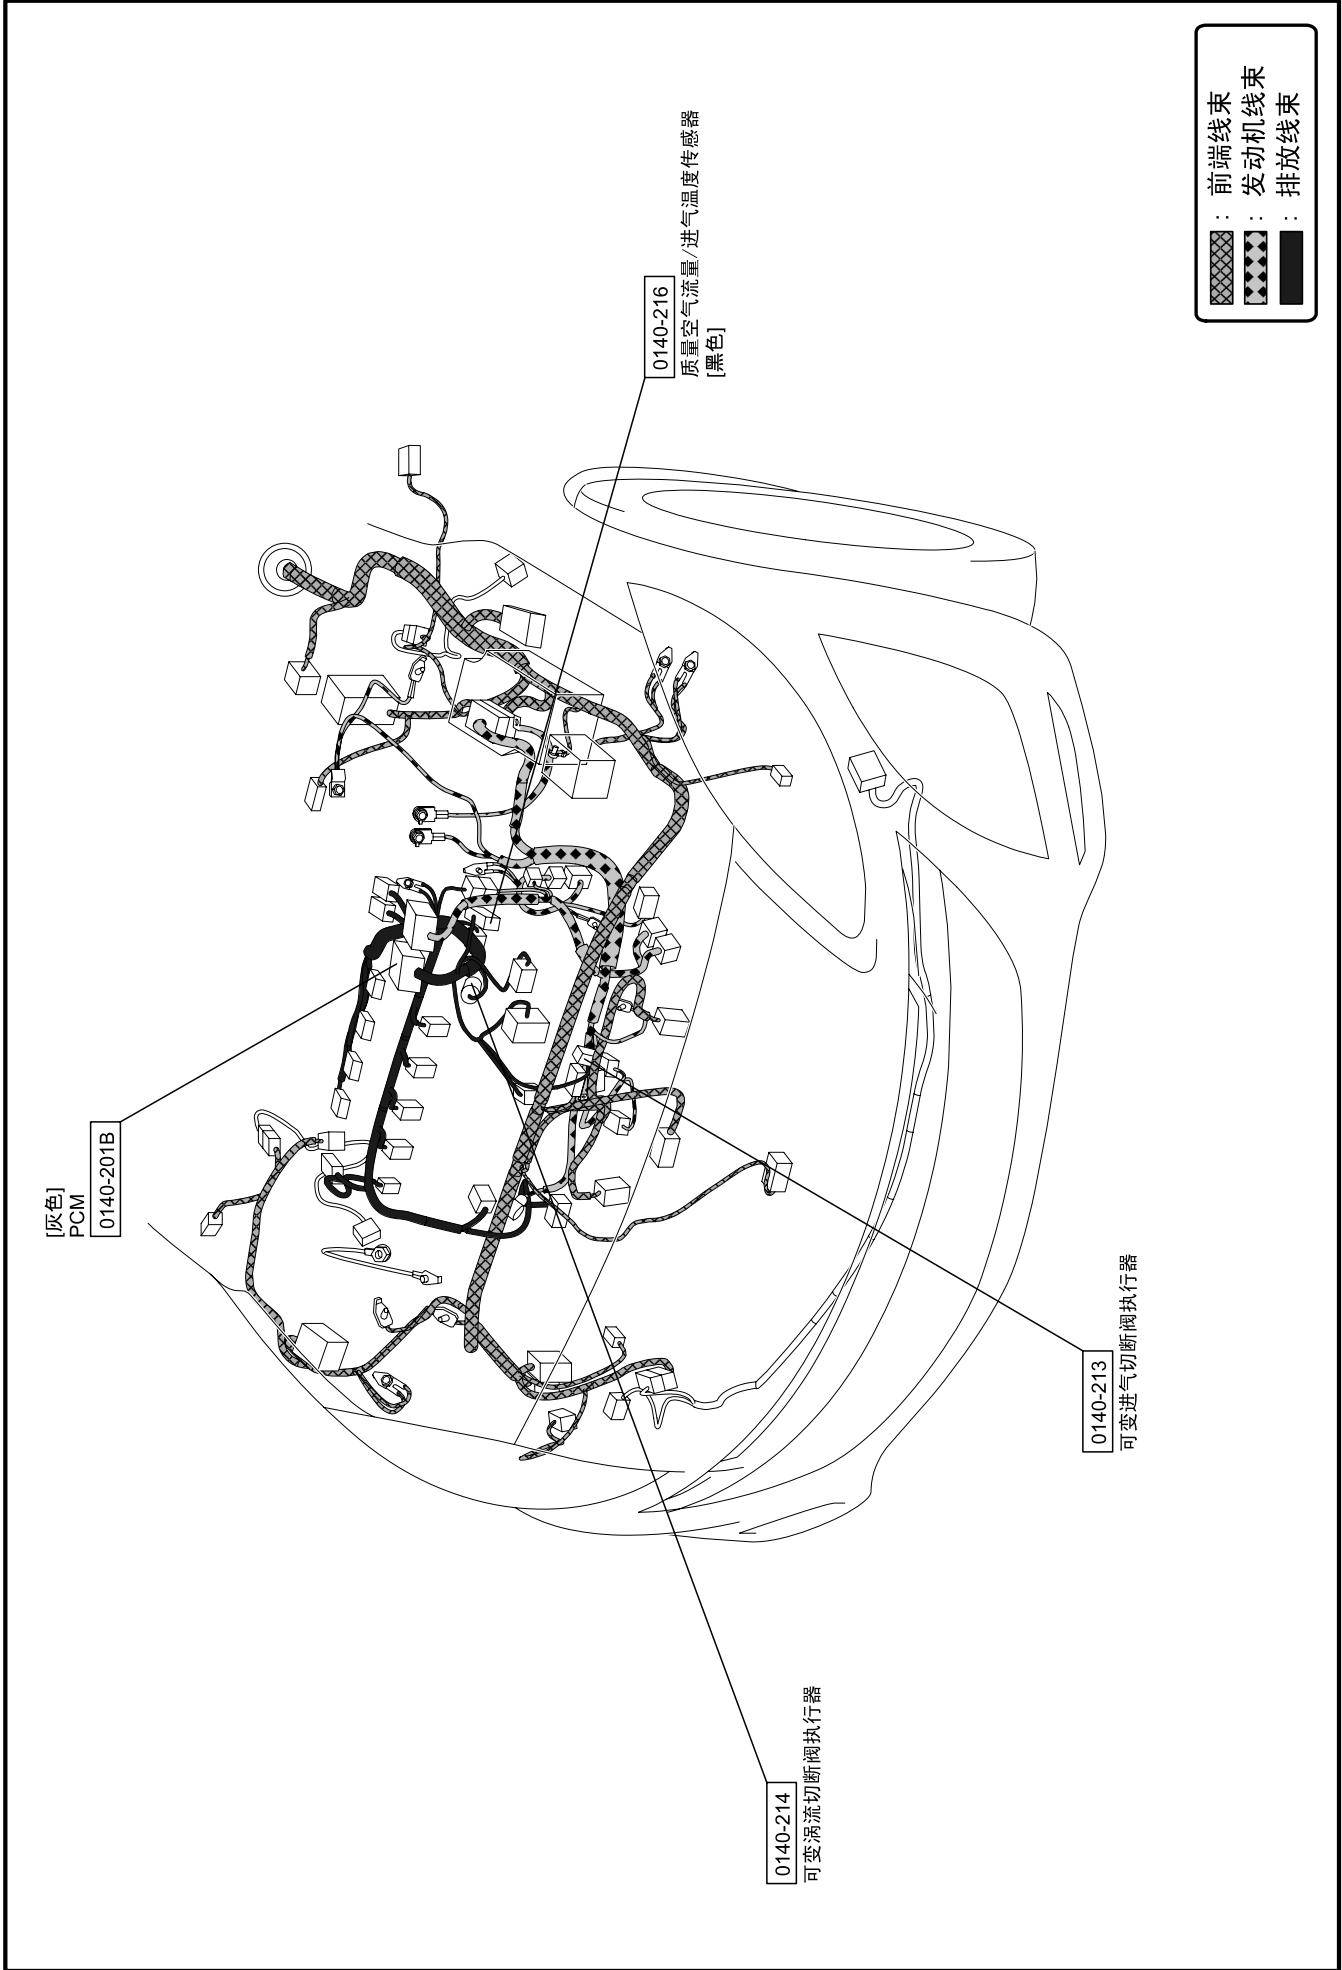

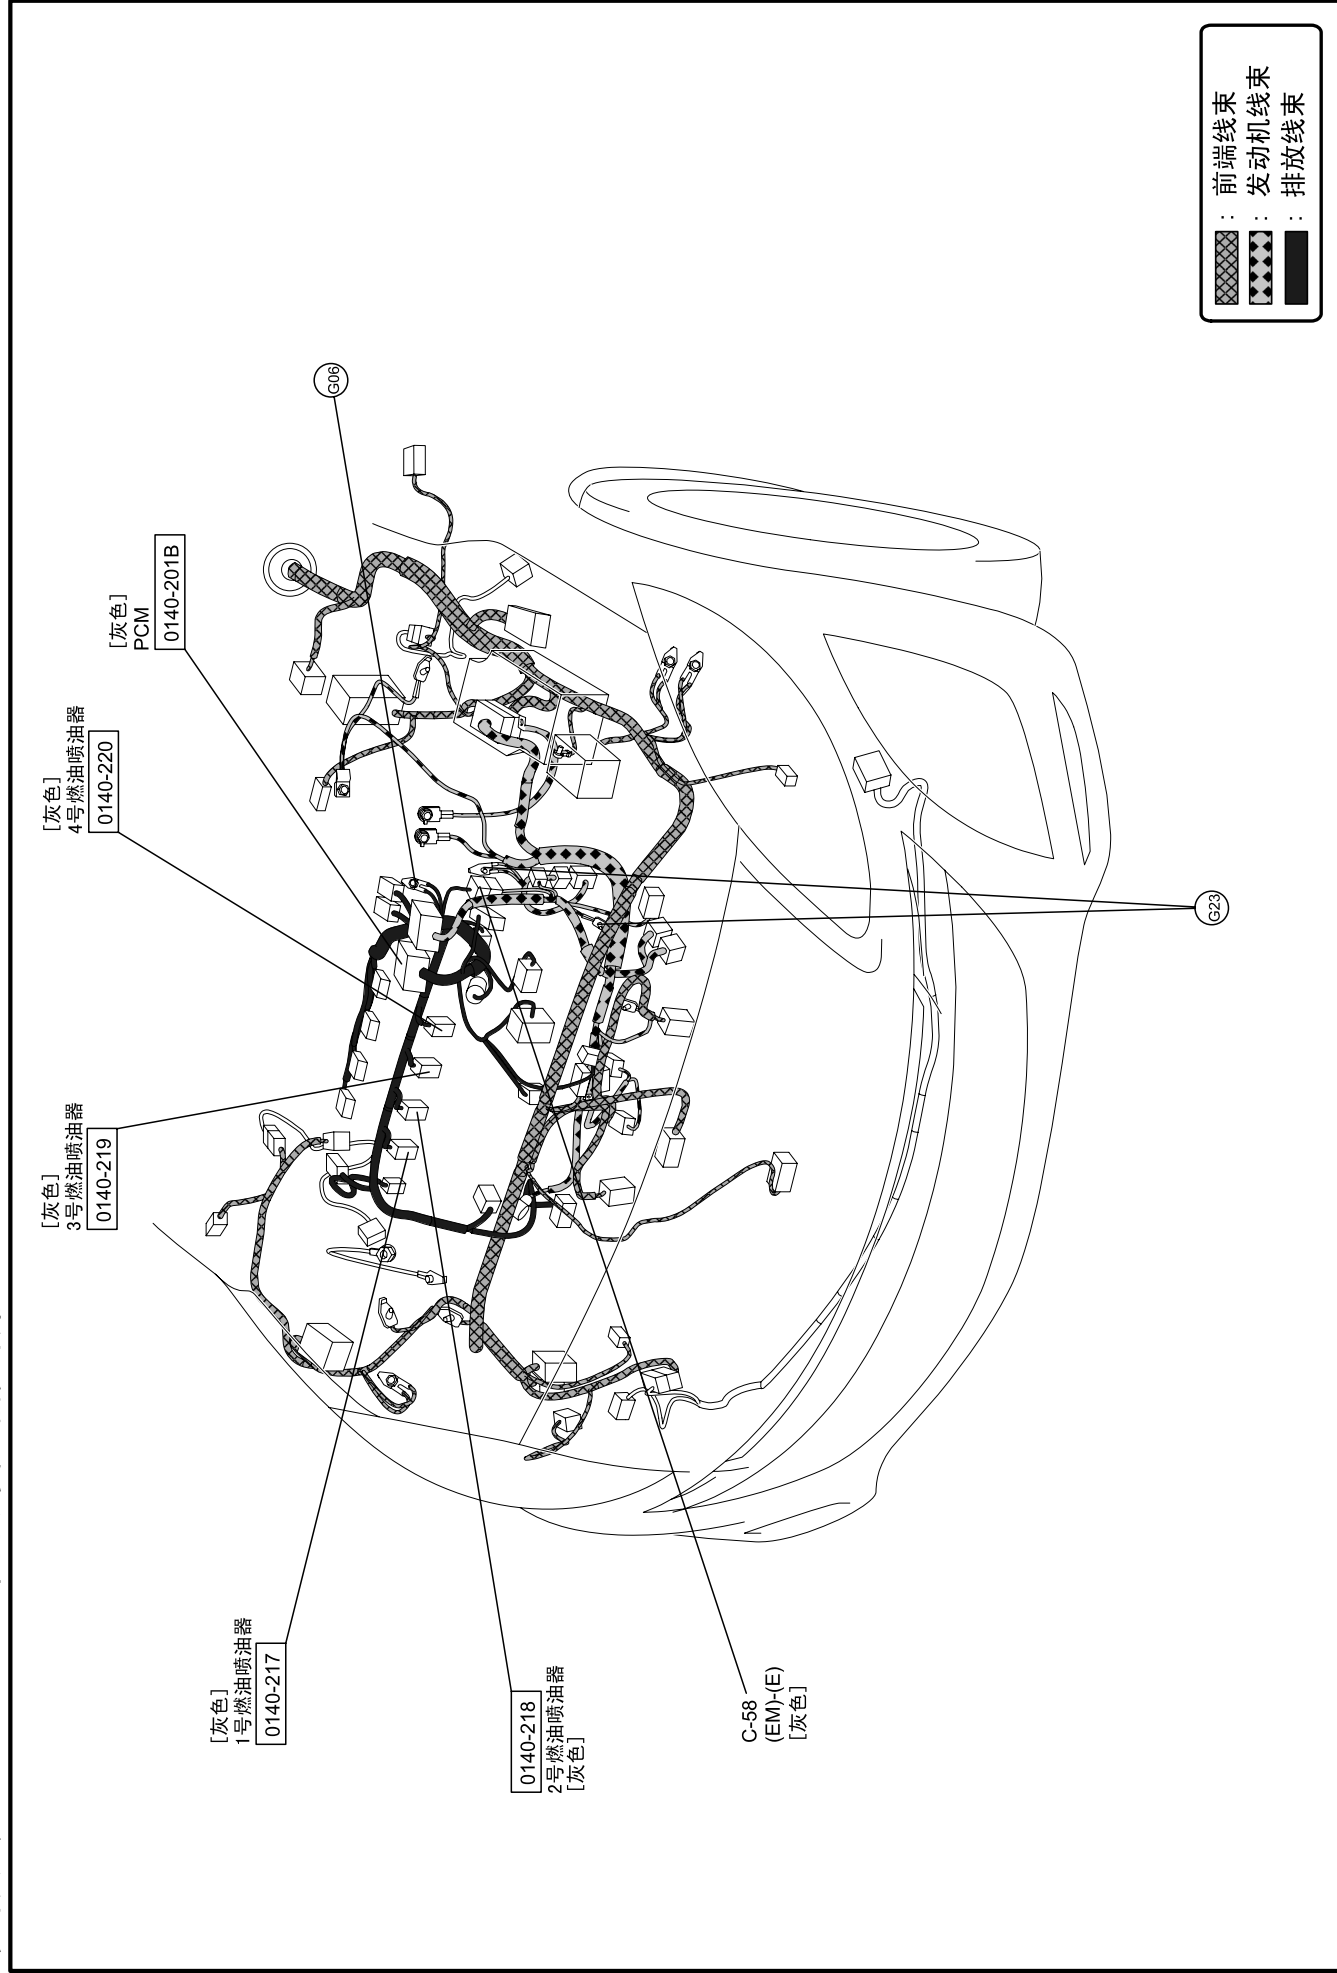


控制系统 (MZR 1.6) (包括自动变速器控制信息)


0140-2g

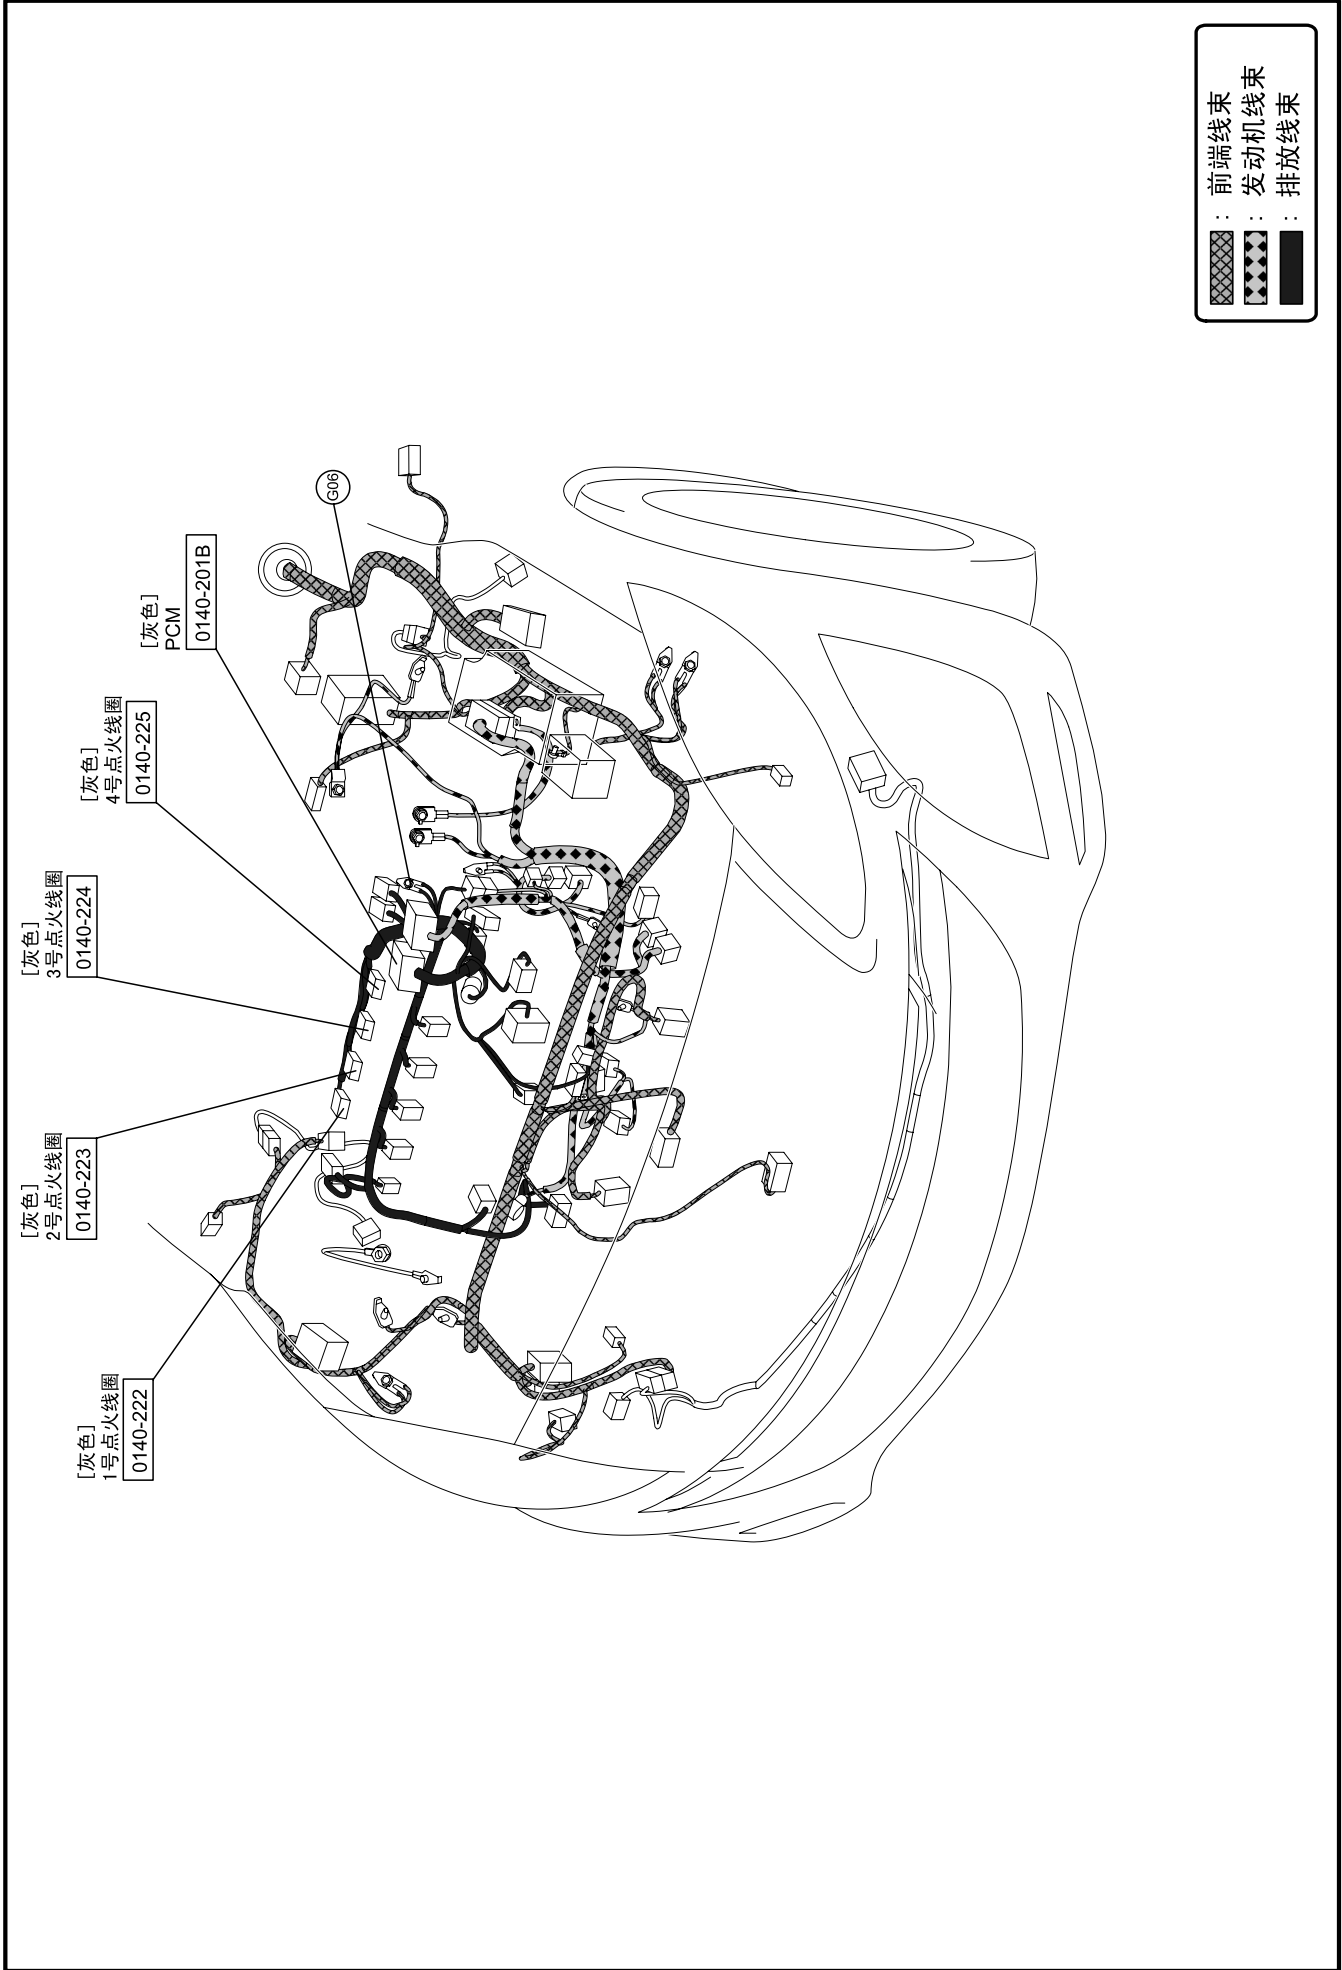

控制系统 (MZR 1.6) (包括自动变速器控制信息)


0140-2h

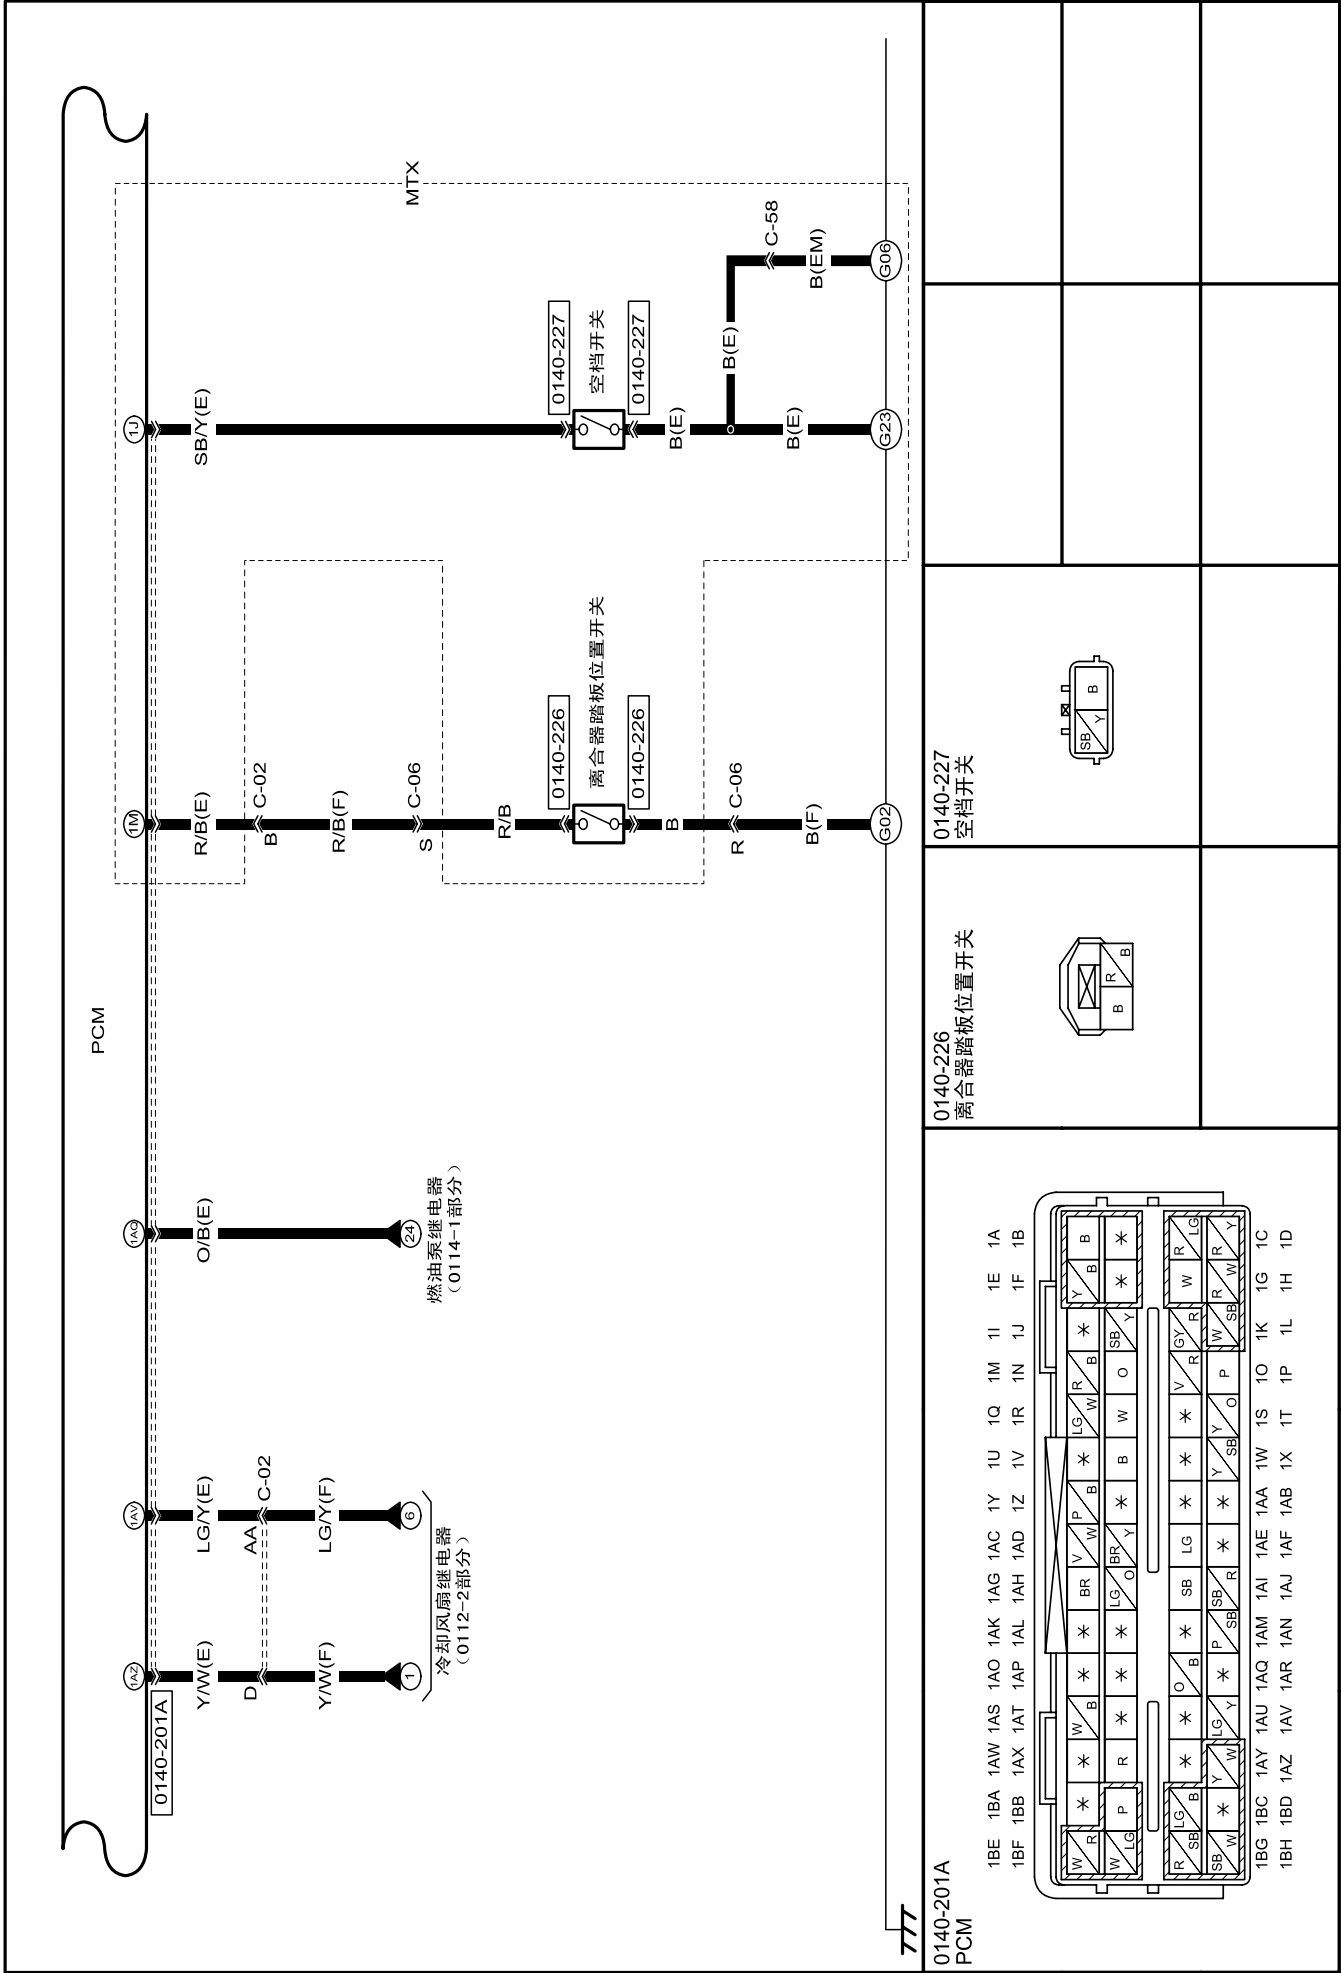


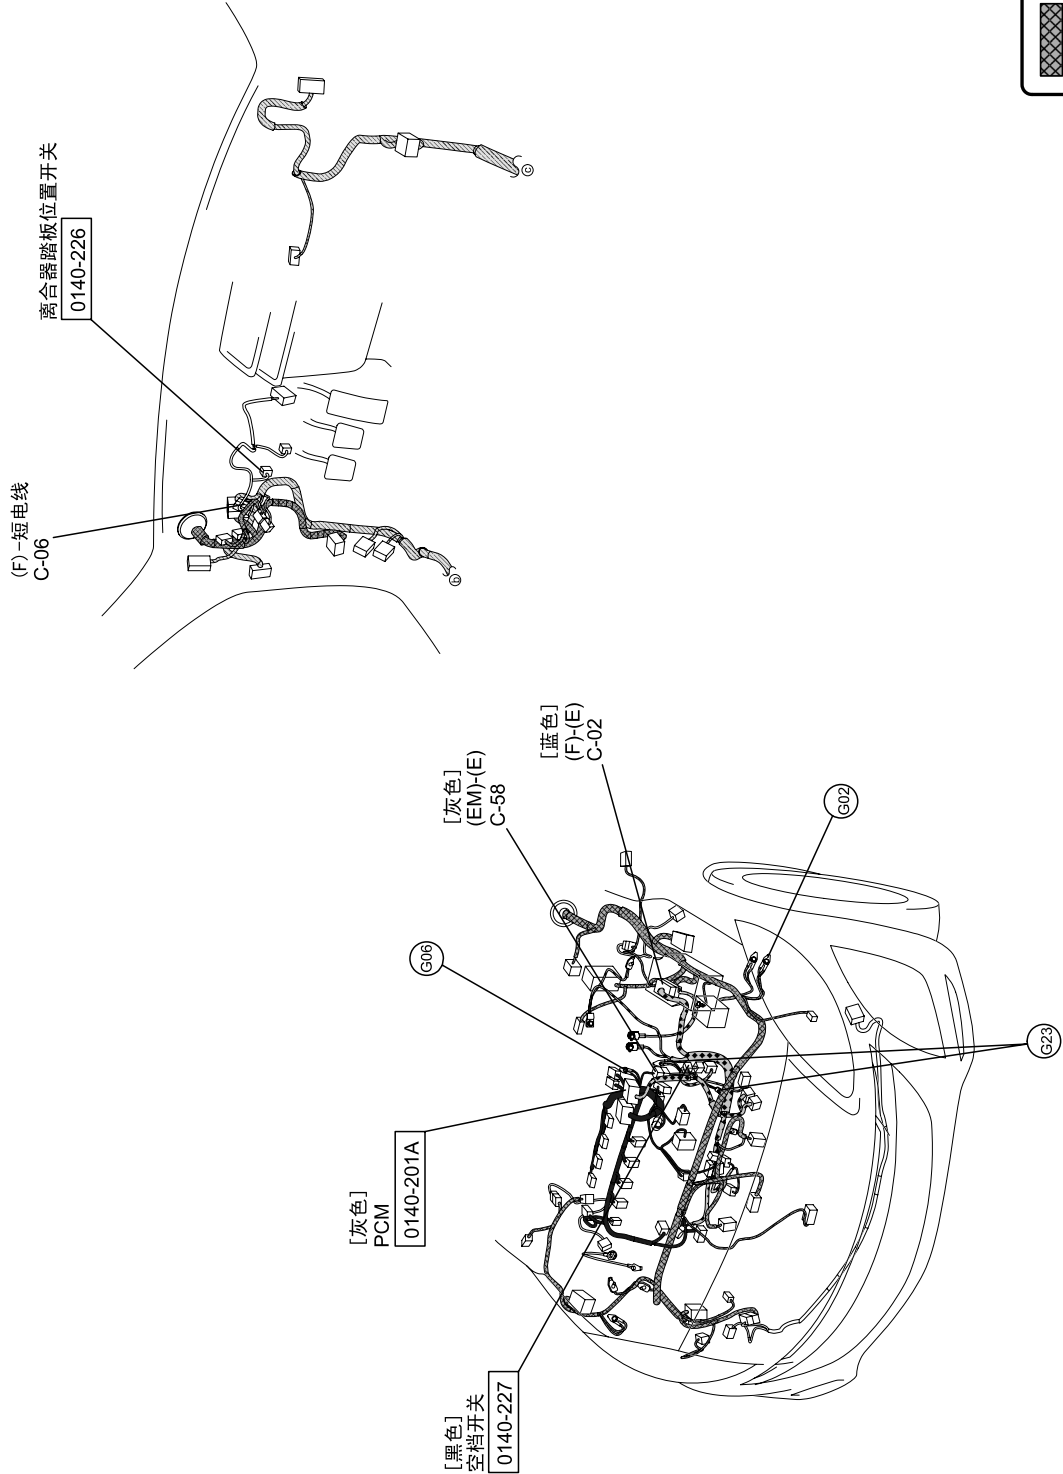


控制系统 (MZR 1.6) (包括自动变速器控制信息)

0140-2i

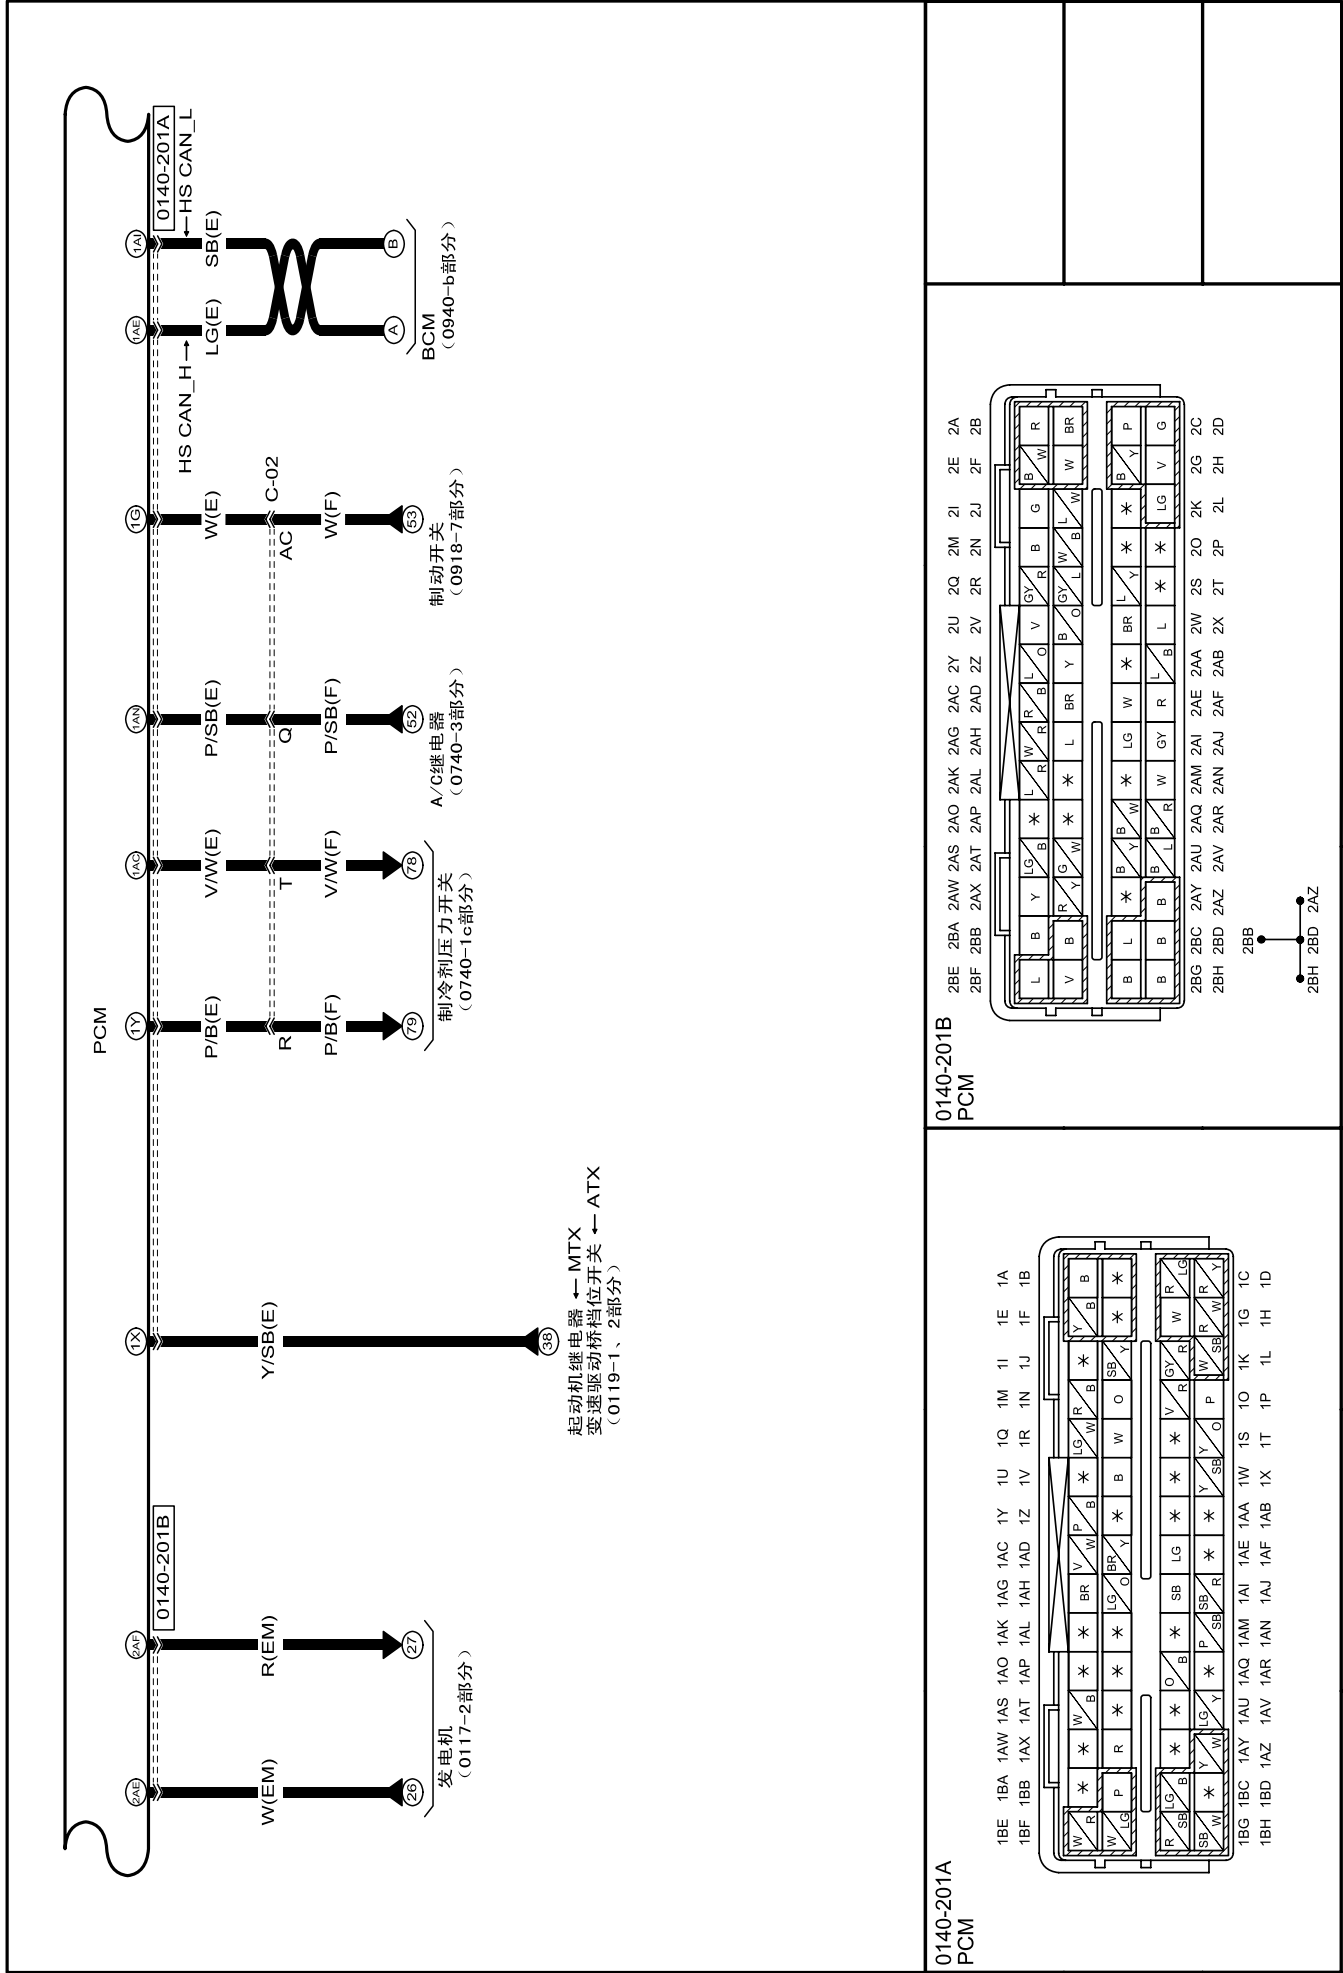

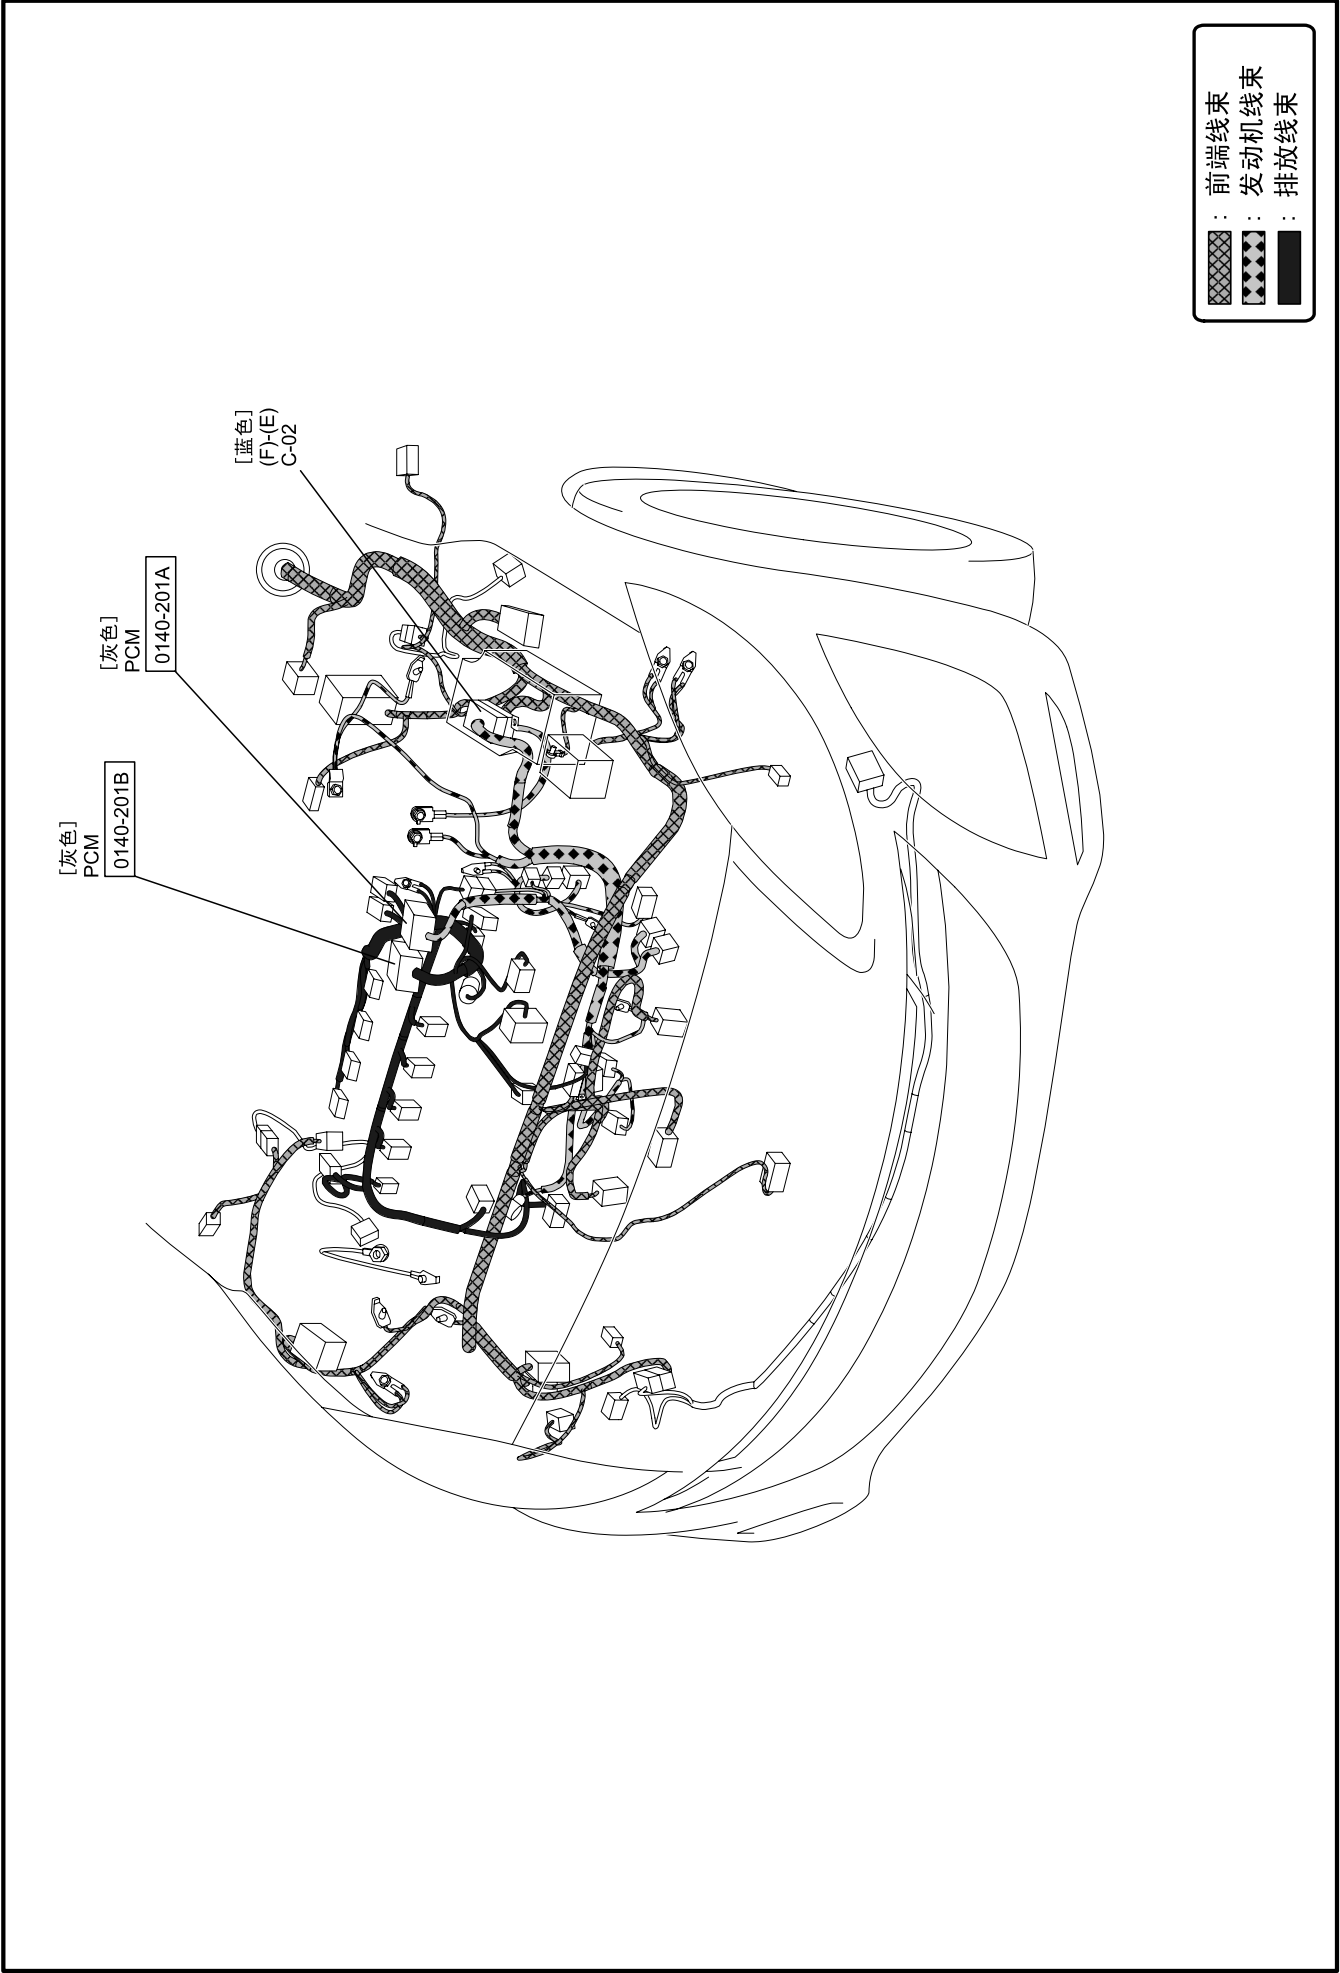

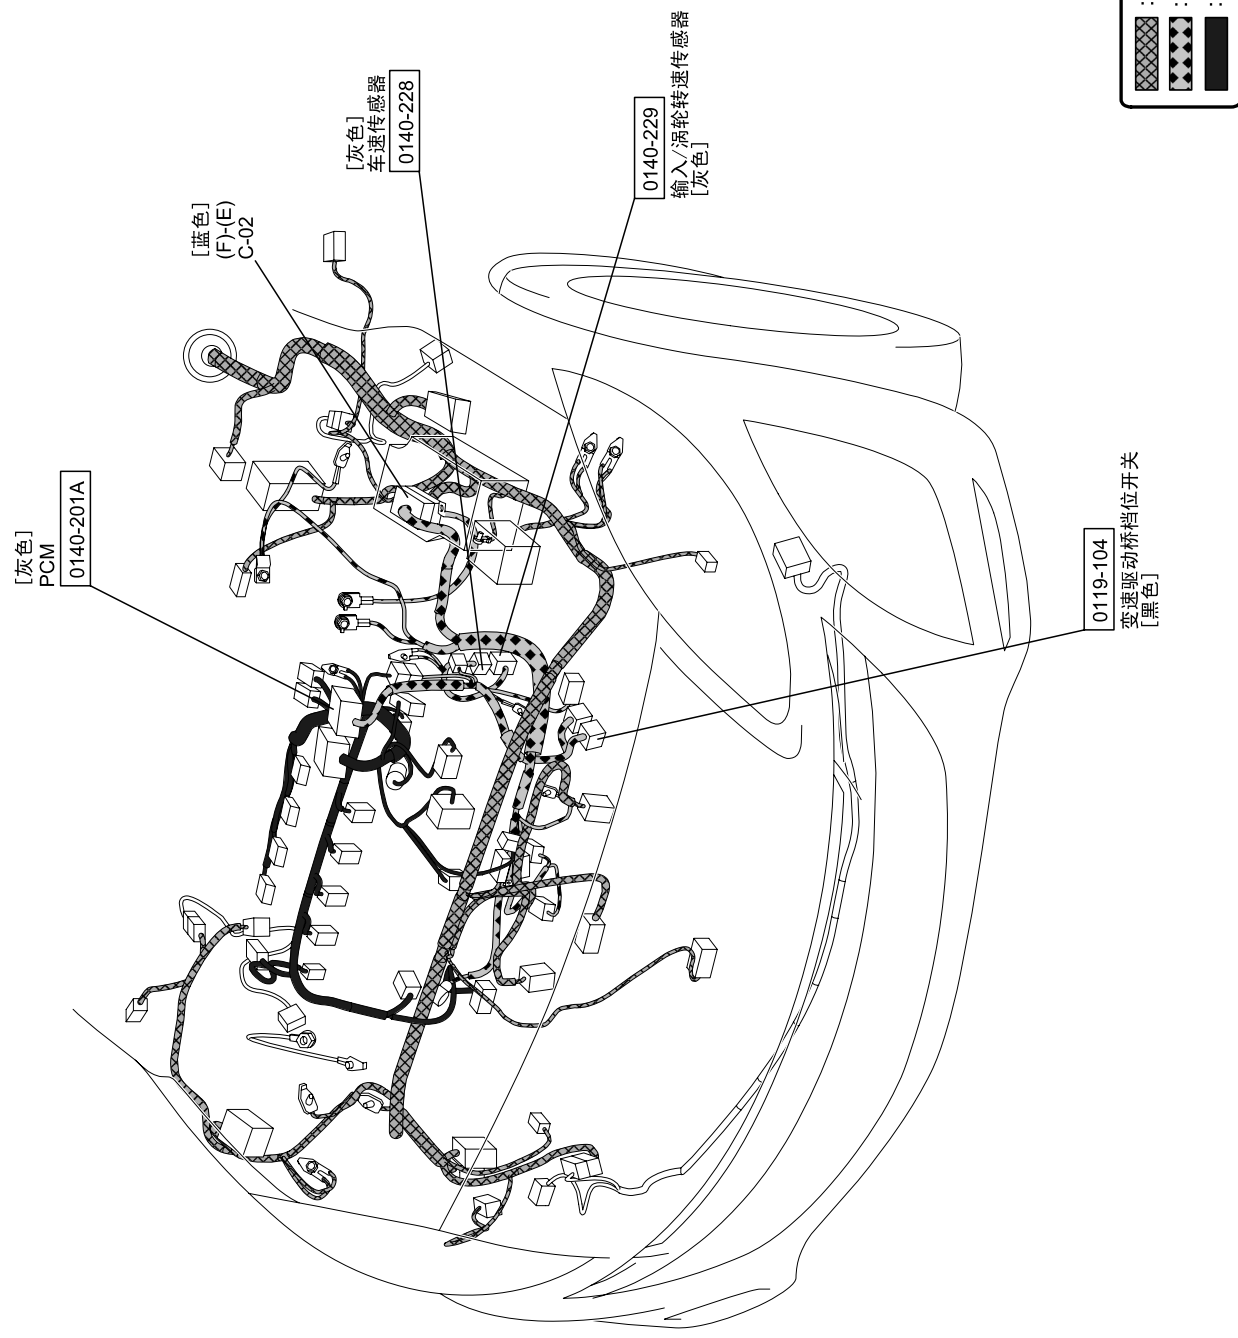

控制系统 (MZR 1.6) (包括自动变速器控制信息)

0140-2k

