


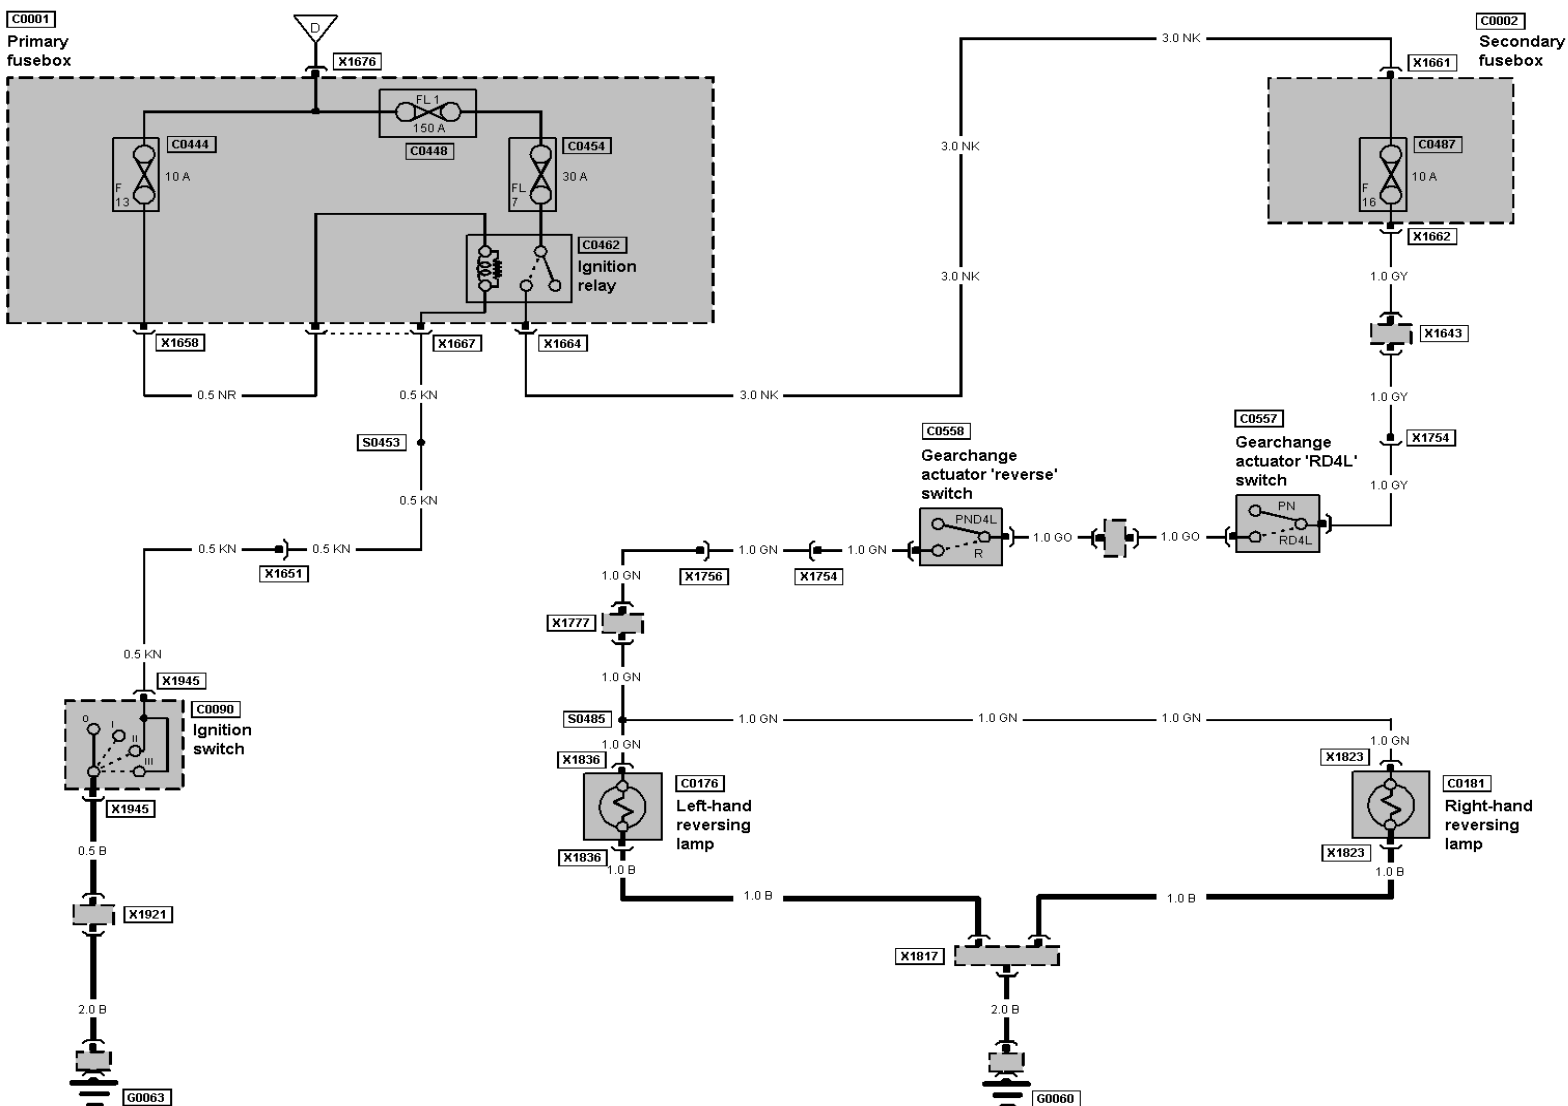

Electrical Circuit: 35 01 03: Reversing lamps (LHD)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0090	Ignition switch
C0176	Left-hand reversing lamp
C0181	Right-hand reversing lamp
C0444	Fuse F13, 10 amp - primary fusebox
C0448	Fuse FL1, 150 amp - primary fusebox
C0454	Fuse FL7, 30 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0487	Fuse F16, 10 amp - secondary fusebox
C0557	Gearchange actuator 'RD4L' switch
C0558	Gearchange actuator 'reverse' switch
G0060	Ground point header connector 10-way
G0063	Ground point header connector 6-way
S0453	Splice - Pink/brown - front main loom
S0485	Splice - Green/brown - rear main loom
X1643	Header connector 20-way
X1651	Front main loom to left-hand drive facia loom plug and socket 23-way
X1658	Primary fusebox connector 12-way
X1661	Secondary fusebox connector 4-way
X1662	Secondary fusebox connector 21-way
X1664	Primary fusebox connector 3-way
X1667	Primary fusebox connector 18-way
X1676	Primary fusebox connector
X1754	Front main loom to gearchange actuator loom plug and socket 16-way
X1756	Front main loom to rear main loom plug and socket 22-way
X1777	Header connector 20-way
X1817	Header connector 20-way
X1823	Right-hand reversing lamp connector 2-way
X1836	Left-hand reversing lamp connector 2-way
X1921	Header connector 20-way
X1945	Switchbox connector 26-way

Circuit Links

Description	Circuit	Additional Information
D	050102	12 V+ from the battery