


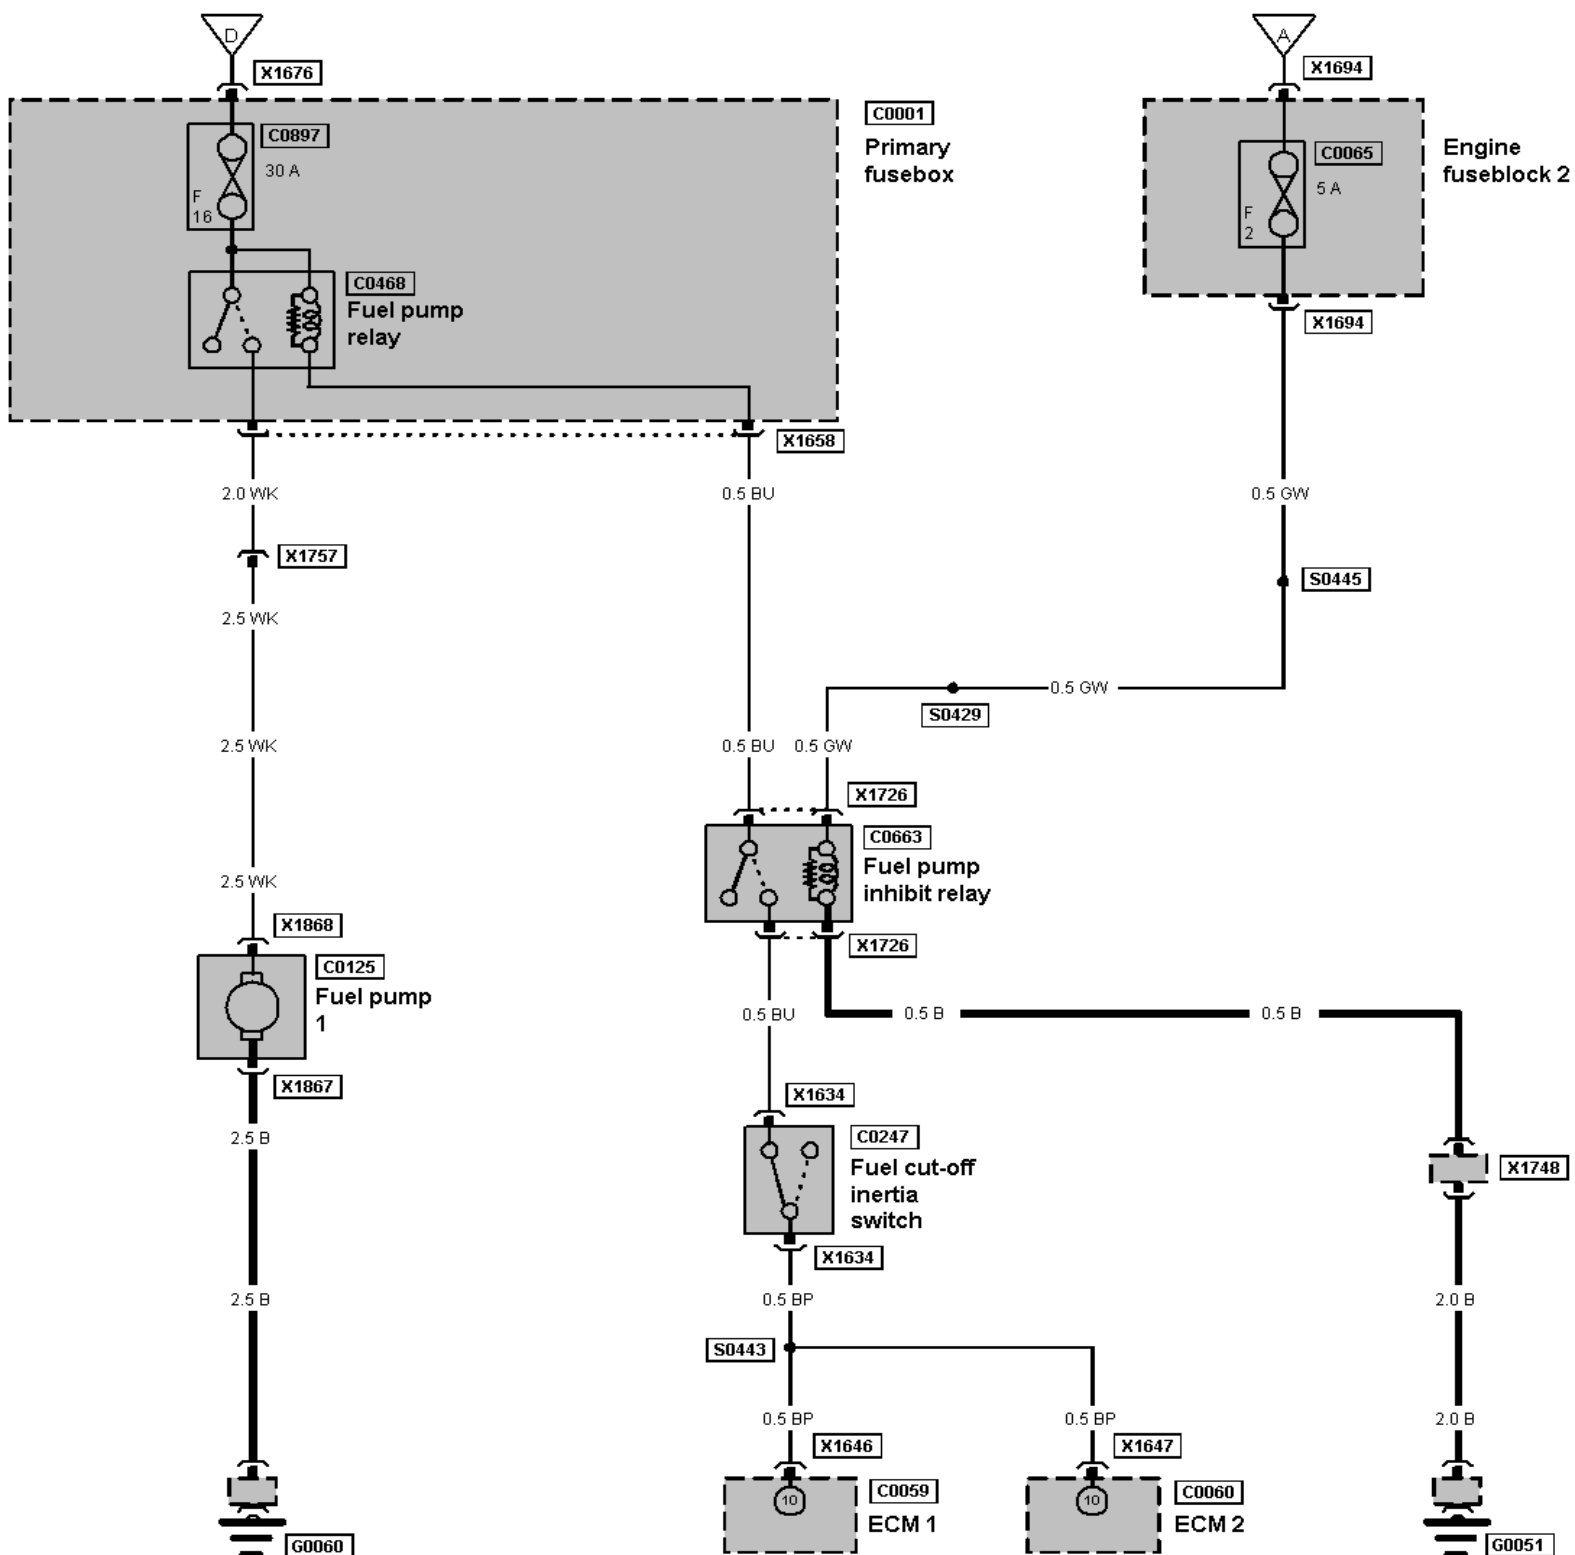

Electrical Circuit: 40 01 03: Fuel pump

No	Description
C0001	Primary fusebox
C0059	Engine control module 1
C0060	Engine control module 2
C0065	Fuse 2, 5 amp - E box
C0125	Fuel pump 1
C0247	Inertia switch
C0468	Fuel pump relay - primary fusebox
C0663	Fuel pump inhibit relay
C0897	Fuse F16, 30 amp - primary fusebox
G0051	Ground point header connector 6-way
G0060	Ground point header connector 10-way
S0429	Splice - Green/white - front main loom
S0443	Splice - Black/purple - front main loom
S0445	Splice - Green/white - front main loom
X1634	Inertia switch connector 3-way
X1646	Engine control module 1 connector 40-way
X1647	Engine control module 2 connector 40-way
X1658	Primary fusebox connector 12-way
X1676	Primary fusebox connector
X1694	Engine fuseblock connector 4-way
X1726	Fuel pump inhibit relay connector
X1748	Header connector 20-way
X1757	Front main loom to rear main loom plug and socket 20-way
X1867	Fuel pump 1 connector
X1868	Fuel pump 1 connector

Circuit Links

Description	Circuit	Additional Information
D	050102	12 V+ from the battery
A	050102	12 V+ from the battery