


驾驶员信息系统

组合仪表


简图

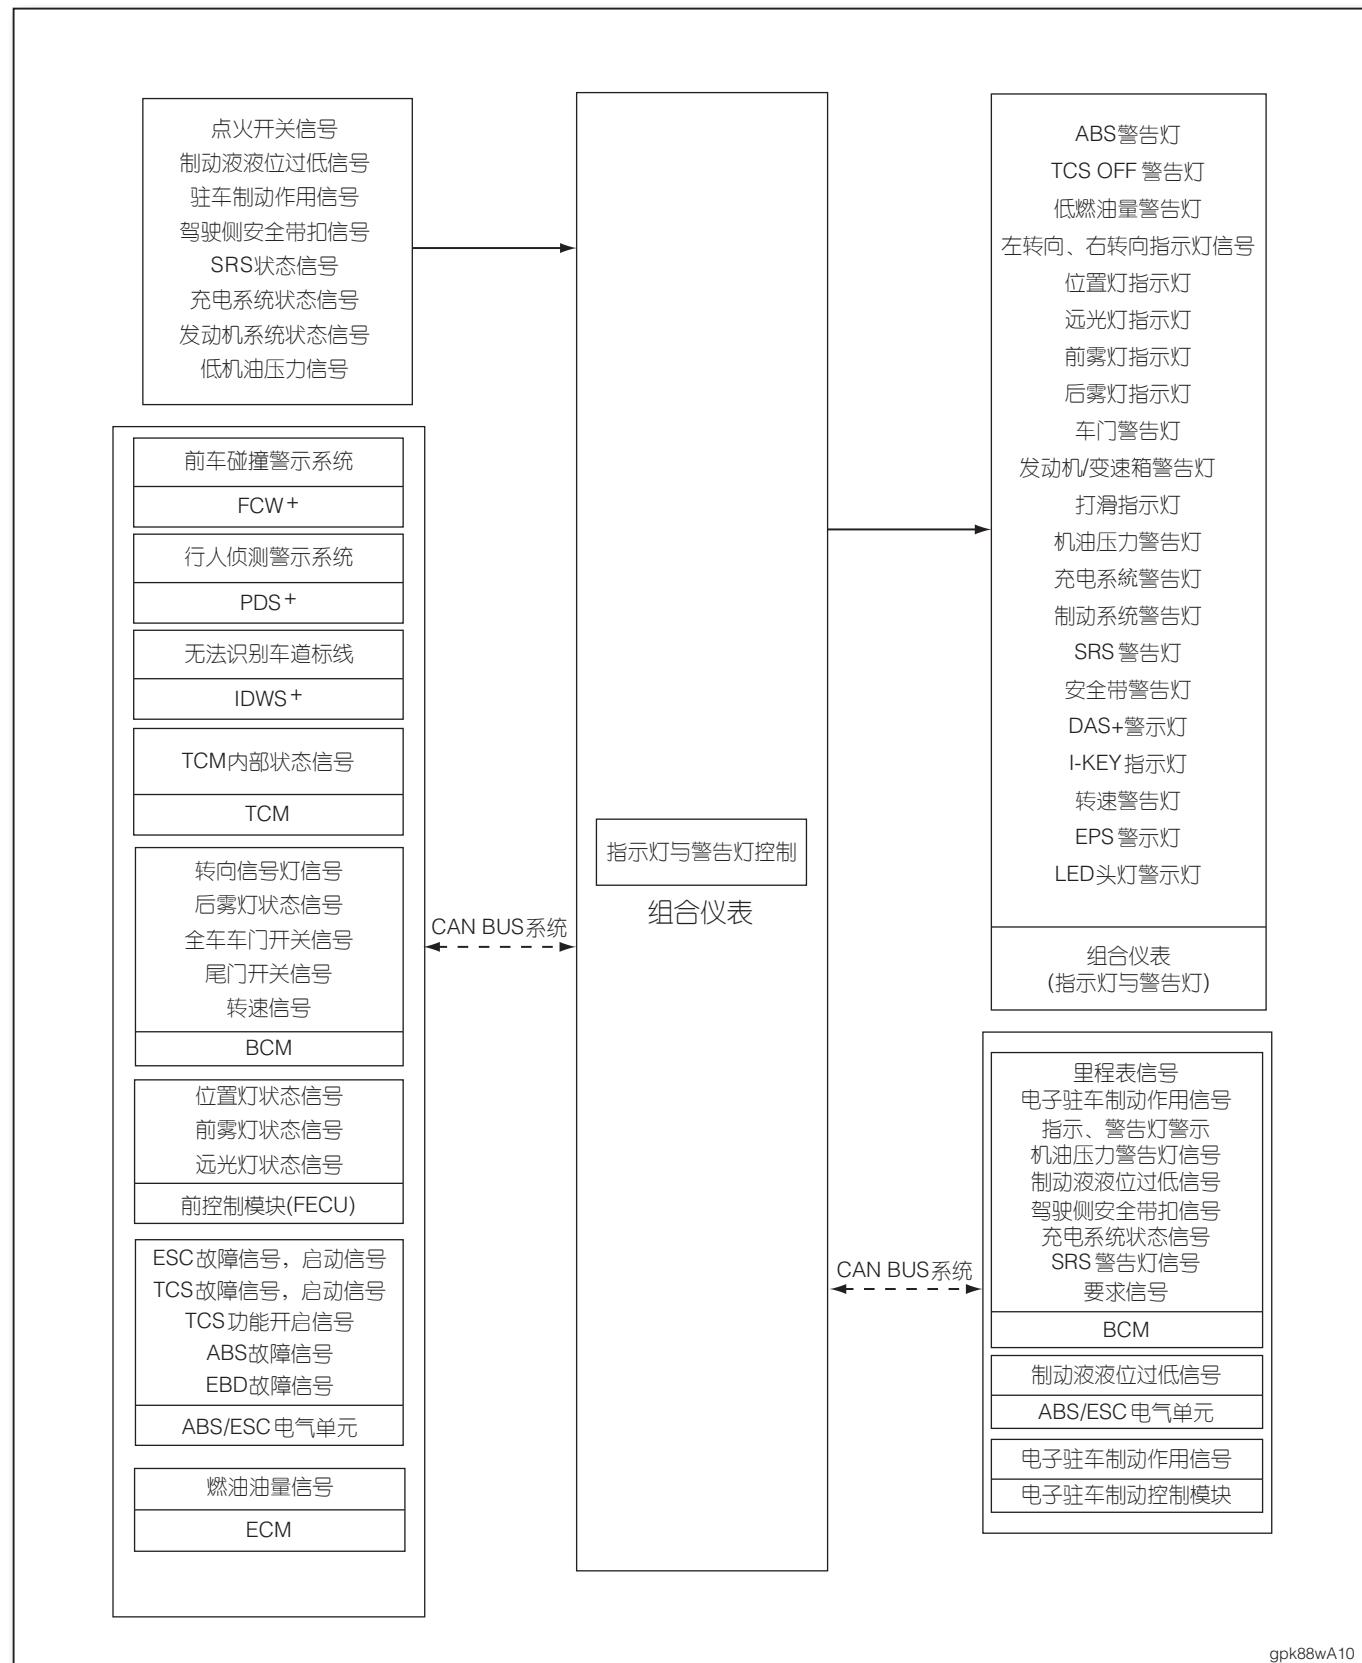

gpk88wA10

驾驶员信息系统


组合仪表

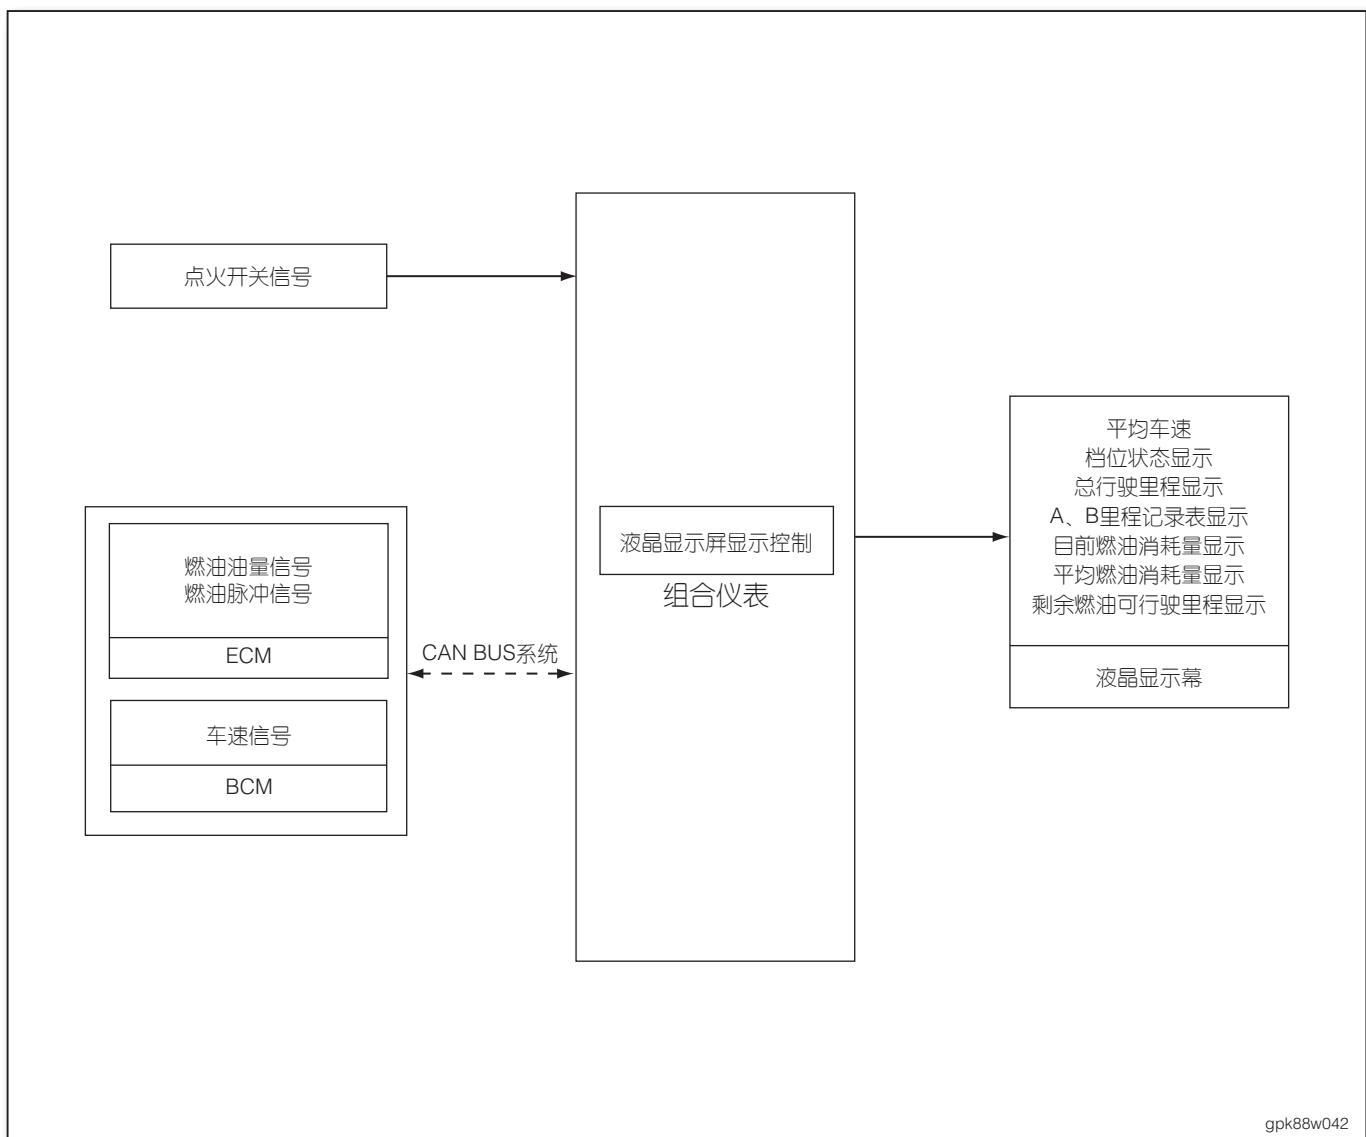

驾驶员信息系统

组合仪表

配线图

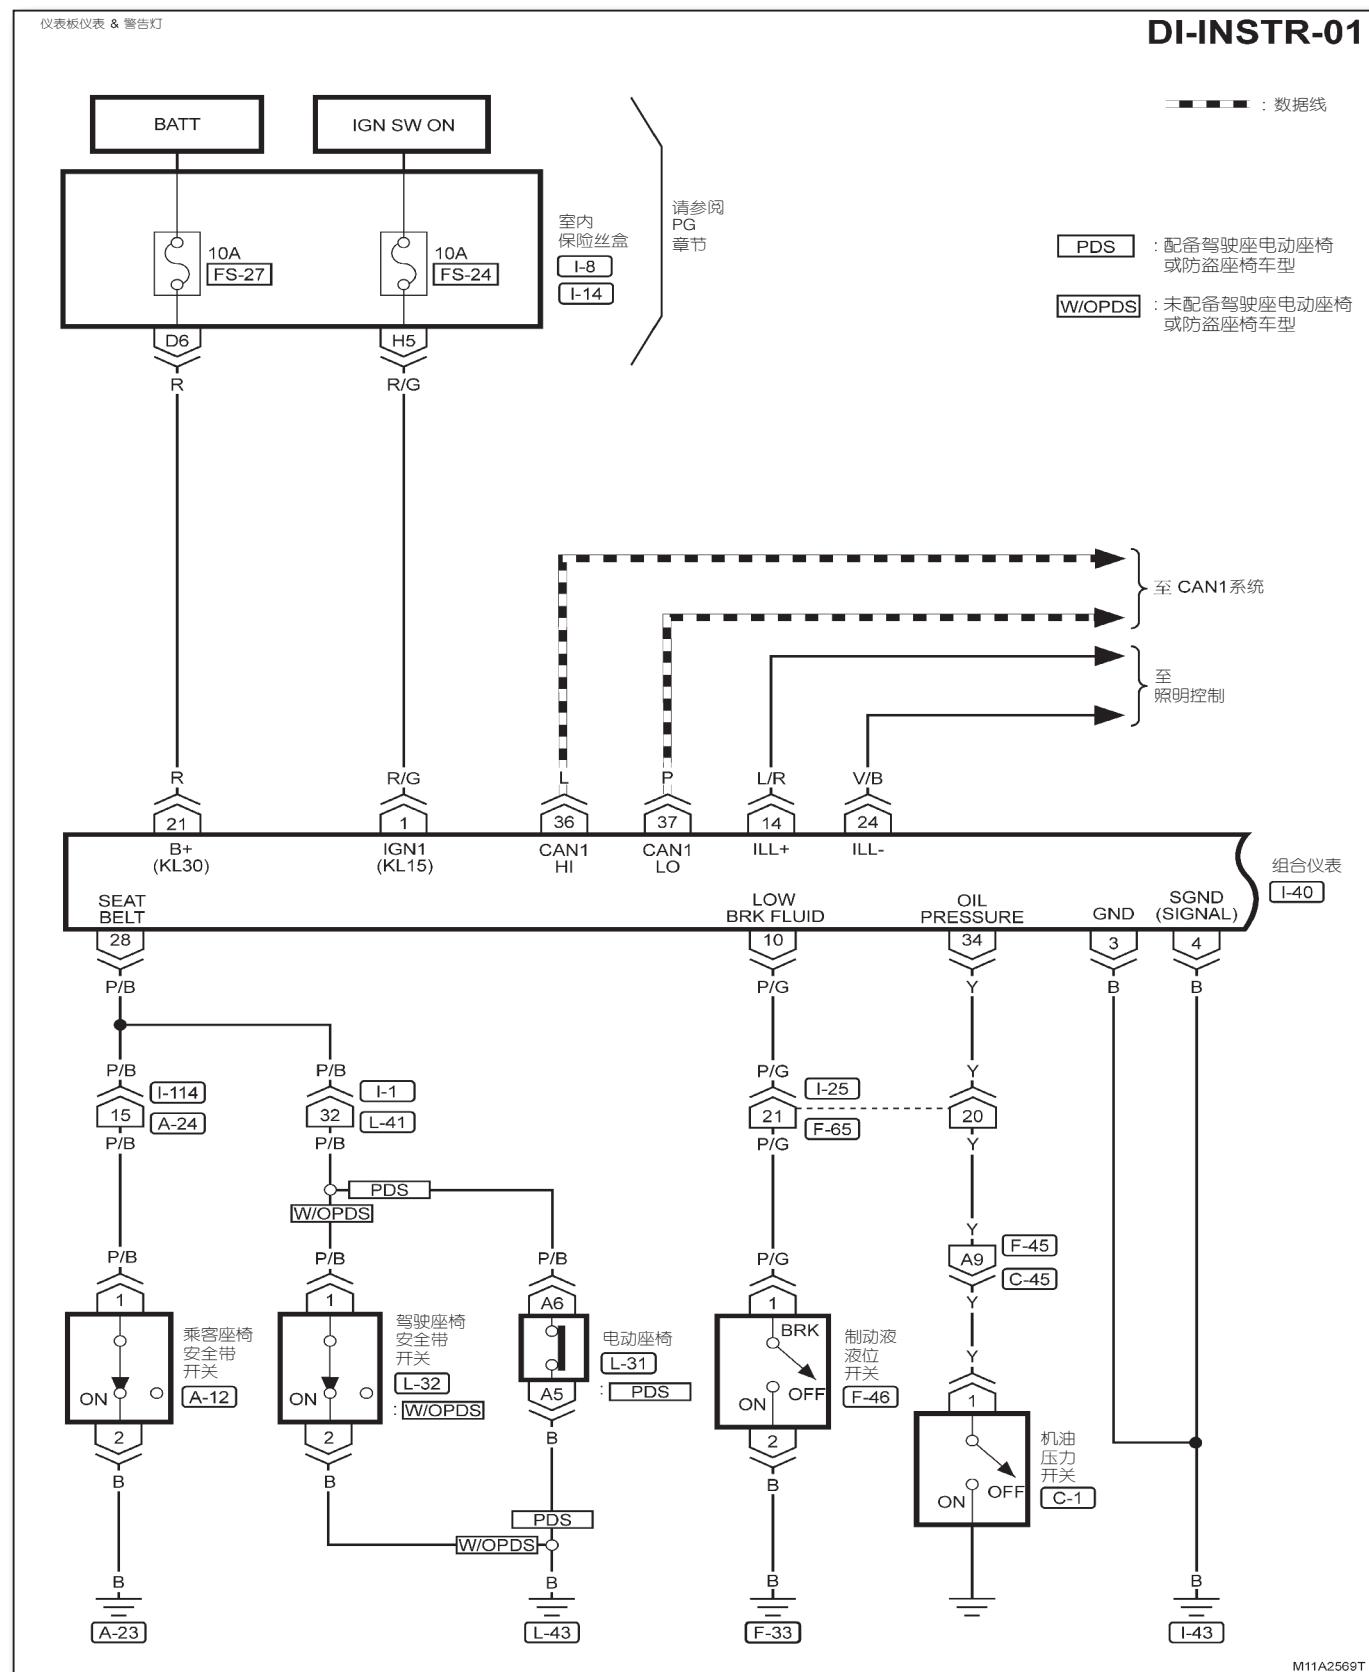


驾驶员信息系统

组合仪表

仪表板仪表 & 警告灯

DI-INSTR-02

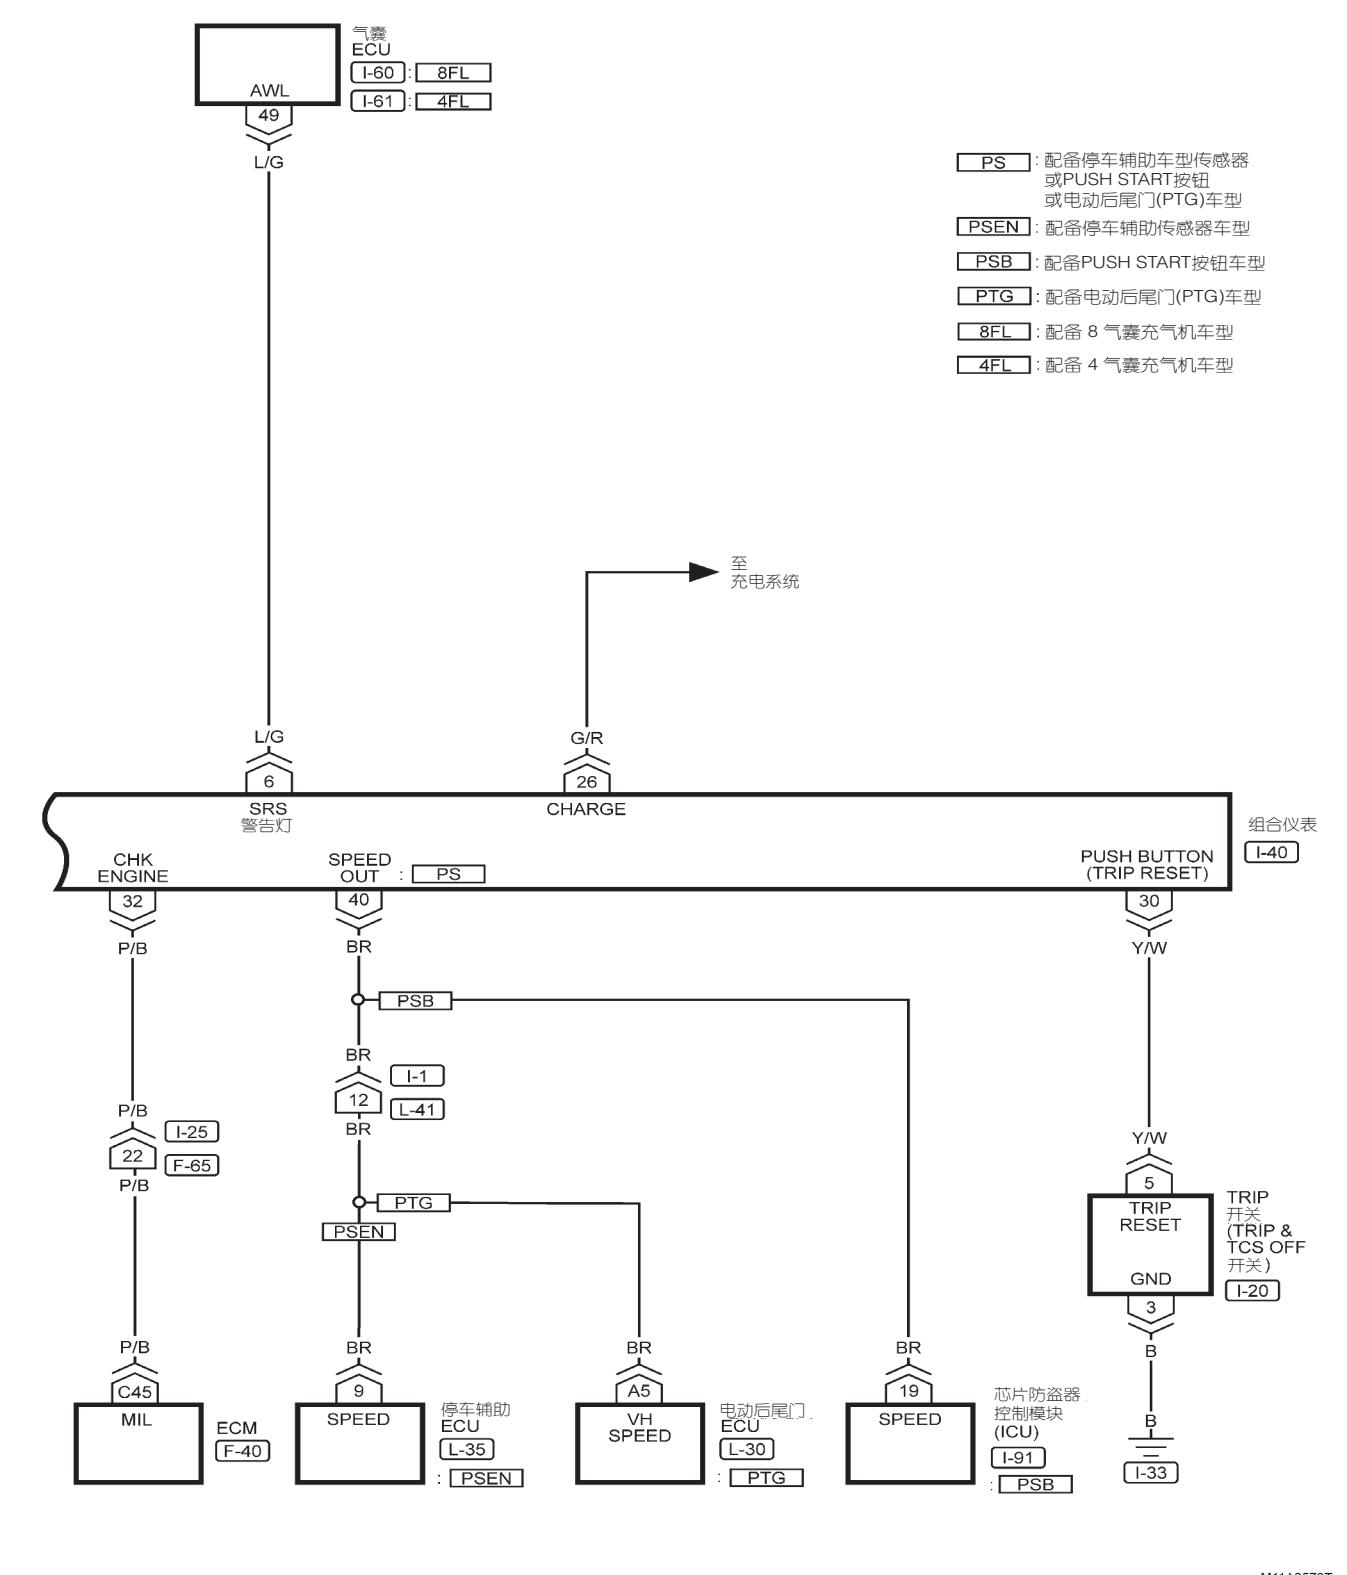

M11A2570T

DI-19

 
驾驶员信息系统

组合仪表

仪表板仪表 & 警告灯


DI-INSTR-03

[A-12]
W
[L-32]
W




[C-1]
W
1

[C-45]
B

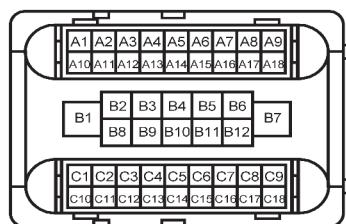

[F-40]
B

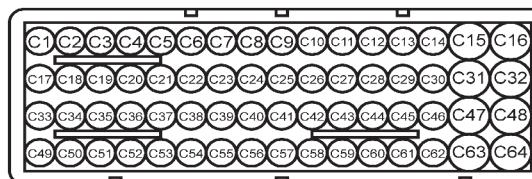

H


[F-46]
GY




[I-1]
W

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

 
[I-8]
B



[I-14]
W

 


[I-20]
B

 

[I-25]
W

1	2	3	4	5		6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21

 [I-40]
W



[I-25]
W

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

M11A2571T

驾驶员信息系统

组合仪表

仪表板仪表 & 告警灯

DI-INSTR-04

I-60

Y

I-61

B

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
				30		33	34			37		40					45	46	47	48	49	50		

I-91

W

12	11	10	9	8	7	6	5	4	3	2	1		
26	25	24	23	22	21	20	19	18	17	16	15	14	13

H

L-30

GY

A10	A9	A8	A7	A6	A5	A4	A3	A2	A1
A20	A19	A18	A17	A16	A15	A14	A13	A12	A11

H

L-31

W

A1	A2	A3		A4	A5
A6	A7	A8	A9	A10	A12

L-35

W

8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9

H

1

2

3

4

4

6

7

8

9

10

DI

12

M11A2572T

DI-21