




Component Location Index

K20A2 engine

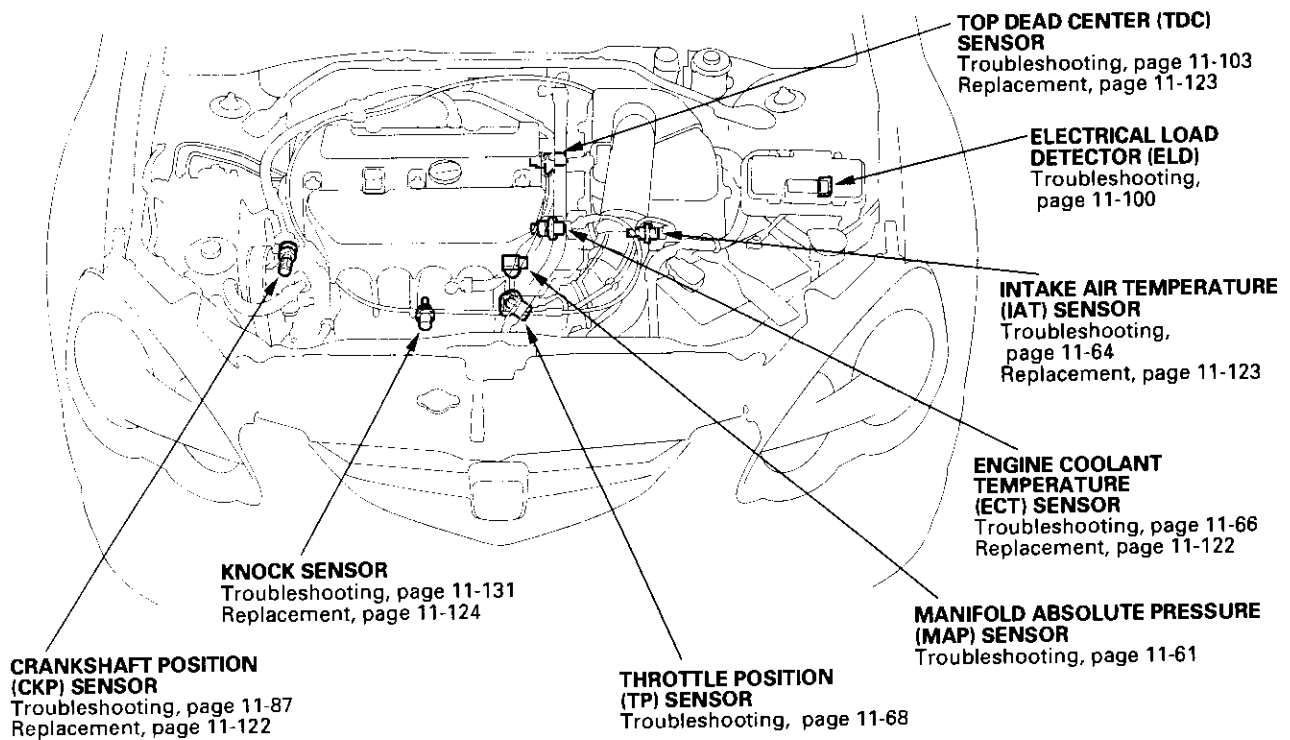



(cont'd)

PGM-FI System

Component Location Index (cont'd)


K20A3 engine

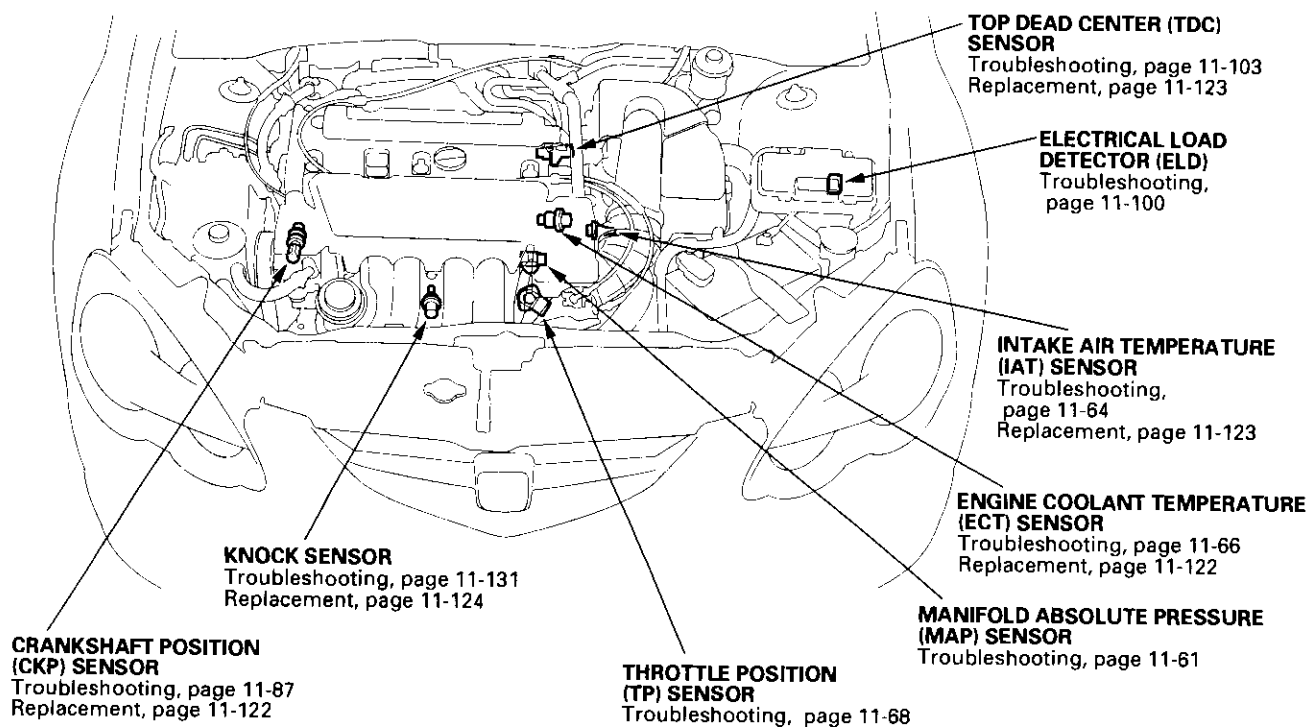

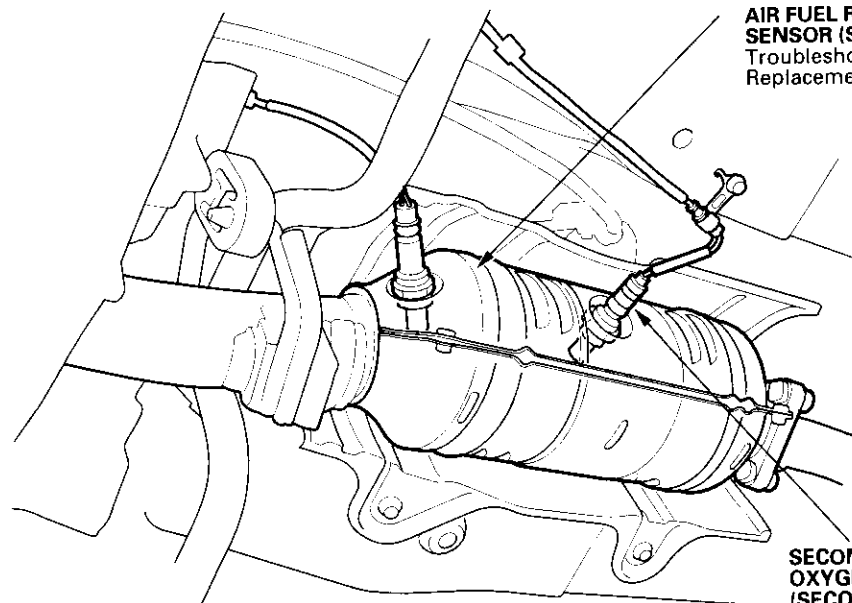

**AIR FUEL RATIO (A/F)
SENSOR (SENSOR 1)**
Troubleshooting, page 11-93
Replacement, page 11-121

**SECONDARY HEATED
OXYGEN SENSOR
(SECONDARY HO₂S)
(SENSOR 2)**
Troubleshooting, page 11-74
Replacement, page 11-121

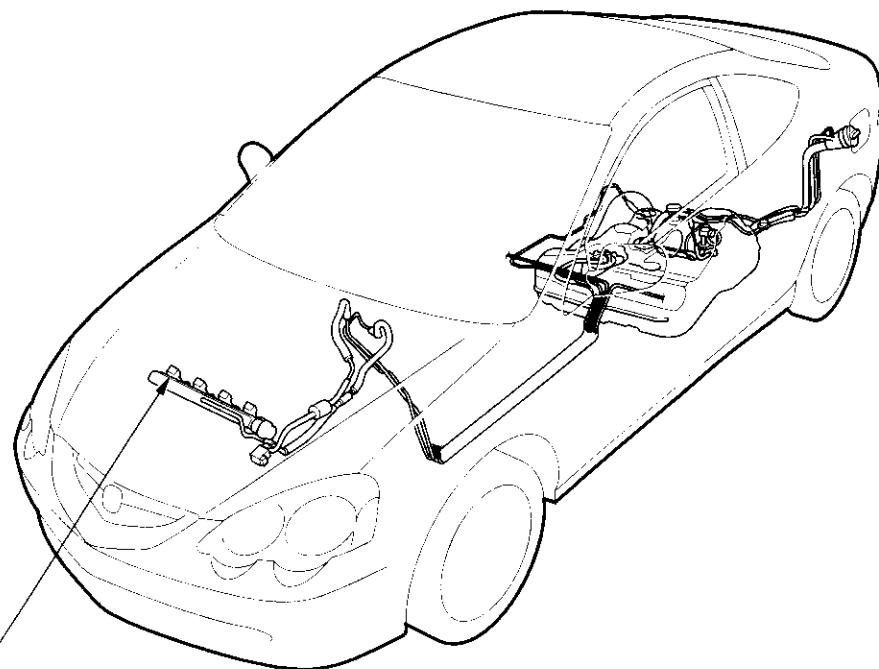


INJECTORS
Replacement, page 11-119


(cont'd)

PGM-FI System

Component Location Index (cont'd)

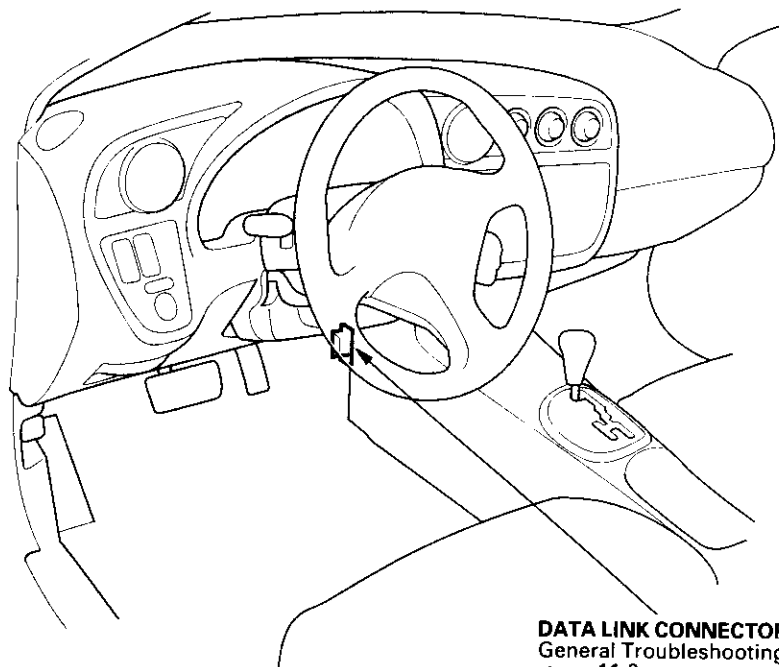

DATA LINK CONNECTOR (DLC)
General Troubleshooting Information,
page 11-3

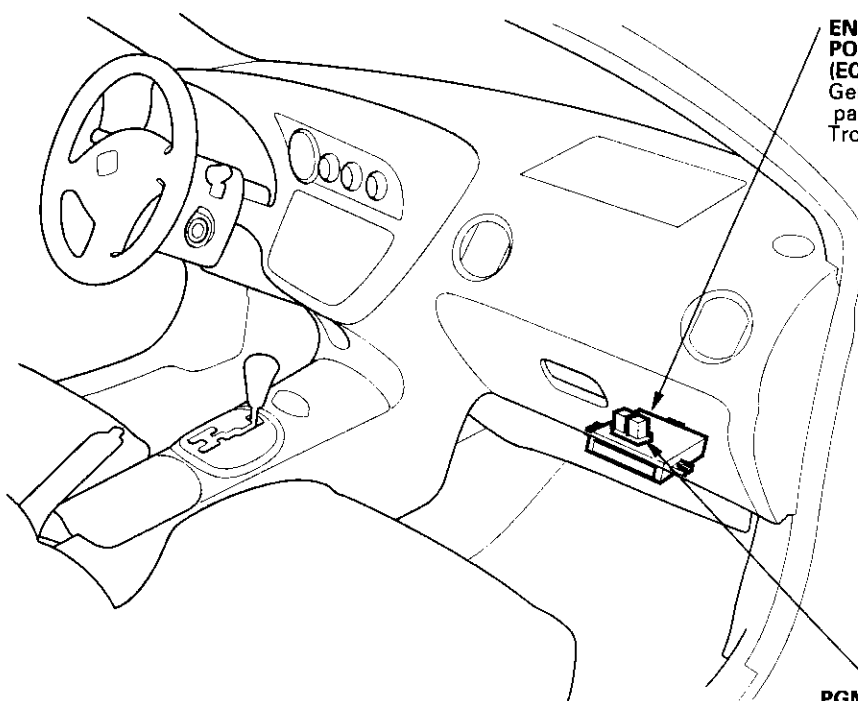

**ENGINE CONTROL MODULE/
POWERTRAIN CONTROL MODULE
(ECM/PCM)**
General Troubleshooting Information,
page 11-3
Troubleshooting, page 11-104

PGM-FI MAIN RELAY 1
Troubleshooting, page 11-105