

Body Electrical

Body Electrical

Special Tools	22-2
General Troubleshooting	22-3
Information	22-3
Relay and Control Unit Locations	22-7
Connectors and Harnesses	22-11
Fuse/Relay Boxes ...	22-48
Power Distribution	22-50
Ground Distribution ...	22-52
Under-dash Fuse/Relay Box	22-53
Battery	22-54
Relays	22-55
*Ignition Switch	22-57
*Gauges	
Component Location	22-58
Index	22-58
Self-diagnosis Procedure	22-60
Circuit Diagram	22-62
Gauge Assembly	22-66
Replacement	22-66
Coolant Temperature	22-66
Gauge Troubleshooting	22-66
Vehicle Speed Signal Circuit	22-67
Troubleshooting	22-67
VSS Replacement	22-69
Exterior Lights	
Component Location	22-70
Index	22-70
Circuit Diagram	22-73
Daytime Running Lights	22-78
Control Unit Input Test	22-78
(Canada)	22-80
Headlight Adjustment	22-81
Headlight Replacement	22-82
Combination Light Switch	22-82
Test/Replacement	22-83
Bulb Replacement	22-83
Taillight Replacement	22-84
High Mount Brake Light	22-85
Replacement	22-85
License Plate Lights	22-85
Replacement	22-86
Brake Pedal Position	22-86
Switch Test	22-86
Turn Signal/Hazard Flasher	
Component Location	22-87
Index	22-87
Circuit Diagram	22-88
Turn Signal/Hazard Relay	22-89
Input Test	22-89
Hazard Warning Switch	22-90
Test	22-90
Entry Light Control System	
Component Location	22-91
Index	22-91
Circuit Diagram	22-92
Ignition Key Switch Test	22-93
Ignition Key Light Test	22-93
Control Unit Input Test	22-94
Interior Lights	
Component Location	22-96
Index	22-96
Circuit Diagram	22-97
Spotlights Test/Replacement	22-98
-With Moonroof	22-98
Ceiling light Test/	22-98
Replacement	22-98
Cargo Area Light Test/	22-99
Replacement	22-99
Hatch Latch Switch Test	22-99
Beverage Holder Light	22-100
Replacement	22-100
Glove Box Light Test/	22-100
Replacement	22-100

*Stereo Sound System

Component Location	22-101
Index	22-101
Circuit Diagram	22-102
Audio Unit Removal/	22-105
Installation	22-105
Audio Unit Connector	22-107
Replacement	22-107
Front Stereo Amplifier	22-109
Connector Replacement-	22-109
With BOSE	22-109
Sound System	22-110
Rear Stereo Amplifier	22-111
Connector Replacement-	22-111
With BOSE	22-111
Sound System	22-111
Speaker Replacement	22-111
Front Stereo Amplifier	22-113
Removal-With BOSE	22-113
Sound System	22-114
Rear Stereo Amplifier	22-115
Removal-With BOSE	22-115
Sound System	22-115
Window Antenna Test	22-115
Window Antenna Repair	22-115
Rear Window Defogger	
Component Location	22-116
Index	22-116
Circuit Diagram	22-117
Function Test	22-118
Defogger Wire Repair	22-118
Window Antenna Coil	22-119
Test	22-119
Noise Condenser Capacity	22-119
Test	22-119
Moonroof	
Component Location	22-120
Index	22-120
Circuit Diagram	22-121
Moonroof Switch Test	22-122
Moonroof Motor Test	22-122
Horn	
Component Location	22-123
Index	22-123
Circuit Diagram	22-124
Horn Test/Replacement	22-124
Horn Switch Test	22-125
Power Mirrors	
Component Location	22-126
Index	22-126
Circuit Diagram	22-127
Function Test	22-128
Power Mirror Switch Test	22-129
Power Mirror Actuator	22-129
Test	22-129
Power Mirror Actuator	22-130
Replacement	22-130
Power Windows	
Component Location	22-132
Index	22-132
Circuit Diagram	22-133
Master Switch Input	22-134
Test	22-134
Master Switch Test/	22-136
Replacement	22-136
Passenger's Switch Test/	22-137
Replacement	22-137
Driver's Window Motor	22-138
Test	22-138
Resetting the Power Window	22-139
Control Unit	22-139
Passenger's Window Motor	22-140
Test	22-140

Wipers/Washers

Component Location	22-141
Index	22-141
Circuit Diagram	22-143
Wiper/Washer Switch	22-145
Test/Replacement	22-146
Control Unit Input Test	22-148
Wiper Motor Test	22-149
Washer Motor Test	22-149
Washer Fluid Level Switch	22-149
Test (Canada)	22-150
Wiper Motor Replacement	22-151
Washer Reservoir	22-151
Replacement	22-152
Washer Tubes	22-152
Replacement	22-152
Accessory Power Socket	
Circuit Diagram	22-153
Accessory Power Socket	22-154
Test/Replacement	22-154
Keyless/Power Door Lock System	
Component Location	22-155
Index	22-155
Circuit Diagram	22-156
Control Unit Input Test	22-158
Keyless Receiver Unit Input	22-161
Test	22-161
Door Lock Knob Switch	22-162
Test	22-162
Door Lock Switch Test	22-163
Hatch Lock Actuator Test	22-164
Door Lock Actuator Test	22-165
Transmitter Test	22-165
Transmitter Programming	22-165
Immobilizer System	
Component Location	22-166
Index	22-166
System Description	22-167
Circuit Diagram	22-168
Troubleshooting	22-169
Immobilizer Control Unit-	22-170
Receiver Replacement	22-170
Multiplex Control System	
Component Location	22-171
Index	22-171
Circuit Diagram	22-172
System Description	22-174
Troubleshooting	22-175
Multiplex Control Unit	22-179
Input Test	22-179
Security Alarm System	
Component Location	22-182
Index	22-182
Circuit Diagram	22-184
System Description	22-186
Security Control Unit Input	22-187
Test	22-187
Hood Switch Test	22-190
Security Hatch Latch	22-190
Switch Test	22-190
Door Key Cylinder Switch	22-191
Test	22-191
Security Horn Test	22-191
Seat Heaters-Canada	
Component Location	22-192
Index	22-192
Circuit Diagram	22-193
Seat Heater Switch	22-194
Test/Replacement	22-194
Seat Heater Test	22-194

