


PGM-FI System

Input Shaft (Mainshaft) Speed Sensor Replacement (M/T)


1. Disconnect the input shaft (mainshaft) speed sensor 3P connector (A).

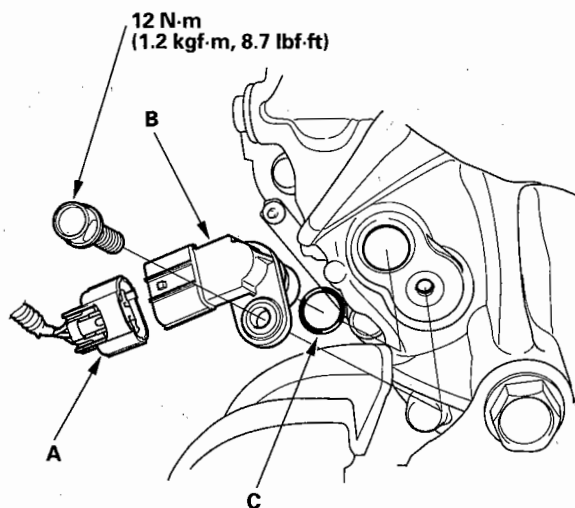

2. Remove the input shaft (mainshaft) speed sensor (B).
3. Install the sensor in the reverse order of removal with a new O-ring (C).

Output Shaft (Countershaft) Speed Sensor Replacement (M/T)

1. Disconnect the output shaft (countershaft) speed sensor 3P connector (A).

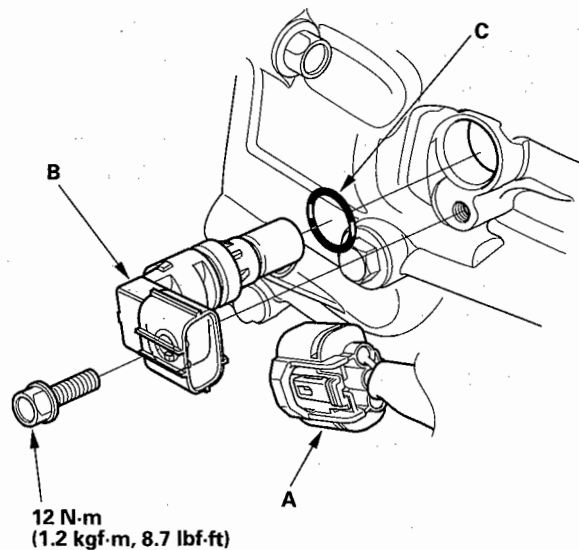

2. Remove the output shaft (countershaft) speed sensor (B).
3. Install the sensor in the reverse order of removal with a new O-ring (C).