

VSA System Components

DTC Troubleshooting Index

DTC	Detection Item	Note
11	Right-front wheel sensor (open/short to body ground/short to power)	(see page 19-63)
12	Right-front wheel sensor (electrical noise/intermittent interruption)	(see page 19-65)
13	Left-front wheel sensor (open/short to body ground/short to power)	(see page 19-63)
14	Left-front wheel sensor (electrical noise/intermittent interruption)	(see page 19-65)
15	Right-rear wheel sensor (open/short to body ground/short to power)	(see page 19-63)
16	Right-rear wheel sensor (electrical noise/intermittent interruption)	(see page 19-65)
17	Left-rear wheel sensor (open/short to body ground/short to power)	(see page 19-63)
18	Left-rear wheel sensor (electrical noise/intermittent interruption)	(see page 19-65)
21	Right-front magnetic encoder	(see page 19-66)
22	Left-front magnetic encoder	(see page 19-66)
23	Right-rear pulser	(see page 19-66)
24	Left-rear pulser	(see page 19-66)
25	Yaw rate sensor	(see page 19-67)
26	Lateral acceleration sensor	(see page 19-69)
27	Steering angle sensor	(see page 19-71)
31	ABS solenoid	(see page 19-73)
32	ABS solenoid	(see page 19-73)
33	ABS solenoid	(see page 19-73)
34	ABS solenoid	(see page 19-73)
35	ABS solenoid	(see page 19-73)
36	ABS solenoid	(see page 19-73)
37	ABS solenoid	(see page 19-73)
38	ABS solenoid	(see page 19-73)
41	Right-front wheel lock	(see page 19-74)
42	Left-front wheel lock	(see page 19-74)
43	Right-rear wheel lock	(see page 19-74)
44	Left-rear wheel lock	(see page 19-74)
51	Motor lock	(see page 19-74)
52	Motor stuck OFF	(see page 19-74)
53	Motor stuck ON	(see page 19-75)
54	Fail-safe relay	(see page 19-76)
61	Low + B-FSR voltage	(see page 19-77)
62	High + B-FSR voltage	(see page 19-77)
64	Sensor power voltage	(see page 19-78)
65	Brake fluid level	(see page 19-79)
66	VSA pressure sensor (inside of VSA modulator-control unit)	(see page 19-79)
68	Brake pedal position switch	(see page 19-80)
71	Different diameter tire	(see page 19-80)
81	Central Processing Unit (CPU)	(see page 19-81)
83	ECM/PCM	(see page 19-82)
84	VSA sensor neutral position	(see page 19-82)
86	F-CAN communication	(see page 19-83)
107	TCS operation	(see page 19-83)
108	VSA operation	(see page 19-83)
112	Internal power source stuck OFF	(see page 19-84)
121	VSA solenoid	(see page 19-85)
122	VSA solenoid	(see page 19-85)
123	VSA solenoid	(see page 19-85)
124	VSA solenoid	(see page 19-85)