



VSA System Components

Circuit Diagram

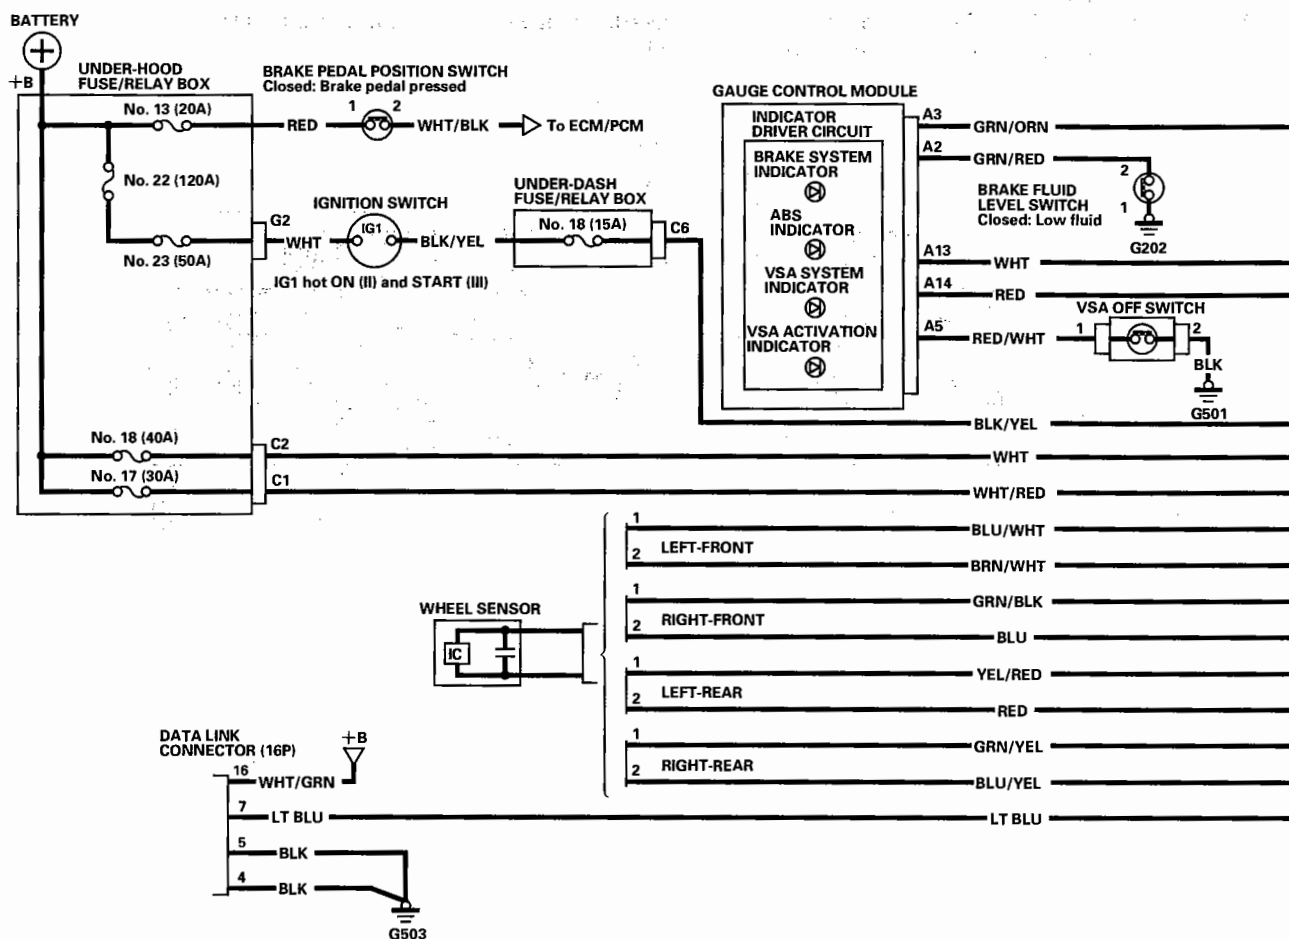

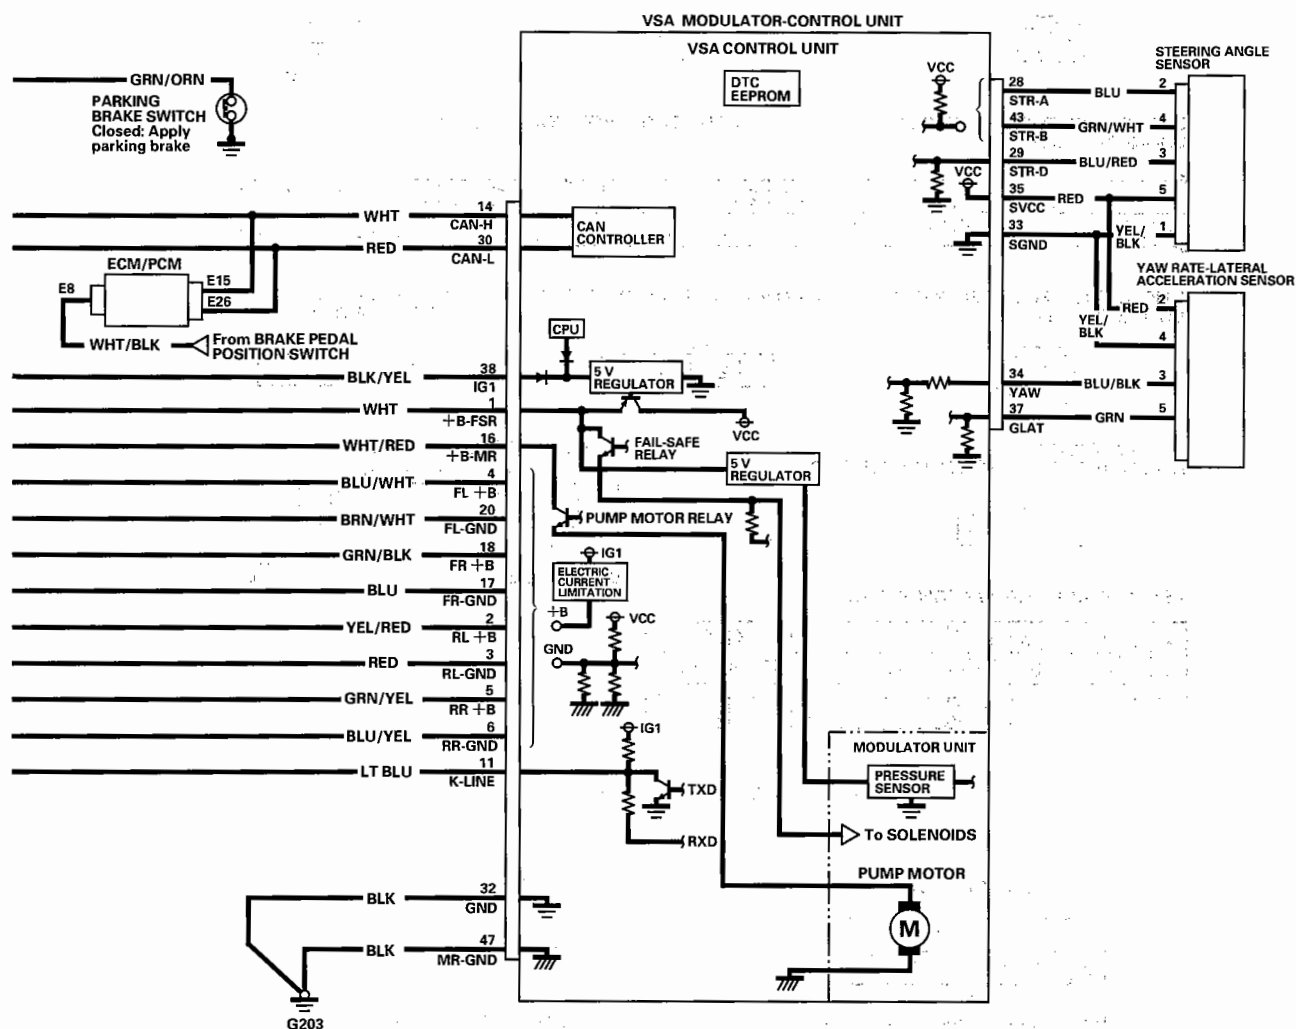

(cont'd)

VSA System Components

Circuit Diagram (cont'd)

 
UNDER-HOOD FUSE/RELAY BOX
CONNECTOR C (2P)




BRAKE FLUID LEVEL SWITCH
2P CONNECTOR



BRAKE PEDAL POSITION SWITCH
4P CONNECTOR



 UNDER-DASH FUSE/RELAY BOX
CONNECTOR C (12P)




GAUGE CONTROL MODULE CONNECTOR A (30P)




UNDER-HOOD FUSE/RELAY BOX
CONNECTOR G (2P)



 
VSA OFF SWITCH 5P CONNECTOR



STEERING ANGLE SENSOR
5P CONNECTOR

 

 
YAW RATE/LATERAL
ACCELERATION SENSOR 5P CONNECTOR



ECM/PCM CONNECTOR E (31P)



 VSA CONTROL UNIT 47P CONNECTOR



Wire side of female terminals

DATA LINK CONNECTOR (16P)



Terminal side of female terminals

WHEEL SENSOR 2P CONNECTOR
FRONT/REAR



Terminal side of male terminals