


Receiver/Dryer Desiccant Replacement

NOTE: Install the Receiver/Dryer as quickly as possible to preset the system from absorbing moisture from the air.

1. Remove the condenser (see page 21-85).
2. Remove the bolts from the condenser, then remove the receiver/dryer (A), the bracket (B) and the O-rings (C).

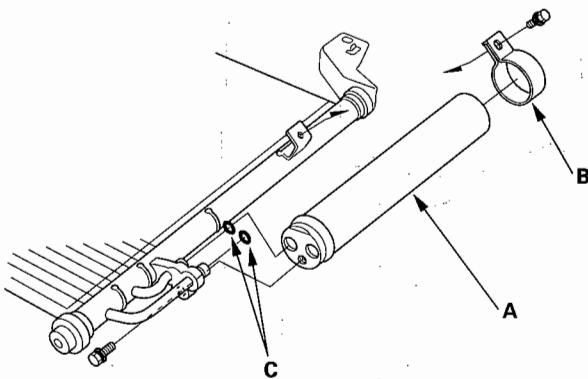

3. Install the receiver/dryer in the reverse order of removal, and note these items:

Replace the O-rings with new ones, and apply a thin coat of refrigerant oil (DENSO ND-OIL 8) before installing them. Be sure to use the correct O-rings for HFC-134a (R-134a) to avoid leakage.