




线束和搭铁位置



发动机室

* 0 1

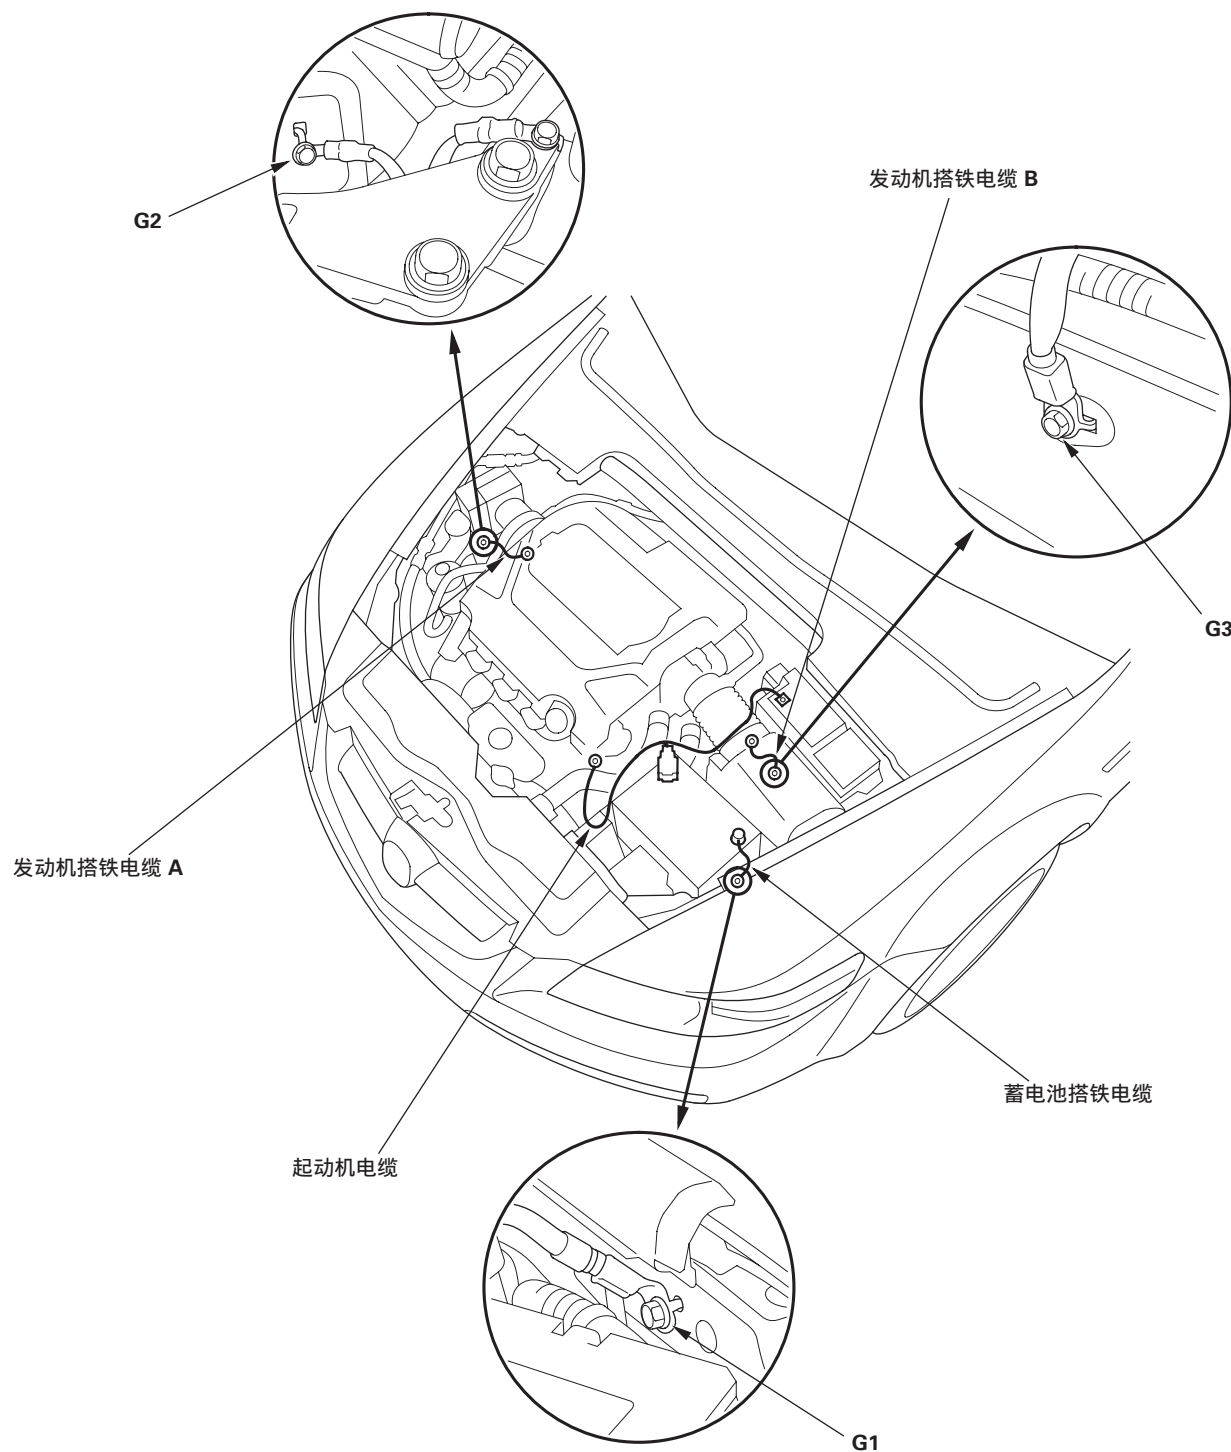




线束和搭铁位置

发动机室（续）

* 0 1

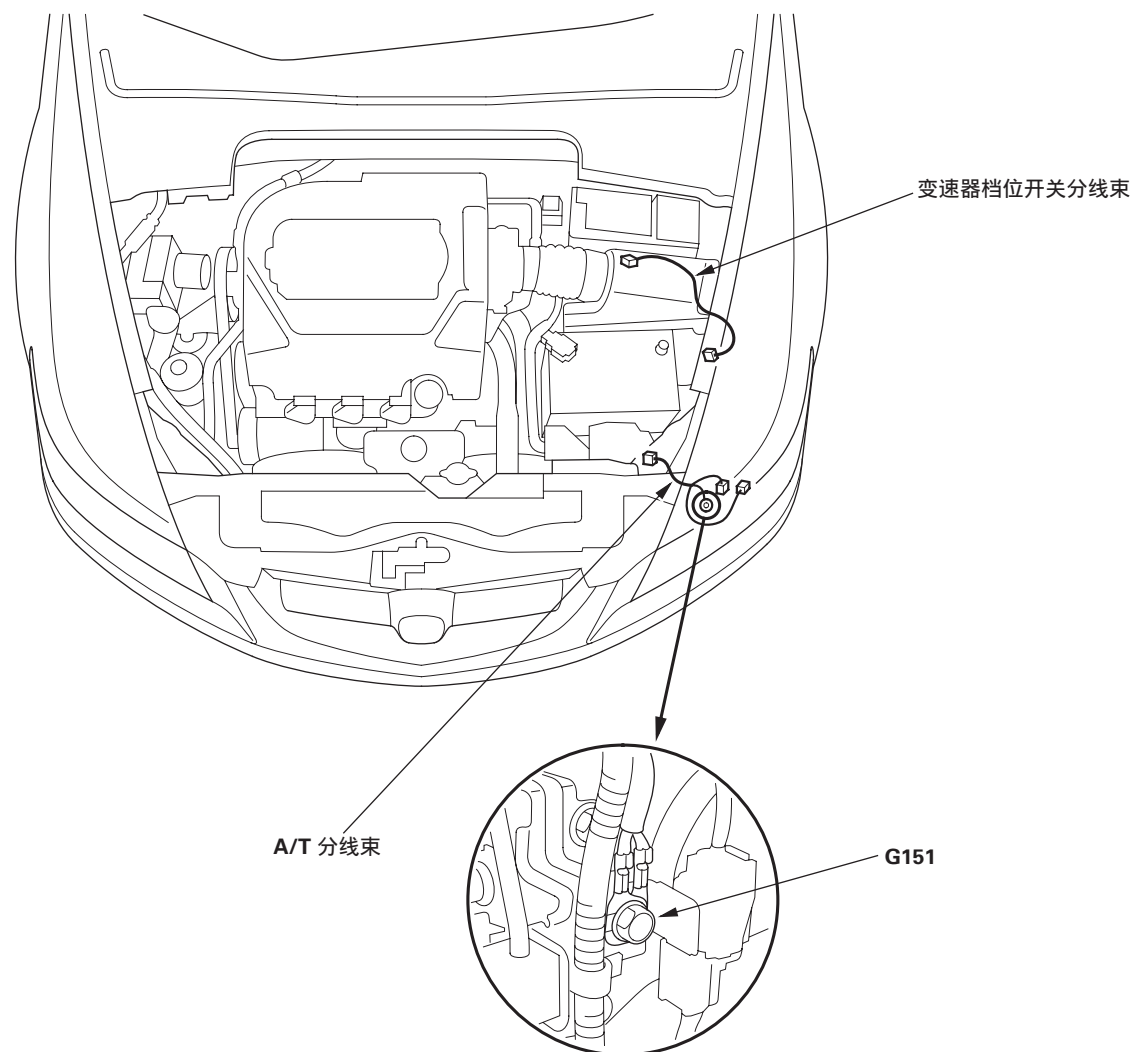


22-34





* 0 1

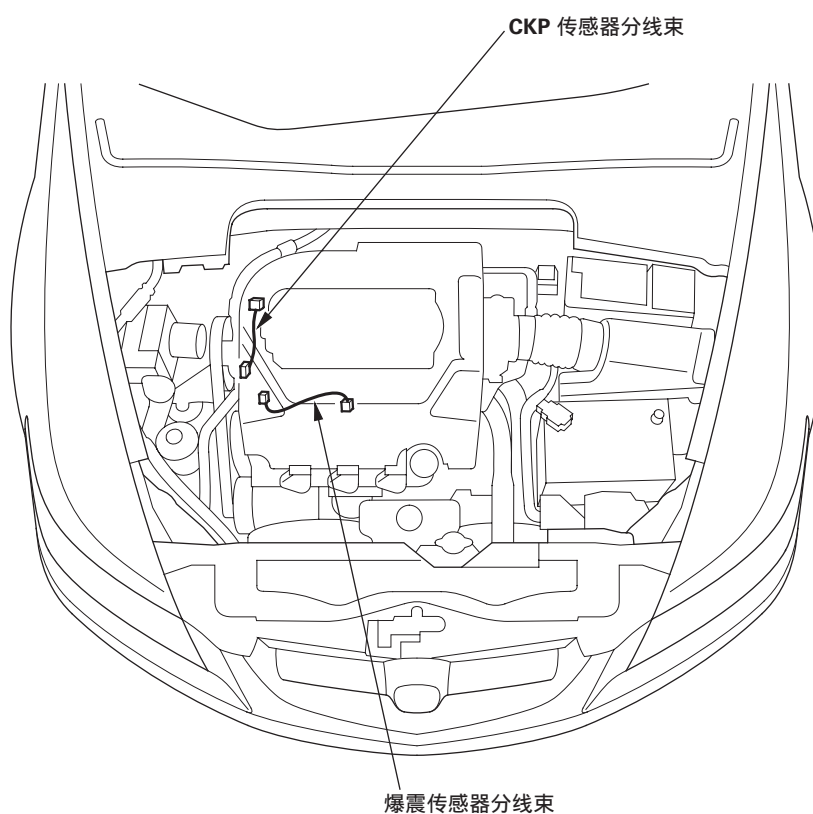




线束和搭铁位置

发动机室（续）

* 0 1

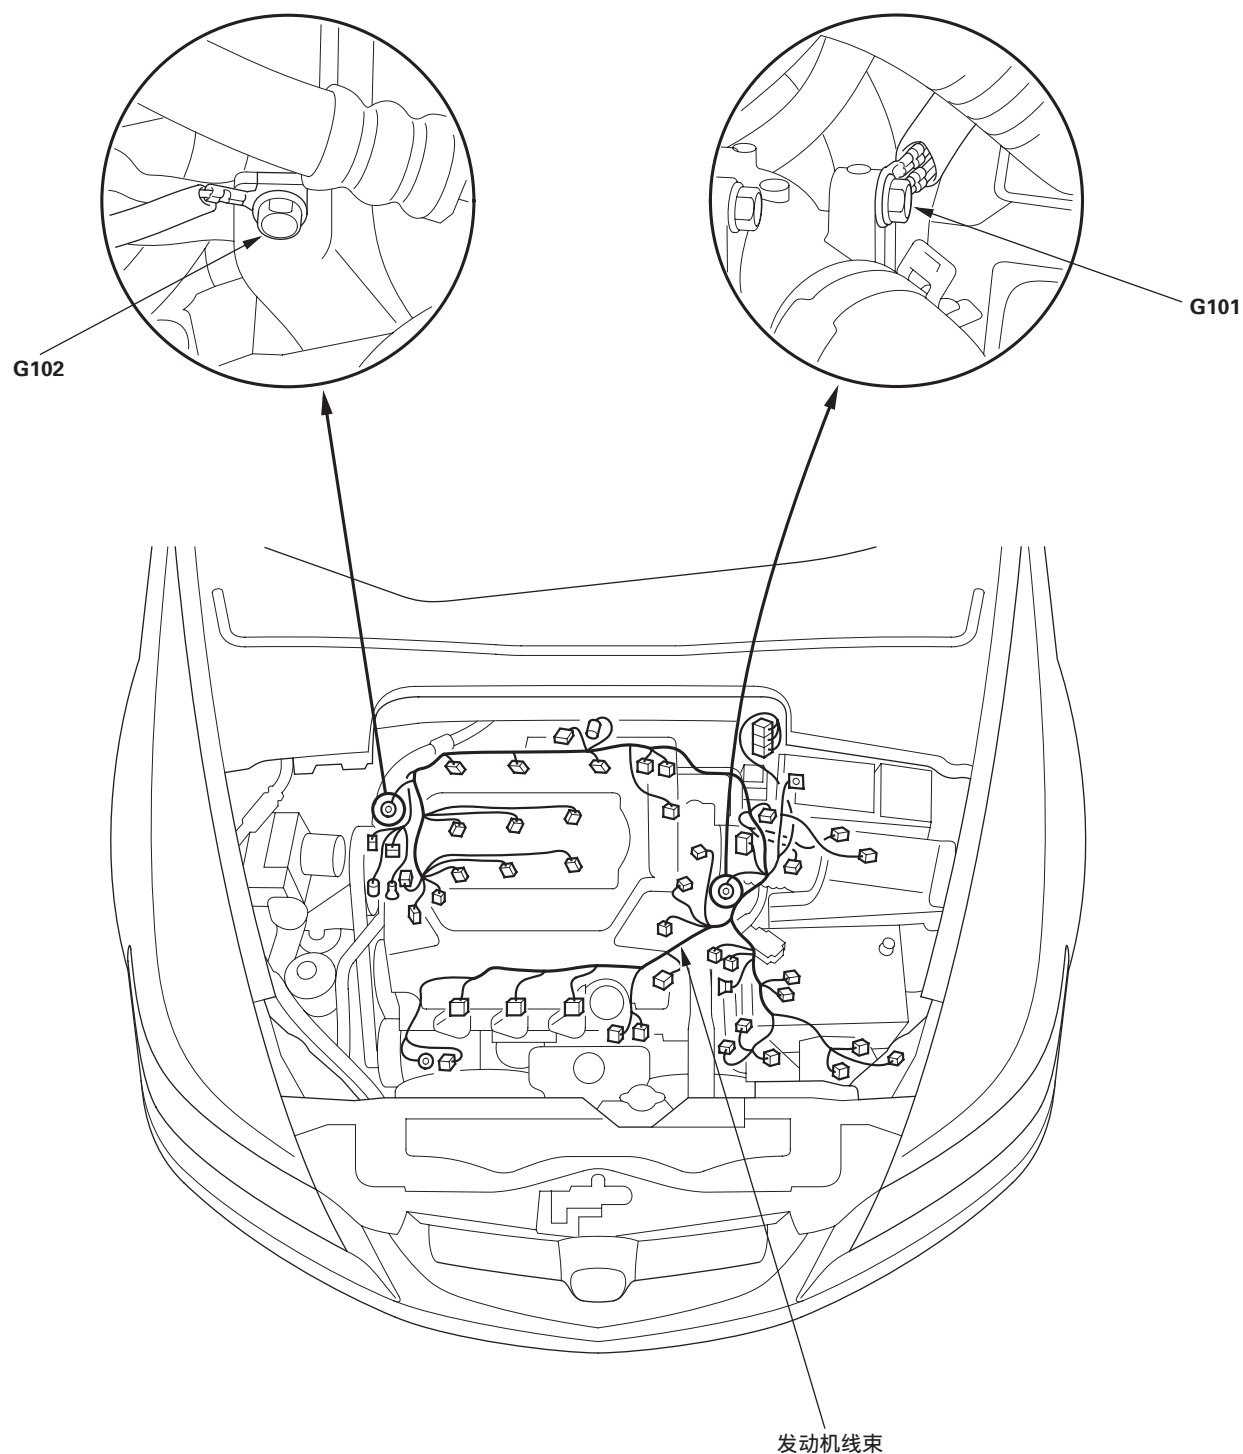


22-36





* 0 1

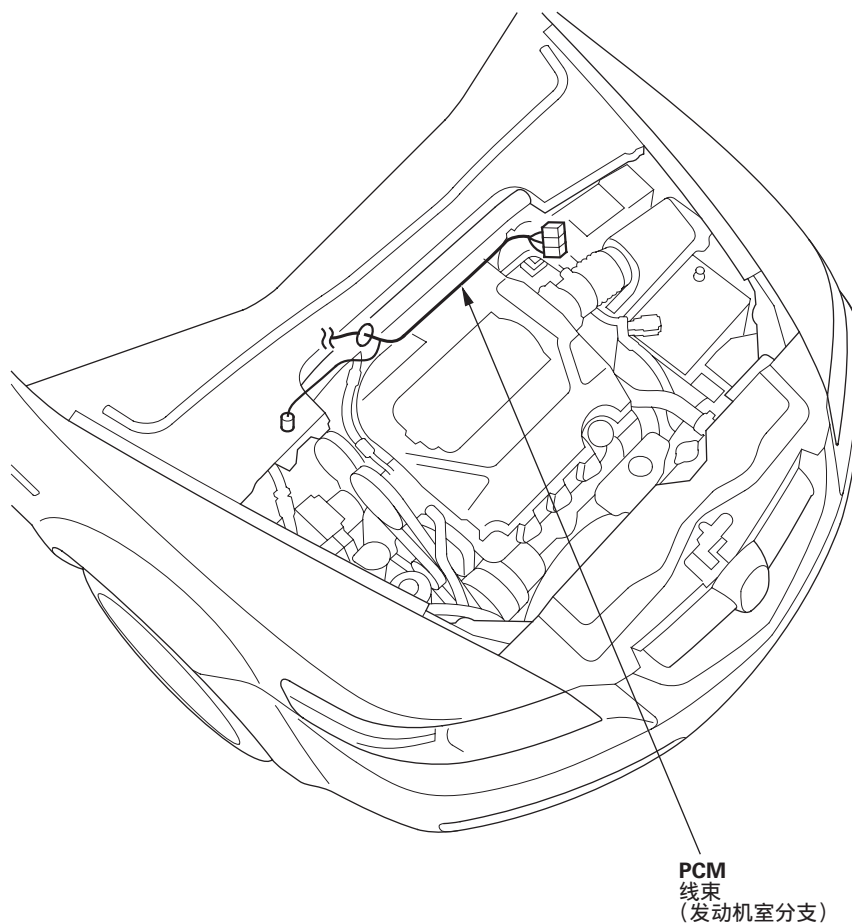

PCM
线束
(发动机室分支)






线束和搭铁位置

发动机室（续）

* 0 1

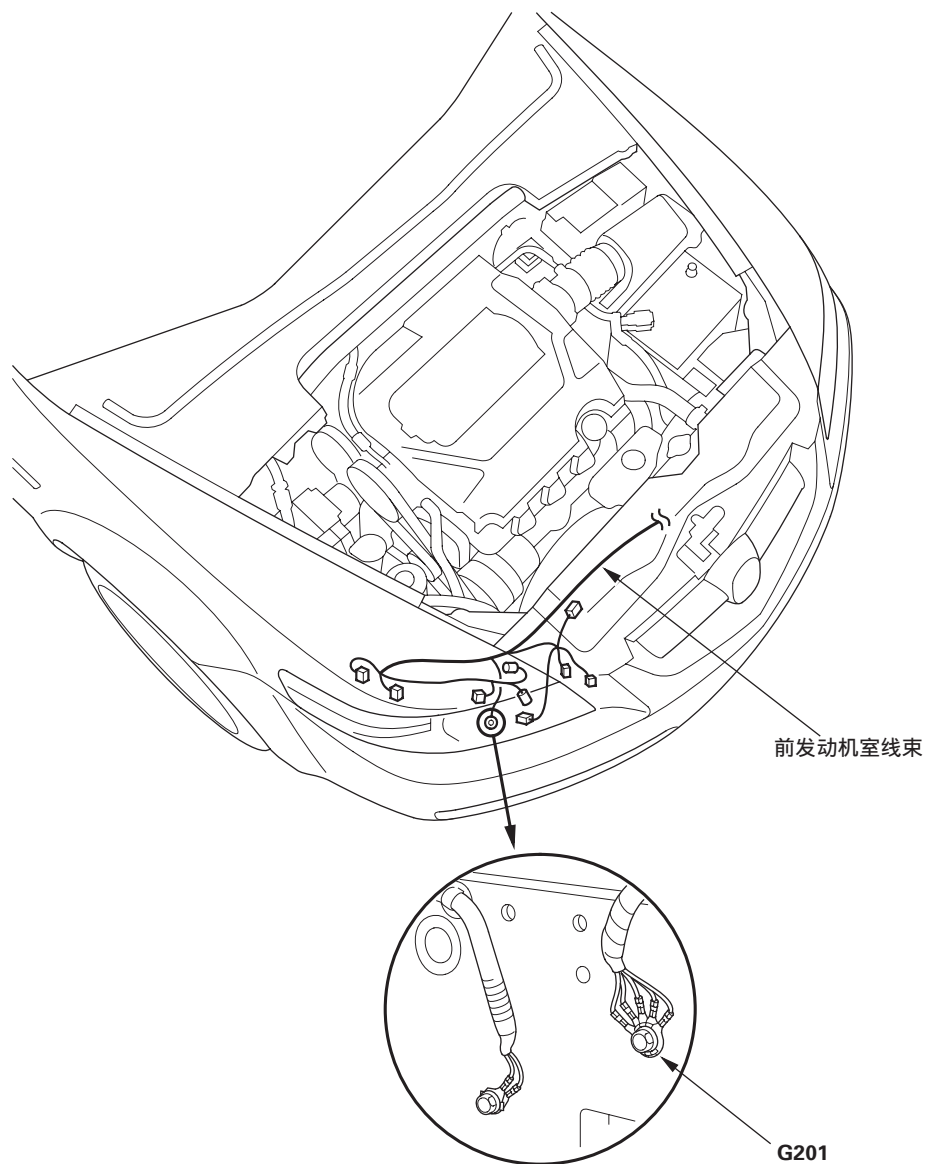



22-38





 * 0 2

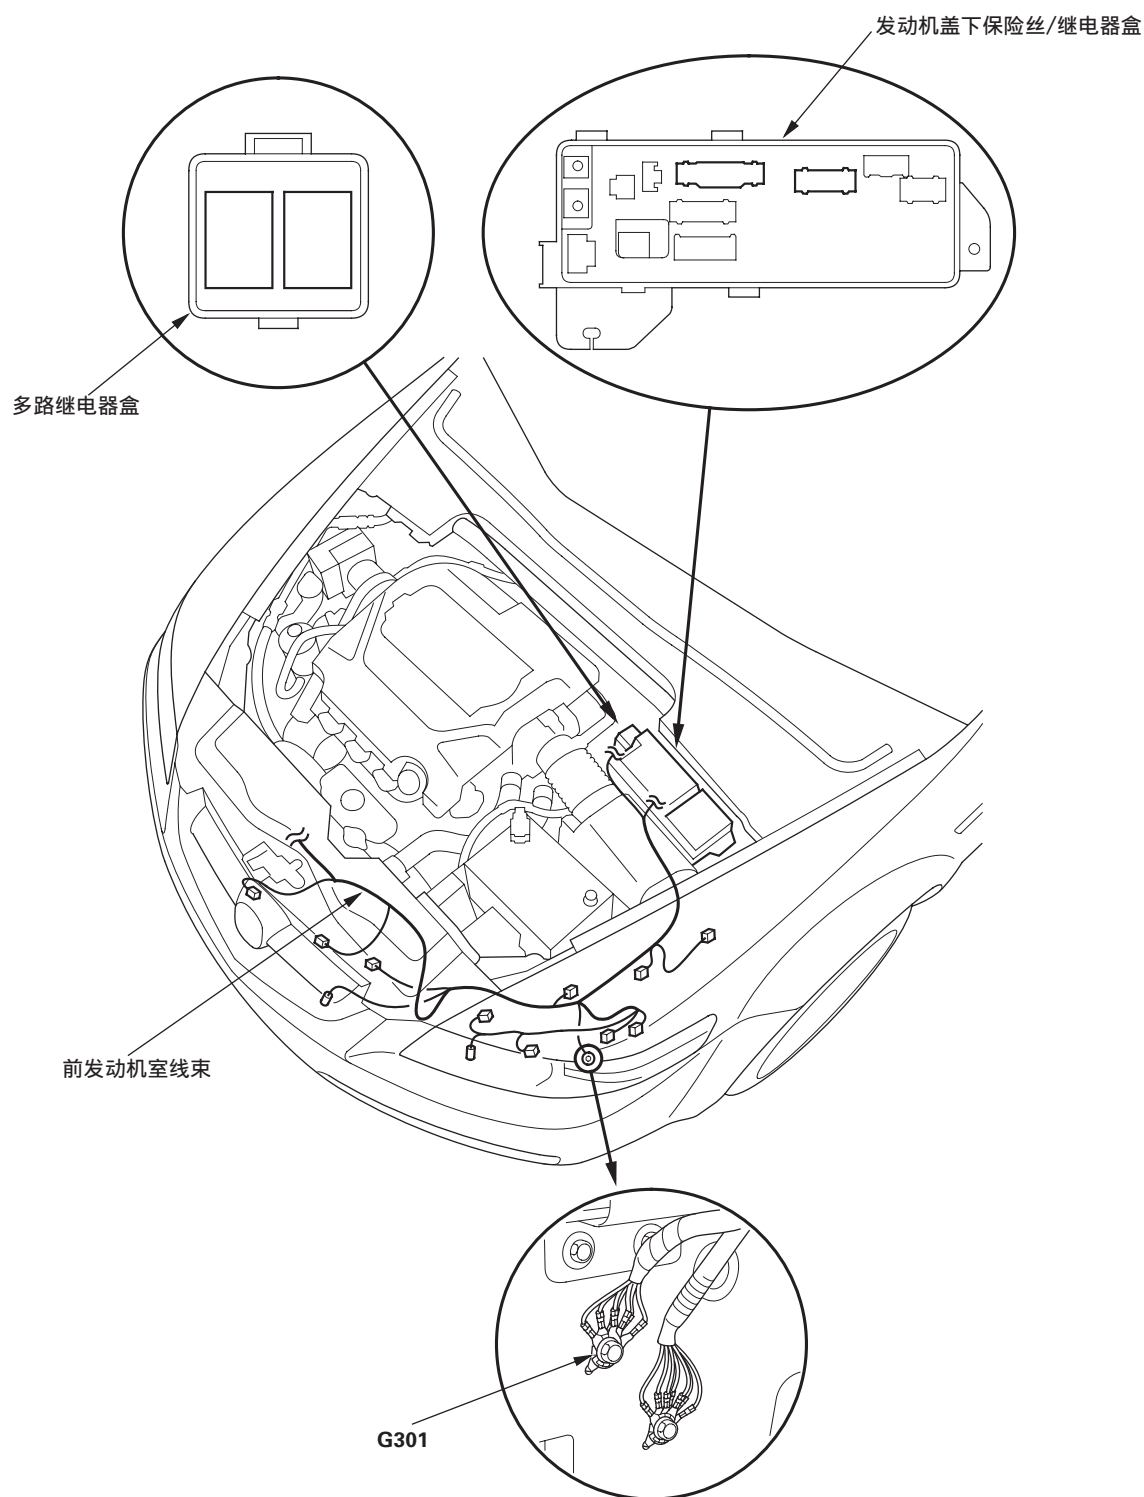




线束和搭铁位置

发动机室（续）

* 0 1


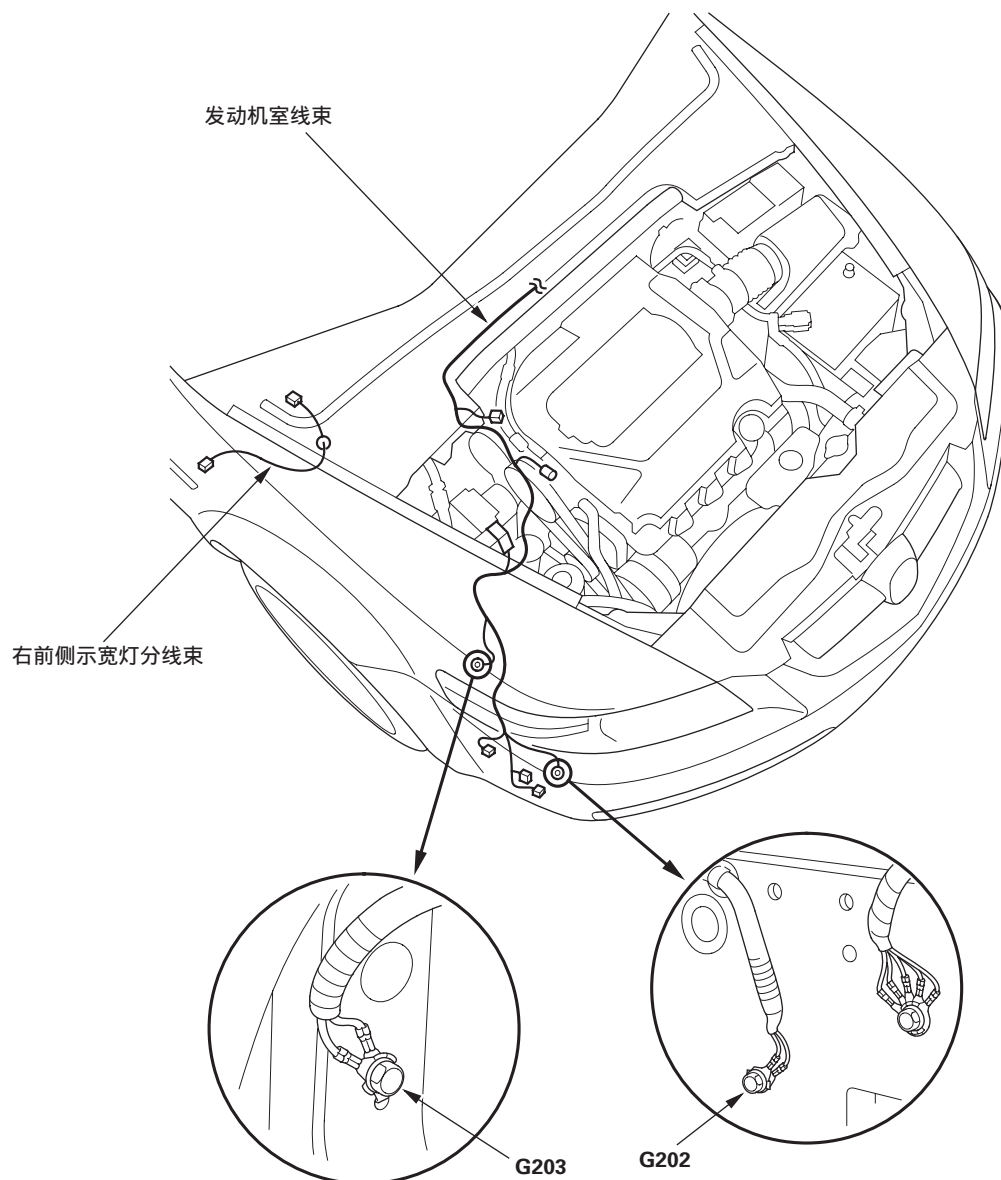


22-40





 * 0 2

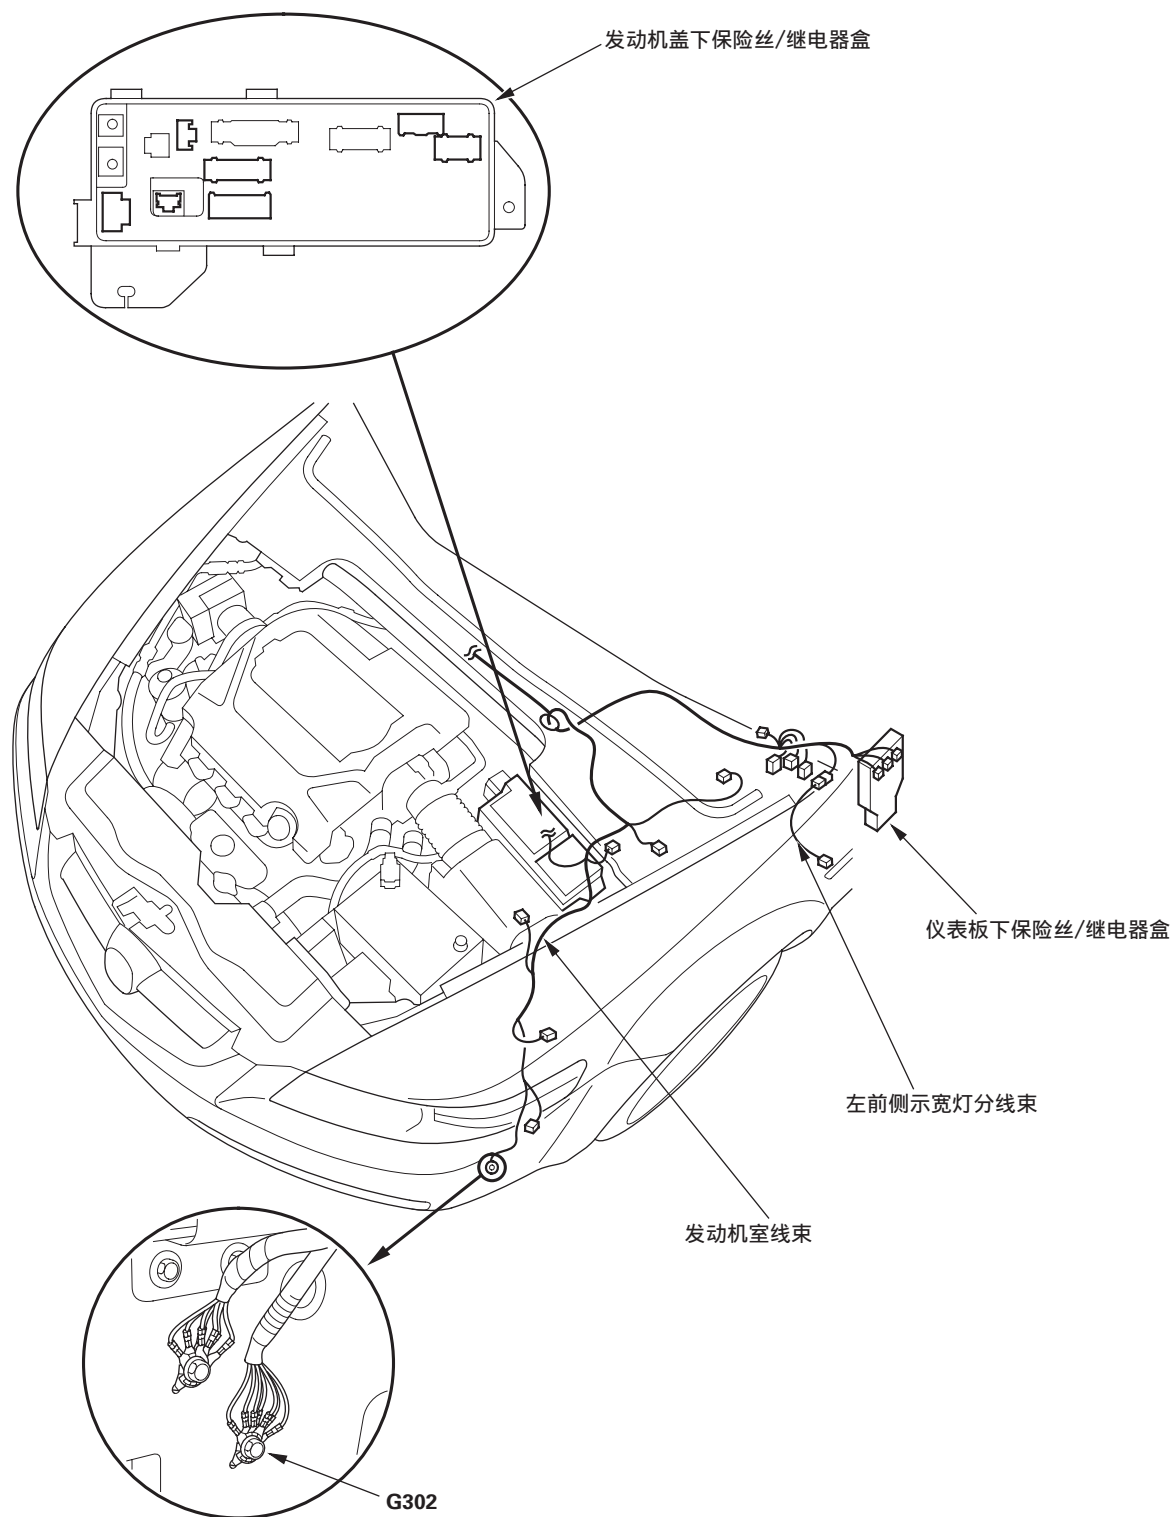




线束和搭铁位置

仪表板

* 0 2

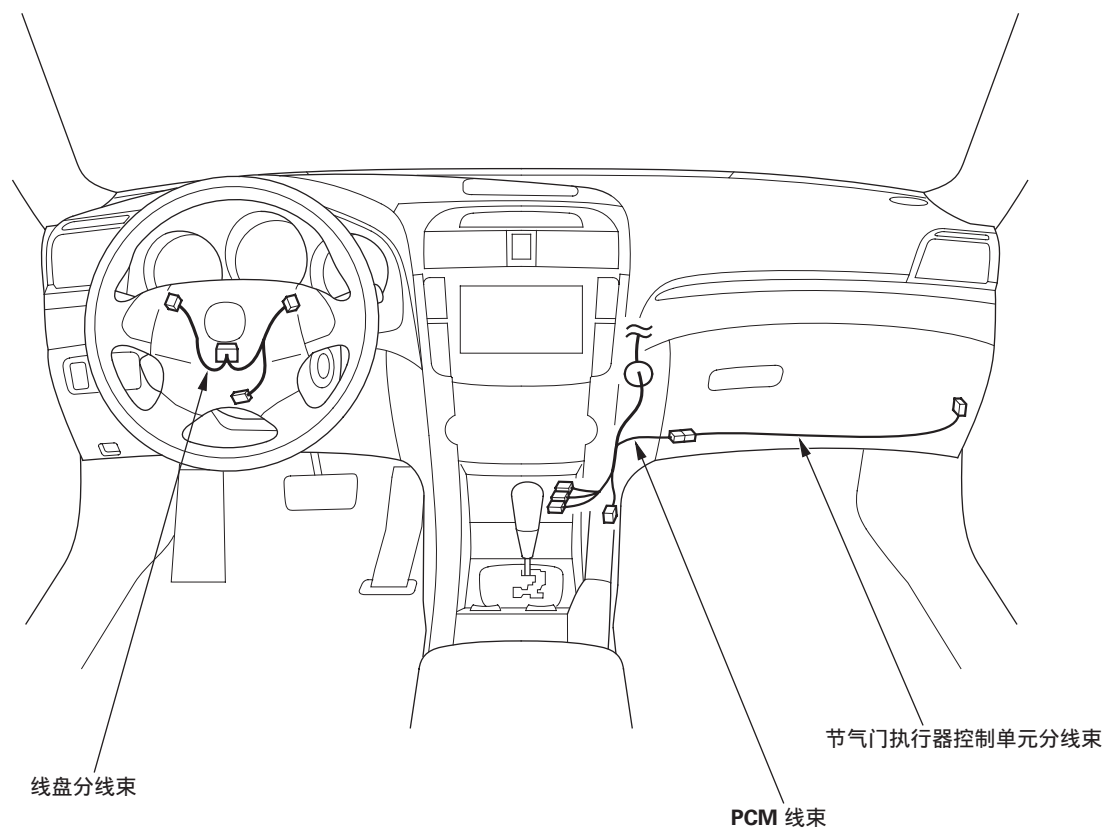


22-42





* 0 1

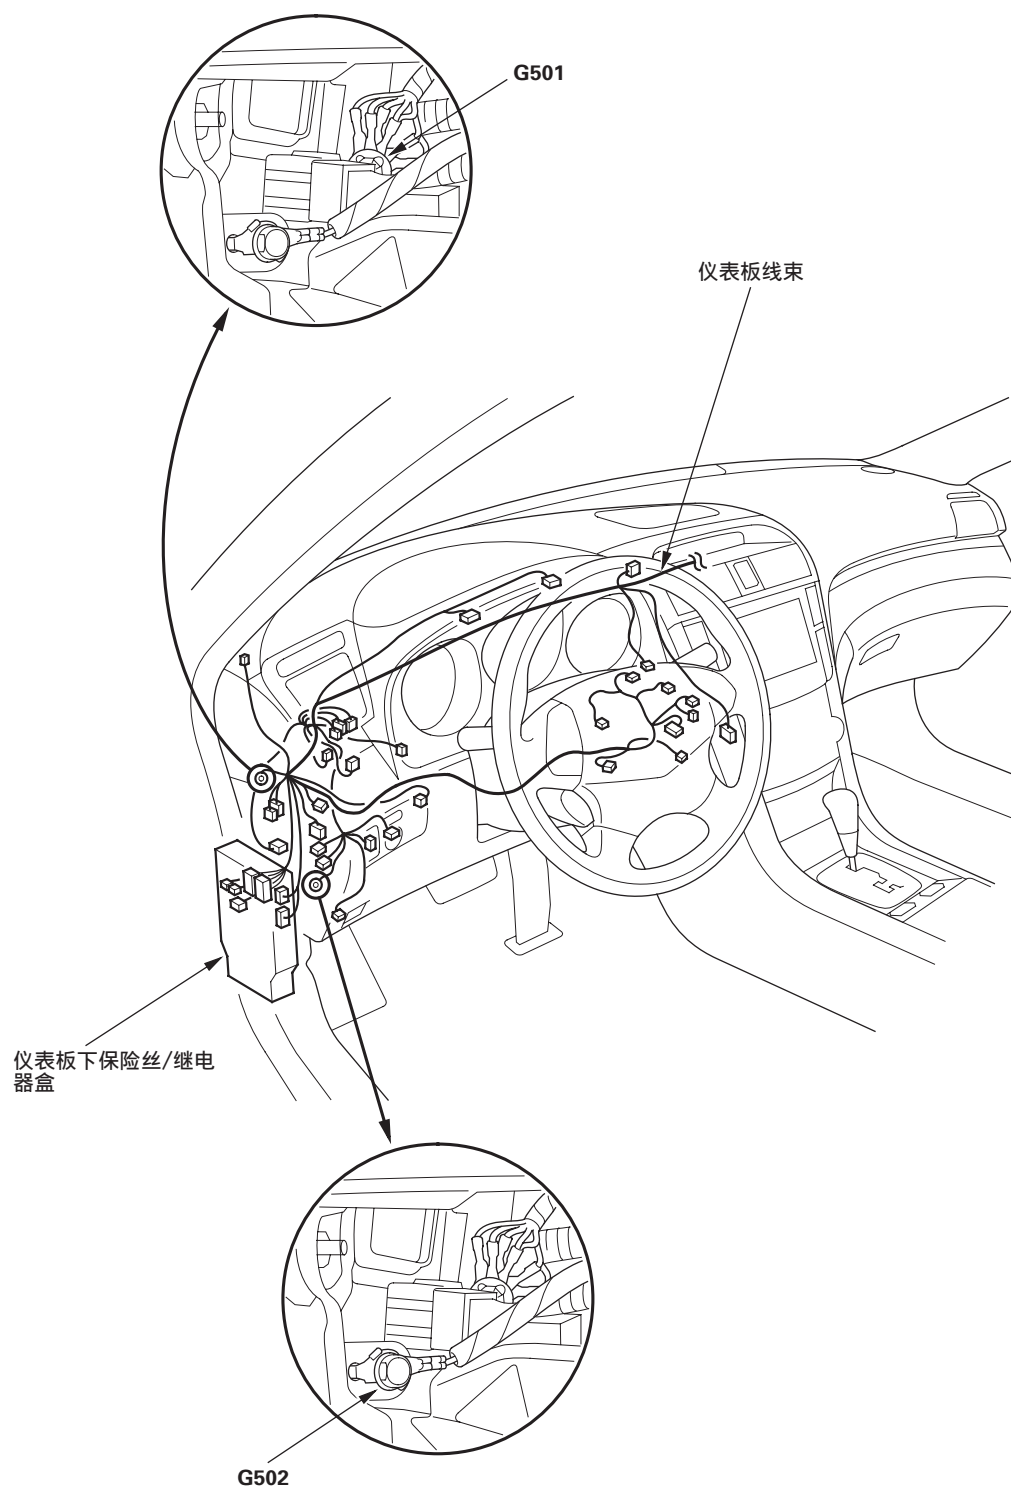

(续)

22-43

 





线束和搭铁位置

仪表板（续）


* 0 2

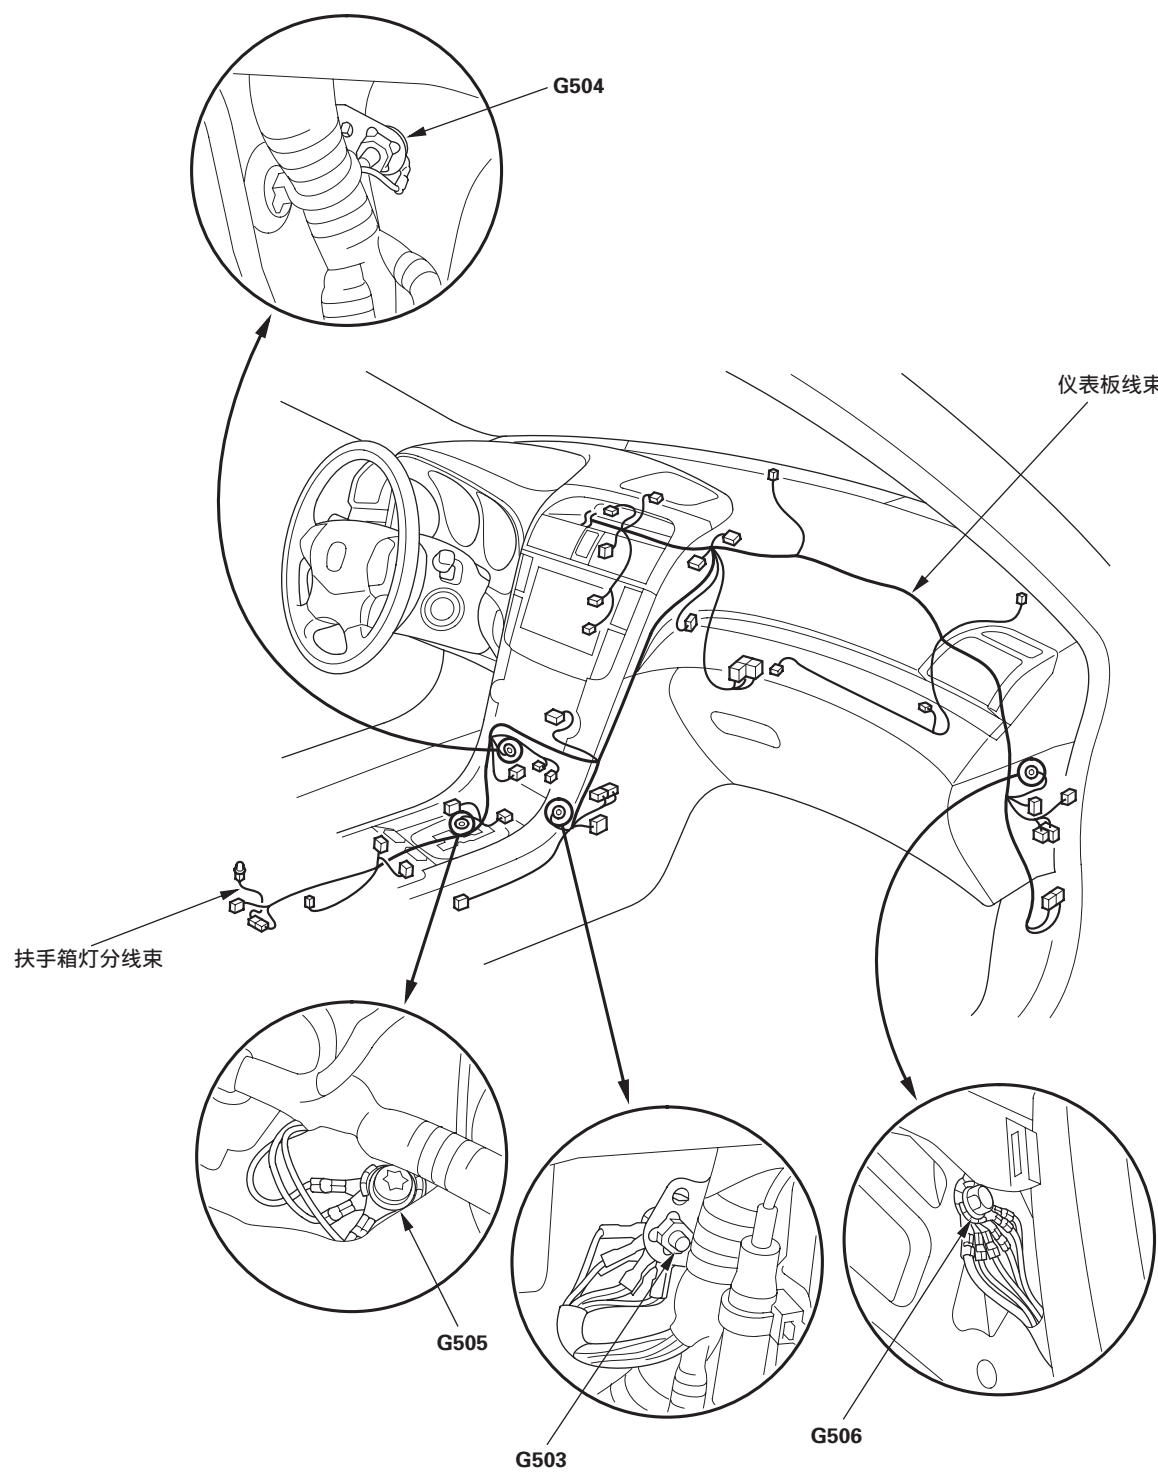



地板

* 0 1

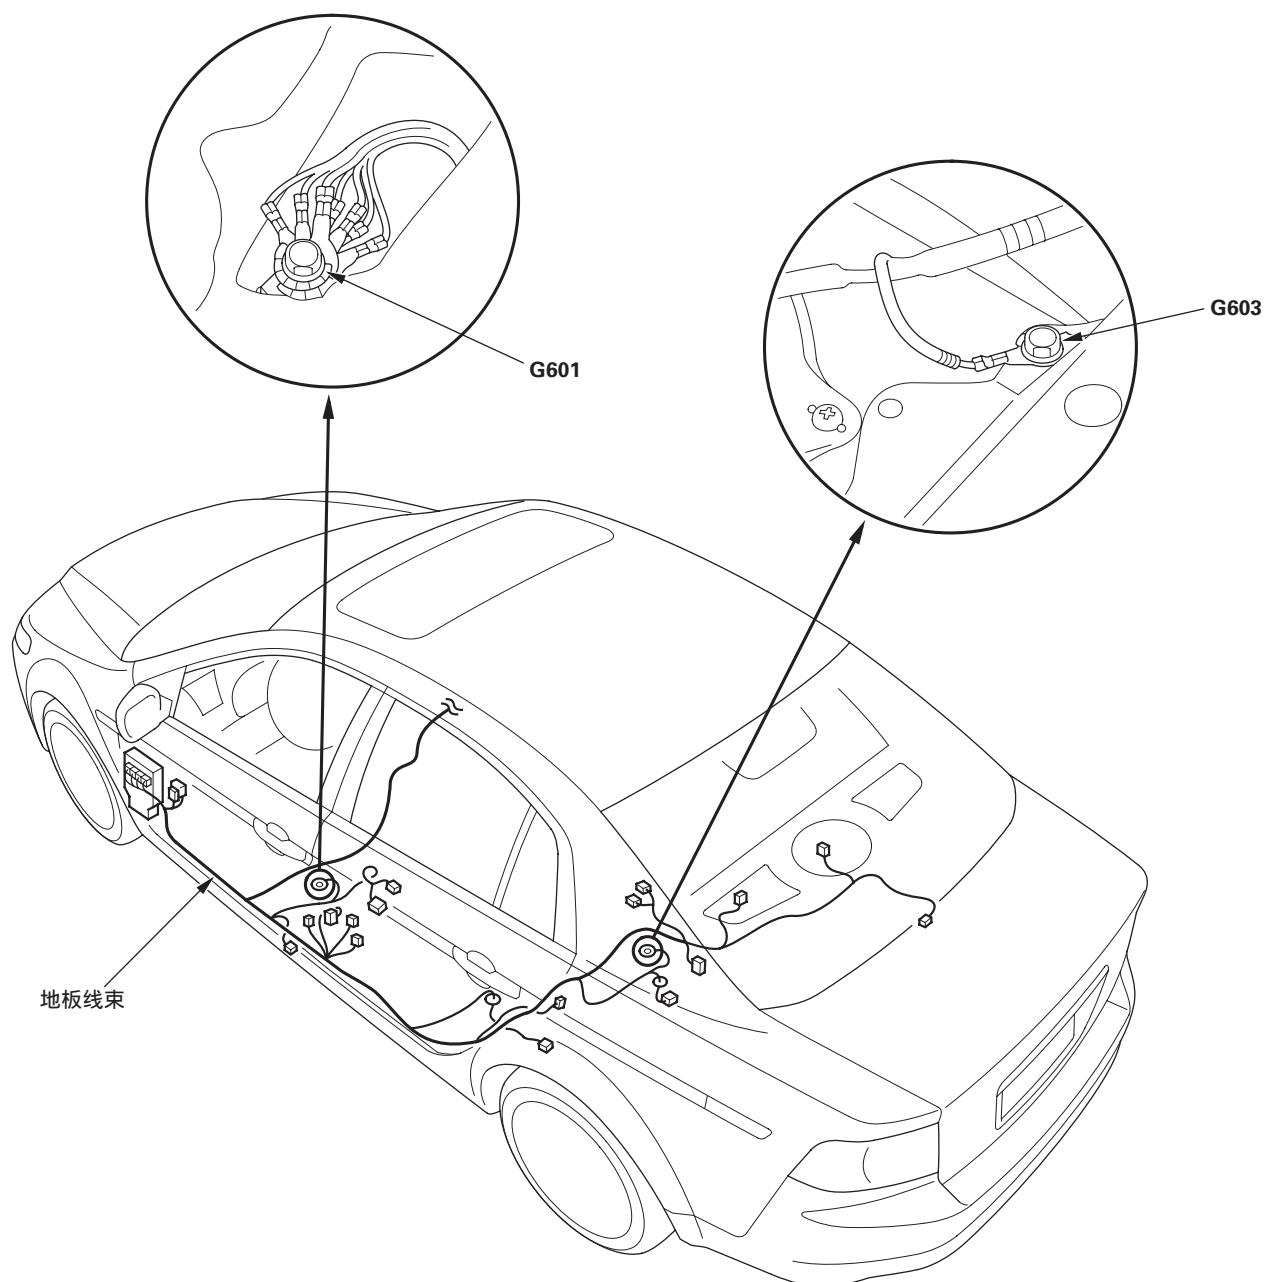

(续)

22-45






线束和搭铁位置

地板 (续)


* 0 2

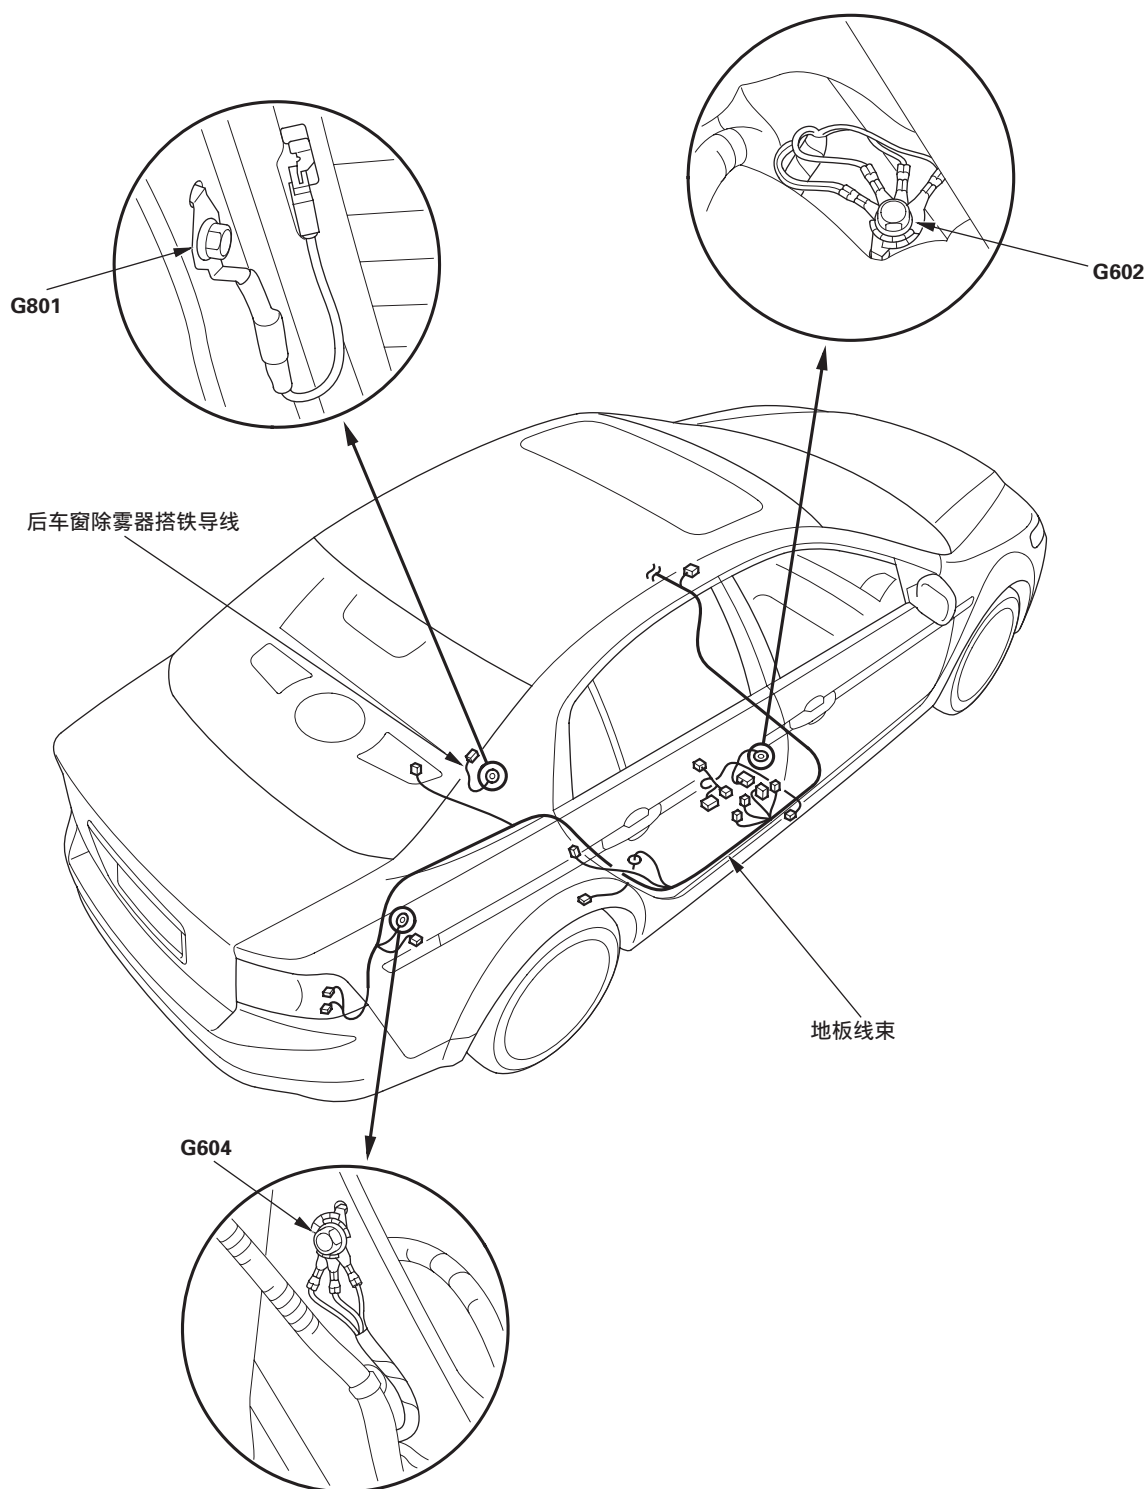



后

* 0 1

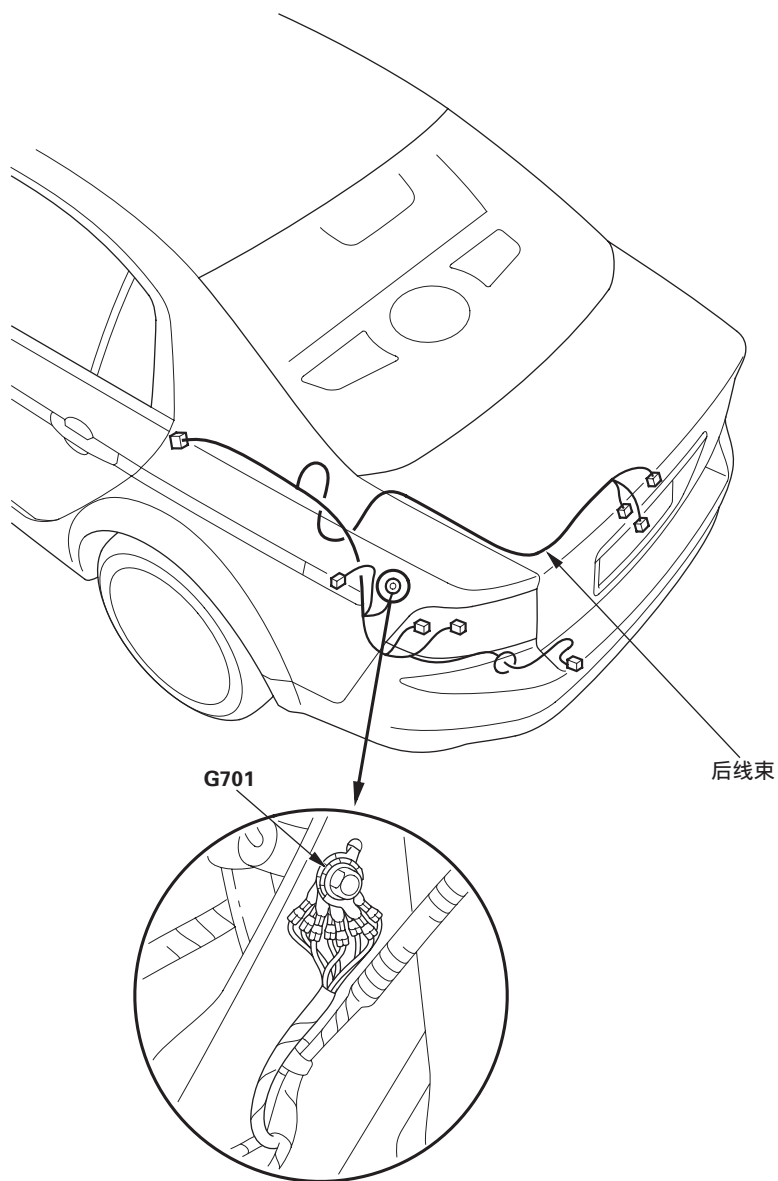

22-47






线束和搭铁位置

车顶

* 0 1

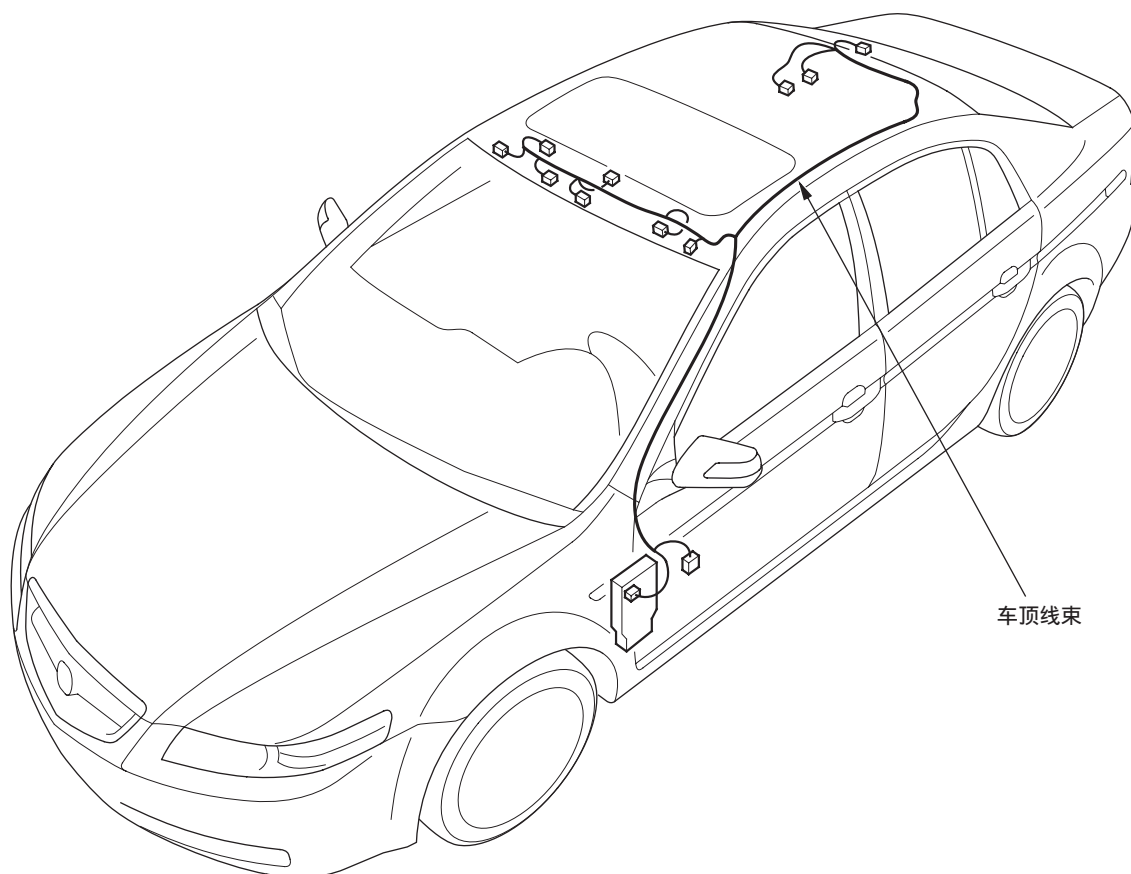

车顶线束


22-48






车门

* 0 1

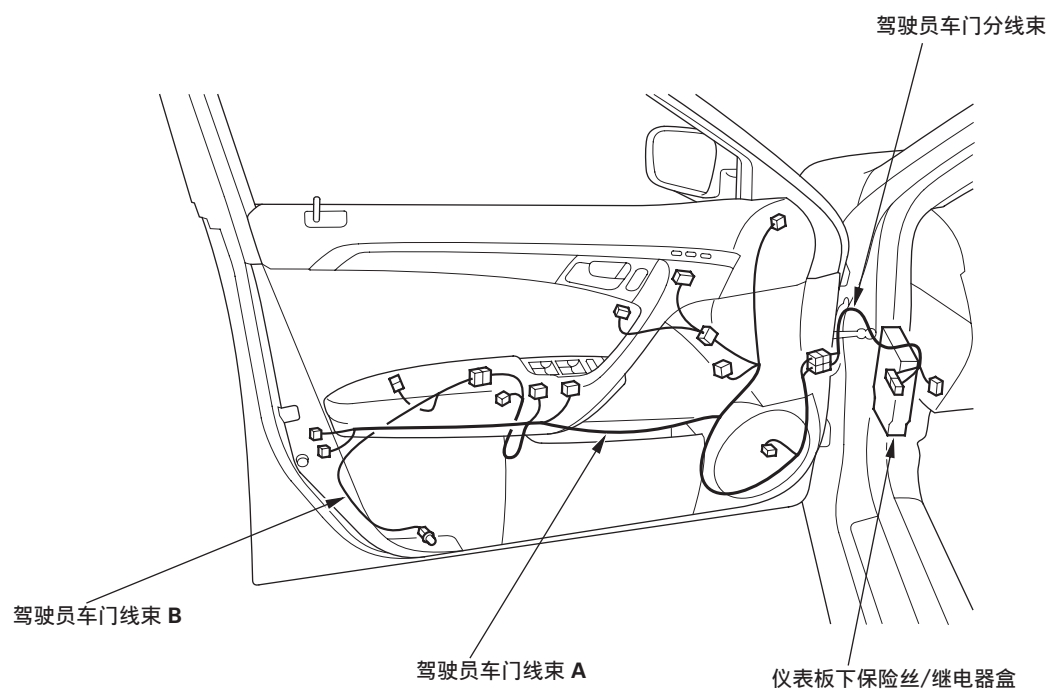

* 0 2

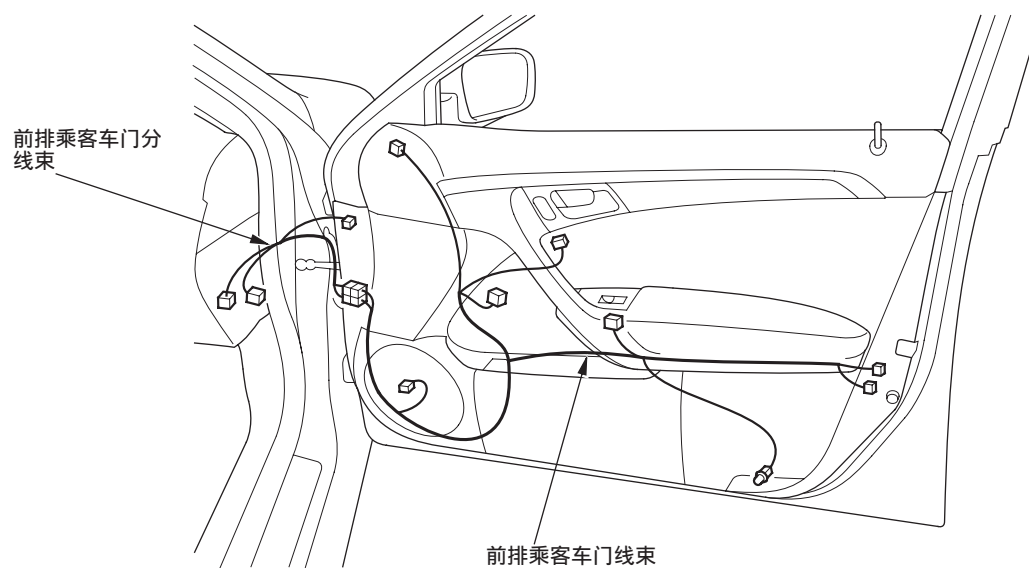




线束和搭铁位置

车门 (续)


* 0 1

左后车门线束

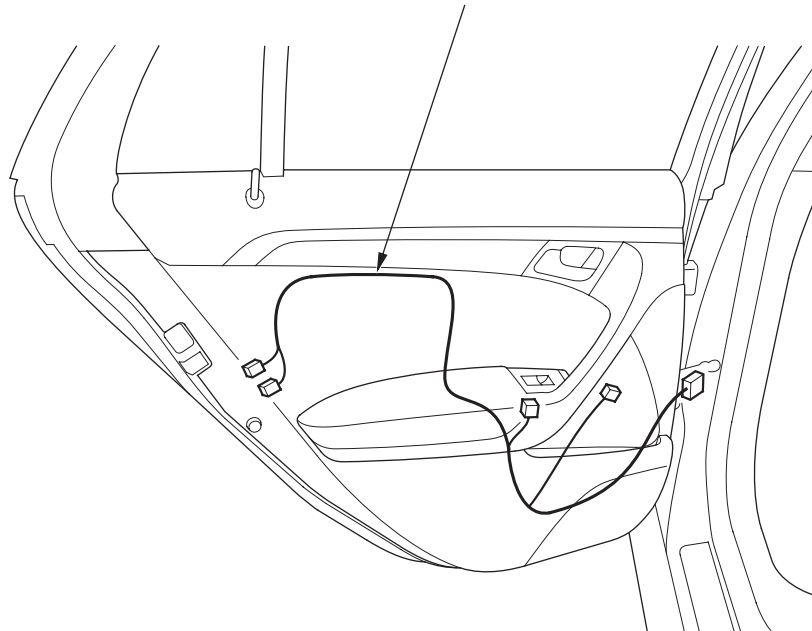

* 0 2

右后车门线束

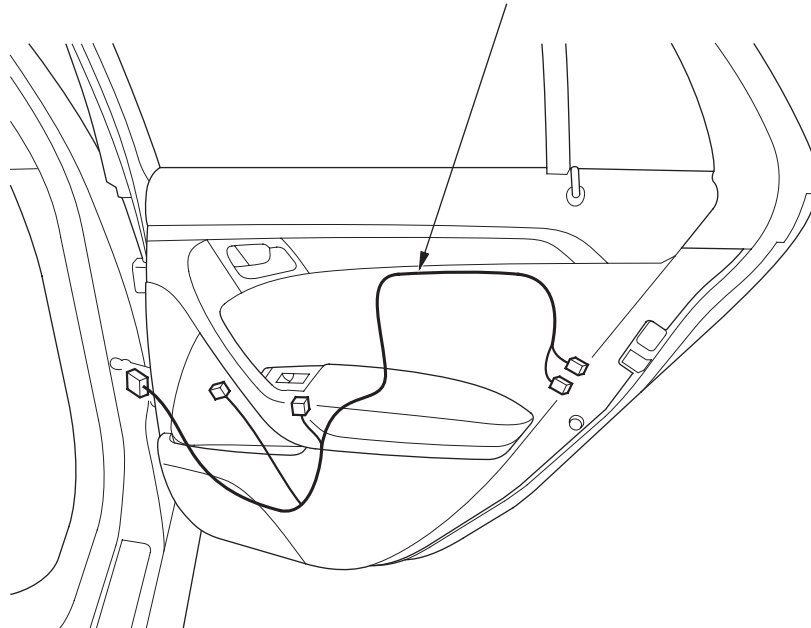


22-50





座椅

* 0 1

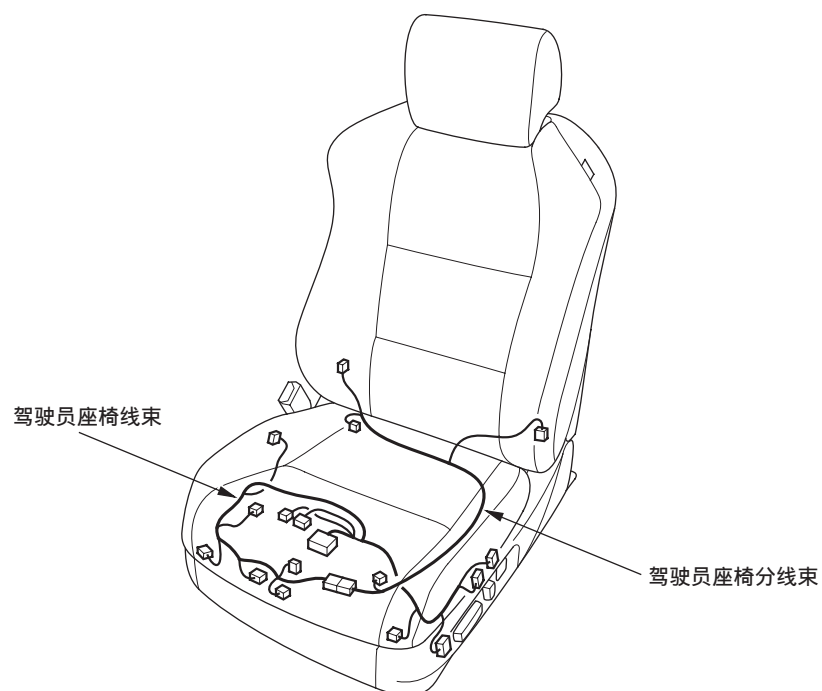

* 0 2






线束和搭铁位置

SRS

* 0 3

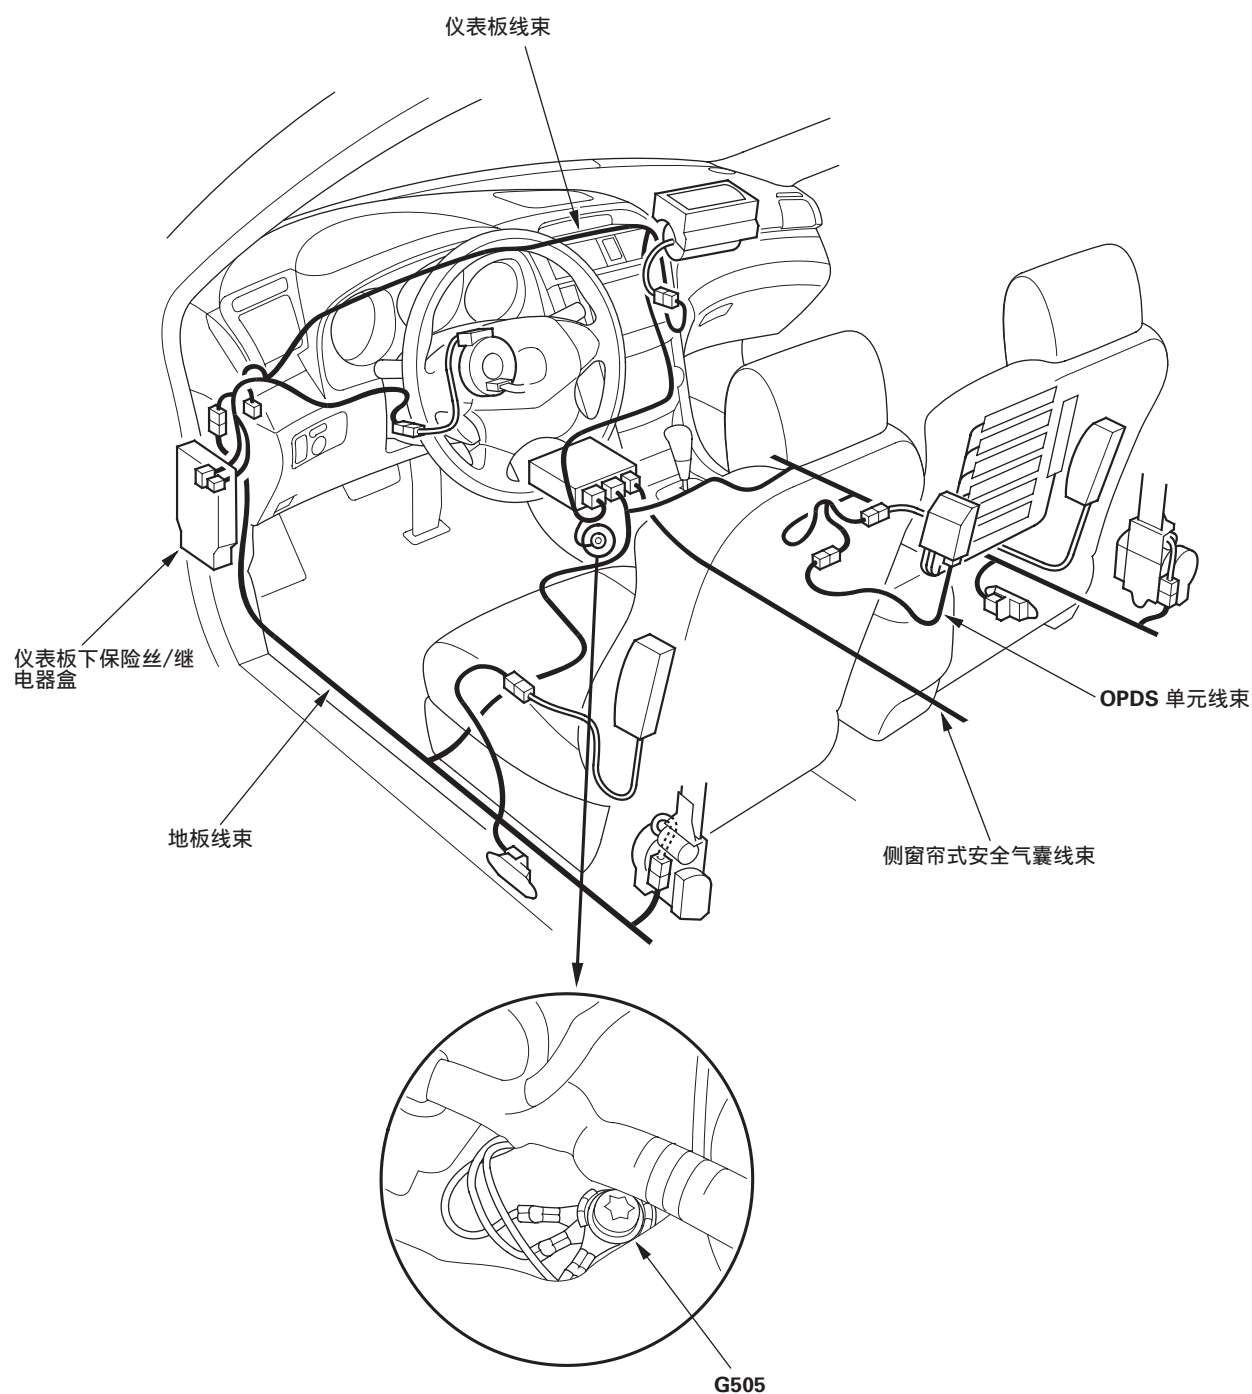


22-52





* 0 4

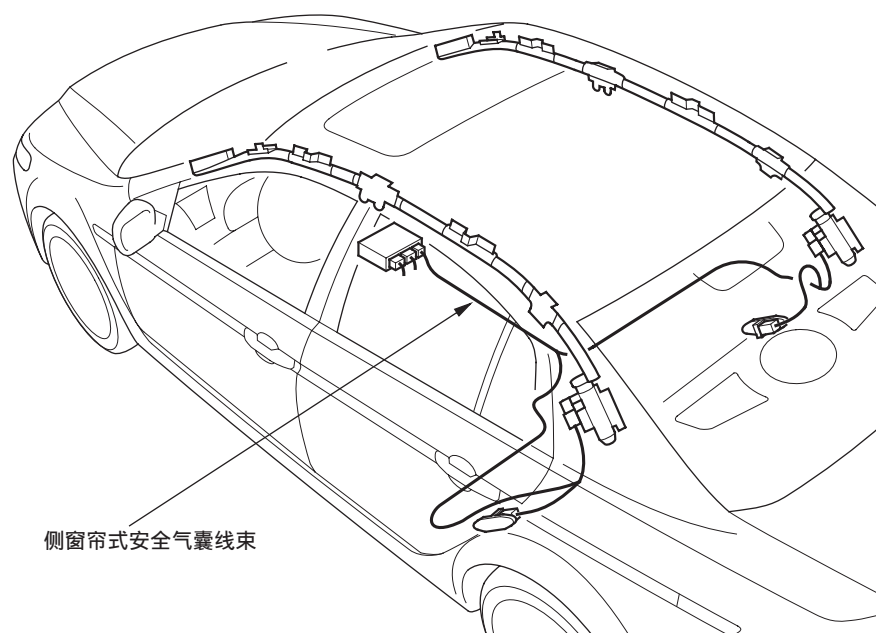




线束和搭铁位置

空调

* 0 1

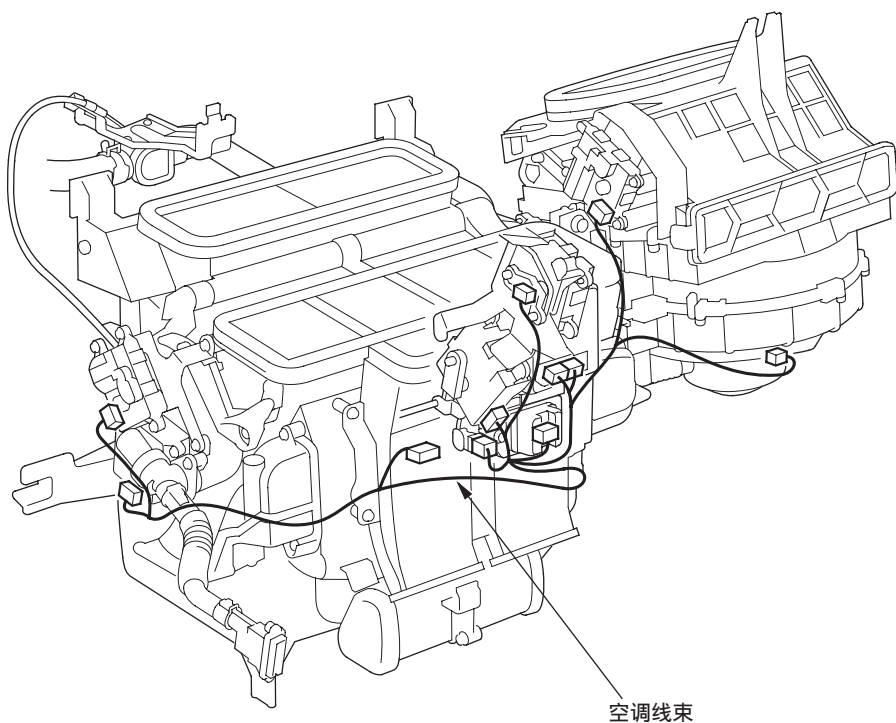

22-54

