



Diagram illustrating the wiring connections for the vehicle's electrical system, showing the connection of various components to the main power distribution point.

Components and Connections:

- BCM (Body Control Module):** Connected to the main power line via a fuse.
- ESP (Electronic Stability Program):** Connected to the main power line via a fuse.
- Relays:** Various relays are connected to the main power line, including the BCM relay, ESP relay, and others.
- Wiring Harnesses:** The diagram shows the routing of wires from the main power line to the various components, including the BCM, ESP, and relays.

Terminal Numbers:

Component	Terminal Numbers
BCM	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24
ESP	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24
Relays	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24

郇 總	縑曾圩廁	皐瓚軌圩
V1	T21-4302010FC	皐瓚斗2.0VVT+QR525/缺宸圩