



20.06.05 驾驶座线束

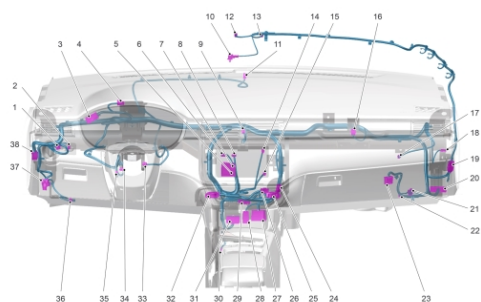

位置	部件号	位置	部件号
1	417A	20	H26-2
2	417B	21	H4-3
3	500	22	412FR
4	200B	23	471B/470B
5	550B	24	H4-2
6	550C	25	450B
7	550A	26	451B
8	550D	27	H22-2
9	H4-2	28	H4-1
10	565	29	H5-2
11	461	30	G5
12	555	31	471A/470A
13	556	32	451A/450A
14	550H	33	951
15	550E	34	950A
16	910	35	950B
17	411	36	412FL
18	911	37	351
19	H5-3	38	H16-1

20.06.06 接地

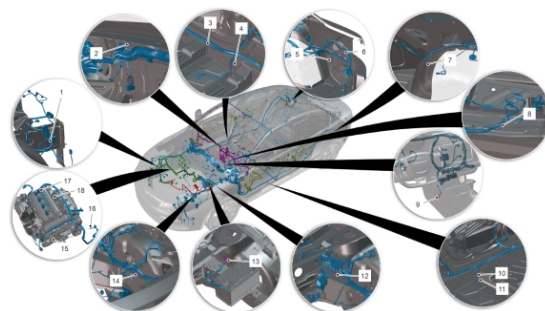

位置	接地编号	位置	接地编号
1	G4	10	G8
2	G6	11	G10
3	G9	12	G3
4	G11	13	G1
5	G14	14	G2
6	G12	15	G15
7	G13	16	G17
8	G7	17	G16
9	G5	18	G18