



部件索引(5)

CI-5

	英文名称	中文名称	部件编号	电路图页码
O	Oil Pressure Switch	机油压力开关	C227 / E83	(SD940-5) / (SD940-10)
	Overhead Console Lamp	车顶控制台灯	R01	(SD929-1)
	Oxygen Sensor (DOWN)	氧传感器(下)	C117 / C230	(SD313-5) / (SD313-13) / (SD313-22) / (SD313-30) / (SD313-38)
	Oxygen Sensor (UP)	氧传感器(上)	C116-1 / C116-2 / C229	(SD313-5) / (SD313-13) / (SD313-22) / (SD313-30) / (SD313-38)
P	Paddle Down Shift Switch (LH)	拨片式降档开关(左)	M80	(SD450-2) / (SD450-7)
	Paddle Up Shift Switch (RH)	拨片式升档开关(右)	M81	(SD450-2) / (SD450-7)
	Parking Brake Switch	驻车制动开关	F33	(SD587-1) / (SD588-1) / (SD940-2) / (SD940-7)
	Passenger Air Bag	助手席安全气囊	M54	(SD569-1)
	Passenger Curtain Air Bag	助手席帘式安全气囊	F17	(SD569-1)
	Passenger Cushion Warmer	助手席座椅座垫加热器	S21	(SD889-2)
	Passenger Door Lock Actuator	助手席门锁执行器	D21	(SD813-2)
	Passenger Door Speaker	助手席车门扬声器	D23	(SD961-2) / (SD969-2)
	Passenger Door Switch	助手席车门开关	F12	(SD929-2)
	Passenger Front Impact Sensor	助手席正面碰撞传感器	E38	(SD569-1)
	Passenger Power Outside Mirror	助手席电动室外后视镜	D30	(SD876-2) / (SD878-1) / (SD879-1) / (SD879-3) / (SD925-2) / (SD957-5)
	Passenger Power Window Motor	助手席电动门窗电机	D24	(SD824-2) / (SD824-5)
	Passenger Power Window Switch	助手席电动门窗开关	D22	(SD824-2) / (SD824-5)
	Passenger Seat Belt Buckle Switch	助手席安全带扣环开关	F20	(SD952-7)
	Passenger Seat Belt Pretensioner	助手席安全带拉紧器	F16	(SD569-2)
	Passenger Seat Warmer Module	助手席座椅加热器模块	S20	(SD889-2)
	Passenger Side Air Bag	助手席侧面安全气囊	F18	(SD569-2)
	Passenger Side Impact Sensor	助手席侧面碰撞传感器	F19	(SD569-2)
	Passenger Smart Key Outside Handle	助手席智能钥匙外侧手柄	D31	(SD929-3) / (SD954-6)
	Passenger Spot Lamp	助手席聚光灯	D27	(SD929-2)
	Passenger Tweeter Speaker	助手席高频扬声器	M40	(SD961-2) / (SD969-2)
	PCM	PCM	C100-A / C100-K C100-AA / C100-AK	(SD313-3) / (SD313-4) / (SD313-5) / (SD313-6) / (SD313-7) / (SD313-8) / (SD313-11) (SD313-12) / (SD313-13) / (SD313-14) / (SD313-15) / (SD313-16) / (SD313-17)
	PDM 2 (ACC) Relay (With Smart Key)	PDM 2(ACC)继电器(配备智能钥匙)	E44	(SD954-2)
	PDM 3 (IG1) Relay (With Smart Key)	PDM 3(IG1)继电器(配备智能钥匙)	E46	(SD954-2)
	PDM 4 (IG2) Relay (With Smart Key)	PDM 4(IG2)继电器(配备智能钥匙)	E49	(SD954-2)
	Power Outside Mirror Switch	电动室外后视镜开关	D09	(SD876-1)
	Power Window Main Switch	电动门窗主开关	D02	(SD813-1) / (SD824-1) / (SD824-2) / (SD824-3) / (SD824-4) / (SD824-5) / (SD824-6)
	Purge Control Solenoid Valve	净化控制电磁阀	C121 / C233	(SD313-5) / (SD313-13) / (SD313-22) / (SD313-30) / (SD313-37)
R	Rail Pressure Sensor	共轨压力传感器	C240	(SD313-43)
	RCV Control Solenoid Valve	RCV控制电磁阀	C242	(SD313-37)
	Rear Combination Lamp (IN) LH	后左组合灯(内侧)	F27	(SD924-3) / (SD926-3) / (SD927-3) / (SD928-2)
	Rear Combination Lamp (IN) RH	后右组合灯(内侧)	F28	(SD924-3) / (SD926-3) / (SD927-3) / (SD928-3)
	Rear Combination Lamp (OUT) LH	后左组合灯(外侧)	F29	(SD925-2) / (SD927-3) / (SD928-2)
	Rear Combination Lamp (OUT) RH	后右组合灯(外侧)	F30	(SD925-2) / (SD927-3) / (SD928-3)