

## 部件索引(7)

CI-7

英文名称	中文名称	部件编号	电路图页码
Passenger Seat Manual Switch (2WAY)	助手席座椅手动开关(2方向)	S21-C	(SD880-6)
Passenger Seat Manual Switch (8WAY)	助手席座椅手动开关(8方向)	S21-B	(SD880-5)
Passenger Seat Manual Switch (With Walk In)	助手席座椅手动开关(配备上下车)	S21-D	(SD880-7)
Passenger Seat Warmer	助手席座椅加热器	S29	(SD889-1)
Passenger Side Air Bag	助手席侧面安全气囊	F18	(SD569-2)
Passenger Side Impact Pressure Sensor	助手席侧面压力式碰撞传感器	D28	(SD569-3)
Passenger Slide Motor	助手席座椅滑动电机	S27	(SD880-3) / (SD880-5) / (SD880-7)
Passenger Smart Key Outside Handle	助手席智能钥匙外侧手柄	D27	(SD929-2) / (SD954-5)
Passenger Temperature Actuator	助手席温度门执行器	M28	(SD971-2)
PCM	PCM	C100-A / C100-B C200-A / C200-K	(SD313-3) / (SD313-4) / (SD313-5) / (SD313-6) / (SD313-7) / (SD313-8) / (SD313-11) (SD313-12) / (SD313-14) / (SD313-15) / (SD313-18) / (SD313-19) / (SD313-20) / (SD313-21) (SD313-22) / (SD313-23)
Power Outlet Relay	电源插座继电器	E42	(SD945-2)
Power Outside Mirror Switch	电动室外后视镜开关	D12	(SD876-1) / (SD878-1)
Power Steering Sensor	动力转向开关	C232	(SD313-12)
Power Window Main Switch	电动门窗主开关	D02	(SD813-1) / (SD824-1) / (SD824-2) / (SD824-3) / (SD824-5) / (SD824-6)
Purge Control Solenoid Valve	净化控制电磁阀	C121 / C221 / C321	(SD313-5) / (SD313-11) / (SD313-20)
Rail Pressure Sensor	共轨压力传感器	C140 / C340	(SD313-7) / (SD313-22)
Rain Sensor	雨传感器	R03	(SD981-2)
RCV Control Solenoid Valve	RCV控制电磁阀	C127 / E21	(SD313-5) / (SD313-20)
Rear Combination Lamp (IN) LH	后左组合灯(内侧)	F27	(SD924-2) / (SD926-1) / (SD926-2) / (SD927-2) / (SD928-2)
Rear Combination Lamp (IN) RH	后右组合灯(内侧)	F28	(SD924-2) / (SD926-1) / (SD926-2) / (SD927-2) / (SD928-2)
Rear Combination Lamp (OUT) LH	后左组合灯(外侧)	F29	(SD925-2) / (SD927-2) / (SD928-2)
Rear Combination Lamp (OUT) RH	后右组合灯(外侧)	F30	(SD925-2) / (SD927-2) / (SD928-2)
Rear Defogger (+)	后除霜器(+)	F32	(SD879-1)
Rear Door Lock Actuator LH	后左门锁执行器	D41	(SD813-2) / (SD814-2) / (SD929-3)
Rear Door Lock Actuator RH	后右门锁执行器	D51	(SD813-2) / (SD814-2) / (SD929-3)
Rear Door Speaker LH (JBL)	后左车门扬声器(JBL)	D43-J	(SD969-4)
Rear Door Speaker LH (W/O AMP)	后左车门扬声器(未配备AMP)	D43-S	(SD961-3) / (SD969-8)
Rear Door Speaker RH (JBL)	后右车门扬声器(JBL)	D53-J	(SD969-4)
Rear Door Speaker RH (W/O AMP)	后右车门扬声器(未配备AMP)	D53-S	(SD961-3) / (SD969-8)
Rear Heated Relay	后加热器继电器	E46	(SD879-1)
Rear Height Sensor	后高度传感器	F38	(SD922-3)
Rear Parking Assist Sensor LH	后左驻车辅助传感器	R21-L	(SD957-3)
Rear Parking Assist Sensor LH (Center)	后左驻车辅助传感器(中央)	R21-CL	(SD957-3)
Rear Parking Assist Sensor RH	后右驻车辅助传感器	R21-R	(SD957-3)
Rear Parking Assist Sensor RH (Center)	后右驻车辅助传感器(中央)	R21-CR	(SD957-3)
Rear Personal Lamp LH	后左私人灯	R11-L	(SD929-1)
Rear Personal Lamp RH	后右私人灯	R11-R	(SD929-1)