



部件索引(8)

CI-8

	英文名称	中文名称	部件编号	电路图页码
R	Rear Power Outlet	后电源插座	F12	(SD945-2)
	Rear Power Window Motor LH	后左电动门窗电机	D44	(SD824-3) /(SD824-6)
	Rear Power Window Motor RH	后右电动门窗电机	D54	(SD824-3) /(SD824-6)
	Rear Power Window Switch LH	后左电动门窗开关	D42	(SD824-3) /(SD824-6)
	Rear Power Window Switch RH	后右电动门窗开关	D52	(SD824-3) /(SD824-6)
	Rear Seat Belt Pretensioner LH	后左座椅安全带拉紧器	F43	(SD589-3)
	Rear Seat Belt Pretensioner RH	后右座椅安全带拉紧器	F44	(SD589-3)
	Rear Seat Warmer Control Module	后座椅加热器控制模块	S41	(SD889-3)
	Rear Seat Warmer LH	后左座椅加热器	S42-L	(SD889-3)
	Rear Seat Warmer RH	后右座椅加热器	S42-R	(SD889-3)
	Rear Seat Warmer Switch	后座椅加热器开关	S43-A /S43-B	(SD889-3)
	Rear Smart Parking Assist Sensor LH	后左智能驻车辅助传感器	R22-L	(SD957-6)
	Rear Smart Parking Assist Sensor LH (Center)	后左智能驻车辅助传感器(中央)	R22-CL	(SD957-6)
	Rear Smart Parking Assist Sensor LH (Side)	后左智能驻车辅助传感器(侧面)	R22-SL	(SD957-6)
	Rear Smart Parking Assist Sensor RH	后右智能驻车辅助传感器	R22-R	(SD957-6)
	Rear Smart Parking Assist Sensor RH (Center)	后右智能驻车辅助传感器(中央)	R22-CR	(SD957-6)
	Rear Smart Parking Assist Sensor RH (Side)	后右智能驻车辅助传感器(侧面)	R22-SR	(SD957-6)
	Rear Surround Speaker LH	后左环绕扬声器	F34	(SD969-4)
	Rear Surround Speaker RH	后右环绕扬声器	F35	(SD969-4)
	Rear View Camera & Trunk Lid Handle Switch	后视摄像头&行李箱盖手柄开关	F10	(SD812-1) /(SD851-3) /(SD961-2) /(SD969-2) /(SD969-6)
S	Rear Wheel Sensor LH	后左轮速传感器	F55	(SD436-2) /(SD587-2) /(SD588-2) /(SD588-6)
	Rear Wheel Sensor RH	后右轮速传感器	F56	(SD436-2) /(SD587-2) /(SD588-2) /(SD588-6)
	Seat Belt Reminder Mat	座椅安全带提示器	F42	(SD952-4)
	Security Indicator	安全指示灯	M41	(SD814-1)
	Select Actuator (G4FJ - DCT)	选择执行器(G4FJ-DCT)	E32	(SD450-6)
	Shift Actuator (G4FJ - DCT)	换挡执行器(G4FJ-DCT)	E33	(SD450-7)
	Side Repeater Lamp LH	左侧面转向灯	E07-L	(SD925-2)
	Side Repeater Lamp RH	右侧面转向灯	E07-R	(SD925-2)
	Smart Cruise Control Unit	智能巡航控制模块	E64	(SD957-8) /(SD964-1)
	Smart Key Antenna (Interior #1)	智能钥匙天线(内部#1)	M40	(SD954-4)
	Smart Key Antenna (Interior #2)	智能钥匙天线(内部#2)	F14	(SD954-4)
	Smart Key Bumper Antenna	智能钥匙保险杠天线	R23	(SD954-4)
	Smart Key Control Module	智能钥匙控制模块	M13-A /M13-B /M13-C	(SD954-2) /(SD954-3) /(SD954-4) /(SD954-5)
	Smart Key Trunk Antenna	智能钥匙行李箱天线	F13	(SD954-4)
	Smart Parking Assist Control Module	智能驻车辅助控制模块	M17	(SD957-4) /(SD957-5) /(SD957-6) /(SD957-7)
	SRS Control Module	SRS控制模块	F15 /M49	(SD589-1) /(SD589-2) /(SD589-3) /(SD588-2) /(SD588-6)
	Start Motor	起动机	E113 /E123 /E133	(SD360-1) /(SD360-2) /(SD360-3) /(SD360-4) /(SD360-5) /(SD360-6)
	Start Relay	起动机继电器	E40	(SD360-1) /(SD360-2) /(SD360-3) /(SD360-4) /(SD360-5) /(SD360-6)
	Start Solenoid	起动机电磁开关	E112 /E122 /E132	(SD360-1) /(SD360-2) /(SD360-3) /(SD360-4) /(SD360-5) /(SD360-6)