

主线束(4)		CV10-4																															
<p><b>M04-B BCM</b></p> <p>端子编号 - 端子名称 AMP_0407_16F_Gr_040</p> <table border="1"> <tr><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td></tr> </table> <p>1. G B-CAN高电位)                      9. O B-CAN低电位)</p> <p>2. R M-CAN高电位)                      10. L M-CAN低电位)</p> <p>3. W C-CAN高电位)                      11. Br C-CAN低电位)</p> <p>4. Y 运动模式开关 (换挡锁止电磁锁)</p> <p>5. B/O 仪表盘开关(PAS开关指示灯)</p> <p>6. -</p> <p>7. G/O LIN 前驻车辅助传感器、 后驻车辅助传感器</p> <p>8. L/O 右金属芯接线块 (金属芯接线块(PCB #t) 前除冰器继电器)</p>	8	7	6	5	4	3	2	1	16	15	14	13	12	11	10	9	<p><b>M05 诊断连接器</b></p> <p>端子编号 1898005935AS 端子名称 MLX_OBDII_16F_B</p> <table border="1"> <tr><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td></tr> </table> <p>1. - -    9. L/O 智能接线盒(保险丝-F34)</p> <p>2. - -    10. - -</p> <p>3. W C-CAN高电位)                      11. Br C-CAN低电位)</p> <p>4. B 搭铁(GM01)                              12. - -</p> <p>5. B 搭铁(GM02)                              13. L/B 车身K-通信电路</p> <p>6. Y 仪表盘(4F输出)                      14. - -</p> <p>7. - -    15. - -</p> <p>8. R M-CAN高电位)                      16. L M-CAN低电位)</p>	8	7	6	5	4	3	2	1	16	15	14	13	12	11	10	9
8	7	6	5	4	3	2	1																										
16	15	14	13	12	11	10	9																										
8	7	6	5	4	3	2	1																										
16	15	14	13	12	11	10	9																										
<p><b>M04-C BCM</b></p> <p>端子编号 1879001490AS 端子名称 AMP_0407_12F_W_070</p> <table border="1"> <tr><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td></tr> </table> <p>1. - -    7. - -</p> <p>2. Br 发动机室左侧接线盒(继电器7)</p> <p>3. Y/B 驾驶席/助手席脚灯、 后座椅脚灯-左/右</p> <p>4. Y 智能接线盒(保险丝-F15)</p> <p>5. L 后窗帘电机(向下)</p> <p>6. O 后窗帘电机(向上)</p> <p>9. Gr 防盗警报喇叭</p> <p>10. Gr 装饰灯-左/右/中央</p> <p>11. Br/B 外部蜂鸣器</p> <p>12. W/B 智能接线盒(保险丝-F6)</p>	6	5	4	3	2	1	12	11	10	9	8	7	<p><b>M06 安全传感器</b></p> <p>端子编号 - 端子名称 KET_030_02F_W</p> <table border="1"> <tr><td>2</td><td>1</td></tr> </table> <p>1. Y/B 智能接线盒 (暗电流自动切断装置保险丝-F34)</p> <p>2. Gr BCM(信号)</p>	2	1																		
6	5	4	3	2	1																												
12	11	10	9	8	7																												
2	1																																
	<p><b>M07-L 驾驶席中频扬声器</b></p> <p>端子编号 1890102223AS 端子名称 KET_090II_02F_W_L</p> <table border="1"> <tr><td>2</td><td>1</td></tr> </table> <p>1. O/B 放大器(+)</p> <p>2. G/B 放大器(-)</p>	2	1																														
2	1																																