



部件索引(6)

CI-6

	英文名称	中文名称	部件编号	电路图页码
P	Power Tail Gate Anti-Pinch Sensor LH	电动后备箱门防夹传感器(左)	R31	(SD817-1)
	Power Tail Gate Anti-Pinch Sensor RH	电动后备箱门防夹传感器(右)	R32	(SD817-1)
	Power Tail Gate Buzzer	电动后备箱门蜂鸣器	R35	(SD817-1)
	Power Tail Gate Cinching Actuator	电动后备箱门扣紧执行器	R33	(SD817-2)
	Power Tail Gate Module	电动后备箱门模块	F39-A / F39-B	(SD817-1) / (SD817-2)
	Power Tail Gate Spindle LH	电动后备箱门主轴(左)	F34	(SD817-2)
	Power Tail Gate Spindle RH	电动后备箱门主轴(右)	F35	(SD817-2)
R	Purge Control Solenoid Valve	净化控制电磁阀	E121 / E221 / E321	(SD313-3) / (SD313-11) / (SD313-20)
	Rail Pressure Sensor	共轨压力传感器	E140 / E240 / E340	(SD313-6) / (SD313-15) / (SD313-23)
	RCV Control Solenoid Valve	RCV控制电磁阀	E210	(SD313-11)
	Rear A/C Control Module	后空调控制器	F37	(SD971-5) / (SD971-9)
	Rear Blower Motor	后鼓风机电机	F40	(SD971-5) / (SD971-9)
	Rear Blower Resistor	后鼓风机电阻器	F59	(SD971-5) / (SD971-9)
	Rear Combination Lamp (In) LH	后组合灯(内侧)(左)	R22	(SD926-1) / (SD927-2) / (SD928-2)
	Rear Combination Lamp (In) RH	后组合灯(内侧)(右)	R23	(SD926-1) / (SD927-2) / (SD928-2)
	Rear Combination Lamp (Out) LH	后组合灯(外侧)(左)	F18	(SD925-2) / (SD927-2) / (SD928-2)
	Rear Combination Lamp (Out) RH	后组合灯(外侧)(右)	F19	(SD925-2) / (SD927-2) / (SD928-2)
	Rear Defogger (-)	后除霜器(-)	R25	(SD879-1)
	Rear Defogger (+)	后除霜器(+)	R24	(SD879-1)
	Rear Door Lock Actuator LH	后门锁执行器(左)	D41	(SD813-3) / (SD814-1) / (SD929-4)
	Rear Door Lock Actuator RH	后门锁执行器(右)	D51	(SD813-3) / (SD814-1) / (SD929-4)
	Rear Door Speaker LH	后车门扬声器(左)	D46 / D47	(SD961-3) / (SD961-5) / (SD969-4) / (SD969-6)
	Rear Door Speaker RH	后车门扬声器(右)	D56 / D57	(SD961-3) / (SD961-5) / (SD969-4) / (SD969-6)
	Rear Driver Seat Belt Pretensioner	后左座椅安全带拉紧器	F51	(SD569-3)
	Rear Driver Side Impact Sensor	后左侧面碰撞传感器	F53	(SD569-3)
	Rear Fog Lamp LH	后雾灯(左)	R46	(SD924-2)
	Rear Fog Lamp RH	后雾灯(右)	R47	(SD924-2)
	Rear Parking Assist Sensor LH	后驻车辅助传感器(左)	R42-L	(SD957-3)
	Rear Parking Assist Sensor LH (Center)	后驻车辅助传感器(左)(内侧)	R42-CL	(SD957-3)
	Rear Parking Assist Sensor RH	后驻车辅助传感器(右)	R42-R	(SD957-3)
	Rear Parking Assist Sensor RH (Center)	后驻车辅助传感器(右)(内侧)	R42-CR	(SD957-3)
	Rear Passenger Seat Belt Pretensioner	后右座椅安全带拉紧器	F52	(SD569-3)
	Rear Passenger Side Impact Sensor	后右侧面碰撞传感器	F54	(SD569-3)
	Rear Personal Lamp LH	后私人灯(左)	R13	(SD929-2)
	Rear Personal Lamp RH	后私人灯(右)	R14	(SD929-2)
	Rear Power Outlet	后电源插座	F77	(SD945-2)
	Rear Power Window Motor LH	后电动门窗电机(左)	D44	(SD824-4) / (SD952-10)
	Rear Power Window Motor RH	后电动门窗电机(右)	D54	(SD824-4) / (SD952-10)
	Rear Power Window Switch LH	后电动门窗开关(左)	D42	(SD824-4) / (SD889-3) / (SD941-3) / (SD952-10)