
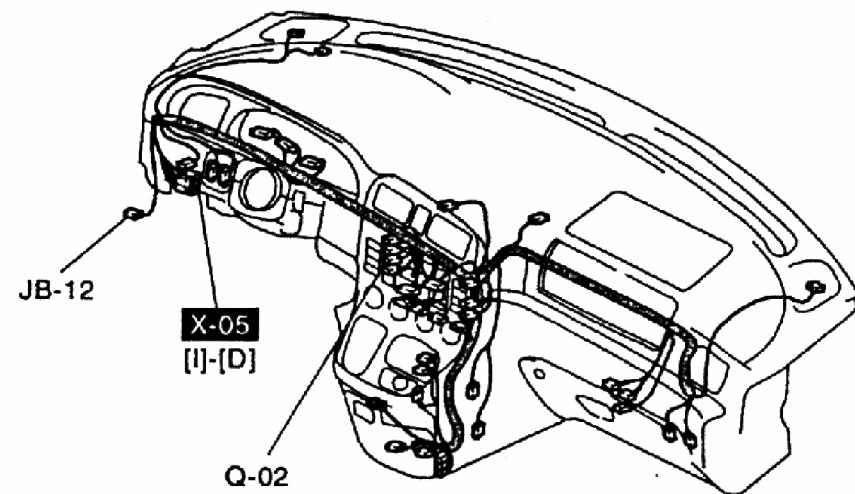


AUTO CRUISE CONTROL UNIT
Q-01


[D]-[F]
X-03

[D]-[F]
X-02

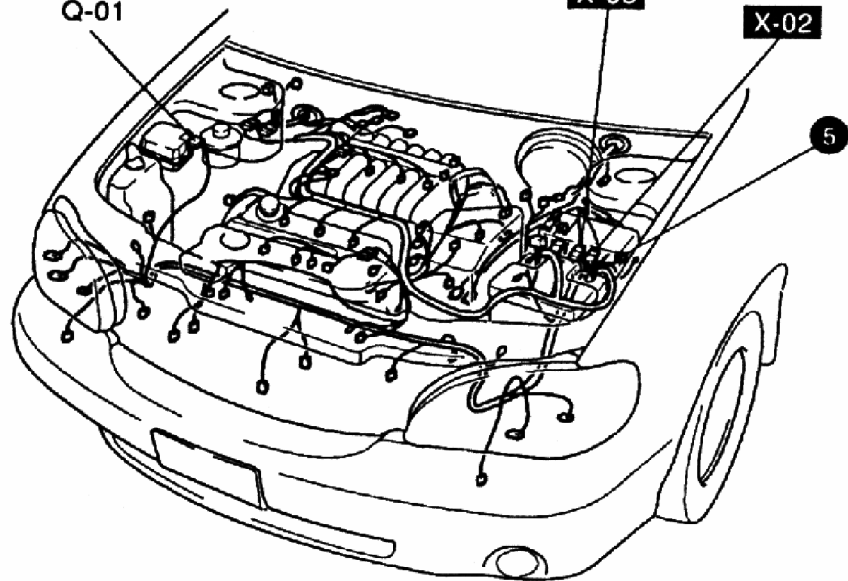

Q-02
AUTO CRUISE CONTROL SWITCH
自动巡航控制开关


(BAT)
JB-10

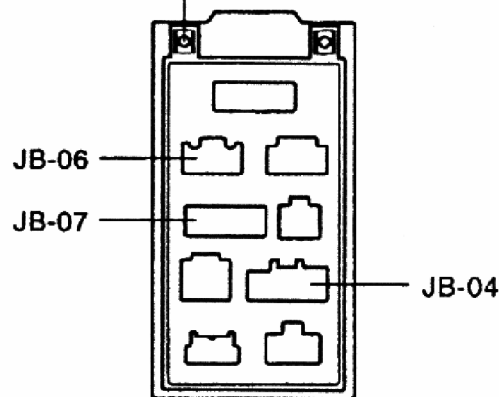

SHORT CONNECTOR
SC-06

IGNITION SWITCH
X-11
点火开关

[D]-[I]
X-05

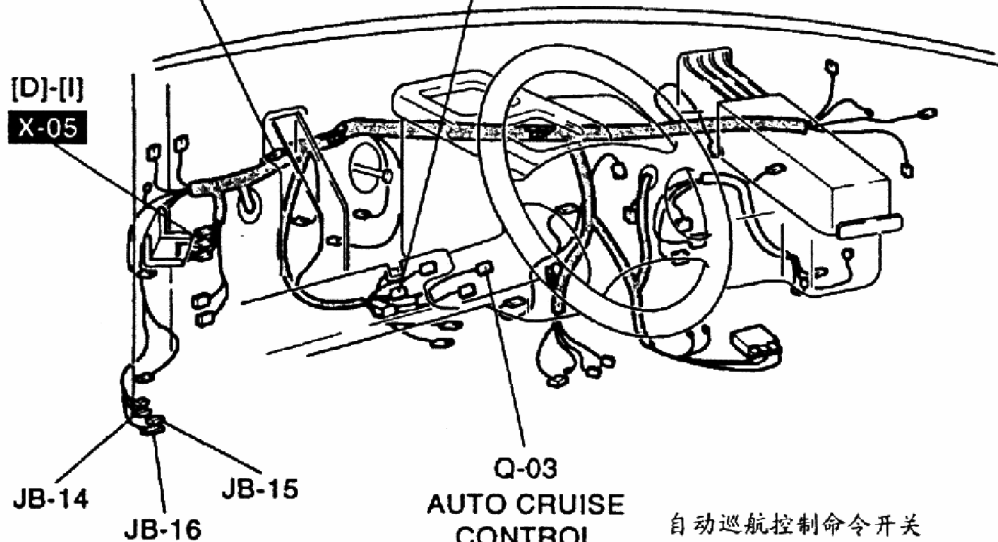

Q-03
AUTO CRUISE CONTROL
COMMAND SWITCH
自动巡航控制命令开关

