



部件索引(6)

CI-6

英文名称	中文名称	部件编号	电路图页码
Passenger Power Window Motor	助手席电动门窗电机	D30	(SD824-2) / (SD824-8) / (SD824-13) / (SD824-19)
Passenger Power Window Switch	助手席电动门窗开关	D23 / D23R / D23S	(SD813-1) (SD824-2) (SD824-5) (SD824-8) (SD824-13) (SD824-18) (SD824-19)
Passenger Safety Power Window Module	助手席安全电动门窗模块	D24	(SD824-5) / (SD824-10) / (SD824-16) / (SD824-21)
Passenger Seat Belt Buckle Switch	助手席座椅安全带扣环开关	F45	(SD952-8)
Passenger Seat Belt Pretensioner	助手席座椅安全带拉紧器	F43	(SD569-3)
Passenger Seat Warmer	助手席座椅加热器	S31	(SD889-1)
Passenger Side Air Bag	助手席侧面安全气囊	F41	(SD569-3)
Passenger Side Impact Pressure Sensor	助手席压力式侧面碰撞传感器	D29	(SD569-2)
Passenger Smart Key Outside Handle	助手席智能钥匙外侧手柄	D28	(SD929-3) / (SD954-7)
Passenger Temperature Actuator	助手席温度门执行器	M45	(SD971-3)
Power Outlet #1	电源插座#1	M66	(SD945-2)
Power Outlet #2	电源插座#2	M67	(SD945-2)
Power Outlet Relay	电源插座继电器	E54	(SD945-2)
Power Outside Mirror Switch	电动室外后视镜开关	D05 / D05R	(SD876-1) / (SD876-3) / (SD878-2)
Power Realy Assembly	电源继电器总成	B03-BMB03-BPB03-QB03-SB03-IMB03-IP	(SD360-2) / (SD366-2) / (SD371-2) / (SD373-2) / (SD586-2) / (SD971-7)
Power Window Main Switch	电动门窗主开关	D03	(SD813-1) / (SD824-1) / (SD824-2) / (SD824-3) / (SD824-4) / (SD824-5) / (SD824-6) / (SD824-7) / (SD824-8) / (SD824-12) / (SD824-13) / (SD824-14) / (SD824-15) / (SD824-16) / (SD824-17) / (SD824-18) / (SD824-19)
PSU Motor	PSU电机	E60	(SD588-1)
PTC Heater	PTC加热器	E39	(SD971-6)
PTC Heater #1 Relay	PTC加热器#1继电器	E42	(SD971-6)
PTC Heater #2 Relay	PTC加热器#2继电器	E41	(SD971-6)
Purge Control Solenoid Valve	净化控制电磁阀	C110	(SD313-4)
Rail Pressure Sensor	共轨压力传感器	C140	(SD313-5)
Rain Sensor	雨传感器	R03	(SD981-1)
Rear Combination Lamp (IN) LH	后左组合灯(内侧)	R23	(SD927-2) / (SD928-2)
Rear Combination Lamp (IN) RH	后右组合灯(内侧)	R24	(SD927-2) / (SD928-2)
Rear Combination Lamp (OUT) LH	后左组合灯(外侧)	F28-OL	(SD925-3) / (SD925-4) / (SD927-2) / (SD928-2)
Rear Combination Lamp (OUT) RH	后右组合灯(外侧)	F28-OR	(SD925-3) / (SD925-4) / (SD927-2) / (SD928-2)
Rear Defogger	后除霜器	R25 / R42	(SD879-1) / (SD879-2)
Rear Defogger Relay	后除霜器继电器	E50	(SD879-1) / (SD879-2)
Rear Door Lock Actuator LH	后左门锁执行器	D41	(SD813-3) / (SD813-4) / (SD814-2) / (SD814-3)
Rear Door Lock Actuator RH	后右门锁执行器	D51	(SD813-3) / (SD813-4) / (SD814-2) / (SD814-3)
Rear Door Speaker LH (W/O AMP)	后左车门扬声器(未配备AMP)	D47	(SD961-3) / (SD961-4) / (SD969-3) / (SD969-4)
Rear Door Speaker LH (With AMP)	后左车门扬声器(配备AMP)	D48	(SD969-5)
Rear Door Speaker RH (W/O AMP)	后右车门扬声器(未配备AMP)	D57	(SD961-3) / (SD961-4) / (SD969-3) / (SD969-4)
Rear Door Speaker RH (With AMP)	后右车门扬声器(配备AMP)	D58	(SD969-5)
Rear Parking Assist Sensor LH	后左驻车辅助传感器	R21-L	(SD957-3)
Rear Parking Assist Sensor LH (Center)	后左驻车辅助传感器(中央)	R21-CL	(SD957-3)