

Fuse & Relay Information (2)

SD100-2

Circuit (IPM)

Fuse No.	(A)	Symbol	Fuse Name	Circuit Protected
F1	10A		MODULE 2	Instrument Cluster (IND./MICOM), Tire Pressure Monitoring Module, Audio, Multifunction Switch (Remocon) Rear Parking Assist Buzzer, ICM Relay Box (DBC Relay), ESP Off Switch, DBC Switch, IPM (Power) Auto Head Lamp Leveling Device Control Module, Head Lamp Leveling Device Actuator LH/RH
F2	10A		MODULE 1	Smart Key Control Module, PDM, Electro Chromic Mirror, Driver CCS Control Module, TCM (D4HB), 4WD ECM E/R Fuse & Relay Box (Fuse - F21/F22/F23), Driver Back Blower Fan, Driver Cushion Blower Fan Steering Angle Sensor, Transmission Range Switch
F3/F4	-	-	-	-
F5	10A		AIR BAG IND.	Instrument Cluster (IND.), Passenger Air Bag SBR
F6	15A		AIR BAG	SRS Control Module
F7	7.5A		START	E/R Fuse & Relay Box (RLY. 7 - Start, RLY. 3 - Burglar Alarm), PDM
F8	-	-	-	-
F9	15A		RR WIPER	ICM Relay Box (Rear Wiper Relay), Rear Wiper Motor, Multifunction Switch (Wiper)
F10	25A		FR WIPER	E/R Fuse & Relay Box (Wiper Relay LO/HI), Front Wiper Motor, Multifunction Switch (Wiper)
F11	7.5A		AUDIO-2	AMP, Power Outside Mirror Switch, Smart Key Control Module, PDM, Audio, AV Head Module Digital Clock, IPM (Power)
F12	15A		P/OUTLET	Rear Power Outlet
F13	-	-	-	-
F14	25A		C/LIGHTER	Front Cigarette Lighter, Front Power Outlet
F15	7.5A		MODULE 3	Not Used
F16	7.5A		FR A/C	E/R Fuse & Relay Box (RLY. 10 - Blower), Fusible Link Box (PTC Heater Relay #2/3), PDM, Front A/C Control Module ICM Relay Box (Front Seat Warmer Relay, Rear A/C Relay, Head Lamp Washer Relay), Active Incar Sensor Cluster Ionizer, Sunroof Motor, Rain Sensor, IPM (Power)
F17	30A		AMP	AMP
F18	7.5A		DRL	Ground (GE01)
F19	7.5A		MANUAL A/C	PCM (G4KE), ECM (D4HB), Front Blower Resistor, Front A/C Control Module, Front Blower Motor
F20	-	-	-	-
F21	7.5A		AUTO A/C	Front A/C Control Module
F22	10A		B/ALARM	Burglar Alarm Horn Relay

※ USE THE DESIGNATED FUSE ONLY