

Fuse & Relay Information (3)

SD100-3

Circuit (IPM)

Fuse No.	(A)	Symbol	Fuse Name	Circuit Protected
F23	20A		RR A/C	ICM Relay Box (Rear A/C Relay)
F24	25A		P/WDW LH	Driver Power Window Relay, Driver Safety Power Window Module
F25	25A		P/WDW RH	Passenger Power Window Relay, Passenger Safety Power Window Module (LHD) Driver Safety Power Window Module (RHD)
F26	15A		MODULE	Audio, AV Head module, RF Receiver, IPM (Power)
F27	10A		ROOM LP	Instrument Cluster (IND.), Front A/C Control Module, Data Link Connector, Door Warning Switch, Personal Room Lamp Digital Clock, Room Lamp Auto Cut Relay, Room Lamp, Over Head Console (MAP Lamp), Cargo Lamp Driver/Passenger Vanity Lamp
F28	10A		DOOR LP	Driver/Passenger Door Lamp, Driver/Passenger Door Scuff Lamp
F29	20A		D/LOCK	Door Lock/Unlock Relay, ICM Relay Box (Dead Lock Relay)
F30	20A		H/L WASHER	ICM Relay Box (Head Lamp Washer Relay)
F31	20A		PDM	PDM
F32	20A		SUNROOF	Sunroof Motor
F33	10A		SMART KEY	PDM, Smart Key Control Module, Start Stop Button Switch, FOB Holder, Key Solenoid, 4WD ECM, Sport Mode Switch
F34	20A		FR S/WARMER	ICM Relay Box (Front Seat Warmer Relay)
F35	30A		P/SEAT	Driver CCS Control Module, Driver Power Seat Switch, Driver Lumbar Support Switch
F36	15A		RR S/WARMER	Not Used
F37	-	-	-	-
F38	15A		HAZARD	IPM (Flasher Unit)
F39	15A		FUEL LID	Tail Gate Relay, Fuel Filler Door Switch
F40	10A		O/S MIRR TPMS	Tire Pressure Monitoring Module, ICM Relay Box (Rear Fog Lamp Relay), Power Outside Mirror Switch
F41	10A		HTD MIRR	Driver/Passenger Power Outside Mirror, Front A/C Control Module
POWER CONNECTOR	I . O . D		POWER CONNECTOR	FUSE - F26 / F27 / F28

⚠ USE THE DESIGNATED FUSE ONLY