

## Fuse &amp; Relay Information (5)

SD100-5

 
 
## E/R Fuse &amp; Relay Box

## - Relay Type

RELAY NO.	SYMBOL	RELAY NAME	TYPE
RLY. 1	W	HTD GLASS (FR) RELAY	PLUG MICRO
RLY. 2	HORN	HORN RELAY	PLUG MICRO
RLY. 3	2	BURGLAR ALARM RELAY	PLUG MICRO
RLY. 4	3	SUB START RELAY	PLUG MICRO
RLY. 5	BUP LP	BACK-UP LAMP RELAY	PLUG MICRO
RLY. 6	1	COOLING FAN (LOW) RELAY	PLUG MINI
RLY. 7	1	START RELAY	PLUG MINI
RLY. 8	2	COOLING FAN (HIGH) RELAY	PLUG MINI
RLY. 9	RR HTD	HTD GLASS (RR) RELAY	PLUG MINI
RLY. 10	88	BLOWER RELAY	PLUG MINI
RLY. 11	LO	WIPER (LOW) RELAY	PLUG MICRO
RLY. 12	HI	WIPER (HIGH) RELAY	PLUG MICRO
RLY. 1 EMS BOX	ENGINE	ENGINE CONTROL RELAY	PLUG MINI
RLY. 2	F/PUMP	FUEL PUMP RELAY	PLUG MICRO
RLY. 3	88	A/C RELAY	PLUG MICRO

## - EMS Box

G4KE —— D4HB

E/R-CHGA(G4KE)  
E/R-CRDA(D4HB)E/R-CHGK(G4KE)  
E/R-CRDK(D4HB)