

Fuse & Relay Information (6)

SD100-6

Circuit (E/R Fuse & Relay Box)

Fuse No.	(A)	Symbol	Fuse Name	Circuit Protected
MULTI FUSE	F1	-	-	-
	F2	60A	I/P B+2	IPM (Fuse - F34/F35, Power Connector - F26/F27/F28)
	F3	40A	BLOWER	RLY. 10 (Blower Relay)
	F4	40A	RR HTD	RLY. 9 (Heated Glass (RR) Relay)
	F5	40A	ABS1	EPS Control Module, ABS Control Module, Multipurpose Check Connector
	F6	150A -	ALT	-
	F7	40A	ABS2	EPS Control Module, ABS Control Module, Multipurpose Check Connector
	F8	60A	I/P B+3	IPM (Fuse - F38/F39/F40)
	F9	60A	I/P B+1	IPM (Fuse - F29/F30/F31/F32/F33/F36)
FUSE	F10	40A	IGN2	RLY. 7 (Start Relay), W/O Smart Key - Ignition Switch, With Smart Key - PDM Relay Box (IGN2 Relay)
	F11/F12	-	-	-
	F13	30A	IGN1	W/O Smart Key - Ignition Switch, With Smart Key - PDM Relay Box (IGN1 Relay)
	F14	15A	HORN	RLY. 2 (Horn Relay)
	F15	15A	STOP LP	Stop Lamp Switch, ICM Relay Box (DBC Relay)
	F16	15A	B+ SENSOR	Battery Sensor
	F17	15A	FR HTD	RLY. 1 (Heated Glass (FR) Relay)
	F18	-	-	-
	F19	50A	COOLING FAN	RLY. 6 (Cooling Fan Low Relay), RLY. 8 (Cooling Fan High Relay)
	F20	50A	I/P B+4	IPM (Fuse - F17/F22/F23/F24/F25)
	F21	7.5A	ECU2	RLY. 4 (Sub Start Relay), PCM (G4KE), ECM (D4HB), Mass Air Flow Sensor (D4HB)
	F22	7.5A	ABS	ESP Control Module, ABS Control Module, Multipurpose Check Connector, Stop Lamp Switch (G4KE), Fuel Filter Warning Sensor (D4HB), Glow Relay Module (D4HB), Fusible Link Box (Fuel Filter Heater Relay (D4HB))
	F23	7.5A	B/UP LP	RLY. 5 (Back-Up Lamp Relay), Back-Up Lamp Switch (M/T)
	F24	175A -	ALT	Alternator

※ USE THE DESIGNATED FUSE AND RELAY ONLY