




前线束 (16)


CV20-16

**E47 燃油滤清器加热器继电器 (D4HA/D4HB)**  
 - 4母/N/A (CR04F086)  
 - 符号 





|                   |                       |
|-------------------|-----------------------|
| 1. R 柴油盒 (保险丝-F1) | 3. B 搭铁 (GE02)        |
| 2. W 燃油滤清器加热器     | 4. G/B 智能接线盒 (保险丝-F5) |

**E50 PTC加热器继电器#3 (D4HA/D4HB)**  
 - 4母/N/A (CR04F086)  
 - 符号 





|                   |                               |
|-------------------|-------------------------------|
| 1. W 柴油盒 (保险丝-F4) | 3. G/O 空调控制模块 (PTC加热器继电器#3控制) |
| 2. W PTC加热器       | 4. O/O 智能接线盒 (保险丝-F25)        |

**E48 PTC加热器继电器#1 (D4HA/D4HB)**  
 - 4母/N/A (CR04F086)  
 - 符号 



|                   |   |
|-------------------|---|
| 1. B 柴油盒 (保险丝-F2) | 3. Gr/O ECM (PTC加热器继电器#1控制), 空调控制模块 (PTC' ON' 信号 (低电位)) |
| 2. R PTC加热器       | 4. G EMS盒 (保险丝-F46)                                     |

**E49 PTC加热器继电器#2 (D4HA/D4HB)**  
 - 4母/N/A (CR04F086)  
 - 符号 



|                   |                               |
|-------------------|-------------------------------|
| 1. R 柴油盒 (保险丝-F3) | 3. L/O 空调控制模块 (PTC加热器继电器#2控制) |
| 2. R PTC加热器       | 4. G/O 智能接线盒 (保险丝-F25)        |