

控制线束(G4KE : THETA-1 | 2.4L MPI) (4)

CV30-4

C207 空调压缩机

 
- 2母/黑色 (XUM\_MMNP\_02F\_B)



1. L/O 空调控制模块 (ECV输入)      2. Br/O 空调控制模块 (ECV输出)

C208 氧传感器(上)

- 4母/黑色 (XUM\_MMNP\_04F\_B)



1. R POM(传感器信号)      3. Y EMS盒(保险丝 - F47)  
2. B POM(传感器搭铁)      4. L POM(传感器加热器)

C209 氧传感器(下)

- 4母/黑色 (KET\_0901WP\_04F\_B)



1. W/B POM(传感器信号)      3. Y EMS盒(保险丝-F47)  
2. P/B POM(传感器搭铁)      4. Y/O POM(传感器加热器)

C211 发动机水温传感器

 
- 4母/黑色 (AMP\_EJWP\_04F\_B)



1. B 搭铁(GC201)      3. L/O POM(传感器搭铁)  
2. - -      4. W/B POM(传感器信号)

C212 ETC电机&节气门位置传感器

- 6母/黑色 (AMP\_MQSWP\_06F\_B\_1)



1. B/O POM(TPS搭铁)      4. P/B POM(TPS 1信号)  
2. Y POM(TPS电源)      5. L/R POM(TPS 2信号)  
3. W POM(ETC直流电机1)      6. R POM(ETC直流电机2)

C213-1 凸轮轴位置传感器#1

- 3母/灰色 (SUM\_0901WP\_03F\_GR\_R)



1. W EMS盒(保险丝-F47)      3. L POM(传感器信号)  
2. G/O POM(传感器搭铁)