

控制线束(G4NB/G4NA: NU 1.8L/2.0L MPI)(9)

CV32-9

C222 ETC电机&节气门位置传感器
- 6母/黑色(KET_090IWP_06F_B_1)



1. W	ECM/PCM(ETC电机(-))	4. L/O	[A/T]PCM(TPS信号#2)
2. R	ECM/PCM(ETC电机(+))	L	[M/T]ECM(TPS信号#2)
3. Br	[A/T]PCM(TPS搭铁)	5. Y	ECM/PCM(TPS电源)
B	[M/T]ECM(TPS搭铁)	6. P/B	ECM/PCM(TPS信号#1)

C223 爆震传感器
- 2母/灰色(PKD_150WP_02F_GR)



1. G	ECM/PCM(搭铁)	2. W	ECM/PCM(信号)
------	-------------	------	-------------

C224-1 喷油嘴#1
- 2母/黑色(KUM_XWP_02F_B_A)




1. G	ECM/PCM(喷油嘴控制#1)	2. R	EMS盒(保险丝-F35)
------	------------------	------	---------------

C224-2 喷油嘴#2
- 2母/黑色(KUM_XWP_02F_B_A)




1. B	ECM/PCM(喷油嘴控制#2)	2. P	EMS盒(保险丝-F35)
------	------------------	------	---------------

C224-3 喷油嘴#3
- 2母/黑色(KUM_XWP_02F_B_A)




1. W	ECM/PCM(喷油嘴控制#3)	2. R	EMS盒(保险丝-F35)
------	------------------	------	---------------

C224-4 喷油嘴#4
- 2母/黑色(KUM_XWP_02F_B_A)




1. L	ECM/PCM(喷油嘴控制#4)	2. P	EMS盒(保险丝-F35)
------	------------------	------	---------------