




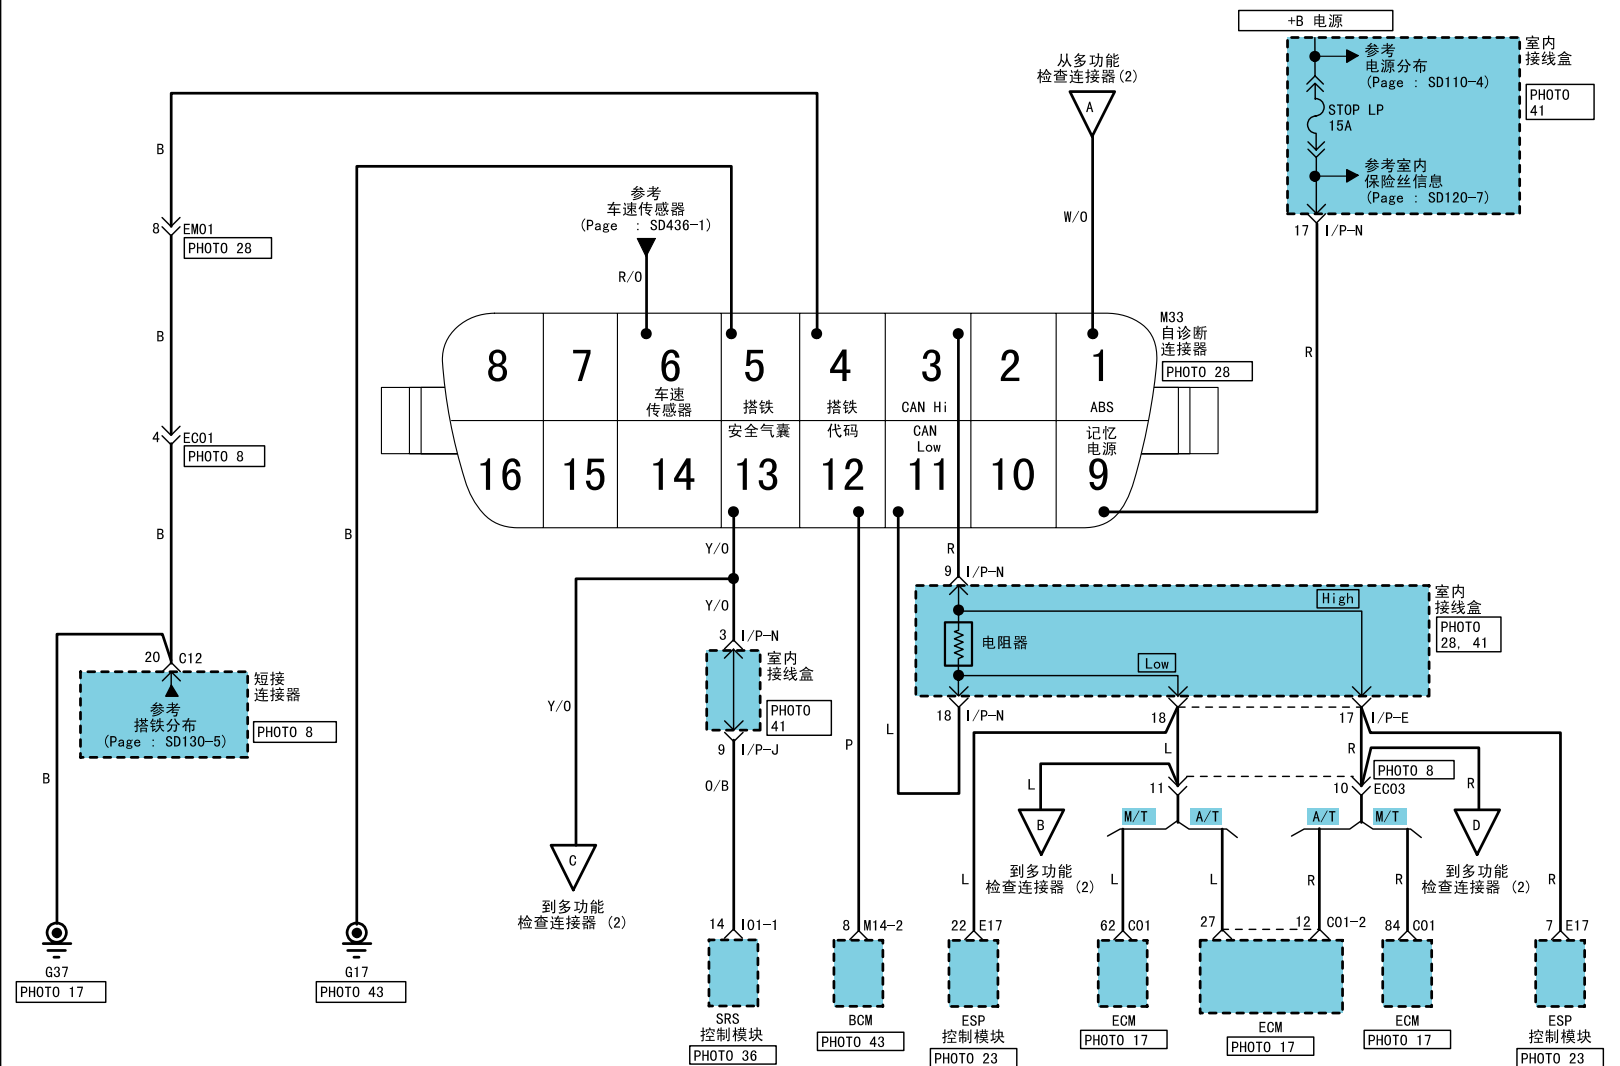

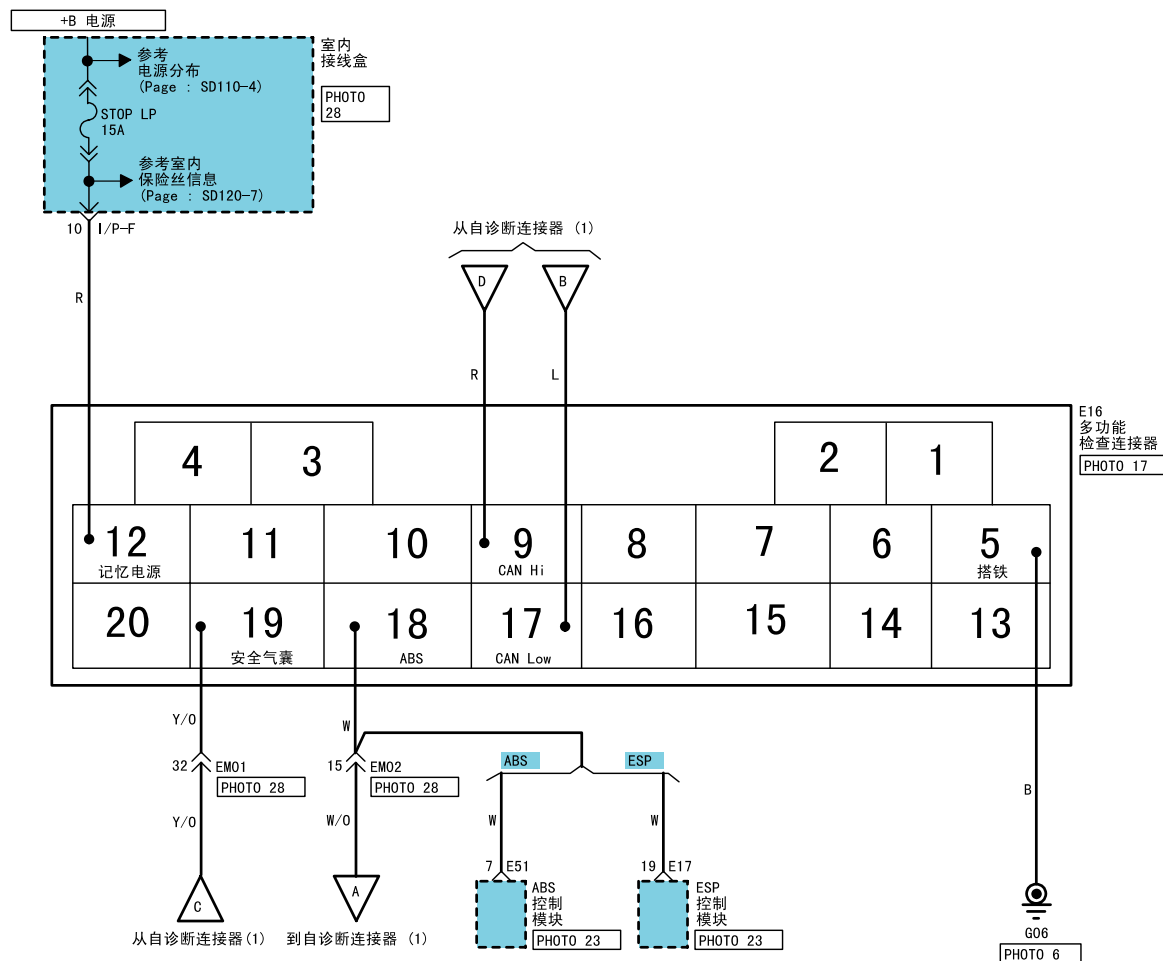


C01

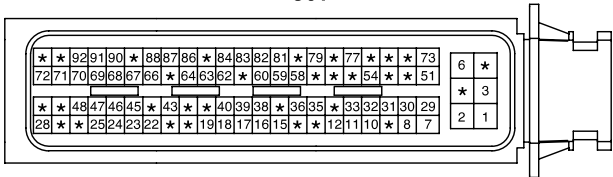


AMP_ECU_94F_B

C01-1

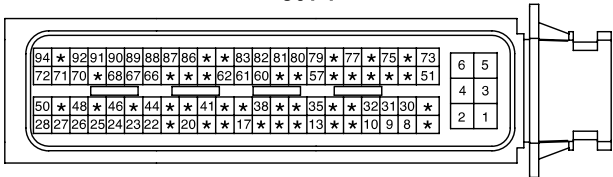


AMP_ECU_94F_B

C01-2

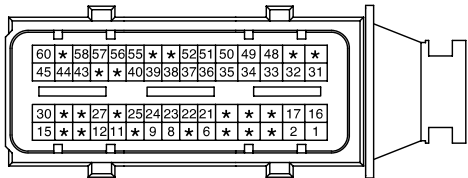

AMP_ECU_60F_B


E16

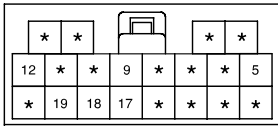

KET_DIAG_20F_B_BRK_B


BLANK

 E17




AMP_ESP_47F_L_UNIT

E51

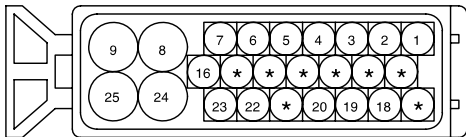


AMP_ABSECU_25F_B

M14-2

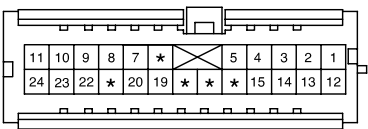


AMP_040III_24F_W

M16-2

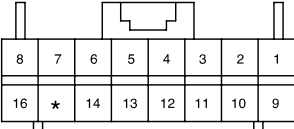

AMP_0407_16F_W_040

M33

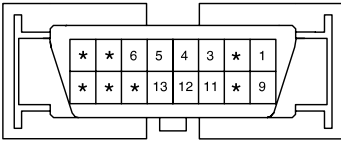

MLX_OBDII_16F_B_SIN

BLANK