

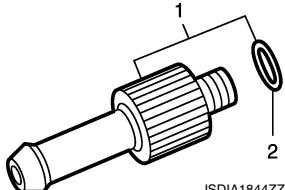
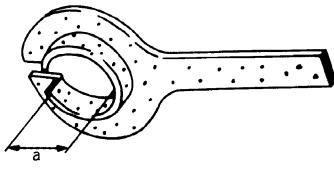
<准备工作>

准备工作

准备工作

专用维修工具

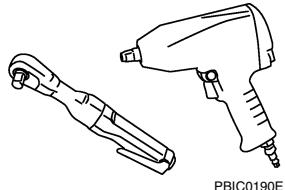
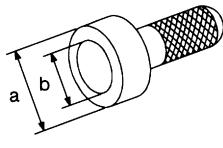
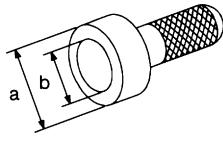
INFOID:0000000009085193

工具编号 工具名称	说明
1. KV311039S0 加注管组 2. KV31103920* O形圈	 <p>JSDIA1844ZZ</p> <p>更换和调整 CVT 液</p>
KV38107900 保护器 a: 直径 32 mm (1.26 in)	 <p>PDIA1183J</p> <p>安装驱动轴</p>

*: O形圈作为一个单独零件，是 SST 的其中一种。

通用维修工具

INFOID:0000000009085194

工具编号 工具名称	说明
机动工具	 <p>PBIC0190E</p> <p>松开螺母和螺栓</p>
冲头 a: 直径 56 mm (2.20 in) b: 直径 50 mm (1.97 in)	 <p>NT115</p> <p>安装差速器侧油封</p>
冲头 a: 直径 65 mm (2.56 in) b: 直径 60 mm (2.36 in)	 <p>NT115</p> <p>安装变矩器壳体油封</p>