


## REMOVAL AND INSTALLATION

### SECURITY INDICATOR LAMP

#### Exploded View

INFOID:000000004940511

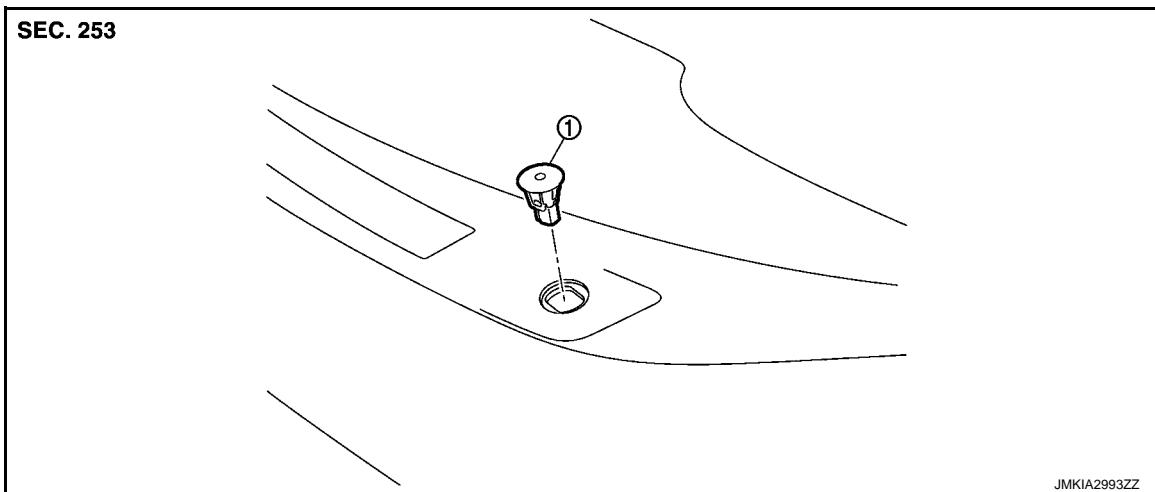

1. Security indicator lamp


#### Removal and Installation

INFOID:000000004940512

##### REMOVAL

Disengage pawls with tool (A) and pull up the security indicator lamp (1).

 : Pawl

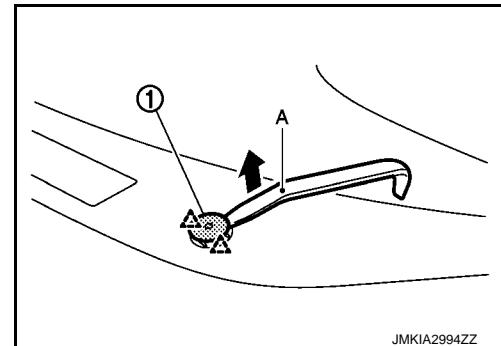

##### INSTALLATION

Install in the reverse order of removal.