

SECTION

BCS

BODY CONTROL SYSTEM

CONTENTS

FOR EUROPE		
HOW TO USE THIS MANUAL	6	
APPLICATION NOTICE	6	
How to Check Vehicle Type	6	
BASIC INSPECTION	7	
INSPECTION AND ADJUSTMENT	7	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)	7	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description	7	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Require- ment	7	
CONFIGURATION (BCM)	7	
CONFIGURATION (BCM) : Description	7	
CONFIGURATION (BCM) : Special Repair Re- quirement	8	
CONFIGURATION (BCM) : Configuration list	9	
SYSTEM DESCRIPTION	10	
BODY CONTROL SYSTEM	10	
System Description	10	
Component Parts Location	11	
COMBINATION SWITCH READING SYSTEM	12	
System Diagram	12	
System Description	12	
Component Parts Location	15	
SIGNAL BUFFER SYSTEM	16	
System Diagram	16	
System Description	16	
POWER CONSUMPTION CONTROL SYSTEM	17	
System Diagram	17	
System Description	17	
Component Parts Location	19	
DIAGNOSIS SYSTEM (BCM)	20	
COMMON ITEM	20	
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	20	
DOOR LOCK	21	
DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)	21	
REAR WINDOW DEFOGGER	22	
REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)	22	
BUZZER	23	
BUZZER : CONSULT-III Function (BCM - BUZZ- ER)	23	
INT LAMP	23	
INT LAMP : CONSULT-III Function (BCM - INT LAMP)	24	
HEADLAMP	25	
HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)	25	
WIPER	27	
WIPER : CONSULT-III Function (BCM - WIPER).....	27	
FLASHER	28	
FLASHER : CONSULT-III Function (BCM - FLASHER)	28	
INTELLIGENT KEY	29	
INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)	29	
COMB SW	32	
COMB SW : CONSULT-III Function (BCM - COMB SW)	32	

BCM	33	Wiring Diagram - BCM (RHD models) -	79
BCM : CONSULT-III Function (BCM - BCM)	33	Fail-safe	85
IMMU	33	DTC Inspection Priority Chart	87
IMMU : CONSULT-III Function (BCM - IMMU)	33	DTC Index	88
BATTERY SAVER	34	SYMPTOM DIAGNOSIS	91
BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)	34	COMBINATION SWITCH SYSTEM SYMP- TOMS	91
TRUNK	35	Symptom Table	91
TRUNK : CONSULT-III Function (BCM - TRUNK)..	35	PRECAUTION	92
THEFT ALM	35	PRECAUTIONS	92
THEFT ALM : CONSULT-III Function (BCM - THEFT)	36	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	92
RETAINED PWR	37	Precaution for Battery Service	92
RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)	37	REMOVAL AND INSTALLATION	93
SIGNAL BUFFER	37	BCM (BODY CONTROL MODULE)	93
SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)	37	Exploded View	93
DTC/CIRCUIT DIAGNOSIS	38	Removal and Installation	93
U1000 CAN COMM	38	COMBINATION SWITCH	94
Description	38	Exploded View	94
DTC Logic	38	Removal and Installation	94
Diagnosis Procedure	38	FOR GENERAL AREAS	
U1010 CONTROL UNIT (CAN)	39	HOW TO USE THIS MANUAL	95
DTC Logic	39	APPLICATION NOTICE	95
Diagnosis Procedure	39	How to Check Vehicle Type	95
U0415 VEHICLE SPEED	40	BASIC INSPECTION	96
Description	40	INSPECTION AND ADJUSTMENT	96
DTC Logic	40	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)	96
Diagnosis Procedure	40	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description	96
B2562 LOW VOLTAGE	41	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Require- ment	96
DTC Logic	41	CONFIGURATION (BCM)	96
Diagnosis Procedure	41	CONFIGURATION (BCM) : Description	96
B26E7 TPMS CAN COMM	42	CONFIGURATION (BCM) : Special Repair Re- quirement	97
DTC Logic	42	CONFIGURATION (BCM) : Configuration list	98
Diagnosis Procedure	42	SYSTEM DESCRIPTION	99
POWER SUPPLY AND GROUND CIRCUIT	43	BODY CONTROL SYSTEM	99
Diagnosis Procedure	43	System Description	99
COMBINATION SWITCH INPUT CIRCUIT	44	Component Parts Location	100
Diagnosis Procedure	44	COMBINATION SWITCH READING SYSTEM	
COMBINATION SWITCH OUTPUT CIRCUIT ...	46		101
Diagnosis Procedure	46	System Diagram	101
ECU DIAGNOSIS INFORMATION	48		
BCM (BODY CONTROL MODULE)	48		
Reference Value	48		
Wiring Diagram - BCM (LHD models) -	72		

System Description	101	TRUNK	124	
Component Parts Location	104	TRUNK : CONSULT-III Function (BCM - TRUNK) ..	124	A
SIGNAL BUFFER SYSTEM	105	THEFT ALM	124	
System Diagram	105	THEFT ALM : CONSULT-III Function (BCM -		B
System Description	105	THEFT)	124	
POWER CONSUMPTION CONTROL SYS-		RETAINED PWR	126	
TEM	106	RETAINED PWR : CONSULT-III Function (BCM -		C
System Diagram	106	RETAINED PWR)	126	
System Description	106	SIGNAL BUFFER	126	
Component Parts Location	108	SIGNAL BUFFER : CONSULT-III Function (BCM		D
DIAGNOSIS SYSTEM (BCM)	109	- SIGNAL BUFFER)	126	
COMMON ITEM	109	DTC/CIRCUIT DIAGNOSIS	127	E
COMMON ITEM : CONSULT-III Function (BCM -		U1000 CAN COMM	127	
COMMON ITEM)	109	Description	127	
DOOR LOCK	110	DTC Logic	127	F
DOOR LOCK : CONSULT-III Function (BCM -		Diagnosis Procedure	127	
DOOR LOCK)	110	U1010 CONTROL UNIT (CAN)	128	
REAR WINDOW DEFOGGER	111	DTC Logic	128	G
REAR WINDOW DEFOGGER : CONSULT-III		Diagnosis Procedure	128	
Function (BCM - REAR DEFOGGER)	111	U0415 VEHICLE SPEED	129	H
BUZZER	112	Description	129	
BUZZER : CONSULT-III Function (BCM - BUZZ-		DTC Logic	129	
ER)	112	Diagnosis Procedure	129	I
INT LAMP	112	B2562 LOW VOLTAGE	130	
INT LAMP : CONSULT-III Function (BCM - INT		DTC Logic	130	
LAMP)	113	Diagnosis Procedure	130	J
HEADLAMP	114	B26E7 TPMS CAN COMM	131	
HEADLAMP : CONSULT-III Function (BCM -		DTC Logic	131	K
HEAD LAMP)	114	Diagnosis Procedure	131	
WIPER	116	POWER SUPPLY AND GROUND CIRCUIT ..	132	
WIPER : CONSULT-III Function (BCM - WIPER) ..	116	Diagnosis Procedure	132	L
FLASHER	117	COMBINATION SWITCH INPUT CIRCUIT	133	
FLASHER : CONSULT-III Function (BCM -		Diagnosis Procedure	133	BCS
FLASHER)	117	COMBINATION SWITCH OUTPUT CIRCUIT .	135	
INTELLIGENT KEY	118	Diagnosis Procedure	135	
INTELLIGENT KEY : CONSULT-III Function		ECU DIAGNOSIS INFORMATION	137	N
(BCM - INTELLIGENT KEY)	118	BCM (BODY CONTROL MODULE)	137	
COMB SW	121	Reference Value	137	O
COMB SW : CONSULT-III Function (BCM -		Wiring Diagram - BCM -	160	
COMB SW)	121	Fail-safe	166	
BCM	122	DTC Inspection Priority Chart	168	P
BCM : CONSULT-III Function (BCM - BCM)	122	DTC Index	169	
IMMU	122	SYMPTOM DIAGNOSIS	171	
IMMU : CONSULT-III Function (BCM - IMMU)	122	COMBINATION SWITCH SYSTEM SYMP-		
BATTERY SAVER	123	TOMS	171	
BATTERY SAVER : CONSULT-III Function (BCM		Symptom Table	171	
- BATTERY SAVER)	123			

SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)	206	
DTC/CIRCUIT DIAGNOSIS	207	
U1000 CAN COMM	207	
Description	207	
DTC Logic	207	
Diagnosis Procedure	207	
U1010 CONTROL UNIT (CAN)	208	
DTC Logic	208	
Diagnosis Procedure	208	
U0415 VEHICLE SPEED	209	
Description	209	
DTC Logic	209	
Diagnosis Procedure	209	
B2562 LOW VOLTAGE	210	
DTC Logic	210	
Diagnosis Procedure	210	
B26E7 TPMS CAN COMM	211	
DTC Logic	211	
Diagnosis Procedure	211	
POWER SUPPLY AND GROUND CIRCUIT ...	212	
Diagnosis Procedure	212	
COMBINATION SWITCH INPUT CIRCUIT	213	
Diagnosis Procedure	213	
COMBINATION SWITCH OUTPUT CIRCUIT..	215	
Diagnosis Procedure	215	
ECU DIAGNOSIS INFORMATION	217	A
BCM (BODY CONTROL MODULE)	217	
Reference Value	217	
Wiring Diagram - BCM -	239	B
Fail-safe	244	
DTC Inspection Priority Chart	246	
DTC Index	247	C
SYMPTOM DIAGNOSIS	249	
COMBINATION SWITCH SYSTEM SYMP- TOMS	249	D
Symptom Table	249	
PRECAUTION	250	E
PRECAUTIONS	250	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	250	F
Precaution for Battery Service	250	G
REMOVAL AND INSTALLATION	251	
BCM (BODY CONTROL MODULE)	251	H
Exploded View	251	
Removal and Installation	251	
COMBINATION SWITCH	252	I
Exploded View	252	
Removal and Installation	252	J
		K
		L