

## REMOVAL AND INSTALLATION

### PUSH-BUTTON IGNITION SWITCH

#### Exploded View

INFOID:000000004639214

Refer to [IP-22, "Exploded View"](#).


#### Removal and Installation

INFOID:000000004639215

##### REMOVAL

1. Remove A/T shift selector. Refer to [TM-268, "Removal and Installation"](#).
2. Disconnect push-button ignition switch connector (2).
3. Remove the push-button ignition switch fixing pawl, and then remove push-button ignition switch (1).

△ : Pawl

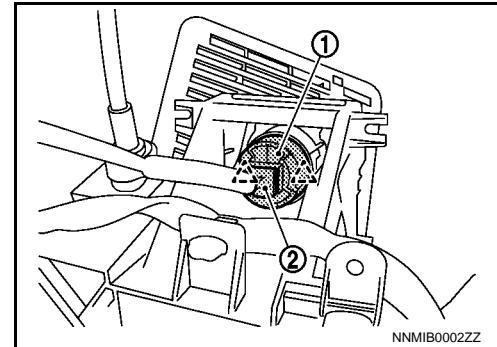

##### INSTALLATION

Install in the reverse order of removal.